

Rubber Track Tractor

938 Vario MT

TABF0938xJxxx1001-

940 Vario MT

TABF0940xJxxx1001-

943 Vario MT

TABF0943xJxxx1001-



TABLE OF CONTENT

General	1
Engine fuel and exhaust systems	2
Frame and suspension	3
Steering system	4
Drive train system	5
Brake system	6
Compressed air system	7
Hydraulic system	8
Electrical system	9
Cab	10
Air conditioning and heating system	11
Chassis	12
Track belt system	13
Implement drive system	14
Implement lift system	15
Attachments	16
Diagrams	17
Special tools	18
Index	19

1 General

1.1	Safety information	1-3
1.1.1	A word to the technician	1-3
1.1.2	Service manual	1-4
1.1.3	Safety symbol	1-4
1.1.4	Safety messages	1-4
1.1.5	Information messages	1-4
1.1.6	Safety signs	1-5
1.1.7	Important safety information	1-5
1.1.8	General safety instruction	1-6
1.1.9	Pressurized air	1-7
1.1.10	Asbestos information	1-7
1.1.11	Electrical storm injury prevention	1-7
1.1.12	Mount and dismount the machine	1-7
1.1.13	Before you start the engine	1-8
1.1.14	Start the engine	1-8
1.1.15	Before operation	1-8
1.1.16	Operating procedures	1-9
1.1.17	Parking	1-9
1.1.18	Operator station	1-10
1.1.19	Cut and crush prevention	1-10
1.1.20	Rollover protective structure	1-10
1.1.21	Burn prevention	1-11
1.1.22	Coolant	1-11
1.1.23	Oils	1-11
1.1.24	High pressure lines	1-11
1.1.25	Fluid penetration	1-12
1.1.26	Batteries	1-12
1.1.27	Exhaust fumes	1-13
1.1.28	Noise prevention	1-14
1.1.29	Fire and explosion prevention	1-14
1.1.30	Fire extinguisher	1-15
1.1.31	Public road transportation	1-15
1.2	Machine identification information	1-17
1.2.1	Serial number definition	1-18
1.3	Proper disposal of waste	1-19
1.4	Lubricant viscosities and refill capacities	1-20
1.4.1	Lubricant viscosities for ambient temperatures	1-20
1.4.2	Lubricant viscosities	1-20
1.4.3	Fluids and capacities	1-21
1.5	Service intervals	1-22
1.5.1	Maintenance schedule	1-22
1.6	Engine service information	1-25
1.6.1	Maintenance chart	1-25
1.6.2	Maintenance to be made daily or at 10 hours intervals	1-26
1.6.2.1	Do a check for the engine oil level	1-26
1.6.2.2	Check coolant level	1-26
1.6.2.3	Check for leakages	1-27
1.6.3	Maintenance to be made weekly or at 100 hours interval	1-27
1.6.3.1	Clean cooling system (from outside)	1-27
1.6.3.2	Examine the condition of the belts	1-27

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

1.6.4	Maintenance to be made at 400 - 800 hours intervals	1-28
1.6.4.1	Change engine oil	1-28
1.6.4.2	Change oil filter	1-28
1.6.4.3	Update the engine software	1-29
1.6.4.4	How to recognize an engine with hydraulic lash adjusters	1-29
1.6.5	Change fuel filters	1-30
1.6.6	Bleed the fuel system	1-31
1.6.7	Maintenance to be made at 4000 hours intervals	1-32
1.6.7.1	Check turbocharger play and check that the intercooler cell is clean	1-32
1.6.8	Maintenance to be made once a year or 1200 hours	1-33
1.6.8.1	Selective Catalyst Reduction (SCR) system maintenance	1-33
1.6.8.2	Replace the main filter and the inlet filter of the supply module	1-34
1.6.9	Maintenance to be made every two years	1-35
1.6.9.1	Change coolant	1-35
1.6.10	Additional maintenance instructions	1-36
1.6.10.1	Before the cold season	1-36
1.6.10.2	Tightening torques	1-37
1.6.10.3	Coolant quality requirements	1-38
1.6.10.4	Fuel quality requirements	1-39
1.6.10.5	Lubricating oil quality requirements	1-44
1.7	Technical data	1-45
1.7.1	Torque specifications	1-45
1.7.1.1	Torque specifications	1-45
1.7.1.2	Constant torque hose clamps	1-45
1.7.1.3	Metric fasteners	1-45
1.7.1.4	Inch fasteners	1-47
1.7.2	Machine specifications	1-51
1.7.2.1	General dimensions	1-51
1.7.2.2	Rear view dimensions	1-52
1.7.2.3	Shipping weights	1-52
1.7.2.4	Machine specifications	1-54
1.7.2.5	Noise vibration level	1-55
1.7.3	Engine specifications	1-56

1.1 Safety information

1.1.1 A word to the technician

Read and understand the safety section in this service manual before operating or servicing the machine. Read and understand the safety sections in the manuals for all attachments before operating or servicing attachments. The technician has the key to safety. Good safety practices protect everyone.

Study the safety information in this service manual. Make the safety information a working part of the safety program. The safety information in this service manual applies specifically to this type of machine. Always do all other usual and customary safe working precautions. Remember - The technician has the responsibility for safety. Good safety practices can prevent serious injury or death.

The safety section points out some basic safety situations that can occur during the operation and maintenance of the machine. The safety section also suggests possible ways to deal with these situations. The safety section does not replace safety practices in other parts of this service manual.

Practice good safety to help prevent injury or death.

Learn how to operate the machine and how to use the controls correctly.

Do not let other persons operate the machine without instruction and training.

Follow all safety precautions and instructions in the manuals and on safety signs affixed to the machine and all attachments.

Use only approved attachments and equipment.

Make sure the machine has the correct equipment needed by the local regulations.



WARNING:
An operator should not use alcohol or drugs which can affect their alertness or coordination. An operator on prescription or 'over the counter' drugs needs medical advice on whether or not they can properly operate machines. If any attachments used on this equipment have a separate Operator Manual, see that manual for other important safety information.

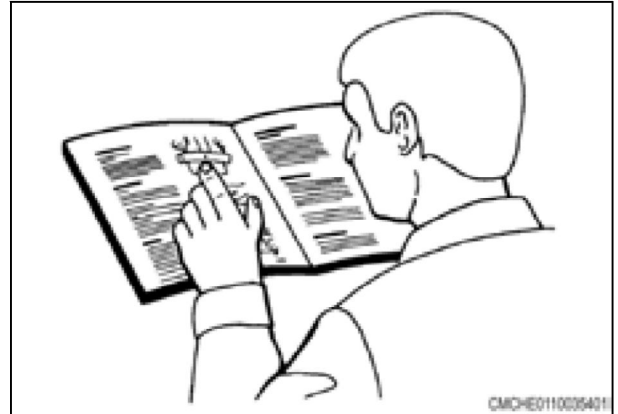 


Fig. 1

1.1.2 Service manual



WARNING:

Some pictures in the manual show the shields removed to permit a clearer view. Never operate the machine with any shields removed.

This service manual has been prepared with the latest service information available at publication. Read and understand the service manual carefully before doing any service on the machine.

Right-hand and left-hand, as used in this manual, are determined by facing the direction of machine travel when in use.

Photos, illustrations, and data used were current at the time of printing, due to possible production changes, the machine can vary slightly. The manufacturer reserves the right to redesign and change the machine as necessary without notification.

1.1.3 Safety symbol

The safety symbol tells you about a potentially hazardous area!

Look for the safety symbol in this manual and on the machine. The safety symbols tell you that there is important safety instructions in the manual.



Fig. 2

1.1.4 Safety messages

The words DANGER, WARNING or CAUTION are used with the safety symbol. Learn these safety messages and obey the recommended precautions and safety instructions.



DANGER:

If you do not obey the recommended precautions and safety instructions, DEATH OR INJURY will occur.



WARNING:

If you do not obey the recommended precautions and safety instructions, DEATH OR INJURY can occur.



CAUTION:

If you do not obey the recommended precautions and safety instructions, INJURY can possibly occur.



Fig. 3

1.1.5 Information messages

The words important and note are not related to personal safety, and are used to give information about the operation and servicing of the machine.

IMPORTANT: Identifies special instructions or procedures which, if not followed, can cause damage to the machine, the process, or the area around the machine.

NOTE: Information to make procedures easier.

1.1.6 Safety signs



WARNING:

Do not remove the safety signs. Replace safety signs that you cannot read, are damaged, or are missing.

Clean the machine surface with a weak soap and water solution before you replace the safety signs. Replacement safety signs are available from your dealer.

Always make sure that safety signs are in the correct locations and that you can read the safety signs. Illustrations of safety sign locations are in this section.

Keep the safety signs clean. If necessary, use a weak soap and water solution.

1.1.7 Important safety information

IMPORTANT: Any Modifications to the machine or systems not authorized by AGCO will void the AGCO Warranty. This includes, but is not limited to hitches.



WARNING:

When replacement parts are required for this product, AGCO recommends using AGCO replacement parts or parts with equivalent specifications including, but not limited to, physical dimensions, type, strength and material. Failure to heed this warning can get untimely failures, product damage, personal injury or death.

Failure to obey basic safety rules and precautions can cause personal injuries during product operation, maintenance, or repair. Know dangerous situations before an injury occurs.

A person must be alert to possible dangers. This person must also have the necessary training, skills and tools to do these operations correctly.

Incorrect operation, lubrication, maintenance or repair of this product can be dangerous and can result in injury or death.

Read and understand all the information about the operation, lubrication, maintenance, and repair before operating on this machine.

The product and this manual give safety precautions and warnings. Bodily injury or death can occur to you or to other persons if all warnings are not heeded.

Not every possible circumstance that can involve a potential danger can be anticipated. The warnings in this publication and on the product are, thus, not all inclusive. If a tool or procedure, not recommended by AGCO, is used, make sure they are safe for everyone.

An operator must make sure the product will not be dangerous or damaged by the operation, lubrication, maintenance or repair procedures selected. Information, specifications, and illustrations in this publication come from information available at the time of publication production.

Specifications, torques, pressures, measurements, adjustments, illustrations, and other items can change at any time. These changes can change the service that is given to the product. Get the complete and most current information before starting a job. AGCO dealers have the most current information available.

1.1.8 General safety instruction



CAUTION:
Carefully read the operator manual before operating the machine. See all instructions and safety rules when operating or doing maintenance.



Fig. 4

Do not start the engine until the area is free of personnel. Honk the horn two times to tell others. This will help prevent personal injury because machine movement can occur.

Know the width of the equipment to keep the correct clearance when operating near fences or near boundary blockage.

Wear a hard hat, protective glasses, and other protective equipment, as necessary.

Do not wear loose clothing or jewelry that can catch on controls or on other parts of the machine.

Make sure that all protective guards and all covers are attached in position on the machine.



Fig. 5

Keep the machine free from unwanted material. Remove unwanted material, oil, tools, and other items from the deck, from walkways, and from steps.

Make sure lunch boxes, tools, and other loose items that are not a part of the machine are attached.

Know the applicable work location hand signals and the personnel that are approved to give the hand signals. Get hand signals from one person only.

Do not put maintenance fluids into glass containers. Drain all liquids into an approved container.

Discard all drained fluids and discard all filters. Refer to local regulations.

Use all cleaning solutions with precaution.

Record all necessary repairs.

Do not let untrained or not approved personnel on the machine.

Do not smoke when doing work an air conditioner. Also, if there is refrigerant gas around, do not smoke. Breathing the fumes that are released from a flame that touches air conditioner refrigerant can cause bodily injury or death.

Breathing gas from air conditioner refrigerant through a lighted cigarette can cause bodily injury or death.

Do the following before completing maintenance unless receiving other instructions:

- Parked the machine on level ground.
- Lower the implements to the ground.
- Park the machine.

- Stop the engine.
- Remove the switch key.
- Cool the machine.

Use other precautions if the conditions and environment make it necessary.

For operating this machine in forestry or loader operations:

This machine does not have a falling-object protective structure and must not be used in forestry or loader operations.

1.1.9 Pressurized air

Air under pressure can cause personal injury. When pressurized air is used for cleaning, wear a protective face shield, protective clothing and protective shoes.

The maximum air pressure for cleaning purposes must be below 205 kPa (30 psi).

1.1.10 Asbestos information

AGCO equipment and replacement parts are asbestos free. AGCO recommends the use of only correct AGCO replacement parts.

1.1.11 Electrical storm injury prevention

When lightning is striking in the vicinity of the machine, the operator should not attempt to dismount or mount the machine.

If you are in the operator's station during an electrical storm, stay in the operator's station. If you are on the ground during an electrical storm, stay away from the machine.

1.1.12 Mount and dismount the machine

Mount the machine and dismount the machine only at locations that have steps and/or hand holds. Before mounting the machine, clean the steps and the hand holds. Inspect the stairs and hand holds. Make any necessary repairs.

When dismounting the machine, descend the steps backwards, and maintain a three-point contact with the steps and hand holds. Three-point contact is two feet and one hand or one foot and two hands.

Never mount a moving machine. Never dismount a moving machine. Never jump off the machine except in an emergency.

Do not carry tools or supplies when you try to mount the machine or when you try to dismount the machine. Use a hand line to pull equipment onto the platform.

Do not use any controls as hand holds when you enter the operator compartment or when you exit the operator compartment.

1.1.13 Before you start the engine

Start the engine only from the operator compartment. Never short across the starter terminals or batteries. Shorting can damage electrical system or cause unexpected machine movement.

Adjust the seat so full pedal travel can be achieved with operator's back against seat back.

Make sure the machine is equipped with a lighting system sufficient for job conditions. Make sure all machine lights are working properly.

Before starting the engine or moving the machine, make sure no one is under, around or on machine. Make sure area is free of personnel.

To honk horn the key must be turned to "run" to enable the horn. As a warning honk horn twice, to alert others.



Fig. 6

1.1.14 Start the engine

Move all hydraulic controls to the hold position before you start the engine.

Make sure the machine is in park.

Press the clutch pedal before you turn the ignition key. The starter will not operate until the clutch has been pressed. To stop the starter, turn the key to off or release the clutch pedal.

Diesel engine exhaust contains material of combustion which can be dangerous. Always operate the engine in an open area. If in a closed in area, send the exhaust out.



WARNING:

If you turn the steering wheel with the transmission in the neutral position and the engine at idle speed, the machine will turn.



WARNING:

Do not use ether. Ether will cause engine damage and/or personal injury.

Do not start the engine until the area is free of personnel to prevent personal injury because of unexpected machine movement.

1.1.15 Before operation

Clear all personnel from around the machine and the area.

Clear all obstacles from machine's path. Be careful of dangers, (electrical power lines, ditches, etc).

Make sure all the windows are clean and attached in the closed position.

Adjust the rearview mirrors for best visibility near the machine. Make sure the horn, backup alarm (if equipped) and all other warning devices are working correctly.

On the drawbar-towed implements, fasten a transport chain of sufficient capacity between the machine drawbar support and implement. Give only enough slack in the chain to permit turning.

Only one instructor must be permitted to ride in the machine cab. Instructor must be seated in the instructor seat with the seat belt fastened.

1.1.16 Operating procedures

The machine will turn with the transmission control lever in the neutral position when the engine is operating and the steering wheel is turned.

Only operate the machine while in the operator's seat. Securely connect the seat belt while operating the machine. Only operate the controls while the engine is operating.

Do a check for the correct operation of all the controls and the protective devices.

As a warning operate the horn two times to tell others in the area to prevent personal injury because of machine movement.

During operation of the machine, record damage and make necessary repairs.

A rollover of the machine can occur when doing work on hills, banks, or slopes. A rollover of the machine can also occur when operating across ditches, ridges, or other unanticipated blockages.

Hold the implement approximately 40 cm (16 in) above the ground level while operating the machine. Do not operate the machine near an overhang, near the edge of a cliff, or near edge of an excavation.

If the machine starts to sideslip on a grade, immediately decrease the load and turn machine downhill.

Be careful to prevent ground conditions which will cause the machine to rollover.

Keep the machine in control. Do not overload the machine more than the capacity.

Make sure the towing devices are sufficient for the work.

Make sure the components on the 3-point linkage are sufficient for the work.

Connect the trailing equipment only to a drawbar or hitch.

Do not straddle a wire cable.

When maneuvering to connect equipment, make sure no personnel are between machine and trailing equipment. Hold up the hitch of trailing equipment to align equipment with drawbar.

Know the maximum dimensions of the machine.

When operating on icy or muddy roads, decrease the travel speed to prevent the loss of control of machine.

After operating in muddy conditions, let sufficient time for tracks to reject unwanted material and moisture before making high speed maneuvers. Belts that are wet and belts that are muddy can impede machine's steering.

Decrease travel speed if the stability of the machine is noticeably reduced.

Slow the machine to a speed that controls the machine when declining a hill.

Use the service brakes if necessary, to control machine speed. Do not coast down a hill with transmission in neutral.

Do not steer machine when crossing ditches. Ditches that are wide and/or ditches that are deep can let the guide blocks sag below midwheels. This can cause the belt to come off.

Do not let passengers anywhere on the machine but on an approved passenger seat. Instructors must have the instructor seatbelt securely connected during all operation.

1.1.17 Parking

Make sure to park the machine on a solid, level surface. Move the drive lever to the neutral position. Wait a time for the park brake to automatically engage or press the park brake switch on the multifunction armrest. Lower all implements to the ground. Move the throttle control lever to low idle and wait a time to let the turbocharger cool. Stop the engine and take the key with you.

1.1.18 Operator station

Do not drill holes or weld on the cab rollover protective structure. (ROPS)

Any modifications to the inner operator station must not extend into the operator space.

Any item brought into the cab must not extend into defined operator space. Secure loose items. Objects must not pose an impact hazard in rough terrain or if there is a rollover.

1.1.19 Cut and crush prevention

Support the equipment correctly when performing work below the equipment. Do not rely on the hydraulic cylinders to hold up the equipment. An implement can fall if a control lever is moved or if a hydraulic line breaks.

Never start the machine engine by shorting across the starter solenoid terminals. Machine movement can occur causing runovers .

Never make adjustments while the machine is moving or while the engine is operating.

Whenever there are attachment control linkages, the clearance in the linkage area will change with movement of the attachment.

Stay clear of all rotating parts and all moving parts.

Keep objects away from moving fan blades. The fan blades will throw objects and the fan blades can cut.

Do not use a wire tow cable that is kinked or frayed. Wear gloves when touching wire cable.

When hitting a retainer pin, the retainer pin can fly out causing personal injury. Make sure that there are no people in the area when hitting a retainer pin. To prevent eye injury, wear protective glasses when hitting a retainer pin.

Chips or other debris can fly off objects when hitting the objects. Make sure that others are clear of the area before hitting any object.

1.1.20 Rollover protective structure

Do not make any modifications to the rollover protective structure (ROPS) as this will change protection provided. Do not change structure by welding, cutting, adding weight, or drilling holes into structure.

Any change not specifically authorized by AGCO invalidates AGCO certification for ROPS. The protection offered by ROPS will be impaired if ROPS has structural damage or alteration. Damage to structure can be caused by a turn over or by falling objects.

Do not mount items (fire extinguishers, first aid kits, work lights, etc.) by welding brackets or drilling holes in ROPS. See dealer for mounting guide lines.

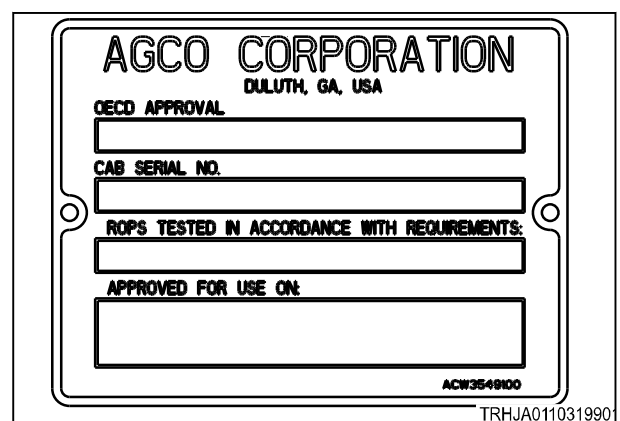 


Fig. 7

1.1.21 Burn prevention

Do not touch any part of an operating engine. Other components such as the transmission, the axles and the oil reservoir can also be hot. Let the engine cool before performing any maintenance on the engine. Release all pressure in air, oil, lubrication, fuel and cooling systems before disconnecting any line fittings or related items.



Fig. 8

1.1.22 Coolant

When the engine is at operating temperature, the engine coolant is hot. The coolant is also under pressure. The radiator and all the lines to the heater or engine contain hot coolant.

Any contact with hot coolant or with the steam can cause severe burns. Allow the cooling system components to cool before the cooling system is drained.

Check the coolant level only after the engine has been stopped.

Make sure the filler cap is cool before removing. The filler cap must be cool enough to touch with a bare hand. Remove the filler cap slowly to relieve the pressure.

The cooling system conditioner contains alkali. Alkali can cause personal injury.

Do not allow alkali to contact skin, eyes or mouth.



Fig. 9

1.1.23 Oils

Pressurized hot oil and hot components can cause personal injury. Do not allow hot oil to contact skin. Do not allow hot components to contact skin.

Remove the hydraulic tank filler cap only after the engine has been stopped.

The filler cap must be cool enough to touch with a bare hand. Follow the standard procedure in this manual to remove the hydraulic tank and transmission filler caps.

1.1.24 High pressure lines

Do not bend or strike the high pressure lines. Do not install any lines that are bent or damaged.

Repair any loose or damaged lines. Leaks can cause fires. Consult your dealer for repair or for replacement parts.

1. General



DANGER:

Diesel fuel or hydraulic fluid under pressure can penetrate the skin or eyes. This can cause serious personal injury, blindness, or death.

1.1.25 Fluid penetration

Always use a board or cardboard when checking for a leak. Leaking fluid under pressure can penetrate the body tissue. Fluid penetration can cause serious injury and possible death. A pin hole leak can cause severe injury. If fluid is injected into the skin, get treatment immediately. Get treatment from a doctor familiar with this type of injury.

Check the lines, the tubes and the hoses carefully. Do not use your bare hand instead, use a board or cardboard to check for leaks. Tighten all connections to the recommended torque.

Replace the hose if any of the following conditions are present:

- End fittings are damaged or leaking.
- Outer coverings are rubbed or cut.
- Wires are showing.
- Outer coverings are ballooning.
- The flexible part of the hose has a kink.
- Outer coverings have embedded armoring.
- The end fittings are displaced.

IMPORTANT: *Take care to contain fluids during the performance of the inspection, the maintenance, the testing, the adjusting, and the repair of the machine. Have a suitable container large enough ready to collect the fluid before opening any compartment or disassembling any component containing fluids. See the local regulations and mandates when discarding fluids.*

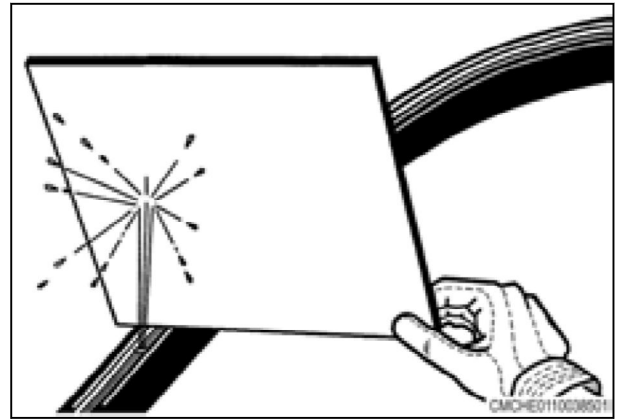 


Fig. 10

1.1.26 Batteries

A lead acid battery generates flammable and explosive gases. Keep sparks and flames away from the battery.



WARNING: Sulfuric acid in battery electrolyte is poisonous.

The acid is strong enough to burn skin, eat holes in clothing and cause blindness if got into eyes.

If acid contacts skin or clothing, flush with water immediately. If acid contacts eyes get immediate medical aid.

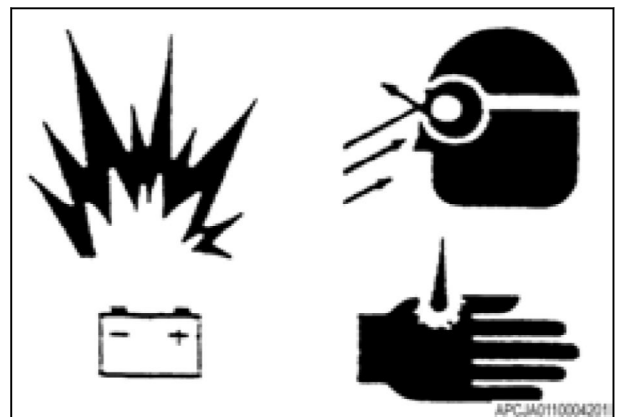 


Fig. 11

Wash hands after touching batteries and connectors.



WARNING: Batteries contain electrolyte which is an acid that can cause personal injury.

Do not let the electrolyte contact the skin or eyes.

Always wear protective glasses for servicing batteries.



Fig. 12

Never check battery charge by placing a metal object across the terminal posts. Use a voltmeter or a hydrometer.



WARNING: Gases from a battery can explode.

Incorrect jumper cable connections can cause an explosion causing an injury.

Keep open flames or sparks away from the top of the battery. Do not smoke in the battery charging areas. To prevent an explosion, never charge a frozen battery.

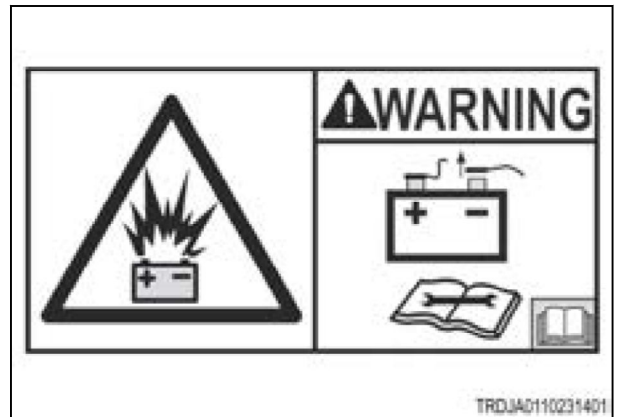 


Fig. 13

1.1.27 Exhaust fumes

Always work in a correct ventilated area.

Engine exhaust fumes can cause sickness or death. If necessary to run engine in a closed area, use correct equipment to safely remove exhaust fumes from area.

Always open the doors and get outside air into area.



Fig. 14

1.1.28 Noise prevention

Wear proper hearing protective devices such as earmuffs or earplugs to prevent loss of hearing due to high noise levels.

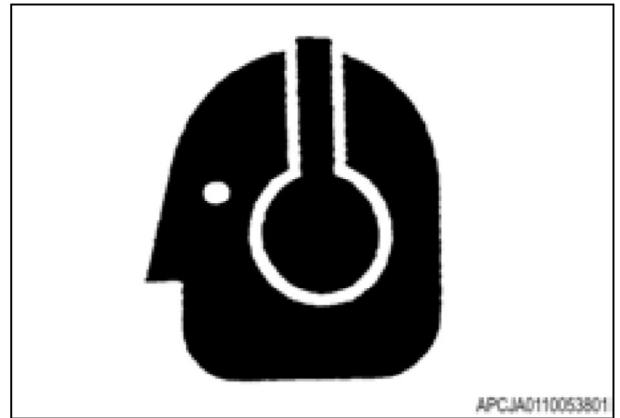 


Fig. 15

1.1.29 Fire and explosion prevention

Use caution when refueling a machine. Do not smoke while refueling and do not refuel near open flames or sparks. Always stop engine before refueling. Fill fuel tank outdoors.

All fuels, most lubricants, and some coolant mixtures are flammable.

Flammable fluids leaking or spilled onto hot surfaces or electrical components can cause a fire.

Fire may cause personal injury and property damage.

Remove all flammable materials such as fuel, oil, and debris from machine.

Do not let any flammable materials to accumulate on machine.

Store fuels and lubricants in correctly identified containers away from not approved persons. Store rags with oil and any flammable materials in protective containers.

Do not smoke in areas used for storing flammable materials.

Do not operate machine near any flame.

Do not weld on lines or tanks that contain flammable fluids. Do not flame cut lines or tanks containing flammable fluid. Clean any such lines or tanks fully with a nonflammable solvent before welding or flame cutting.

Check all electrical wires daily. Repair any wires loose or frayed before operating machine. Clean and tighten all electrical connections.

Dust generated from repairing nonmetallic hoods or nonmetallic fenders can be flammable and/or



Fig. 16

explosive. Repair such components in a well ventilated area away from open flames or sparks.

Inspect all lines and hoses for wear or for deterioration and replace if necessary.

Route hoses correctly. Lines and hoses must have sufficient support and secure clamps. Tighten all connections to recommended torque.

1.1.30 Fire extinguisher

An optional (1) bracket can be installed on the right front frame rail. The bracket holds a 4.5 kg fire extinguisher. Make sure that all clamps, guards, and heat shields are installed correctly. Correct installation prevents vibration, abrasions and too much heat during the machine operation.

Do not weld the bracket onto the cab ROPS frame to install the fire extinguisher. Do not drill holes in the cab ROPS frame to attach the fire extinguisher.

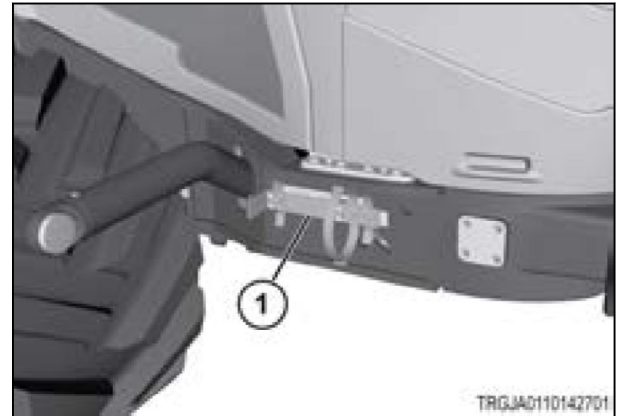 


Fig. 17

Make sure that a fire extinguisher (1) is available and know the operation. Examine and service the fire extinguisher regularly. Obey the recommendations on the instruction plate.

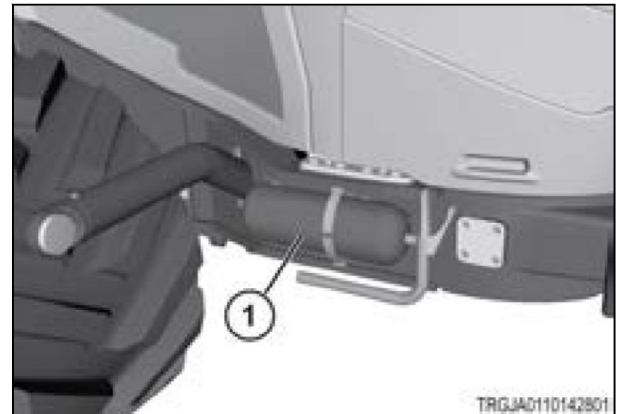 


Fig. 18

1.1.31 Public road transportation

Always walk around and visually examine the machine before moving on a public road. As a warning to others in the area, honk the horn two times before starting engine. Do a check for damage and/or defective components that can make a dangerous condition. Make sure all machine systems operate correctly including (but not limited to):

- front road lamps
- tail and brake lamps
- amber hazard lights
- parking brake
- horn
- windshield wiper and washer
- rear view mirrors
- etc.

Repair or replace a component not in correct operating order.

Do not drive at a speed causing machine to lose control.

1. General

Obey all traffic rules. Operate the machine with hazard lights on, unless prevented by law. The operation of work lamps while driving on public roads is prohibited. Use of road lamps while moving on public roads is the operator's responsibility.

NOTE:

When the Speed Indication Symbol (SIS) is installed in the rear window, be sure to close the rear window when transporting the machine on the road.

1.2 Machine identification information

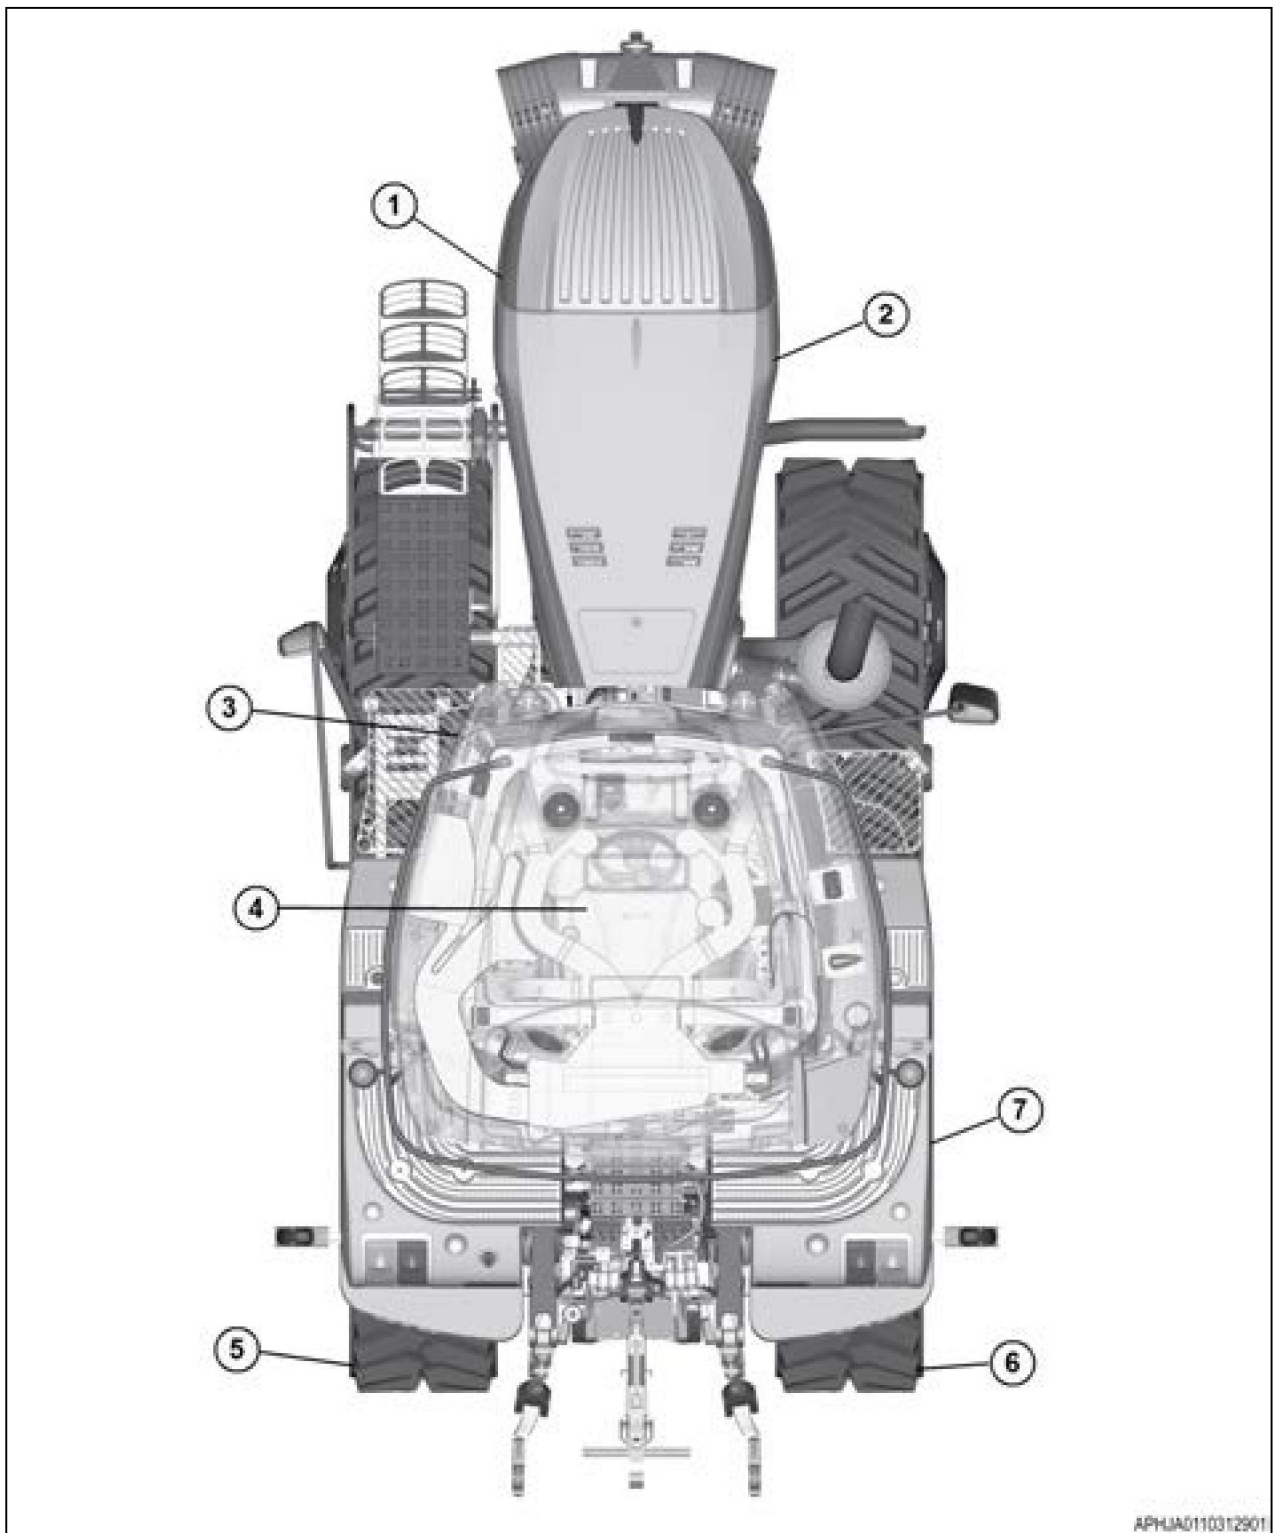 


Fig. 19

1. General

Call out	Description	Serial Number
1	Emissions control information / Engine serial number	
2	Machine PIN plate	
3	Cab serial number (on front frame cross member)	
4	Operator seat serial number (on operator seat)	
5	Left track belt number	
6	Right track belt number	
7	Differential serial number	

1.2.1 Serial number definition

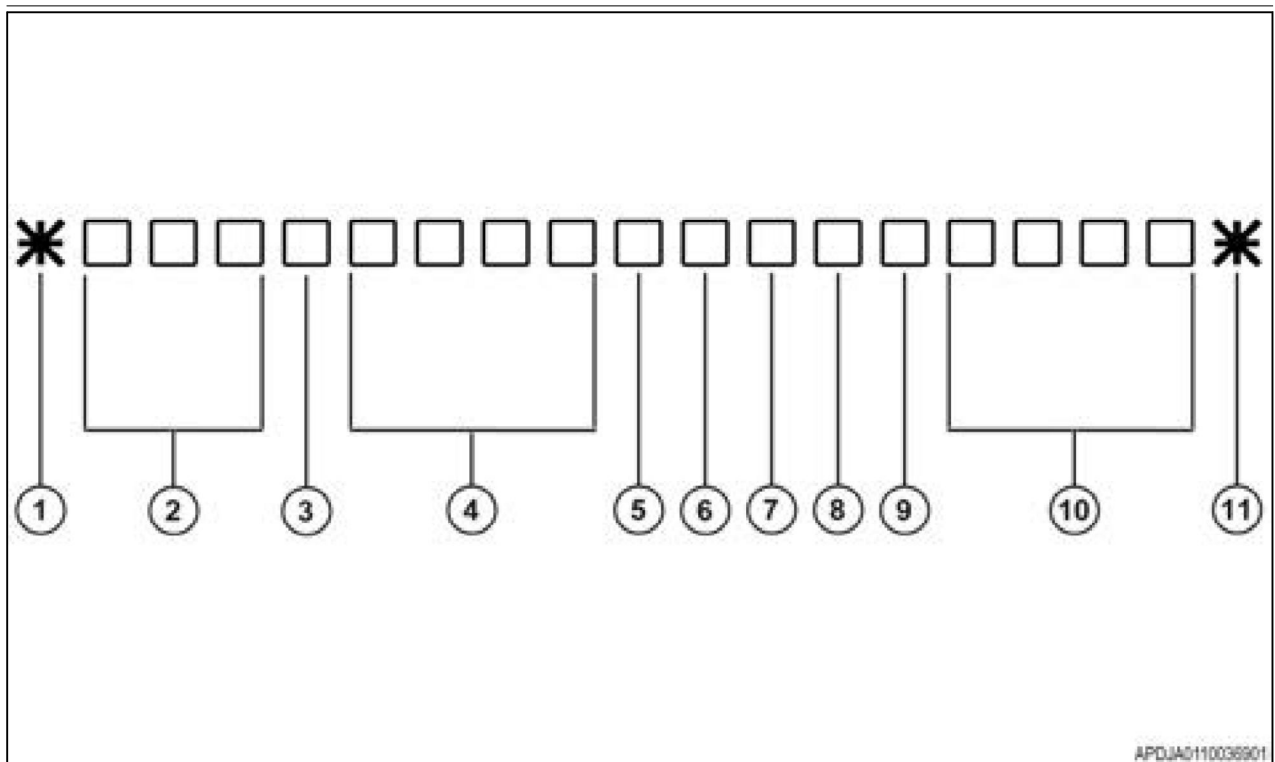 


Fig. 20

Definition of the serial number.

- | | | | |
|---|-------------------------|----|--|
| 1 | Beginning Symbol | 8 | Compliance Region |
| 2 | World Manufacturer Code | 9 | Option Code |
| 3 | Brand Code | 10 | Machine Sequence Number - sequence number will start over at the beginning of each model year. The first machine of each model year will start with sequence 1001. |
| 4 | Model | 11 | Ending Symbol |
| 5 | Check Letter | | |
| 6 | Model Year Code | | |
| 7 | Location Built Code | | |

NOTE: For serial number breaks in this manual, only the information from the model year code and following will be given.

1.3 Proper disposal of waste

Improper disposal of waste can pollute the environment and ecology. A few examples of potentially harmful equipment waste can include, but not limited to, items such as oil, fuel, coolant, brake fluid, filters, battery chemicals, tires, etc.

Use leak proof containers when draining fluids. Do not use food or beverage containers to collect waste fluids, as food or beverage container(s) may mislead someone into drinking from them.

Do not pour or spill waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire with local environmental or recycling center on the proper way to recycle or dispose waste.



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

1.4 Lubricant viscosities and refill capacities

1.4.1 Lubricant viscosities for ambient temperatures

Proper oil viscosity grade is determined by the minimum outside temperature while the machine is started and while operated.

To determine the proper oil viscosity grade, refer to the minimum column in the following table.

This information reflects the coldest ambient temperature condition for starting and for operating a cold machine.

Refer to the maximum column in the table to select the oil viscosity grade for operating the machine at the highest temperature anticipated.

Use the highest oil viscosity allowed for ambient temperature when starting the machine.

Machines operated continuously, should use oils having higher oil viscosity in final drives and in differentials.

Oils with higher oil viscosity will maintain the highest possible oil film thickness.

Consult a dealer if additional information is needed.

1.4.2 Lubricant viscosities

AGCO Genuine lubricants are the recommended products for this machine. The use of other lubricants may not provide the same level of necessary performance.

Lubricant viscosities						
Compartment or system	Oil type and classification	Oil viscosity	Celcius		Fahrenheit	
			Min	Max	Min	Max
Engine crankcase	AGCO® Multiguard® Engine Oil	SAE 5W-30	-35	30	-31	104
		SAE 5W-40	-35	40+	-31	86
		SAE 10W-30	-25	30	-13	86
		SAE 10W-40	-25	40+	-13	104
		SAE 15W-40	-20	40+	-4	104
		SAE 20W-20	-15	15	5	59
		SAE 20W-40	-15	40+	5	104
		SAE 30	0	30	32	86
Front idler hub Midwheel hub Drive wheel hub	AGCO® Gear Lubricant Full Synthetic	SAE 50	-30	50	-22	122
Hydraulic system Transmission	AGCO® Permatran® 821XL Plus	SAE 15W-40	-20	40	-4	104
Final drive	AGCO® Gear Lubricant	SAE 85W-140	-12	41	10	105
Fan drive	AGCO® Permatran® 821XL	SAE 10W-30	-25	30	-13	86
Implement hydraulics	AGCO® Permatran® 821XL	SAE 10W-30	-25	30	-13	86

1.4.3 Fluids and capacities

IMPORTANT: *The fill capacities given are approximate. Do a check of the fluid levels after filling.*

AGCO Genuine lubricants are the recommended products for this machine. The use of other lubricants may not provide the same level of necessary performance.

Fluids and fill capacities			
Compartment or system		Approximate fill capacity	
Engine coolant		AGCO® Antifreeze and Coolant (50/50 premix water and ethylene/glycol)	42.2 L
Diesel fuel	Fuel tank - left fender	Meets EN590-2009 or ASTM D975 Grade No. 1-D S15 B5 blend	251.8 L
	Fuel tank - right fender		248.9 L
	Fuel tank - main		179.5 L
	Mid capacity		131.0 L
	High capacity		290.2 L
Engine crankcase and filter		AGCO® Multiguard® SAE 10W-40	34.8 L
DEF (Diesel exhaust fluid) tank			71.0 L
Windscreen washer reservoir			4.0 L
Refrigerant		R134A	1.3 kg
Final drives hydraulic system (standard, wide)	Final drive - left	AGCO® Gear Lubricant SAE 85W-140	18.0 L
	Final drive - right		18.0 L
Front idler hub		AGCO® Permatran® 821XL SAE 50 synthetic	590 mL each
Midwheel hub		AGCO® Permatran® 821XL SAE 50 synthetic	160 mL each
Drive wheel hub		AGCO® Permatran® 821XL SAE 50 synthetic	1.4 L
Grease fittings		AGCO® Grease Hi Temperature Moly-Lithium Base	As necessary
Implement hydraulic system		AGCO® Permatran® 821XL	150 L
Transmission / differential		AGCO® Permatran® 821XL Plus SAE 15W-40	110.0 L
Fan drive system		AGCO® Permatran® 821XL SAE 10W-30	18.3 L

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>