

Operator's Manual



Combines

FENDT 5185 E

FENDT 5185 E - S/N => 551200001



Breganze
AGCO S.p.A. - Via F. Laverda, 15/17 - 36042
BREGANZE (VI) – Italy.
FENDT is a worldwide brand of AGCO
© AGCO 2015
Original Operator's Manual

December 2015
FENDT 5185 E_EN_LA327435010
EAME
English

Combines

1 General Information	13
1.1 Information	15
1.1.1 Introduction	15
1.1.2 Company policy	15
1.1.3 Optional equipment	15
1.1.4 Spare parts and accessories	16
1.1.5 Warranty	16
1.1.6 Lubricants	16
1.2 Use	18
1.2.1 Use of the combine	18
1.3 Identification	19
1.3.1 Combine identification	19
1.3.2 Engine Identification	20
1.3.3 Cutting table identification	21
1.3.4 Cab identification	21
1.3.5 Hydrostatic pump identification	22
1.3.6 Hydrostatic motor identification	22
1.3.7 Straw chopper identification (if fitted)	23
1.3.8 Chaff spreader identification (if fitted)	23
1.3.9 Trailer hitch identification (if fitted)	24
1.4 Identification form	25
1.4.1 Machine data	25
1.5 Conformity	26
1.5.1 EC Declaration of Conformity	26
1.6 Information	27
1.6.1 Ecology	27
1.6.2 Hydraulic systems: hoses	27
1.6.3 Scrapping and disposal	28
1.7 Weight	29
1.7.1 Weight distribution	29
2 Safety	31
2.1 Warning symbols and safety instructions	33
2.1.1 Warnings	33
2.2 Information for road transport	34
2.2.1 Road transport	34
2.3 Information for operations	37
2.3.1 Field Operations	37
2.4 Information for maintenance	41
2.4.1 Maintenance work	41
2.5 Information on the engine	45
2.5.1 Engine	45
2.6 Safety and function decals	49
2.6.1 Location of decals	49
2.6.2 Description of decals	54
2.7 Work on the battery	64
2.7.1 Battery	64
2.8 Safety devices	65
2.8.1 Emergency exit	65

2.8.2	Operator presence device	66
2.8.3	Safety belts	67
2.8.4	Table safety stops	68
2.8.5	Safety guard for main crop elevator	69
2.8.6	Safety Stop	69
2.8.7	Sprags for wheels	70
2.8.8	Audible alarm for reversing	71
2.8.9	Reflectors for road transport	72
2.8.10	Safety Guards	73
2.8.11	Fall protection rails	73
2.8.12	Safety devices for operations to be carried out in the upper part of the machine	74
2.8.13	Straw chopper	75
2.8.14	Fire extinguisher	75
2.9	Trailer hitch	76
2.9.1	Automatic towing hooks	76
2.9.2	CUNA and CE trailer hitches	77
2.9.2.1	Procedure for attaching and removing	78
2.9.2.2	Drawbar coupling	79
2.9.3	Fixed trailer hitch (non-automatic - CUNA type)	79
2.10	Machine lifting	80
2.10.1	Attachment points	80
2.11	Towing	81
2.11.1	Towing the combine	81
2.12	Further information	82
2.12.1	Noise level in the cab	82
2.12.2	Vibrations in the cab	82
2.12.3	Statutory regulations	82
2.12.4	Electromagnetic emissions	83
2.13	Notes	84
2.13.1	Notes for road transport	84
3	Operation	87
3.1	Combine operation	89
3.1.1	Crop processing	89
3.2	Stage 1	90
3.2.1	Feeding	90
3.3	Stage 2	91
3.3.1	Threshing	91
3.4	Stage 3	92
3.4.1	Separation	92
3.5	Stage 4	93
3.5.1	Cleaning	93
3.6	Stage 5	94
3.6.1	Grain storage and unloading	94
4	Controls and Instruments	95
4.1	Steering column	97
4.1.1	Components and adjustments	97
4.2	Multifunction lever	98
4.2.1	Main components	98
4.3	Instrument panel	99
4.3.1	Front control panel	99
4.3.2	Rear control panel	101
4.3.3	Multiple light indicators	105
4.3.4	On-board Computer	106

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

4.3.4.1	Graphical user interface	108
4.3.4.2	Day/night mode	110
4.3.4.3	Operational parameters	111
4.3.4.4	Auto-calibration	111
4.3.4.5	Hectare counter	112
4.3.4.6	No communication	112
4.3.4.7	Alarm statuses	113
4.3.5	Performance monitor (on request)	113
4.3.5.1	Using the monitor	114
4.3.5.2	Selecting the measurement range (straw walker, sieves or total)	114
4.3.5.3	Calibrating the bar cursor scale	115
4.3.5.4	Sensitivity adjustment	115
4.3.5.5	Shifting to forward speed monitoring	116
4.3.5.6	Summary of keyboard functions	116
4.4	Controls at the operator seat	117
4.4.1	Description	117
4.5	Cab	119
4.5.1	Cab controls (top right-hand side)	119
4.5.2	Operator seat	122
4.5.3	Preparation for radio installation	123
4.5.4	Reading light	123
4.5.5	Document Pocket	124
4.5.6	Air conditioning in the cab	125
4.5.6.1	Pressurization	126
4.5.7	Heating	127
4.6	Access to combine components	128
4.6.1	Access to the operator platform	128
4.6.2	Accessing and cleaning the front windscreen of the cab	129
4.6.3	Access to the engine compartment	130
4.6.4	Access to the grain tank	131
4.6.5	Access to the inside of the grain tank	132
4.7	Engine	133
4.7.1	Starting the engine	133
4.7.2	Useful advice	134
4.7.3	Stopping the engine	135
4.8	Road transport	136
4.8.1	Operations to be carried out before transportation	136
4.8.2	Position light and sidelight adjustment	137
4.9	Using the combine	138
4.9.1	Operations to be carried out before use	138
5	Field Operations	139
5.1	General Information	141
5.1.1	Notes	141
5.1.2	Before operating the machine in the field	141
5.2	Starting and Stopping the Combine	143
5.2.1	Procedure to follow	143
5.3	Cutting table	145
5.3.1	Attaching the cutting table	145
5.3.1.1	Adjustments for attaching the cutting table	147
5.3.2	Removing the table	148
5.3.3	Adjustment of cutting table ground clearance	149
5.4	Main Crop Elevator	150
5.4.1	Adjustments	150
5.4.1.1	Access to the main components	152
5.4.2	Reverse drive system	153

5.5 Cylinder Housing	154
5.5.1 Components	154
5.5.2 Threshing drum	155
5.5.3 Concave	156
5.5.3.1 Concave filler plates	157
5.5.3.2 Parallelism between the threshing drum and concave	158
5.5.3.3 Unblocking the threshing drum	159
5.5.3.4 Universal wheat/maize concave	160
5.5.3.5 Basic concave settings	161
5.5.3.6 Spike-toothed Cylinder/Concave (for rice)	161
5.5.4 Rear beater	163
5.6 Straw walkers	164
5.6.1 Description and adjustments	164
5.7 Main Grain Pan	165
5.7.1 Description	165
5.7.2 Checking the main grain pan	166
5.7.3 Cleaning the main grain pan	167
5.7.4 Stone trap assembly removal/refitting	168
5.8 Fanning Mill	170
5.8.1 Description and adjustments	170
5.8.1.1 Fanning mill for threshing light seed crops	172
5.9 Top sieve	173
5.9.1 Adjustment	173
5.10 Bottom sieve	177
5.10.1 Adjustment	177
5.11 Returns	179
5.11.1 Description and adjustments	179
5.12 Grain tank	181
5.12.1 Description	181
5.12.1.1 Grain tank unloading auger	182
5.12.1.2 Sensor to measure tank filling	183
5.12.1.3 Grain tank control window	183
5.12.1.4 Doors for Grain Tank Maintenance and Cleaning	184
5.12.1.5 Vertical auger tank drain door	185
5.12.1.6 Tank bottom door	186
5.12.1.7 Grain Tank Cover	187
5.12.1.8 Basic Settings	188
6 Lubrication and Maintenance	191
6.1 General Information	193
6.1.1 Lubrication and Maintenance	193
6.2 Preliminary Service Inspection	194
6.2.1 After the first 50 working hours	194
6.3 Scheduled Service Inspection	195
6.3.1 When and where to carry it out	195
6.3.2 Interval - 10 hours	197
6.3.2.1 Cylinder variator (1)	197
6.3.2.2 Engine oil (2)	198
6.3.2.3 Coolant expansion tank (3)	199
6.3.2.4 Hydraulic and hydrostatic systems tank (4)	199
6.3.2.5 Prefilter/water separator (5)	200
6.3.2.6 Straw chopper rotor (if fitted) (6)	200
6.3.3 Interval - 75 hours	201
6.3.3.1 Service brakes (11)	201
6.3.3.2 Main crop elevator lower shaft (12)	201
6.3.3.3 Main crop elevator belt tensioner (13)	202

6.3.3.4	Fanning mill variator (14)	202
6.3.3.5	Crop-unloading auger drive belt tensioner (15)	203
6.3.3.6	Coupling bushes of final drive shafts (16)	203
6.3.3.7	Rear axle support (17)	204
6.3.3.8	Rear axle king pins (18)	204
6.3.3.9	Rear straw-walker shaft supports (19)	205
6.3.3.10	Unloading auger bottom gearbox (20)	205
6.3.3.11	Unloading auger top gearbox (21)	206
6.3.3.12	Table drive-belt tensioner (22)	206
6.3.3.13	Track frames (23)	207
6.3.3.14	Cab air filters (24)	207
6.3.3.15	Evaporator (25)	208
6.3.3.16	Condenser (26)	209
6.3.3.17	Radiators and hydraulic oil (27)	210
6.3.3.18	Adjusting the rotary screen brushes and aspirator brushes	211
6.3.3.19	Chaff spreader drive (if fitted) (28)	212
6.3.4	Interval - 150 hours	213
6.3.4.1	Park brake (41)	213
6.3.4.2	Gearbox (42)	213
6.3.4.3	Final drives (43)	214
6.3.4.4	Unloading auger bottom gearbox (44)	214
6.3.4.5	Main crop elevator supports (45)	215
6.3.4.6	Reversing-belt tensioner-arm pin (46)	215
6.3.4.7	Main clutch (47)	216
6.3.4.8	Tailings-auger left support (48)	216
6.3.4.9	Windscreen wash fluid reservoir (49)	217
6.3.4.10	Threshing-mechanism belt tensioner (50)	217
6.3.4.11	Hydrostatic pump belt tensioner (51)	218
6.3.4.12	Unloading auger slewing ring (52)	218
6.3.4.13	Engine air filter (53)	219
6.3.4.14	Straw-chopper driven belt tensioner (54)	220
6.3.4.15	Straw chopper drive-belt tensioner (55)	220
6.3.4.16	Engine (56)	220
6.3.4.17	Straw chopper layshaft (57)	222
6.3.4.18	Return rotary-screen belt tensioner (58)	222
6.3.4.19	Rotary-screen belt tensioner (59)	223
6.3.4.20	Radiator-fan drive belt tensioner (60)	223
6.3.5	Interval - 225 hours	223
6.3.5.1	Engine oil and filters (71)	223
6.3.6	Interval - 450 hours	227
6.3.6.1	Battery (81)	227
6.3.6.2	Dehydrator filter (82)	228
6.3.6.3	Final drives (83)	229
6.3.6.4	Gearbox (84)	229
6.3.6.5	Hydraulic oil intake filter (85)	230
6.3.6.6	Hydrostatic transmission filter (86)	231
6.3.6.7	Hydraulic systems oil (87)	232
6.3.6.8	Hydraulic and hydrostatic system return filter (88)	233
6.3.6.9	Engine diesel-fuel filters (89)	234
6.3.6.10	Catalytic fluid filter (90)	235
6.4	Periodical maintenance operations	236
6.4.1	Description	236
6.4.1.1	Engine valves (1)	237
6.4.1.2	Coolant (2)	238
6.4.1.3	Service brake circuit fluid (3)	239
6.4.1.4	Diesel fuel tank (4)	239
6.4.1.5	Turbocharger (5)	240
6.4.1.6	Hydraulic hoses (6)	240

6.5 Lubrication	241
6.5.1 Summary table	241
7 Adjustments	243
7.1 Adjustments	245
7.1.1 Important information	245
7.2 Belt and chain adjustment	246
7.2.1 Belts and chains (left-hand side)	246
7.2.1.1 Feeder drive belt (1)	246
7.2.1.2 Threshing unit drive belt (2)	247
7.2.1.3 Unloading auger drive belt (3)	247
7.2.1.4 Hydrostatic pump drive belt (4)	248
7.2.1.5 Chaff spreader drive belt (if fitted) (5)	249
7.2.1.6 Reversing drive belt (6)	249
7.2.1.7 Main transmission belt (7)	250
7.2.1.8 Clean grain and tailings augers drive belt (8)	250
7.2.1.9 Straw walker drive belt (9)	251
7.2.1.10 Cutting table drive belt (10)	251
7.2.1.11 Unloading auger chain (11)	252
7.2.1.12 Straw chopper drive belt (if fitted) (12)	252
7.2.1.13 Straw chopper drive belt (if fitted) (13)	253
7.2.2 Belts and chains (right-hand side)	253
7.2.2.1 Belt drive for rotary screen (21)	254
7.2.2.2 Counter drive for rotary screen (22)	254
7.2.2.3 Drive belt for alternator and engine coolant pump (23)	255
7.2.2.4 Radiator fan drive belt (24)	255
7.2.2.5 Belt drive for cylinder variator (25)	256
7.2.2.6 Belt drive for fanning mill variator (26)	257
7.2.2.7 Top chain drive for tailings auger (27)	258
7.2.2.8 Tailings elevator chain (28)	258
7.2.2.9 Tank filling auger drive chain (29)	259
7.2.2.10 Crop elevator chain (30)	259
7.2.2.11 Front crop-elevator chain (31)	260
7.2.2.12 Cab air-conditioning compressor drive belt (32)	260
7.2.2.13 Dust aspirator drive belt (33)	261
7.3 Slip clutches	262
7.3.1 Description	262
7.3.1.1 Clutch for main crop elevator upper shaft (1)	262
7.3.1.2 Clutch for shaker shoe counter drive (2)	262
7.3.1.3 Shear bolt for unloading auger counter drive (3)	263
7.4 Tires	264
7.4.1 Tire pressure	264
7.4.2 Replacement of Front Wheels	264
7.4.3 Replacement of Rear Wheels	265
7.4.4 Front wheel assembly	267
7.4.5 Rear wheel assembly	268
7.5 Brakes	269
7.5.1 Service brakes	269
7.5.2 Park brake	270
7.6 Rear axle	271
7.6.1 Toe-in setting	271
7.6.2 Steering ram ball joints	271
7.6.3 Rear axle support	272
7.7 Battery	273
7.7.1 Battery Replacement	273
7.7.2 Suggestions regarding the battery	273

7.7.3 Indicator Light for Battery Charging	274
8 Systems	275
8.1 Safety Precautions	277
8.1.1 Notes	277
8.2 Engine supply system	278
8.2.1 Permitted fuels	278
8.2.2 Fuel Circuit	278
8.2.3 Bleeding the Fuel Supply Circuit	280
8.2.4 Catalytic fluid tank (DEF)	281
8.2.5 Injection system operation	282
8.3 Engine air intake and exhaust system	283
8.3.1 Operation	283
8.4 Engine cooling system	285
8.4.1 Coolant	285
8.4.2 Engine cooling system operation	286
8.5 Engine lubrication system	287
8.5.1 Operation	287
8.5.2 Oil vapor recovery system	288
8.6 SCR system	289
8.6.1 Operation	289
8.7 Hydraulics system	291
8.7.1 Pumps and fuel tank	291
8.7.2 Table positioning hydraulic circuits	292
8.7.2.1 Cutting table oleopneumatic shock absorber	293
8.7.2.2 Hose burst valve	293
8.7.2.3 Cutting table positioning pressure switch	294
8.7.3 Hydraulic steering system	295
8.7.4 Auxiliary hydraulics circuit	296
8.8 Hydrostatic transmission system	297
8.8.1 Front-wheel drive	297
8.9 Electrical system	298
8.9.1 Main components	298
8.9.2 Fuses	299
8.9.3 Additional fuses	302
8.9.4 Cab fuses	305
8.9.5 Relays	306
8.9.5.1 Additional relays	308
8.9.5.2 Various relays	309
8.9.6 Control units	310
8.9.6.1 Engine sensors and control unit	311
8.9.7 Connections for additional equipment	312
8.9.7.1 Electric connectors	312
8.9.8 Headlight adjustment	314
8.9.9 Unloading area light	315
8.9.10 Reversing area light	315
8.9.11 Light in grain tank	316
8.9.12 Engine access-ladder light	316
9 Troubleshooting	317
9.1 Description	319
9.1.1 Feeding	319
9.1.2 Threshing	319
9.1.3 Separation and cleaning	321
9.1.4 Hydrostatic Transmission	324
9.1.5 Engine	325



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

9.1.6	Hydraulics system	327
9.1.7	Electrical system	328
9.1.8	Air conditioning circuit	329
9.1.9	Straw chopper	329
10	Off-Season Storage	333
10.1	Procedure to follow	335
10.1.1	Operations to be carried out after the harvest	335
10.1.2	Ordering spare parts	336
10.1.3	Operations to be carried out before the new season	336
11	Optional equipment	339
11.1	Information	341
11.1.1	General considerations	341
11.2	Optional equipment	342
11.2.1	Auxiliary table lifting ram	342
11.2.2	Camera	343
11.2.3	Additional rear view mirrors	343
11.2.4	Additional lights (for work)	344
11.2.5	Performance monitor	344
11.2.6	Windbreak	345
11.2.7	Additional fire extinguisher	345
11.2.8	Diesel fuel filter	346
11.2.9	Additional Portable Lamp	346
11.2.10	Weight and moisture control monitor	347
11.2.11	Trailer hitch	347
11.2.12	Refrigerator	348
11.2.13	Cylinder cover	348
11.2.14	Tailings cover plate	349
11.2.15	Top sieve	349
11.2.16	Bottom sieve	350
11.2.17	Electrically-operated sieves and returns sensors	351
11.2.18	Cutting height control	352
11.2.19	Hydraulic quick couplers	352
11.3	Equipment for threshing	353
11.3.1	Equipment for maize	353
11.3.2	Equipment for corn-cob	354
11.3.3	Equipment for rice	355
11.3.4	Equipment for light seed crops	355
11.3.5	Equipment for soya and peas	356
11.4	Ballast weights	357
11.4.1	Description	357
11.4.2	Ballast weights on rear axle	357
11.4.3	Ballast weights on the straw walker hood for machines without straw chopper	358
11.4.4	Ballast weights on the rear wheels with a liquid mix (for tubeless tires)	359
11.4.5	Filling tires with anti-freeze solutions	360
11.5	Straw chopper	361
11.5.1	Transport position	361
11.5.2	Working position	362
11.5.3	Operating the straw chopper	363
11.5.4	Disengaging the straw chopper	365
11.5.5	Access to the straw chopper rotor	365
11.5.6	Straw chopper rotor knives	365
11.5.7	Counter-knives	366
11.5.8	Chopping quality	366
11.5.9	Use of straw chopper in maize	368
11.6	Chaff Spreader	370

11.6.1 Working and maintenance positions	370
11.6.2 Chaff spreader speed	372
11.6.3 Disengaging the chaff spreader	372
11.6.4 Chaff spreader belt tensioning	372
11.7 Tracks	373
11.7.1 Use and maintenance	373
11.7.2 Track chain tension	374
12 Technical Specifications	375
12.1 Wheels and tires	377
12.1.1 information	377
12.1.2 Wheel tightening torque	377
12.1.3 Tire capacity	377
12.1.4 Tire equipment- front axle	378
12.1.5 Tire equipment - rear axle	379
12.1.6 Tire equipment - Version with half-tracks on front axle	380
12.2 Dimensions	381
12.2.1 Combine dimensions	381
12.2.2 Tracks with runners	383
12.2.3 Clearance between unloading auger and table	384
12.2.4 Available cutting tables and weights	384
12.2.5 Clearance between unloading auger and ground	385
12.3 Technical specifications	386
12.3.1 Feeding unit	386
12.3.2 Threshing sys.	386
12.3.3 Cleaning unit	388
12.3.4 Grain tank	389
12.3.5 Hydraulic system	390
12.3.6 Hydrostatic system	390
12.3.7 Engine	390
12.3.8 Electrical components	391
12.3.9 Transmission	391
12.3.10 Rear axle	392
12.3.11 Weight	392
13 Index	393

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>