

Operator's Manual



Combines

FENDT 5185 E

*FENDT 5185 E - S/N => 551200044
ZN205512x03000044*



Breganze
AGCO S.p.A. - Via F. Laverda, 15/17 - 36042
BREGANZE (VI) – Italy.
FENDT is a worldwide brand of AGCO
© AGCO 2016
Original Operator's Manual

November 2016
FENDT 5185 E_EN_LA327435011
EAME
English

Combines

1 General Information	13
1.1 Information	15
1.1.1 Introduction	15
1.1.2 Company policy	15
1.1.3 Optional equipment	15
1.1.4 Spare parts and accessories	16
1.1.5 Warranty	16
1.1.6 Lubricants	16
1.2 Use	18
1.2.1 Use of the combine	18
1.3 Identification	19
1.3.1 Combine identification	19
1.3.2 Engine Identification	20
1.3.3 Cutting table identification	21
1.3.4 Cab identification	21
1.3.5 Hydrostatic pump identification	22
1.3.6 Hydrostatic motor identification	22
1.3.7 Straw chopper identification (if fitted)	23
1.3.8 Chaff spreader identification (if fitted)	23
1.3.9 Trailer hitch identification (if fitted)	24
1.4 Identification form	25
1.4.1 Machine data	25
1.5 Conformity	26
1.5.1 EC Declaration of Conformity	26
1.6 Information	27
1.6.1 Ecology	27
1.6.2 Hydraulic systems: hoses	27
1.6.3 Scrapping and disposal	28
1.7 Weight	29
1.7.1 Weight distribution	29
2 Safety	31
2.1 Warning symbols and safety instructions	33
2.1.1 Warnings	33
2.2 Information for road transport	34
2.2.1 Road transport	34
2.3 Information for operations	37
2.3.1 Field Operations	37
2.4 Information for maintenance	41
2.4.1 Maintenance work	41
2.5 Information on the engine	45
2.5.1 Engine	45
2.6 Safety and function decals	49
2.6.1 Location of decals	49
2.6.2 Description of decals	54
2.7 Work on the battery	64
2.7.1 Battery	64
2.8 Safety devices	65
2.8.1 Emergency exit	65

2.8.2	Operator presence device	66
2.8.3	Safety belts	67
2.8.4	Table safety stops	68
2.8.5	Safety guard for main crop elevator	69
2.8.6	Safety Stop	69
2.8.7	Sprags for wheels	70
2.8.8	Audible alarm for reversing	71
2.8.9	Reflectors for road transport	72
2.8.10	Safety Guards	73
2.8.11	Fall protection rails	73
2.8.12	Safety devices for operations to be carried out in the upper part of the machine	74
2.8.13	Straw chopper	75
2.8.14	Fire extinguisher	75
2.9	Trailer hitch	76
2.9.1	Automatic towing hooks	76
2.9.2	CUNA and CE trailer hitches	77
2.9.2.1	Procedure for attaching and removing	78
2.9.2.2	Drawbar coupling	79
2.9.3	Fixed trailer hitch (non-automatic - CUNA type)	79
2.10	Machine lifting	80
2.10.1	Attachment points	80
2.11	Towing	81
2.11.1	Towing the combine	81
2.12	Further information	82
2.12.1	Noise level in the cab	82
2.12.2	Vibrations in the cab	82
2.12.3	Statutory regulations	82
2.12.4	Electromagnetic emissions	83
2.13	Notes	84
2.13.1	Notes for road transport	84
3	Operation	87
3.1	Combine operation	89
3.1.1	Crop processing	89
3.2	Stage 1	90
3.2.1	Feeding	90
3.3	Stage 2	91
3.3.1	Threshing	91
3.4	Stage 3	92
3.4.1	Separation	92
3.5	Stage 4	93
3.5.1	Cleaning	93
3.6	Stage 5	94
3.6.1	Grain storage and unloading	94
4	Controls and Instruments	95
4.1	Steering column	97
4.1.1	Components and adjustments	97
4.2	Multifunction lever	98
4.2.1	Main components	98
4.3	Instrument panel	99
4.3.1	Front control panel	99
4.3.2	Rear control panel	101
4.3.3	Multiple light indicators	105
4.3.4	On-board Computer	106

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

4.3.4.1	Graphical user interface	108
4.3.4.2	Day/night mode	110
4.3.4.3	Operational parameters	111
4.3.4.4	Auto-calibration	111
4.3.4.5	Hectare counter	112
4.3.4.6	No communication	112
4.3.4.7	Alarm statuses	113
4.3.5	Performance monitor (on request)	113
4.3.5.1	Using the monitor	114
4.3.5.2	Selecting the measurement range (straw walker, sieves or total)	114
4.3.5.3	Calibrating the bar cursor scale	115
4.3.5.4	Sensitivity adjustment	115
4.3.5.5	Shifting to forward speed monitoring	116
4.3.5.6	Summary of keyboard functions	116
4.4	Controls at the operator seat	117
4.4.1	Description	117
4.5	Cab	119
4.5.1	Cab controls (top right-hand side)	119
4.5.2	Operator seat	122
4.5.3	Preparation for radio installation	123
4.5.4	Rear Cab Window	123
4.5.5	Reading light	124
4.5.6	Document Pocket	124
4.5.7	Air conditioning in the cab	125
4.5.7.1	Pressurization	126
4.5.8	Heating	127
4.6	Access to combine components	128
4.6.1	Access to the operator platform	128
4.6.2	Accessing and cleaning the front windscreen of the cab	129
4.6.3	Access to the engine compartment	130
4.6.4	Access to the grain tank	131
4.6.5	Access to the inside of the grain tank	132
4.7	Engine	133
4.7.1	Starting the engine	133
4.7.2	Useful advice	134
4.7.3	Stopping the engine	135
4.8	Road transport	136
4.8.1	Operations to be carried out before transportation	136
4.8.2	Position light and sidelight adjustment	137
4.9	Using the combine	138
4.9.1	Operations to be carried out before use	138
5	Field Operations	139
5.1	General Information	141
5.1.1	Notes	141
5.1.2	Before operating the machine in the field	141
5.2	Starting and Stopping the Combine	143
5.2.1	Procedure to follow	143
5.3	Cutting table	145
5.3.1	Attaching the cutting table	145
5.3.1.1	Adjustments for attaching the cutting table	147
5.3.2	Removing the table	148
5.3.3	Adjustment of cutting table ground clearance	149
5.4	Main Crop Elevator	150
5.4.1	Adjustments	150
5.4.1.1	Access to the main components	152

5.4.2 Reverse drive system	153
5.5 Cylinder Housing	154
5.5.1 Components	154
5.5.2 Threshing drum	155
5.5.3 Wheat concave	156
5.5.3.1 Concave filler plates	157
5.5.3.2 Parallelism between the cylinder and concave	158
5.5.3.3 Unblocking the threshing drum	159
5.5.4 Sectional concave	160
5.5.4.1 Concave filler plates	161
5.5.4.2 Parallelism between the cylinder and concave	162
5.5.5 Universal wheat/maize concave	163
5.5.5.1 Basic concave settings	164
5.5.6 Spike-toothed Cylinder/Concave (for rice)	164
5.5.7 Rear beater	166
5.6 Straw walkers	167
5.6.1 Description and adjustments	167
5.7 Main Grain Pan	168
5.7.1 Description	168
5.7.2 Checking the main grain pan	169
5.7.3 Cleaning the main grain pan	170
5.7.4 Stone trap assembly removal/refitting	171
5.8 Fanning Mill	173
5.8.1 Description and adjustments	173
5.8.1.1 Fanning mill for threshing light seed crops	175
5.9 Top sieve	176
5.9.1 Adjustment	176
5.10 Bottom sieve	180
5.10.1 Adjustment	180
5.11 Tailings	182
5.11.1 Description and adjustments	182
5.12 Grain tank	184
5.12.1 Description	184
5.12.1.1 Grain tank unloading auger	185
5.12.1.2 Sensor to measure tank filling	186
5.12.1.3 Grain tank control window	187
5.12.1.4 Doors for Grain Tank Maintenance and Cleaning	187
5.12.1.5 Vertical auger tank drain door	189
5.12.1.6 Tank bottom door	189
5.12.1.7 Grain Tank Cover	190
5.12.1.8 Basic Settings	191
6 Lubrication and Maintenance	193
6.1 General Information	195
6.1.1 Lubrication and Maintenance	195
6.2 Preliminary Service Inspection	196
6.2.1 After the first 50 working hours	196
6.3 Scheduled Service Inspection	197
6.3.1 When and where to carry it out	197
6.3.2 Interval - 10 hours	199
6.3.2.1 Cylinder variator (1)	199
6.3.2.2 Engine oil (2)	200
6.3.2.3 Coolant expansion tank (3)	201
6.3.2.4 Hydraulic and hydrostatic systems tank (4)	201
6.3.2.5 Prefilter/water separator (5)	202
6.3.2.6 Straw chopper rotor (if fitted) (6)	202

6.3.3	Interval - 75 hours	203
6.3.3.1	Service brakes (11)	203
6.3.3.2	Main crop elevator lower shaft (12)	203
6.3.3.3	Main crop elevator belt tensioner (13)	204
6.3.3.4	Fanning mill variator (14)	204
6.3.3.5	Crop-unloading auger drive belt tensioner (15)	205
6.3.3.6	Coupling bushes of final drive shafts (16)	205
6.3.3.7	Rear axle support (17)	206
6.3.3.8	Rear axle king pins (18)	206
6.3.3.9	Rear straw-walker shaft supports (19)	207
6.3.3.10	Unloading auger bottom gearbox (20)	207
6.3.3.11	Unloading auger top gearbox (21)	208
6.3.3.12	Table drive-belt tensioner (22)	208
6.3.3.13	Track frames (23)	209
6.3.3.14	Cab air filters (24)	209
6.3.3.15	Evaporator (25)	210
6.3.3.16	Condenser (26)	211
6.3.3.17	Radiators and hydraulic oil (27)	212
6.3.3.18	Adjusting the rotary screen brushes and aspirator brushes	213
6.3.3.19	Chaff spreader drive (if fitted) (28)	214
6.3.4	Interval - 150 hours	215
6.3.4.1	Park brake (41)	215
6.3.4.2	Gearbox (42)	215
6.3.4.3	Final drives (43)	216
6.3.4.4	Unloading auger bottom gearbox (44)	216
6.3.4.5	Main crop elevator supports (45)	217
6.3.4.6	Reversing-belt tensioner-arm pin (46)	217
6.3.4.7	Main clutch (47)	218
6.3.4.8	Tailings-auger left support (48)	218
6.3.4.9	Windscreen wash fluid reservoir (49)	219
6.3.4.10	Threshing-mechanism belt tensioner (50)	219
6.3.4.11	Hydrostatic pump belt tensioner (51)	220
6.3.4.12	Unloading auger slewing ring (52)	220
6.3.4.13	Engine air filter (53)	221
6.3.4.14	Straw-chopper driven belt tensioner (54)	222
6.3.4.15	Straw chopper drive-belt tensioner (55)	222
6.3.4.16	Engine (56)	222
6.3.4.17	Straw chopper layshaft (57)	224
6.3.4.18	Return rotary-screen belt tensioner (58)	224
6.3.4.19	Rotary-screen belt tensioner (59)	225
6.3.4.20	Radiator-fan drive belt tensioner (60)	225
6.3.5	Interval - 225 hours	225
6.3.5.1	Engine oil and filters (71)	225
6.3.6	Interval - 450 hours	229
6.3.6.1	Battery (81)	229
6.3.6.2	Dehydrator filter (82)	230
6.3.6.3	Final drives (83)	231
6.3.6.4	Gearbox (84)	231
6.3.6.5	Hydraulic oil intake filter (85)	232
6.3.6.6	Hydrostatic transmission filter (86)	233
6.3.6.7	Hydraulic systems oil (87)	234
6.3.6.8	Hydraulic and hydrostatic system return filter (88)	235
6.3.6.9	Engine diesel-fuel filters (89)	236
6.3.6.10	Catalytic fluid filter (90)	237
6.4	Periodical maintenance operations	238
6.4.1	Description	238
6.4.1.1	Engine valves (1)	239
6.4.1.2	Coolant (2)	240

6.4.1.3	Service brake circuit fluid (3)	241
6.4.1.4	Diesel fuel tank (4)	241
6.4.1.5	Turbocharger (5)	242
6.4.1.6	Hydraulic hoses (6)	242
6.4.1.7	Catalytic fluid tank (DEF) (7)	243
6.5	Lubrication	244
6.5.1	Summary table	244
7	Adjustments	245
7.1	Adjustments	247
7.1.1	Important information	247
7.2	Belt and chain adjustment	248
7.2.1	Belts and chains (left-hand side)	248
7.2.1.1	Feeder drive belt (1)	248
7.2.1.2	Threshing unit drive belt (2)	249
7.2.1.3	Unloading auger drive belt (3)	250
7.2.1.4	Hydrostatic pump drive belt (4)	251
7.2.1.5	Chaff spreader drive belt (if fitted) (5)	252
7.2.1.6	Reversing drive belt (6)	253
7.2.1.7	Main transmission belt (7)	253
7.2.1.8	Clean grain and tailings augers drive belt (8)	254
7.2.1.9	Straw walker drive belt (9)	254
7.2.1.10	Cutting table drive belt (10)	255
7.2.1.11	Unloading auger chain (11)	255
7.2.1.12	Straw chopper drive belt (if fitted) (12)	256
7.2.1.13	Straw chopper drive belt (if fitted) (13)	257
7.2.2	Belts and chains (right-hand side)	258
7.2.2.1	Belt drive for rotary screen (21)	258
7.2.2.2	Counter drive for rotary screen (22)	259
7.2.2.3	Drive belt for alternator and engine coolant pump (23)	259
7.2.2.4	Radiator fan drive belt (24)	260
7.2.2.5	Belt drive for cylinder variator (25)	260
7.2.2.6	Belt drive for fanning mill variator (26)	261
7.2.2.7	Top chain drive for tailings auger (27)	262
7.2.2.8	Tailings elevator chain (28)	262
7.2.2.9	Tank filling auger drive chain (29)	263
7.2.2.10	Crop elevator chain (30)	263
7.2.2.11	Front crop-elevator chain (31)	264
7.2.2.12	Cab air-conditioning compressor drive belt (32)	265
7.2.2.13	Dust aspirator drive belt (33)	266
7.3	Slip clutches	267
7.3.1	Description	267
7.3.1.1	Clutch for main crop elevator upper shaft (1)	267
7.3.1.2	Clutch for shaker shoe counter drive (2)	267
7.3.1.3	Shear bolt for unloading auger counter drive (3)	268
7.4	Tires	269
7.4.1	Tire pressure	269
7.4.2	Replacement of Front Wheels	270
7.4.3	Replacement of Rear Wheels	271
7.4.4	Front wheel assembly	272
7.4.5	Rear wheel assembly	273
7.5	Brakes	274
7.5.1	Service brakes	274
7.5.2	Park brake	275
7.6	Rear axle	276
7.6.1	Toe-in setting	276
7.6.2	Steering ram ball joints	276

7.6.3 Rear axle support	277
7.7 Battery	278
7.7.1 Battery Replacement	278
7.7.2 Suggestions regarding the battery	278
7.7.3 Indicator Light for Battery Charging	279
8 Systems	281
8.1 Safety Precautions	283
8.1.1 Notes	283
8.2 Engine supply system	284
8.2.1 Permitted fuels	284
8.2.2 Fuel Circuit	285
8.2.3 Bleeding the Fuel Supply Circuit	286
8.2.4 Catalytic fluid tank (DEF)	287
8.2.5 Injection system operation	289
8.3 Engine air intake and exhaust system	290
8.3.1 Operation	290
8.4 Engine cooling system	292
8.4.1 Coolant	292
8.4.2 Engine cooling system operation	293
8.5 Engine lubrication system	294
8.5.1 Operation	294
8.5.2 Oil vapor recovery system	295
8.6 SCR system	296
8.6.1 Operation	296
8.7 Hydraulics system	298
8.7.1 Pumps and fuel tank	298
8.7.2 Table positioning hydraulic circuits	299
8.7.2.1 Cutting table oleopneumatic shock absorber	300
8.7.2.2 Hose burst valve	300
8.7.2.3 Cutting table positioning pressure switch	301
8.7.3 Hydraulic steering system	302
8.7.4 Auxiliary hydraulics circuit	303
8.8 Hydrostatic transmission system	304
8.8.1 Front-wheel drive	304
8.9 Electrical system	305
8.9.1 Main components	305
8.9.2 Fuses	306
8.9.3 Additional fuses	309
8.9.4 Cab fuses	312
8.9.5 Relays	313
8.9.5.1 Additional relays	315
8.9.5.2 Various relays	316
8.9.6 Control units	317
8.9.6.1 Engine sensors and control unit	318
8.9.7 Connections for additional equipment	319
8.9.7.1 Electric connectors	319
8.9.8 Headlight adjustment	321
8.9.9 Unloading area light	322
8.9.10 Reversing area light	322
8.9.11 Light in grain tank.	323
8.9.12 Engine access-ladder light	323
9 Troubleshooting	325
9.1 Description	327
9.1.1 Feeding	327



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

9.1.2	Threshing	327
9.1.3	Separation and cleaning	329
9.1.4	Hydrostatic Transmission	332
9.1.5	Engine	333
9.1.6	Hydraulics system	335
9.1.7	Electrical system	336
9.1.8	Air conditioning circuit	337
9.1.9	Straw chopper	337
10	Off-Season Storage	341
10.1	Procedure to follow	343
10.1.1	Operations to be carried out after the harvest	343
10.1.2	Ordering spare parts	344
10.1.3	Operations to be carried out before the new season	344
11	Optional equipment	347
11.1	Information	349
11.1.1	General considerations	349
11.2	Optional equipment	350
11.2.1	Auxiliary table lifting ram	350
11.2.2	Camera	351
11.2.3	Additional rear view mirrors	351
11.2.4	Additional lights (for work)	352
11.2.5	Performance monitor	352
11.2.6	Windbreak	353
11.2.7	Additional fire extinguisher	353
11.2.8	Diesel fuel prefilter	354
11.2.9	Additional Portable Lamp	354
11.2.10	Weight and moisture control monitor	355
11.2.11	Trailer hitch	355
11.2.12	Refrigerator	356
11.2.13	Cylinder cover	356
11.2.14	Tailings cover plate	357
11.2.15	Top sieve	357
11.2.16	Bottom sieve	358
11.2.17	Electrically-operated sieves and returns sensors	359
11.2.18	Cutting height control	360
11.2.19	Hydraulic quick couplers	360
11.3	Equipment for threshing	361
11.3.1	Equipment for maize	361
11.3.2	Equipment for corn-cob	362
11.3.3	Equipment for rice	363
11.3.4	Equipment for light seed crops	363
11.3.5	Equipment for soya and peas	364
11.4	Ballast weights	365
11.4.1	Description	365
11.4.2	Ballast weights on rear axle	365
11.4.3	Ballast weights on the straw walker hood for machines without straw chopper	366
11.4.4	Ballast weights on the rear wheels with a liquid mix (for tubeless tires)	367
11.4.5	Filling tires with anti-freeze solutions	368
11.5	Straw chopper	369
11.5.1	Transport position	369
11.5.2	Working position	370
11.5.3	Operating the straw chopper	371
11.5.4	Disengaging the straw chopper	373
11.5.5	Access to the straw chopper rotor	373
11.5.6	Straw chopper rotor knives	373

11.5.7 Counter-knives	374
11.5.8 Chopping quality	374
11.5.9 Use of straw chopper in maize	376
11.6 Chaff Spreader	378
11.6.1 Working and maintenance positions	378
11.6.2 Chaff spreader speed	380
11.6.3 Disengaging the chaff spreader	380
11.6.4 Chaff spreader belt tensioning	380
11.7 Tracks	381
11.7.1 Use and maintenance	381
11.7.2 Track chain tension	382
12 Technical Specifications	383
12.1 Wheels and tires	385
12.1.1 information	385
12.1.2 Wheel tightening torque	385
12.1.3 Tire capacity	385
12.1.4 Tire equipment- front axle	386
12.1.5 Tire equipment - rear axle	387
12.1.6 Tire equipment - Version with half-tracks on front axle	388
12.2 Dimensions	389
12.2.1 Combine dimensions	389
12.2.2 Tracks with runners	391
12.2.3 Clearance between unloading auger and table	392
12.2.4 Available cutting tables and weights	392
12.2.5 Clearance between unloading auger and ground	393
12.3 Technical specifications	394
12.3.1 Feeding unit	394
12.3.2 Threshing sys.	394
12.3.3 Cleaning unit	396
12.3.4 Grain tank	397
12.3.5 Hydraulic system	398
12.3.6 Hydrostatic system	398
12.3.7 Engine	398
12.3.8 Electrical components	399
12.3.9 Transmission	399
12.3.10 Rear axle	400
12.3.11 Weight	400
13 Index	401

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>