

Operator's Manual

FENDT

Combines

FENDT 5185 E

FENDT 5185 E - S/N => ZN205512_03010001



Breganze
AGCO S.p.A. - Via F. Laverda, 15/17 - 36042
BREGANZE (VI) – Italy.
FENDT is a worldwide brand of AGCO
© AGCO 2018
Original Operator's Manual

July 2018
FENDT 5185 E_EN_LA327435013
EME
English

Combines

1	General Information	13
1.1	Information	15
1.1.1	Introduction	15
1.1.2	Company policy	15
1.1.3	Optional equipment	15
1.1.4	Spare parts and accessories	16
1.1.5	Warranty	16
1.1.6	Lubricants	16
1.2	Use	18
1.2.1	Use of the combine	18
1.3	Identification	19
1.3.1	Combine identification	19
1.3.2	Engine Identification	20
1.3.3	Cutting table identification	21
1.3.4	Cab identification	21
1.3.5	Hydrostatic pump identification	22
1.3.6	Hydrostatic motor identification	22
1.3.7	Straw chopper identification (if fitted)	23
1.3.8	Chaff spreader identification (if fitted)	23
1.3.9	Trailer hitch identification (if fitted)	24
1.4	Identification form	25
1.4.1	Machine data	25
1.5	Conformity	26
1.5.1	EC Declaration of Conformity	26
1.6	Information	28
1.6.1	Ecology	28
1.6.2	Hydraulic systems: hoses	28
1.6.3	Scrapping and disposal	29
1.7	Weight	30
1.7.1	Weight distribution	30
2	Safety	33
2.1	Warning symbols and safety instructions	35
2.1.1	Warnings	35
2.2	Information for road transport	36
2.2.1	Road transport	36
2.3	Information for operations	39
2.3.1	Field Operations	39
2.4	Information for maintenance	43
2.4.1	Maintenance work	43
2.5	Information on the engine	47
2.5.1	Engine	47
2.6	Safety and function decals	50
2.6.1	Location of decals	50
2.6.2	Description of decals	54
2.7	Work on the battery	64
2.7.1	Battery	64
2.8	Safety devices	65
2.8.1	Emergency exit	65

2.8.2	Operator presence device	66
2.8.3	Safety belts	67
2.8.4	Table safety stops	68
2.8.5	Safety guard for main crop elevator	69
2.8.6	Safety Stop	69
2.8.7	Sprags for wheels	70
2.8.8	Audible alarm for reversing	71
2.8.9	Reflectors for road transport	72
2.8.10	Safety Guards	73
2.8.11	Fall protection rails	73
2.8.12	Safety devices for operations to be carried out in the upper part of the machine	74
2.8.13	Straw chopper	75
2.8.14	Fire extinguisher	75
2.9	Trailer hitch	76
2.9.1	Automatic towing hooks	76
2.9.2	CUNA and CE trailer hitches	77
2.9.2.1	Procedure for attaching and removing	78
2.9.2.2	Drawbar coupling	79
2.9.3	Fixed trailer hitch (non-automatic - CUNA type)	79
2.10	Machine lifting	80
2.10.1	Attachment points	80
2.11	Towing	81
2.11.1	Towing the combine	81
2.12	Further information	82
2.12.1	Noise level in the cab	82
2.12.2	Vibrations in the cab	82
2.12.3	Statutory regulations	82
2.12.4	Electromagnetic emissions	83
2.13	Notes	84
2.13.1	Notes for road transport	84
3	Operation	87
3.1	Combine operation	89
3.1.1	Crop processing	89
3.2	Stage 1	90
3.2.1	Feeding	90
3.3	Stage 2	91
3.3.1	Threshing	91
3.4	Stage 3	92
3.4.1	Separation	92
3.5	Stage 4	93
3.5.1	Cleaning	93
3.6	Stage 5	94
3.6.1	Grain storage and unloading	94
4	Controls and Instruments	95
4.1	Steering column	97
4.1.1	Components and adjustments	97
4.2	Multifunction lever	98
4.2.1	Main components	98
4.3	Instrument panel	99
4.3.1	Front control panel	99
4.3.2	Rear control panel	101
4.3.3	Multiple light indicators	105
4.3.4	On-board Computer	106

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

4.3.4.1	Graphical user interface	108
4.3.4.2	Day/night mode	110
4.3.4.3	Operational parameters	111
4.3.4.4	Auto-calibration	111
4.3.4.5	Hectare counter	112
4.3.4.6	No communication	112
4.3.4.7	Alarm statuses	113
4.3.5	Performance monitor (on request)	113
4.3.5.1	Using the monitor	114
4.3.5.2	Selecting the measurement range (straw walker, sieves or total)	114
4.3.5.3	Calibrating the bar cursor scale	115
4.3.5.4	Sensitivity adjustment	115
4.3.5.5	Shifting to forward speed monitoring	116
4.3.5.6	Summary of keyboard functions	116
4.4	Description	117
4.5	Cab	118
4.5.1	Cab controls (top right-hand side)	118
4.5.2	Operator seat	121
4.5.3	Preparation for radio installation	122
4.5.4	Rear Cab Window	122
4.5.5	Reading light	123
4.5.6	Document Pocket	123
4.5.7	Air conditioning in the cab	124
4.5.7.1	Pressurization	125
4.5.8	Heating	126
4.6	Access to combine components	127
4.6.1	Access to the operator platform	127
4.6.2	Accessing and cleaning the front windscreen of the cab	128
4.6.3	Access to the engine compartment	129
4.6.4	Access to the grain tank	130
4.6.5	Access to the inside of the grain tank	131
4.7	Engine	132
4.7.1	Starting the engine	132
4.7.2	Useful advice	133
4.7.3	Stopping the engine	134
4.8	Road transport	135
4.8.1	Operations to be carried out before transportation	135
4.8.2	Position light and sidelight adjustment	136
4.9	Using the combine	137
4.9.1	Operations to be carried out before use	137
5	Field Operations	139
5.1	General Information	141
5.1.1	Notes	141
5.1.2	Before operating the machine in the field	141
5.2	Starting and Stopping the Combine	143
5.2.1	Procedure to follow	143
5.3	Cutting table	145
5.3.1	Attaching the cutting table	145
5.3.1.1	Adjustments for attaching the cutting table	147
5.3.2	Removing the table	148
5.3.3	Adjustment of cutting table ground clearance	149
5.4	Main Crop Elevator	150
5.4.1	Adjustments	150
5.4.1.1	Access to the main components	152
5.4.2	Reverse drive system	153

5.5	Cylinder Housing	154
5.5.1	Components	154
5.5.2	Threshing drum	155
5.5.3	Wheat concave	156
5.5.3.1	Concave filler plates	157
5.5.3.2	Parallelism between the cylinder and concave	158
5.5.3.3	Unblocking the threshing drum	159
5.5.4	Sectional concave	160
5.5.4.1	Concave filler plates	161
5.5.4.2	Parallelism between the cylinder and concave	162
5.5.5	Universal wheat/maize concave	163
5.5.5.1	Basic concave settings	164
5.5.6	Spike-toothed Cylinder/Concave (for rice)	164
5.5.7	Rear beater	166
5.6	Straw walkers	167
5.6.1	Description and adjustments	167
5.7	Main Grain Pan	168
5.7.1	Description	168
5.7.2	Checking the main grain pan	169
5.7.3	Cleaning the main grain pan	170
5.7.4	Stone trap assembly removal/refitting	171
5.8	Fanning Mill	173
5.8.1	Description and adjustments	173
5.8.1.1	Fanning mill for threshing light seed crops	175
5.9	Top sieve	176
5.9.1	Adjustment	176
5.10	Bottom sieve	180
5.10.1	Adjustment	180
5.11	Tailings	182
5.11.1	Description and adjustments	182
5.12	Grain tank	184
5.12.1	Description	184
5.12.1.1	Grain tank unloading auger	185
5.12.1.2	Sensor to measure tank filling	186
5.12.1.3	Grain tank control window	186
5.12.1.4	Doors for Grain Tank Maintenance and Cleaning	187
5.12.1.5	Vertical auger tank drain door	188
5.12.1.6	Tank bottom door	189
5.12.1.7	Grain Tank Cover	190
5.12.1.8	Basic Settings	191
6	Lubrication and Maintenance	193
6.1	General Information	195
6.1.1	Lubrication and Maintenance	195
6.2	Preliminary Service Inspection	196
6.2.1	After the first 50 working hours	196
6.3	Scheduled Service Inspection	197
6.3.1	When and where to carry it out	197
6.3.2	Interval - 10 hours	199
6.3.2.1	Cylinder variator (1)	199
6.3.2.2	Engine oil (2)	200
6.3.2.3	Coolant expansion tank (3)	201
6.3.2.4	Hydraulic and hydrostatic systems tank (4)	201
6.3.2.5	Prefilter/water separator (5)	202
6.3.2.6	Straw chopper rotor (if fitted) (6)	202
6.3.3	Interval - 75 hours	203

6.3.3.1	Service brakes (11)	203
6.3.3.2	Main crop elevator lower shaft (12)	203
6.3.3.3	Main crop elevator belt tensioner (13)	204
6.3.3.4	Fanning mill variator (14)	204
6.3.3.5	Crop-unloading auger drive belt tensioner (15)	205
6.3.3.6	Coupling bushes of final drive shafts (16)	205
6.3.3.7	Rear axle support (17)	206
6.3.3.8	Rear axle king pins (18)	206
6.3.3.9	Rear straw-walker shaft supports (19)	207
6.3.3.10	Unloading auger bottom gearbox (20)	207
6.3.3.11	Unloading auger top gearbox (21)	208
6.3.3.12	Table drive-belt tensioner (22)	208
6.3.3.13	Track frames (23)	209
6.3.3.14	Cab air filters (24)	209
6.3.3.15	Evaporator (25)	211
6.3.3.16	Condenser (26)	211
6.3.3.17	Radiators and hydraulic oil (27)	212
6.3.3.18	Adjusting the rotary screen brushes and aspirator brushes	213
6.3.3.19	Chaff spreader drive (if fitted) (28)	214
6.3.4	Interval - 150 hours	215
6.3.4.1	Park brake (41)	215
6.3.4.2	Gearbox (42)	215
6.3.4.3	Final drives (43)	216
6.3.4.4	Unloading auger bottom gearbox (44)	216
6.3.4.5	Main crop elevator supports (45)	217
6.3.4.6	Reversing-belt tensioner-arm pin (46)	217
6.3.4.7	Main clutch (47)	218
6.3.4.8	Tailings-auger left support (48)	218
6.3.4.9	Windscreen wash fluid reservoir (49)	219
6.3.4.10	Threshing-mechanism belt tensioner (50)	219
6.3.4.11	Hydrostatic pump belt tensioner (51)	220
6.3.4.12	Unloading auger slewing ring (52)	220
6.3.4.13	Engine air filter (53)	221
6.3.4.14	Straw-chopper driven belt tensioner (54)	222
6.3.4.15	Straw chopper drive-belt tensioner (55)	222
6.3.4.16	Engine (56)	222
6.3.4.17	Straw chopper layshaft (57)	224
6.3.4.18	Return rotary-screen belt tensioner (58)	224
6.3.4.19	Rotary-screen belt tensioner (59)	225
6.3.4.20	Radiator-fan drive belt tensioner (60)	225
6.3.5	Interval - 225 hours	225
6.3.5.1	Engine oil and filters (71)	225
6.3.6	Interval - 450 hours	228
6.3.6.1	Battery (81)	228
6.3.6.2	Dehydrator filter (82)	229
6.3.6.3	Final drives (83)	230
6.3.6.4	Gearbox (84)	230
6.3.6.5	Hydraulic oil intake filter (85)	231
6.3.6.6	Hydrostatic transmission filter (86)	232
6.3.6.7	Hydraulic systems oil (87)	233
6.3.6.8	Hydraulic and hydrostatic system return filter (88)	235
6.3.6.9	Engine diesel-fuel filters (89)	235
6.3.6.10	Catalytic fluid filter (90)	237
6.4	Periodical maintenance operations	238
6.4.1	Description	238
6.4.1.1	Engine valves (1)	239
6.4.1.2	Coolant (2)	240
6.4.1.3	Service brake circuit fluid (3)	241

6.4.1.4	Diesel fuel tank (4)	241
6.4.1.5	Turbocharger (5)	242
6.4.1.6	Hydraulic hoses (6)	242
6.4.1.7	Catalytic fluid tank (DEF) (7)	243
6.5	Lubrication	244
6.5.1	Summary table	244
7	Adjustments	245
7.1	Adjustments	247
7.1.1	Important information	247
7.2	Belt and chain adjustment	248
7.2.1	Belts and chains (left-hand side)	248
7.2.1.1	Feeder drive belt (1)	248
7.2.1.2	Threshing unit drive belt (2)	249
7.2.1.3	Unloading auger drive belt (3)	249
7.2.1.4	Hydrostatic pump drive belt (4)	250
7.2.1.5	Chaff spreader drive belt (if fitted) (5)	251
7.2.1.6	Reversing drive belt (6)	251
7.2.1.7	Main transmission belt (7)	252
7.2.1.8	Clean grain and tailings augers drive belt (8)	252
7.2.1.9	Straw walker drive belt (9)	253
7.2.1.10	Cutting table drive belt (10)	253
7.2.1.11	Unloading auger chain (11)	254
7.2.1.12	Straw chopper drive belt (if fitted) (12)	254
7.2.1.13	Straw chopper drive belt (if fitted) (13)	255
7.2.2	Belts and chains (right-hand side)	256
7.2.2.1	Belt drive for rotary screen (21)	256
7.2.2.2	Counter drive for rotary screen (22)	257
7.2.2.3	Drive belt for alternator and engine coolant pump (23)	257
7.2.2.4	Radiator fan drive belt (24)	258
7.2.2.5	Belt drive for cylinder variator (25)	258
7.2.2.6	Belt drive for fanning mill variator (26)	259
7.2.2.7	Top chain drive for tailings auger (27)	260
7.2.2.8	Tailings elevator chain (28)	260
7.2.2.9	Tank filling auger drive chain (29)	261
7.2.2.10	Crop elevator chain (30)	261
7.2.2.11	Front crop-elevator chain (31)	262
7.2.2.12	Cab air-conditioning compressor drive belt (32)	262
7.2.2.13	Dust aspirator drive belt (33)	263
7.3	Slip clutches	264
7.3.1	Description	264
7.3.1.1	Clutch for main crop elevator upper shaft (1)	264
7.3.1.2	Clutch for shaker shoe counter drive (2)	264
7.3.1.3	Shear bolt for unloading auger counter drive (3)	265
7.4	Tires	266
7.4.1	Tire pressure	266
7.4.2	Replacement of Front Wheels	267
7.4.3	Replacement of Rear Wheels	268
7.4.4	Front wheel assembly	269
7.4.5	Rear wheel assembly	270
7.5	Brakes	271
7.5.1	Service brakes	271
7.5.2	Park brake	272
7.6	Rear axle	273
7.6.1	Toe-in setting	273
7.6.2	Steering ram ball joints	273
7.6.3	Rear axle support	274

7.7	Battery	275
7.7.1	Battery Replacement	275
7.7.2	Suggestions regarding the battery	275
7.7.3	Indicator Light for Battery Charging	276
8	Systems	277
8.1	Safety Precautions	279
8.1.1	Notes	279
8.2	Engine supply system	280
8.2.1	Permitted fuels	280
8.2.2	Fuel Circuit	281
8.2.3	Bleeding the Fuel Supply Circuit	282
8.2.4	Catalytic fluid tank (DEF)	283
8.2.5	Injection system operation	285
8.3	Engine air intake and exhaust system	286
8.3.1	Operation	286
8.4	Engine cooling system	288
8.4.1	Coolant	288
8.4.2	Engine cooling system operation	289
8.5	Engine lubrication system	290
8.5.1	Operation	290
8.5.2	Oil vapor recovery system	291
8.6	SCR system	292
8.6.1	Operation	292
8.7	Hydraulics system	294
8.7.1	Pumps and fuel tank	294
8.7.2	Table positioning hydraulic circuits	295
8.7.2.1	Cutting table oleopneumatic shock absorber	296
8.7.2.2	Hose burst valve	296
8.7.2.3	Cutting table positioning pressure switch	297
8.7.3	Hydraulic steering system	298
8.7.4	Auxiliary hydraulics circuit	299
8.8	Hydrostatic transmission system	300
8.8.1	Front-wheel drive	300
8.9	Electrical system	301
8.9.1	Main components	301
8.9.2	Fuses	302
8.9.3	Additional fuses	305
8.9.4	Cab fuses	307
8.9.5	Relays	308
8.9.5.1	Additional relays	310
8.9.5.2	Various relays	311
8.9.6	Control units	312
8.9.6.1	Engine sensors and control unit	313
8.9.7	Connections for additional equipment	314
8.9.7.1	Electric connectors	314
8.9.8	Headlight adjustment	316
8.9.9	Unloading area light	317
8.9.10	Reversing area light	317
8.9.11	Light in grain tank	318
8.9.12	Engine access-ladder light	318
9	Troubleshooting	319
9.1	Description	321
9.1.1	Feeding	321
9.1.2	Threshing	321



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

9.1.3	Separation and cleaning	323
9.1.4	Hydrostatic Transmission	326
9.1.5	Engine	327
9.1.6	Hydraulics system	329
9.1.7	Electrical system	330
9.1.8	Air conditioning circuit	331
9.1.9	Straw chopper	331
10	Off-Season Storage	335
10.1	Procedure to follow	337
10.1.1	Operations to be carried out after the harvest	337
10.1.2	Ordering spare parts	338
10.1.3	Operations to be carried out before the new season	338
11	Optional equipment	341
11.1	Information	343
11.1.1	General considerations	343
11.2	Optional equipment	344
11.2.1	Auxiliary table lifting ram	344
11.2.2	Camera	345
11.2.3	Additional rear view mirrors	345
11.2.4	Additional lights (for work)	346
11.2.5	Performance monitor	346
11.2.6	Windbreak	347
11.2.7	Additional fire extinguisher	347
11.2.8	Diesel fuel prefilter	348
11.2.9	Additional Portable Lamp	348
11.2.10	Weight and moisture control monitor	349
11.2.11	Trailer hitch	349
11.2.12	Refrigerator	350
11.2.13	Cylinder cover	350
11.2.14	Tailings cover plate	351
11.2.15	Top sieve	351
11.2.16	Bottom sieve	352
11.2.17	Electrically-operated sieves and returns sensors	353
11.2.18	Cutting height control	354
11.2.19	Hydraulic quick couplers	354
11.3	Equipment for threshing	355
11.3.1	Equipment for maize	355
11.3.2	Equipment for corn-cob	356
11.3.3	Equipment for rice	357
11.3.4	Equipment for light seed crops	357
11.3.5	Equipment for soya and peas	358
11.4	Ballast weights	359
11.4.1	Description	359
11.4.2	Ballast weights on rear axle	359
11.4.3	Ballast weights on the straw walker hood for machines without straw chopper	360
11.4.4	Ballast weights on the rear wheels with a liquid mix (for tubeless tires)	361
11.4.5	Filling tires with anti-freeze solutions	362
11.5	Straw chopper	363
11.5.1	Transport position	363
11.5.2	Working position	364
11.5.3	Operating the straw chopper	365
11.5.4	Disengaging the straw chopper	367
11.5.5	Access to the straw chopper rotor	367
11.5.6	Straw chopper rotor knives	367
11.5.7	Counter-knives	368

11.5.8	Chopping quality	368
11.5.9	Use of straw chopper in maize	370
11.6	Chaff Spreader	372
11.6.1	Working and maintenance positions	372
11.6.2	Chaff spreader speed	374
11.6.3	Disengaging the chaff spreader	374
11.6.4	Chaff spreader belt tensioning	374
11.7	Tracks	375
11.7.1	Use and maintenance	375
11.7.2	Track chain tension	376
12	Technical Specifications	377
12.1	Wheels and tires	379
12.1.1	information	379
12.1.2	Wheel tightening torque	379
12.1.3	Tire capacity	379
12.1.4	Tire equipment- front axle	380
12.1.5	Tire equipment - rear axle	381
12.1.6	Tire equipment - Version with half-tracks on front axle	382
12.2	Dimensions	383
12.2.1	Combine dimensions	383
12.2.2	Tracks with runners	385
12.2.3	Clearance between unloading auger and table	386
12.2.4	Available cutting tables and weights	386
12.2.5	Clearance between unloading auger and ground	387
12.3	Technical specifications	388
12.3.1	Feeding unit	388
12.3.2	Threshing sys.	388
12.3.3	Cleaning unit	390
12.3.4	Grain tank	391
12.3.5	Hydraulic system	392
12.3.6	Hydrostatic system	392
12.3.7	Engine	392
12.3.8	Electrical components	393
12.3.9	Transmission	393
12.3.10	Rear axle	394
12.3.11	Weight	394
13	Index	395

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>