

Operator's Manual

FENDT

Combine Harvester

FENDT 5225 E

FENDT 5225 E - S/N => 551620001



Breganze
AGCO S.p.A. - Via F. Laverda, 15/17 - 36042
BREGANZE (VI) – Italy.
FENDT is a worldwide brand of AGCO
© AGCO 2015
Original Operator's Manual

December 2015
FENDT 5225 E_EN_LA327432010
EAME
English

Combine Harvester

1 General Information	13
1.1 Information	15
1.1.1 Introduction	15
1.1.2 Company policy	15
1.1.3 Optional equipment	15
1.1.4 Spare parts and accessories	16
1.1.5 Warranty	16
1.1.6 Lubricants	16
1.2 Use	18
1.2.1 Use of the combine	18
1.3 Trailer hitch	19
1.3.1 Combine identification	19
1.3.2 Engine Identification	20
1.3.3 Cutting table identification	21
1.3.4 Cab identification	21
1.3.5 Hydrostatic pump identification	22
1.3.6 Hydrostatic motor identification	22
1.3.7 Straw chopper identification (if fitted)	23
1.3.8 Chaff spreader identification (if fitted)	23
1.3.9 Trailer hitch identification (if fitted)	24
1.4 Identification plate	25
1.4.1 Machine data	25
1.5 Conformity	26
1.5.1 EC Declaration of Conformity	26
1.6 Information	27
1.6.1 Ecology	27
1.6.2 Hydraulic systems: hoses	27
1.6.3 Scrapping and disposal	28
1.7 Weight	29
1.7.1 Weight distribution	29
2 Safety	31
2.1 Warning symbols and safety instructions	33
2.1.1 Warnings	33
2.2 Information for road transport	34
2.2.1 Road transport	34
2.3 Information for operations	37
2.3.1 Field Operations	37
2.4 Information for maintenance	41
2.4.1 Maintenance work	41
2.5 Information on the engine	45
2.5.1 Engine	45
2.6 Safety and function decals	49
2.6.1 Location of decals	49
2.6.2 Description of decals	53
2.7 Work on the battery	64
2.7.1 Battery	64
2.8 Safety devices	65
2.8.1 Emergency exit	65

2.8.2	Operator presence device	66
2.8.2.1	Returning the machine to normal operation	66
2.8.3	Safety belts	68
2.8.4	Cutting table safety stops	69
2.8.5	Safety guard for main crop elevator	70
2.8.6	Sprags for wheels	70
2.8.7	Audible alarm for reversing	71
2.8.8	Reflectors for road transport	72
2.8.9	Safety Guards	73
2.8.10	Fall protection rails	73
2.8.11	Safety devices for operations to be carried out in the upper part of the machine	74
2.8.12	Straw Chopper (if fitted)	75
2.8.13	Fire extinguisher	75
2.9	Trailer hitch	76
2.9.1	Automatic trailer hitch	76
2.9.2	CUNA and CE trailer hitches	77
2.9.2.1	Procedure for attaching and removing	78
2.9.2.2	Drawbar coupling	79
2.9.3	ROCKINGER trailer hitch	79
2.9.3.1	Removal	79
2.9.3.2	Drawbar coupling	80
2.9.4	Fixed trailer hitch (non-automatic - CUNA type)	81
2.10	Machine lifting	82
2.10.1	Attachment points	82
2.11	Towing	83
2.11.1	Towing the combine	83
2.12	Further information	84
2.12.1	Noise level in the cab	84
2.12.2	Vibrations in the cab	84
2.12.3	Statutory regulations	84
2.12.4	Electromagnetic emissions	85
2.13	Notes	86
2.13.1	Notes for road transport	86
3	Operation	89
3.1	Combine operation	91
3.1.1	Crop processing	91
3.2	Stage 1	92
3.2.1	Feeding	92
3.3	Stage 2	93
3.3.1	Threshing	93
3.4	Stage 3	94
3.4.1	Separation	94
3.5	Stage 4	95
3.5.1	Cleaning	95
3.6	Stage 5	96
3.6.1	Grain storage and unloading	96
4	Controls and Instruments	97
4.1	Steering column	99
4.1.1	Components and adjustments	99
4.2	Multifunction lever	100
4.2.1	Main components	100
4.3	Instrument panel	102
4.3.1	Front control panel	102

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

4.3.2	Rear control panel	103
4.4	Controls at the operator seat	110
4.4.1	Description	110
4.5	Agritronicplus	111
4.5.1	Components	111
4.5.2	Multiple light indicators	112
4.5.3	On-board Computer	114
4.5.3.1	Using the computer	116
4.5.3.2	Scheduled service inspection hours	116
4.5.3.3	Resetting partial or total hectare counter	117
4.5.3.4	Calibrating constants used for calculating covered area	117
4.5.3.5	C6: Working width	118
4.5.3.6	C2: Forward speed	118
4.5.3.7	Table of constants	119
4.5.3.8	Partial hectare counter	120
4.5.3.9	Hectare counter operation	120
4.5.3.10	Activation of the audible alarm	121
4.5.4	Performance monitor	122
4.5.4.1	Using the monitor	123
4.5.4.2	Selecting the measurement range (straw walker, sieves or total)	123
4.5.4.3	Calibrating the bar cursor scale	124
4.5.4.4	Sensitivity adjustment	124
4.5.4.5	Shifting to forward speed monitoring	125
4.5.4.6	Summary of keyboard functions	125
4.5.5	Terra Control System	126
4.5.5.1	Using Terra Control	129
4.5.5.2	Terra Control sensitivity	131
4.5.5.3	Adjusting the potentiometer for table floatation	132
4.5.5.4	Adjusting the potentiometer for main crop elevator height control	135
4.6	Cab	138
4.6.1	Cab controls	138
4.6.2	Operator seat	142
4.6.3	Passenger seat	143
4.6.4	Footrest	143
4.6.5	Preparation for radio installation	144
4.6.6	Reading light	144
4.6.7	Air conditioning in the cab	145
4.6.8	Heating	147
4.7	Access to combine components	148
4.7.1	Access to the operator platform	148
4.7.2	Accessing and cleaning the front windscreen of the cab	149
4.7.3	Access to the engine compartment	150
4.7.4	Access to the grain tank	151
4.7.5	Access to the inside of the grain tank	152
4.8	Engine	153
4.8.1	Starting the engine	153
4.8.2	Useful advice	153
4.8.3	Stopping the engine	154
4.9	Road transport	156
4.9.1	Operations to be carried out before transportation	156
4.9.2	Position light and sidelight adjustment	157
4.10	Using the combine	158
4.10.1	Operations to be carried out before use	158
5	Field Operations	159
5.1	General Information	161

5.1.1	Notes	161
5.1.2	Before operating the machine in the field	161
5.2	Starting and Stopping the Combine	163
5.2.1	Procedure to follow	163
5.3	Cutting table	165
5.3.1	Attaching and removing the table	165
5.3.2	Table lateral floatation (optional)	169
5.3.3	Ground self-alignment system (optional)	170
5.4	Main Crop Elevator	171
5.4.1	Adjustments	171
5.4.1.1	Access to the main components	173
5.4.2	Reverse drive system	174
5.5	Cylinder Housing	175
5.5.1	Components	175
5.5.2	Threshing drum	176
5.5.3	Concave	178
5.5.3.1	Concave filler plates	179
5.5.3.2	Parallelism between the cylinder and concave	180
5.5.3.3	Unblocking the cylinder	181
5.5.3.4	Universal wheat/maize concave	182
5.5.3.5	Basic concave settings	183
5.5.3.6	Spike-toothed Cylinder/Concave (for rice)	183
5.5.4	Rear beater	185
5.6	Straw walkers	186
5.6.1	Description and adjustments	186
5.7	Main Grain Pan	187
5.7.1	Description	187
5.7.2	Checking the main grain pan	188
5.7.3	Cleaning the main grain pan	189
5.7.4	Stone trap assembly removal/refitting	190
5.8	Fanning Mill	192
5.8.1	Description and adjustments	192
5.8.1.1	Fanning mill for threshing light seed crops	194
5.9	Top sieve	195
5.9.1	Adjustment	195
5.10	Bottom sieve	199
5.10.1	Adjustment	199
5.11	Returns	201
5.11.1	Description and adjustments	201
5.12	Grain tank	203
5.12.1	Description	203
5.12.1.1	Grain tank unloading auger	204
5.12.1.2	Sensors to check tank filling	205
5.12.1.3	Grain tank control window	206
5.12.1.4	Doors for Grain Tank Maintenance and Cleaning	206
5.12.1.5	Vertical auger tank drain door	208
5.12.1.6	Tank bottom door	208
5.12.1.7	Grain tank cover	210
5.12.1.8	Basic Settings	211
6	Lubrication and Maintenance	213
6.1	General Information	215
6.1.1	Lubrication and Maintenance	215
6.2	Preliminary Service Inspection	217
6.2.1	After the first 50 working hours	217

6.3 Scheduled Service Inspection	218
6.3.1 Operation and adjustment	218
6.3.2 When and where to carry it out	220
6.3.3 Interval - 10 hours	222
6.3.3.1 Cylinder variator (1)	222
6.3.3.2 Engine oil (2)	223
6.3.3.3 Coolant expansion tank (3)	224
6.3.3.4 Hydraulic and hydrostatic systems tank (4)	224
6.3.3.5 Prefilter/water separator (5)	225
6.3.3.6 Straw chopper rotor (if fitted) (6)	225
6.3.4 Interval - 75 hours (Sa)	226
6.3.4.1 Service brakes (7)	226
6.3.4.2 Main crop elevator belt tensioner (9)	226
6.3.4.3 Fanning mill variator (10)	227
6.3.4.4 Belt tensioner for crop unloading auger (11)	228
6.3.4.5 Coupling bushes of final drive shafts (12)	228
6.3.4.6 Rear axle support (13)	229
6.3.4.7 Rear axle king pins (14)	229
6.3.4.8 Rear wheel 4WD tie rod (if fitted) (14)	230
6.3.4.9 Bearings for rear straw walker crank (15)	230
6.3.4.10 Bottom angle gear for unloading auger (16)	231
6.3.4.11 Top angle gear for unloading auger (17)	231
6.3.4.12 Table belt tensioner (18)	232
6.3.4.13 Angle gear at tank filling elevator (19)	232
6.3.4.14 Track frames (20)	233
6.3.4.15 Cab air filters (21)	233
6.3.4.16 Evaporator (22)	234
6.3.4.17 Condenser (23)	235
6.3.4.18 Radiator and hydraulic oil (24)	236
6.3.4.19 Adjusting the rotary screen brushes and aspirator brushes	237
6.3.4.20 Main crop elevator adapter (with lateral floatation fitted) (25)	238
6.3.4.21 Chaff spreader drive (if fitted) (26)	239
6.3.5 Interval - 150 hours (Sb)	239
6.3.5.1 Park brake (27)	239
6.3.5.2 Gearbox (28)	240
6.3.5.3 Reduction gear housings (29)	240
6.3.5.4 Bottom angle gear for unloading auger (30)	241
6.3.5.5 Main crop elevator supports (31)	241
6.3.5.6 Reversing belt tensioner arm pin (32)	242
6.3.5.7 Main clutch (33)	242
6.3.5.8 Left bearing for tailings auger (34)	243
6.3.5.9 Windscreen wash fluid tank (35)	243
6.3.5.10 Threshing unit belt tensioner (36)	244
6.3.5.11 Hydrostatic pump belt tensioner (37)	244
6.3.5.12 Bottom ring nut for unloading auger (38)	245
6.3.5.13 Engine air filter (39)	246
6.3.5.14 Driven belt tensioner for straw chopper (40)	247
6.3.5.15 Drive belt tensioner for straw chopper (41)	247
6.3.5.16 Engine (42)	247
6.3.5.17 Cab access ladder (43)	249
6.3.5.18 Straw chopper layshaft (44)	249
6.3.5.19 Belt tensioner for return rotary screen (45)	250
6.3.5.20 Rotary screen belt tensioner (46)	250
6.3.6 Interval - 225 hours (Sa + engine)	250
6.3.6.1 Engine oil and filters (51)	250
6.3.7 Interval - 450 hours (Sc)	254
6.3.7.1 Battery (58)	254
6.3.7.2 Dehydrator filter (59)	255

6.3.7.3	Reduction gear housings (60)	256
6.3.7.4	Gearbox (61)	256
6.3.7.5	Hydraulic oil intake filter (62)	257
6.3.7.6	Filter, hydrostatic transmission (63)	258
6.3.7.7	Hydraulic systems oil (64)	259
6.3.7.8	Hydraulic and hydrostatic system return filter (65)	260
6.3.7.9	Air compressor (if fitted) (66)	261
6.3.7.10	Engine diesel oil filter (67)	261
6.3.7.11	Catalytic fluid filter (68)	263
6.4	Periodical maintenance operations	264
6.4.1	Description	264
6.4.1.1	Engine valves (1)	265
6.4.1.2	Coolant (2)	266
6.4.1.3	Service brake circuit fluid (3)	267
6.4.1.4	Diesel fuel tank (4)	267
6.4.1.5	Turbocharger (5)	268
6.4.1.6	Hydraulic hoses (6)	268
6.5	Lubrication	269
6.5.1	Summary table	269
7	Adjustments	271
7.1	Adjustments	273
7.1.1	Important information	273
7.2	Belt and chain adjustment	274
7.2.1	Belts and chains (left-hand side)	274
7.2.1.1	Feeder drive belt (1)	275
7.2.1.2	Belt drive for threshing unit (2)	276
7.2.1.3	Belt drive for unloading auger (3)	277
7.2.1.4	Belt drive for air compressor (if fitted) (4)	278
7.2.1.5	Belt drive for hydrostatic pump (5)	279
7.2.1.6	Belt drive for chaff spreader (if fitted) (6)	280
7.2.1.7	Belt drive for reversing (7)	280
7.2.1.8	Main transmission belt (8)	281
7.2.1.9	Belt drives for good grain and tailings augers (9)	281
7.2.1.10	Belt drive for straw walkers (10)	282
7.2.1.11	Belt drive for cutting table (11)	282
7.2.1.12	Chain drive for unloading auger (12)	283
7.2.1.13	Belt drive for straw chopper (if fitted) (13)	283
7.2.1.14	Belt drive for straw chopper (if fitted) (14)	284
7.2.2	Belts and chains (right-hand side)	284
7.2.2.1	Belt drive for rotary screen (21)	285
7.2.2.2	Counter drive for rotary screen (22)	285
7.2.2.3	Belt drive for engine coolant pump (23)	286
7.2.2.4	Belt drive for alternator and cooling fan (24)	286
7.2.2.5	Belt drive for cylinder variator (25)	287
7.2.2.6	Belt drive for fanning mill variator (26)	288
7.2.2.7	Top chain drive for tailings auger (27)	289
7.2.2.8	Crop elevator chain (28)	289
7.2.2.9	Chain drive for tailings elevator (29)	290
7.2.2.10	Front crop elevator chain (30)	290
7.2.2.11	Chain drive for tank filling auger (31)	291
7.2.2.12	Belt drive for reel pump (32)	291
7.2.2.13	Belt drive for cab air conditioning compressor (33)	292
7.2.2.14	Belt drive for dust aspirator (34)	293
7.3	Slip clutches	294
7.3.1	Description	294
7.3.1.1	Clutch for main crop elevator upper shaft (1)	294

7.3.1.2 Clutch for shaker shoe counter drive (2)	294
7.3.1.3 Shear bolt for unloading auger counter drive (3)	295
7.4 Tires	296
7.4.1 Tire pressure	296
7.4.2 Replacement of Front Wheels	296
7.4.3 Replacement of Rear Wheels	297
7.4.4 Front wheel assembly	299
7.4.5 Rear wheel assembly	300
7.5 Brakes	301
7.5.1 Service brakes	301
7.5.2 Park brake	302
7.6 Rear axle	303
7.6.1 Toe-in setting	303
7.6.2 Steering ram ball joints	303
7.6.3 Adjustable rear axle	304
7.6.4 Rear axle support	305
7.7 Battery	306
7.7.1 Battery Replacement	306
7.7.2 Suggestions regarding the battery	306
7.7.3 Indicator Light for Battery Charging	307
8 Systems	309
8.1 Safety Precautions	311
8.1.1 Notes	311
8.2 Engine supply system	312
8.2.1 Permitted fuels	312
8.2.2 Fuel Circuit	312
8.2.3 Bleeding the Fuel Supply Circuit	314
8.2.4 Catalytic fluid tank (DEF)	314
8.2.5 Injection system operation	316
8.3 Engine air intake and exhaust system	317
8.3.1 Operation	317
8.4 Engine cooling system	319
8.4.1 Coolant	319
8.4.2 Engine cooling system operation	320
8.5 Engine lubrication system	321
8.5.1 Operation	321
8.5.2 Oil vapor recovery system	322
8.6 SCR system	323
8.6.1 Operation	323
8.7 Hydraulics system	325
8.7.1 Pumps and fuel tank	325
8.7.2 Table positioning hydraulic circuits	327
8.7.2.1 Cutting table oleopneumatic shock absorbers	328
8.7.2.2 Flow limiting solenoid valve	328
8.7.2.3 Hose burst valve	329
8.7.2.4 Table horizontal positioning circuit (optional)	329
8.7.3 Reel rotation control hydraulic circuit	330
8.7.4 Hydraulic steering system	331
8.7.5 Auxiliary hydraulics circuit	332
8.8 Hydrostatic transmission system	333
8.8.1 Front-wheel drive	333
8.8.2 Rear-wheel drive (optional)	334
8.9 Electrical system	335
8.9.1 Main components	335



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

8.9.2 Fuses	336
8.9.3 Additional fuses	339
8.9.4 Cab fuses	342
8.9.5 Relays	343
8.9.5.1 Additional relays	344
8.9.5.2 Various relays	345
8.9.6 Control units	347
8.9.6.1 Engine sensors and control unit	348
8.9.7 Connections for additional equipment	349
8.9.7.1 Electric connectors	349
8.9.8 Headlight adjustment	351
9 Troubleshooting	353
9.1 Description	355
9.1.1 Feeding	355
9.1.2 Threshing	355
9.1.3 Separation and cleaning	357
9.1.4 Hydrostatic Transmission	360
9.1.5 Engine	361
9.1.6 Hydraulics system	363
9.1.7 Electrical system	364
9.1.8 Air conditioning circuit	365
9.1.9 Straw chopper	365
10 Off-Season Storage	369
10.1 Procedure to follow	371
10.1.1 Operations to be carried out after the harvest	371
10.1.2 Ordering spare parts	372
10.1.3 Operations to be carried out before the new season	372
11 Optional equipment	375
11.1 Information	377
11.1.1 General considerations	377
11.2 Optional equipment	378
11.2.1 Auxiliary table lifting ram	378
11.2.2 Four-wheel drive	379
11.2.3 Camera	379
11.2.4 Windbreak	380
11.2.5 Additional lights and mirrors	380
11.2.6 Electrically operated straw chopper straw deflectors	381
11.2.7 Additional fire extinguisher	381
11.2.8 Diesel fuel filter	382
11.2.9 Air compressor	382
11.2.10 Additional Portable Lamp	383
11.2.11 Weight and moisture control monitor	383
11.2.12 Trailer hitch	384
11.2.13 Refrigerator	384
11.2.14 Lateral floatation	385
11.2.15 Vertical Knives	385
11.2.16 Electrically-operated sieves and returns sensors	386
11.2.17 Cylinder cover	387
11.2.18 Tailings cover plate	387
11.2.19 Top sieve	388
11.2.20 Bottom sieve	389
11.3 Equipment for threshing	390
11.3.1 Equipment for maize	390
11.3.2 Equipment for corn-cob	391

11.3.3	Equipment for rice	392
11.3.4	Equipment for light seed crops	392
11.3.5	Equipment for soya and peas	393
11.4	Ballast weights	394
11.4.1	Description	394
11.4.2	Ballast weights on rear axle	394
11.4.3	Ballast weights on the straw walker hood for machines without straw chopper	395
11.4.4	Ballast weights on the rear wheels with a liquid mix (for tubeless tires)	396
11.4.5	Filling tires with anti-freeze solutions	397
11.5	Straw chopper	398
11.5.1	Transport positions	398
11.5.2	Working position	399
11.5.3	Operating the straw chopper	400
11.5.4	Disengaging the straw chopper	402
11.5.5	Access to the straw chopper rotor	402
11.5.6	Straw chopper rotor knives	402
11.5.7	Counter-knives	403
11.5.8	Chopping quality	403
11.5.9	Use of straw chopper in maize	405
11.6	Chaff Spreader	407
11.6.1	Working and maintenance positions	407
11.6.2	Chaff spreader speed	409
11.6.3	Disengaging the chaff spreader	409
11.6.4	Chaff spreader belt tensioning	409
11.7	Tracks	410
11.7.1	Use and maintenance	410
11.7.2	Track chain tension	411
12	Technical Specifications	413
12.1	Wheels and tires	415
12.1.1	information	415
12.1.2	Wheel tightening torque	415
12.1.3	Tire capacity	415
12.1.4	Tire equipment- front axle	416
12.1.5	Tire equipment- rear axle	417
12.1.6	Tire equipment - Version with half-tracks on front axle	418
12.1.7	Ballast weights	419
12.2	Dimensions	420
12.2.1	Combine dimensions	420
12.2.2	Tracks with runners	422
12.2.3	Clearance between unloading auger and table	423
12.2.4	Clearance between unloading auger and ground	424
12.3	Technical specifications	425
12.3.1	Feeding unit	425
12.3.2	Threshing sys.	425
12.3.3	Cleaning unit	427
12.3.4	Grain tank	428
12.3.5	Hydraulic system	428
12.3.6	Hydrostatic system	429
12.3.7	Engine	429
12.3.8	Electrical components	430
12.3.9	Transmission	430
12.3.10	Rear axle	431
12.3.11	Weight	431
13	Index	433

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>