

Operator's Manual

FENDT

Combine Harvester

FENDT 5225 E

*FENDT 5225 E - S/N => 551620077
ZN205516J03020093*



Breganze
AGCO S.p.A. - Via F. Laverda, 15/17 - 36042
BREGANZE (VI) – Italy.
FENDT is a worldwide brand of AGCO
© AGCO 2016
Original Operator's Manual

November 2016
FENDT 5225 E_EN_LA327432011
EAME
English

Combine Harvester

1 General Information	13
1.1 Information	15
1.1.1 Introduction	15
1.1.2 Company policy	15
1.1.3 Optional equipment	15
1.1.4 Spare parts and accessories	16
1.1.5 Warranty	16
1.1.6 Lubricants	16
1.2 Use	18
1.2.1 Use of the combine	18
1.3 Identification	19
1.3.1 Combine identification	19
1.3.2 Engine Identification	20
1.3.3 Cutting table identification	21
1.3.4 Cab identification	21
1.3.5 Hydrostatic pump identification	22
1.3.6 Hydrostatic motor identification	22
1.3.7 Straw chopper identification (if fitted)	23
1.3.8 Chaff spreader identification (if fitted)	23
1.3.9 Trailer hitch identification (if fitted)	24
1.4 Identification form	25
1.4.1 Machine data	25
1.5 Conformity	26
1.5.1 EC Declaration of Conformity	26
1.6 Information	27
1.6.1 Ecology	27
1.6.2 Hydraulic systems: hoses	27
1.6.3 Scrapping and disposal	28
1.7 Weight	29
1.7.1 Weight distribution	29
2 Safety	31
2.1 Warning symbols and safety instructions	33
2.1.1 Warnings	33
2.2 Information for road transport	34
2.2.1 Road transport	34
2.3 Information for operations	37
2.3.1 Field Operations	37
2.4 Information for maintenance	41
2.4.1 Maintenance work	41
2.5 Information on the engine	45
2.5.1 Engine	45
2.6 Safety and function decals	49
2.6.1 Location of decals	49
2.6.2 Description of decals	53
2.7 Work on the battery	64
2.7.1 Battery	64
2.8 Safety devices	65
2.8.1 Emergency exit	65

2.8.2	Operator presence device	66
2.8.2.1	Returning the machine to normal operation	67
2.8.3	Safety belts	68
2.8.4	Cutting table safety stops	69
2.8.5	Safety guard for main crop elevator	70
2.8.6	Sprags for wheels	70
2.8.7	Audible alarm for reversing	71
2.8.8	Reflectors for road transport	72
2.8.9	Safety Guards	73
2.8.10	Fall protection rails	73
2.8.11	Safety devices for operations to be carried out in the upper part of the machine	74
2.8.12	Straw Chopper (if fitted)	75
2.8.13	Fire extinguisher	75
2.9	Trailer hitch	76
2.9.1	Automatic towing hooks	76
2.9.2	CUNA and CE trailer hitches	77
2.9.2.1	Procedure for attaching and removing	78
2.9.2.2	Drawbar coupling	79
2.9.3	ROCKINGER trailer hitch	79
2.9.3.1	Removal	79
2.9.3.2	Drawbar coupling	80
2.9.4	Fixed trailer hitch (non-automatic - CUNA type)	81
2.10	Machine lifting	82
2.10.1	Attachment points	82
2.11	Towing	83
2.11.1	Towing the combine	83
2.12	Further information	84
2.12.1	Noise level in the cab	84
2.12.2	Vibrations in the cab	84
2.12.3	Statutory regulations	84
2.12.4	Electromagnetic emissions	85
2.13	Notes	86
2.13.1	Notes for road transport	86
3	Operation	89
3.1	Combine operation	91
3.1.1	Crop processing	91
3.2	Stage 1	92
3.2.1	Feeding	92
3.3	Stage 2	93
3.3.1	Threshing	93
3.4	Stage 3	94
3.4.1	Separation	94
3.5	Stage 4	95
3.5.1	Cleaning	95
3.6	Stage 5	96
3.6.1	Grain storage and unloading	96
4	Controls and Instruments	97
4.1	Steering column	99
4.1.1	Components and adjustments	99
4.2	Multifunction lever	100
4.2.1	Main components	100
4.3	Instrument panel	102
4.3.1	Front control panel	102

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

4.3.2	Rear control panel	103
4.4	Controls at the operator seat	110
4.4.1	Description	110
4.5	Agritronicplus	111
4.5.1	Components	111
4.5.2	Multiple light indicators	112
4.5.3	On-board Computer	114
4.5.3.1	Using the computer	116
4.5.3.2	Scheduled service inspection hours	116
4.5.3.3	Resetting partial or total hectare counter	117
4.5.3.4	Calibrating constants used for calculating covered area	117
4.5.3.5	C6: Working width	118
4.5.3.6	C2: Forward speed	118
4.5.3.7	Table of constants	119
4.5.3.8	Partial hectare counter	120
4.5.3.9	Hectare counter operation	120
4.5.3.10	Activation of the audible alarm	121
4.5.4	Performance monitor	122
4.5.4.1	Using the monitor	123
4.5.4.2	Selecting the measurement range (straw walker, sieves or total)	123
4.5.4.3	Calibrating the bar cursor scale	124
4.5.4.4	Sensitivity adjustment	124
4.5.4.5	Shifting to forward speed monitoring	125
4.5.4.6	Summary of keyboard functions	125
4.5.5	Terra Control System	126
4.5.5.1	Using Terra Control	129
4.5.5.2	Terra Control sensitivity	131
4.5.5.3	Calibrating the potentiometer for cutting table floatation	132
4.5.5.4	Calibrating the potentiometer for main crop elevator height control	135
4.6	Cab	138
4.6.1	Cab controls	138
4.6.2	Operator seat	142
4.6.3	Passenger seat	143
4.6.4	Footrest	143
4.6.5	Preparation for radio installation	144
4.6.6	Rear Cab Window	144
4.6.7	Reading light	145
4.6.8	Air conditioning in the cab	146
4.6.9	Heating	148
4.7	Access to combine components	149
4.7.1	Access to the operator platform	149
4.7.2	Accessing and cleaning the front windscreen of the cab	150
4.7.3	Access to the engine compartment	151
4.7.4	Access to the grain tank	152
4.7.5	Access to the inside of the grain tank	153
4.8	Engine	154
4.8.1	Starting the engine	154
4.8.2	Useful advice	155
4.8.3	Stopping the engine	155
4.9	Road transport	157
4.9.1	Operations to be carried out before transportation	157
4.9.2	Position light and sidelight adjustment	158
4.10	Using the combine	159
4.10.1	Operations to be carried out before use	159
5	Field Operations	161

5.1 General Information	163
5.1.1 Notes	163
5.1.2 Before operating the machine in the field	163
5.2 Starting and Stopping the Combine	165
5.2.1 Procedure to follow	165
5.3 Cutting table	167
5.3.1 Attaching and removing the table	167
5.3.2 Table lateral floatation (optional)	171
5.3.3 GSAX system (ground self-alignment) (optional)	173
5.4 Main Crop Elevator	174
5.4.1 Adjustments	174
5.4.1.1 Access to the main components	176
5.4.2 Reverse drive system	177
5.5 Cylinder Housing	178
5.5.1 Components	178
5.5.2 Threshing drum	179
5.5.3 Wheat concave	181
5.5.3.1 Concave filler plates	182
5.5.3.2 Parallelism between the cylinder and concave	183
5.5.3.3 Unblocking the cylinder	184
5.5.4 Sectional concave	185
5.5.4.1 Concave filler plates	186
5.5.4.2 Parallelism between the cylinder and concave	187
5.5.5 Universal wheat/maize concave	188
5.5.5.1 Basic concave settings	189
5.5.6 Spike-toothed Cylinder/Concave (for rice)	189
5.5.7 Rear beater	191
5.6 Straw walkers	192
5.6.1 Description and adjustments	192
5.7 Main Grain Pan	193
5.7.1 Description	193
5.7.2 Checking the main grain pan	194
5.7.3 Cleaning the main grain pan	195
5.7.4 Stone trap assembly removal/refitting	196
5.8 Fanning Mill	198
5.8.1 Description and adjustments	198
5.8.1.1 Fanning mill for threshing light seed crops	200
5.9 Top sieve	201
5.9.1 Adjustment	201
5.10 Bottom sieve	205
5.10.1 Adjustment	205
5.11 Tailings	207
5.11.1 Description and adjustments	207
5.12 Grain tank	209
5.12.1 Description	209
5.12.1.1 Grain tank unloading auger	210
5.12.1.2 Sensors to check tank filling	211
5.12.1.3 Grain tank control window	212
5.12.1.4 Doors for Grain Tank Maintenance and Cleaning	212
5.12.1.5 Vertical auger tank drain door	214
5.12.1.6 Tank bottom door	214
5.12.1.7 Grain tank cover	216
5.12.1.8 Basic Settings	217
6 Lubrication and Maintenance	219

6.1 General Information	221
6.1.1 Lubrication and Maintenance	221
6.2 Preliminary Service Inspection	223
6.2.1 After the first 50 working hours	223
6.3 Scheduled Service Inspection	224
6.3.1 Operation and adjustment	224
6.3.2 When and where to carry it out	226
6.3.3 Interval - 10 hours	228
6.3.3.1 Cylinder variator (1)	228
6.3.3.2 Engine oil (2)	229
6.3.3.3 Coolant expansion tank (3)	230
6.3.3.4 Hydraulic and hydrostatic systems tank (4)	230
6.3.3.5 Prefilter/water separator (5)	231
6.3.3.6 Straw chopper rotor (if fitted) (6)	231
6.3.4 Interval - 75 hours (Sa)	232
6.3.4.1 Service brakes (7)	232
6.3.4.2 Main crop elevator belt tensioner (9)	232
6.3.4.3 Fanning mill variator (10)	233
6.3.4.4 Belt tensioner for crop unloading auger (11)	234
6.3.4.5 Coupling bushes of final drive shafts (12)	234
6.3.4.6 Rear axle support (13)	235
6.3.4.7 Rear axle king pins (14)	235
6.3.4.8 Rear wheel 4WD tie rod (if fitted) (14)	236
6.3.4.9 Bearings for rear straw walker crank (15)	236
6.3.4.10 Bottom angle gear for unloading auger (16)	237
6.3.4.11 Top angle gear for unloading auger (17)	237
6.3.4.12 Table belt tensioner (18)	238
6.3.4.13 Angle gear at tank filling elevator (19)	238
6.3.4.14 Track frames (20)	239
6.3.4.15 Cab air filters (21)	239
6.3.4.16 Evaporator (22)	241
6.3.4.17 Condenser (23)	241
6.3.4.18 Radiator and hydraulic oil (24)	242
6.3.4.19 Adjusting the rotary screen brushes and aspirator brushes	243
6.3.4.20 Main crop elevator adapter (with lateral floatation fitted) (25)	244
6.3.4.21 Chaff spreader drive (if fitted) (26)	245
6.3.5 Interval - 150 hours (Sb)	245
6.3.5.1 Park brake (27)	245
6.3.5.2 Gearbox (28)	246
6.3.5.3 Reduction gear housings (29)	246
6.3.5.4 Bottom angle gear for unloading auger (30)	247
6.3.5.5 Main crop elevator supports (31)	248
6.3.5.6 Reversing belt tensioner arm pin (32)	248
6.3.5.7 Main clutch (33)	249
6.3.5.8 Left bearing for tailings auger (34)	249
6.3.5.9 Windscreen wash fluid tank (35)	250
6.3.5.10 Threshing unit belt tensioner (36)	250
6.3.5.11 Hydrostatic pump belt tensioner (37)	251
6.3.5.12 Bottom ring nut for unloading auger (38)	251
6.3.5.13 Engine air filter (39)	252
6.3.5.14 Driven belt tensioner for straw chopper (40)	253
6.3.5.15 Drive belt tensioner for straw chopper (41)	253
6.3.5.16 Engine (42)	253
6.3.5.17 Cab access ladder (43)	255
6.3.5.18 Straw chopper layshaft (44)	255
6.3.5.19 Belt tensioner for return rotary screen (45)	256
6.3.5.20 Rotary screen belt tensioner (46)	256

6.3.6	Interval - 225 hours (Sa + engine)	256
6.3.6.1	Engine oil and filters (51)	256
6.3.7	Interval - 450 hours (Sc)	260
6.3.7.1	Battery (58)	260
6.3.7.2	Dehydrator filter (59)	261
6.3.7.3	Reduction gear housings (60)	262
6.3.7.4	Gearbox (61)	262
6.3.7.5	Hydraulic oil intake filter (62)	263
6.3.7.6	Filter, hydrostatic transmission (63)	264
6.3.7.7	Hydraulic systems oil (64)	265
6.3.7.8	Hydraulic and hydrostatic system return filter (65)	266
6.3.7.9	Air compressor (if fitted) (66)	267
6.3.7.10	Engine diesel oil filter (67)	267
6.3.7.11	Catalytic fluid filter (68)	269
6.4	Periodical maintenance operations	270
6.4.1	Description	270
6.4.1.1	Engine valves (1)	271
6.4.1.2	Coolant (2)	272
6.4.1.3	Service brake circuit fluid (3)	273
6.4.1.4	Diesel fuel tank (4)	273
6.4.1.5	Turbocharger (5)	274
6.4.1.6	Hydraulic hoses (6)	274
6.4.1.7	Catalytic fluid tank (DEF) (7)	275
6.5	Lubrication	276
6.5.1	Summary table	276
7	Adjustments	277
7.1	Adjustments	279
7.1.1	Important information	279
7.2	Belt and chain adjustment	280
7.2.1	Belts and chains (left-hand side)	280
7.2.1.1	Feeder drive belt (1)	281
7.2.1.2	Belt drive for threshing unit (2)	282
7.2.1.3	Belt drive for unloading auger (3)	283
7.2.1.4	Belt drive for air compressor (if fitted) (4)	284
7.2.1.5	Belt drive for hydrostatic pump (5)	285
7.2.1.6	Belt drive for chaff spreader (if fitted) (6)	286
7.2.1.7	Belt drive for reversing (7)	287
7.2.1.8	Main transmission belt (8)	287
7.2.1.9	Belt drives for good grain and tailings augers (9)	288
7.2.1.10	Belt drive for straw walkers (10)	288
7.2.1.11	Belt drive for cutting table (11)	289
7.2.1.12	Chain drive for unloading auger (12)	289
7.2.1.13	Belt drive for straw chopper (if fitted) (13)	290
7.2.1.14	Belt drive for straw chopper (if fitted) (14)	291
7.2.2	Belts and chains (right-hand side)	292
7.2.2.1	Belt drive for rotary screen (21)	292
7.2.2.2	Counter drive for rotary screen (22)	293
7.2.2.3	Belt drive for engine coolant pump (23)	293
7.2.2.4	Belt drive for alternator and cooling fan (24)	294
7.2.2.5	Belt drive for cylinder variator (25)	294
7.2.2.6	Belt drive for fanning mill variator (26)	295
7.2.2.7	Top chain drive for tailings auger (27)	296
7.2.2.8	Crop elevator chain (28)	296
7.2.2.9	Chain drive for tailings elevator (29)	297
7.2.2.10	Front crop elevator chain (30)	297
7.2.2.11	Chain drive for tank filling auger (31)	298

7.2.2.12	Belt drive for reel pump (32)	298
7.2.2.13	Belt drive for cab air conditioning compressor (33)	299
7.2.2.14	Belt drive for dust aspirator (34)	300
7.3	Slip clutches	301
7.3.1	Description	301
7.3.1.1	Clutch for main crop elevator upper shaft (1)	301
7.3.1.2	Clutch for shaker shoe counter drive (2)	301
7.3.1.3	Shear bolt for unloading auger counter drive (3)	302
7.4	Tires	303
7.4.1	Tire pressure	303
7.4.2	Replacement of Front Wheels	304
7.4.3	Replacement of Rear Wheels	305
7.4.4	Front wheel assembly	306
7.4.5	Rear wheel assembly	307
7.5	Brakes	308
7.5.1	Service brakes	308
7.5.2	Park brake	309
7.6	Rear axle	310
7.6.1	Toe-in setting	310
7.6.2	Steering ram ball joints	310
7.6.3	Width setting	311
7.6.4	Telescopic arm position	311
7.6.5	Rear axle support	313
7.7	Battery	314
7.7.1	Battery Replacement	314
7.7.2	Suggestions regarding the battery	314
7.7.3	Indicator Light for Battery Charging	315
8	Systems	317
8.1	Safety Precautions	319
8.1.1	Notes	319
8.2	Engine supply system	320
8.2.1	Permitted fuels	320
8.2.2	Fuel Circuit	321
8.2.3	Bleeding the Fuel Supply Circuit	322
8.2.4	Catalytic fluid tank (DEF)	323
8.2.5	Injection system operation	324
8.3	Engine air intake and exhaust system	325
8.3.1	Operation	325
8.4	Engine cooling system	327
8.4.1	Coolant	327
8.4.2	Engine cooling system operation	328
8.5	Engine lubrication system	329
8.5.1	Operation	329
8.5.2	Oil vapor recovery system	330
8.6	SCR system	331
8.6.1	Operation	331
8.7	Hydraulics system	333
8.7.1	Pumps and fuel tank	333
8.7.2	Table positioning hydraulic circuits	335
8.7.2.1	Cutting table oleopneumatic shock absorbers	336
8.7.2.2	Flow limiting solenoid valve	336
8.7.2.3	Hose burst valve	337
8.7.2.4	Table horizontal positioning circuit (optional)	337
8.7.3	Reel rotation control hydraulic circuit	338
8.7.4	Hydraulic steering system	339

8.7.5 Auxiliary hydraulics circuit	340
8.8 Hydrostatic transmission system	341
8.8.1 Front-wheel drive	341
8.8.2 Rear-wheel drive (optional)	342
8.9 Electrical system	343
8.9.1 Main components	343
8.9.2 Fuses	344
8.9.3 Additional fuses	347
8.9.4 Cab fuses	350
8.9.5 Relays	351
8.9.5.1 Additional relays	352
8.9.5.2 Various relays	353
8.9.6 Control units	355
8.9.6.1 Engine sensors and control unit	356
8.9.7 Connections for additional equipment	357
8.9.7.1 Electric connectors	357
8.9.8 Headlight adjustment	359
9 Troubleshooting	361
9.1 Description	363
9.1.1 Feeding	363
9.1.2 Threshing	363
9.1.3 Separation and cleaning	365
9.1.4 Hydrostatic Transmission	368
9.1.5 Engine	369
9.1.6 Hydraulics system	371
9.1.7 Electrical system	372
9.1.8 Air conditioning circuit	373
9.1.9 Straw chopper	373
10 Off-Season Storage	377
10.1 Procedure to follow	379
10.1.1 Operations to be carried out after the harvest	379
10.1.2 Ordering spare parts	380
10.1.3 Operations to be carried out before the new season	380
11 Optional equipment	383
11.1 Information	385
11.1.1 General considerations	385
11.2 Optional equipment	386
11.2.1 Auxiliary table lifting ram	386
11.2.2 Four-wheel drive	387
11.2.3 Camera	387
11.2.4 Windbreak	388
11.2.5 Additional lights and mirrors	388
11.2.6 Electrically operated straw chopper straw deflectors	389
11.2.7 Additional fire extinguisher	389
11.2.8 Diesel fuel prefilter	390
11.2.9 Air compressor	390
11.2.10 Additional Portable Lamp	391
11.2.11 Weight and moisture control monitor	391
11.2.12 Trailer hitch	392
11.2.13 Refrigerator	392
11.2.14 Lateral floatation	393
11.2.15 Vertical Knives	393
11.2.16 Electrically-operated sieves and returns sensors	394
11.2.17 Cylinder cover	395



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

11.2.18	Tailings cover plate	395
11.2.19	Top sieve	396
11.2.20	Bottom sieve	397
11.3	Equipment for threshing	398
11.3.1	Equipment for maize	398
11.3.2	Equipment for corn-cob	399
11.3.3	Equipment for rice	400
11.3.4	Equipment for light seed crops	400
11.3.5	Equipment for soya and peas	401
11.4	Ballast weights	402
11.4.1	Description	402
11.4.2	Ballast weights on rear axle	403
11.4.3	Ballast weights on the straw walker hood for machines without straw chopper	404
11.4.4	Ballast weights on the rear wheels with a liquid mix (for tubeless tires)	405
11.4.5	Filling tires with anti-freeze solutions	406
11.5	Straw chopper	407
11.5.1	Transport positions	407
11.5.2	Working position	408
11.5.3	Operating the straw chopper	409
11.5.4	Disengaging the straw chopper	411
11.5.5	Access to the straw chopper rotor	411
11.5.6	Straw chopper rotor knives	411
11.5.7	Counter-knives	412
11.5.8	Chopping quality	412
11.5.9	Use of straw chopper in maize	414
11.6	Chaff Spreader	416
11.6.1	Working and maintenance positions	416
11.6.2	Chaff spreader speed	418
11.6.3	Disengaging the chaff spreader	418
11.6.4	Chaff spreader belt tensioning	418
11.7	Tracks	419
11.7.1	Use and maintenance	419
11.7.2	Track chain tension	420
12	Technical Specifications	421
12.1	Wheels and tires	423
12.1.1	information	423
12.1.2	Wheel tightening torque	423
12.1.3	Tire capacity	423
12.1.4	Tire equipment- front axle	424
12.1.5	Tire equipment - rear axle	425
12.1.6	Tire equipment - Version with half-tracks on front axle	426
12.1.7	Ballast weights	427
12.2	Dimensions	428
12.2.1	Combine dimensions	428
12.2.2	Tracks with runners	430
12.2.3	Clearance between unloading auger and table	431
12.2.4	Clearance between unloading auger and ground	432
12.3	Technical specifications	433
12.3.1	Feeding unit	433
12.3.2	Threshing sys.	433
12.3.3	Cleaning unit	435
12.3.4	Grain tank	436
12.3.5	Hydraulic system	436
12.3.6	Hydrostatic system	437
12.3.7	Engine	437

12.3.8 Electrical components	438
12.3.9 Transmission	438
12.3.10 Rear axle	439
12.3.11 Weight	439
13 Index	441

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>