

Combines

FENDT 5255 L - 6275 L

FENDT 5255 L / 5255 L MCS - S/N => ZN205550_03020001
FENDT 5255 L PL - S/N => ZN205554_03000001
FENDT 6275 L / 6275 L MCS - S/N => ZN205650_03020001
FENDT 6275 L PL - S/N => ZN205654_03000001



TABLE OF CONTENT

| | |
|--|----|
| Preface | 1 |
| General Information - 00 | 2 |
| Engine - 10 | 3 |
| Drive transmission - 14 | 4 |
| Transmission - 21 | 5 |
| Front drive axle - 25 | 6 |
| Hydrostatic transmission - 29 | 7 |
| Brakes - 33 | 8 |
| Hydraulic system - 35 | 9 |
| Steering - 41 | 10 |
| Axles and wheels - 44 | 11 |
| Cab air conditioning system - 50 | 12 |
| Electrical system - 55 | 13 |
| Attachments/Headers - 58 | 14 |
| Product feeding - 60 | 15 |
| Threshing - 66 | 16 |
| Separation - 72 | 17 |
| Straw chopper - 73 | 18 |
| Cleaning - 74 | 19 |
| Tank - 80 | 20 |
| Conversion | 21 |

1 Preface

| | | |
|------------|------------------------------------|-----|
| 1.1 | Introductory notes | 1-3 |
| 1.2 | Important warnings | 1-4 |
| 1.3 | Identification number | 1-5 |

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

1.1 Introductory notes

- This manual is divided into sections numbered with two-digit numbers, each section having independent page numbering. For quick reference, these sections have the same identification number and description as the relevant Flat Time Rate Manual.
- The subjects covered and the information sought can easily be found using the index on the following pages.
- The information in this manual was updated on the date shown on the booklet. As AGCO is constantly improving its product range, some information may not be updated due to modifications made for technical or commercial reasons as well as for compliance with legal requirements in the various countries. If there are any inconsistencies, contact our AGCO Sales and Service Networks.

1.2 Important warnings

- **Warning: Some of the models listed in this manual are not marketed in your country. For more details, contact your dealer.**
- All repair and maintenance work listed in this manual must be carried out exclusively by the AGCO Service Network, in strict compliance with the instructions provided and using, where necessary, the special tools required.
- Anybody who carries out the above operations without scrupulously complying with the instructions shall be held personally liable for any damage caused as a result of their actions.
- The Manufacturer and all the organizations in its distribution chain, including (without limitation) national, regional or local dealers, reject any responsibility for damage due to the abnormal behavior of parts and/or components not approved by the Manufacturer, including those used for the servicing or repair of the product manufactured or marketed by the Manufacturer. In any case, no warranty of any type is issued or imposed concerning the product manufactured or marketed by the Manufacturer for damage due to abnormal behavior of parts and/or components not approved by the Manufacturer.

LITERARY AND ARTISTIC PROPERTY OF AGCO CORPORATION

Reproduction of text and illustrations, even partially, is prohibited

PRINTED IN ITALY



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

1.3 Identification number



CAUTION: Some of the models listed in this manual are not marketed in your country

| Model | Model identification code |
|------------------|---------------------------|
| FENDT 5255 L | X5AS |
| FENDT 5255 L MCS | X5BS |
| FENDT 5255 L PL | X5BS AL |
| FENDT 6275 L | X6AS |
| FENDT 6275 L MCS | X6BS |
| FENDT 6275 L PL | X6BS AL |

Description of the combine harvester identification number - Type 1

Example: * $\frac{\text{a}}{\text{5550}}$ * $\frac{\text{b}}{\text{5550}}$ $\frac{\text{c}}{\text{10001}}$ *
d

a = Technical type

d = Identification number: **555010001** is made up of two parts:

- Part 1 (**b**), made up of 4 digits "5550", identifies the technical type (machine model).
- Part 2 (**c**), made up of 5 digits "10001", which increase in numerical order of production and identify the sequential number of the produced machine model.

| | |
|--------------------|---|
| *5550*55501.. ...* | For FENDT 5255 L/FENDT 5255 L MCS models |
| *5650*56501.. ...* | For FENDT 6275 L/FENDT 6275 L MCS models |

Description of the combine harvester identification number - Type 2

Example: * $\frac{\text{a}}{\text{ZN2}}$ $\frac{\text{b}}{\text{0}}$ $\frac{\text{c}}{\text{5550}}$ $\frac{\text{d}}{\text{x}}$ $\frac{\text{e}}{\text{0}}$ $\frac{\text{f}}{\text{3}}$ $\frac{\text{g}}{\text{020001}}$ *
h

h = Identification number: **ZN205550x03020001** is made up of 7 parts:

- a** Manufacturer code: ZN2 = AGCO S.P.A.
- b** Not used.
- c** Technical type.
- d** Random letter generated automatically.
- e** Not used.
- f** Production site code: 3 = Breganze.
- g** Sequential number.

| | |
|---------------------|---|
| *ZN205550x03020001* | For FENDT 5255 L/FENDT 5255 L MCS models |
| *ZN205554x03000001* | For FENDT 5255 L PL models |
| *ZN205650x03020001* | For FENDT 6275 L/FENDT 6275 L MCS models |
| *ZN205654x03000001* | For FENDT 6275 L PL models |

FreeFlow grain header identification number

| | |
|-------------------|-------------------------------------|
| 7116.. ... | For the 16 ft (m 4.80) model |
| 7118.. ... | For the 18 ft (m 5.40) model |
| 7120.. ... | For the 20 ft (m 6.00) model |
| 7123.. ... | For the 23 ft (m 7.00) model |
| 7125.. ... | For the 25 ft (m 7.60) model |

PowerFlow grain header identification number

| | |
|--------------------|----------------------------|
| 7018.. ... | For the 18 ft model |
| 7020.. ... | For the 20 ft model |
| 7022... ... | For the 22 ft model |

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>