

Operator's Manual



Combines

FENDT 5255 L - 6275 L

FENDT 5255 L / 5255 L MCS - S/N => 555010094
FENDT 6275 L / 6275 L MCS - S/N => 565010197



Breganze
AGCO S.p.A. - Via F. Laverda, 15/17 - 36042
BREGANZE (VI) – Italy.
FENDT is a worldwide brand of AGCO
© AGCO 2016
Original Operator's Manual

May 2016
FENDT 5255L-6275L_EN_LA327307014
EAME
English

Combines

1 General Information	15
1.1 Information	17
1.1.1 Introduction	17
1.1.2 Company policy	17
1.1.3 Optional equipment	17
1.1.4 Spare parts and accessories	18
1.1.5 Warranty	18
1.1.6 Lubricants	18
1.2 Use	20
1.2.1 Use of the combine	20
1.3 Identification	21
1.3.1 Combine identification	21
1.3.2 Engine Identification	22
1.3.3 Cutting table identification	23
1.3.4 Operator seat identification	23
1.3.5 Hydrostatic pump identification	24
1.3.6 Hydrostatic motor identification	24
1.3.7 Straw chopper identification (if fitted)	25
1.3.8 Chaff spreader identification (if fitted)	25
1.3.9 Trailer hitch identification (if fitted)	26
1.4 Identification form	27
1.4.1 Machine data	27
1.5 Conformity	28
1.5.1 EC Declaration of Conformity	28
1.6 Information	29
1.6.1 Ecology	29
1.6.2 Hydraulic systems: hoses	29
1.6.3 Scrapping and disposal	30
1.7 Weight	31
1.7.1 Weight distribution	31
2 Safety	33
2.1 Warning symbols and safety instructions	35
2.1.1 Warnings	35
2.2 Information for road transport	36
2.2.1 Road transport	36
2.3 Information for operations	39
2.3.1 Field Operations	39
2.4 Information for maintenance	43
2.4.1 Maintenance work	43
2.5 Information on the engine	47
2.5.1 Engine	47
2.6 Safety and function decals	51
2.6.1 Location of decals	51
2.6.2 Description of decals	54
2.7 Work on the battery	66
2.7.1 Battery	66
2.8 Safety devices	67
2.8.1 Emergency exit	67

2.8.2	Operator presence device	68
2.8.2.1	Returning the machine to normal operation	69
2.8.3	Safety belts	70
2.8.4	Cutting table safety stops	71
2.8.5	Safety guard for main crop elevator	72
2.8.6	Sprags for wheels	72
2.8.7	Audible alarm for reversing	73
2.8.8	Reflectors for road transport	74
2.8.9	Safety Guards	75
2.8.10	Fall protection rails	75
2.8.11	Safety devices for operations to be carried out in the upper part of the machine	77
2.8.12	Straw Chopper (if fitted)	78
2.8.13	Fire extinguisher	78
2.9	Trailer hitch	79
2.9.1	Automatic towing hooks	79
2.9.2	CUNA and CE trailer hitches	80
2.9.2.1	Procedure for attaching and removing	81
2.9.2.2	Drawbar coupling	82
2.9.3	ROCKINGER trailer hitch	82
2.9.3.1	Removal	82
2.9.3.2	Drawbar coupling	83
2.9.4	Fixed trailer hitch (non-automatic - CUNA type)	84
2.10	Machine lifting	85
2.10.1	Attachment points	85
2.11	Towing	86
2.11.1	Towing the combine	86
2.12	Further information	87
2.12.1	Noise level in the cab	87
2.12.2	Vibrations in the cab	87
2.12.3	Statutory regulations	87
2.12.4	Electromagnetic emissions	88
2.13	Notes	89
2.13.1	Notes for road transport	89
3	Operation	91
3.1	Combine operation	93
3.1.1	Crop processing	93
3.2	Stage 1	94
3.2.1	Feeding	94
3.3	Stage 2	95
3.3.1	Threshing	95
3.4	Stage 3	96
3.4.1	Separation	96
3.5	Stage 4	97
3.5.1	Cleaning	97
3.6	Stage 5	98
3.6.1	Grain storage and unloading	98
3.7	Transmission	99
3.7.1	Rear-wheel drive (4WD)	99
4	Controls and Instruments	101
4.1	Steering column	103
4.1.1	Adjustments	103
4.1.2	Ignition switch	104
4.1.3	Direction indicators	105

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

4.2 Brakes	106
4.2.1 Brake pedals	106
4.2.2 Service brakes	106
4.2.3 Park brake	107
4.3 Multifunction lever	108
4.3.1 Main components	108
4.3.2 Push buttons on the multifunction lever	109
4.4 Gear shift lever and reversing lever	111
4.4.1 General Information	111
4.5 Instrument panel	112
4.5.1 Components	112
4.5.2 Armrest	113
4.5.3 Throttle control	113
4.5.4 Switch for threshing mechanism and straw chopper	114
4.5.5 Switch for feed mechanism engagement	114
4.5.6 Switch for four-wheel drive (optional)	115
4.5.7 Miscellaneous push buttons	115
4.5.8 Push button for road transport mode	116
4.6 Computer	117
4.6.1 Description	117
4.6.1.1 Screen	118
4.6.1.2 Push buttons and knob	120
4.6.2 Main function controls	121
4.6.2.1 Activated device checks	124
4.6.2.2 Meaning of the symbols:	124
4.6.3 Combine main menu	125
4.6.3.1 Cells (4 and 5) of the Combine main menu	126
4.6.4 Machine settings and performance control	127
4.6.5 Setting straw chopper deflectors	128
4.6.6 Monitoring performance and returns	129
4.6.7 Header settings	130
4.6.7.1 Header configuration	130
4.6.7.2 Advanced header settings	131
4.6.7.3 Header settings	132
4.6.8 Reel	134
4.6.9 Automatic controls	135
4.6.10 Preset height	136
4.6.11 Automatic height	137
4.6.12 Field pressure	139
4.6.13 Lateral floatation	140
4.6.14 Automatic control combinations	140
4.6.14.1 Pre-set height and Automatic height	141
4.6.14.2 Pre-set height and Field pressure	143
4.6.14.3 Pre-set height and Lateral floatation	143
4.6.14.4 Pre-set height, Automatic height and Field pressure	144
4.6.14.5 Pre-set height, Automatic height and Lateral floatation	146
4.6.14.6 Pre-set height, Field pressure and Lateral floatation	146
4.6.14.7 Pre-set height, Automatic height, Field pressure and Lateral floatation (recommended setting)	147
4.6.14.8 Automatic height and Field pressure	148
4.6.14.9 Automatic height and Lateral floatation	150
4.6.14.10 Automatic height, Field pressure and Lateral floatation	150
4.6.14.11 Field pressure and Lateral floatation	151
4.6.15 Settings for harvesting specific crops	152
4.6.16 Shafts and engine	153
4.6.17 Maintenance & calibration	154
4.6.17.1 Calibrations	155

4.6.17.2	Information on the management system	156
4.6.17.3	System setup	157
4.6.18	Error codes	160
4.6.19	Diagnostics	162
4.6.20	Meters	165
4.6.21	Display adjustment	166
4.6.21.1	Night-time screen brightness	167
4.6.21.2	Screen calibration	168
4.6.21.3	Cleaning the screen	169
4.7	Cab	170
4.7.1	Main components	170
4.7.2	Air conditioning	171
4.7.2.1	Compressor	171
4.7.2.2	Condenser	172
4.7.2.3	Expansion valve – evaporator	172
4.7.3	Pressurization and heating	173
4.7.4	Cab controls	175
4.7.4.1	Rear-view mirrors	179
4.7.5	Cab seats	180
4.7.6	Other cab components	182
4.7.6.1	Refrigerator	182
4.7.6.2	Document Pocket	182
4.7.6.3	Sun visor	183
4.7.6.4	Rear Cab Window	184
4.7.6.5	Reading light	184
4.7.6.6	Footrest	185
4.7.6.7	Preparation for radio installation	185
4.8	Access to combine components	186
4.8.1	Access to the operator platform	186
4.8.2	Access to and cleaning of the front windshield of the cab	187
4.8.3	Cleaning the rear-view mirrors	188
4.8.4	Cleaning the camera	189
4.8.5	Access to the engine compartment	189
4.8.6	Access to the grain tank	190
4.8.7	Access to the inside of the grain tank	191
4.9	Engine	192
4.9.1	Starting the engine	192
4.9.2	Useful advice	193
4.9.3	Stopping the engine	194
4.10	Road transport	195
4.10.1	Operations to be carried out before transportation	195
4.11	Using the combine	198
4.11.1	Operations to be carried out before use	198
5	Field Operations	199
5.1	General Information	201
5.1.1	Notes	201
5.1.2	Before operating the machine in the field	201
5.2	Starting and Stopping the Combine	203
5.2.1	Procedure to follow	203
5.3	Cutting table	205
5.3.1	Attaching and removing the table	205
5.3.2	Table lateral floatation	209
5.4	Main Crop Elevator	211
5.4.1	Adjustments	211
5.4.1.1	Access to the main components	213

5.4.1.2 P.F.R. — Finger feed roller	214
5.4.2 Reverse drive system	215
5.4.3 Stone trap	216
5.4.3.1 Stone trap assembly removal/refitting	217
5.5 Cylinder Housing	219
5.5.1 Threshing drum	219
5.5.1.1 Unblocking the cylinder	220
5.5.2 Concave	221
5.5.2.1 Concave filler plates	222
5.5.2.2 Parallelism between the cylinder and concave	224
5.5.2.3 Universal wheat/maize concave	225
5.5.2.4 Basic settings - universal concave	226
5.5.2.5 Spike-toothed Cylinder/Concave (for rice)	227
5.5.3 Rear beater	229
5.6 Multi-Crop Separator (MCS)	230
5.6.1 Operational description	230
5.6.2 Checking the concave position	231
5.6.3 Disengaging the Multi Crop Separator concaves	232
5.6.4 Multi Crop Separator speed	233
5.7 Straw walkers	235
5.7.1 Description and adjustments	235
5.8 Main Grain Pan	237
5.8.1 Description	237
5.8.2 Checking the main grain pan	238
5.8.3 Cleaning the main grain pan	240
5.9 Fanning Mill	241
5.9.1 Description and adjustments	241
5.9.1.1 Fanning mill for threshing light seed crops	243
5.10 Top sieve	244
5.10.1 Adjustment	244
5.11 Bottom sieve	248
5.11.1 Adjustment	248
5.12 Tailings	250
5.12.1 Description and adjustments	250
5.13 Grain tank	252
5.13.1 Description	252
5.13.1.1 Grain tank unloading auger	252
5.13.1.2 Sensors to check tank filling	253
5.13.1.3 Grain tank control window	254
5.13.1.4 Doors for Grain Tank Maintenance and Cleaning	254
5.13.1.5 Vertical auger tank drain door	255
5.13.1.6 Tank bottom door	256
5.13.1.7 Grain Tank Cover	257
5.13.2 Basic Settings	259
6 Lubrication and Maintenance	261
6.1 General Information	263
6.1.1 Lubrication and Maintenance	263
6.2 Preliminary Service Inspection	265
6.2.1 After the first 50 working hours	265
6.3 Scheduled Service Inspection	266
6.3.1 Operation and adjustment	266
6.3.2 When and where to carry it out	267
6.3.3 Interval - 10 hours	272
6.3.3.1 Hydraulic and hydrostatic systems tank (1)	272
6.3.3.2 Engine oil (2)	273

6.3.3.3	Threshing drum variator (3)	274
6.3.3.4	Coolant expansion tank (4)	274
6.3.3.5	Prefilter/water separator (5)	275
6.3.3.6	Straw chopper rotor (6)	275
6.3.4	Interval - 50 hours	276
6.3.4.1	Rear axle support (11)	276
6.3.4.2	Table drive-belt tensioner (12)	276
6.3.4.3	Service brakes (13)	277
6.3.4.4	Cab air filters (14)	277
6.3.4.5	Fanning mill variator (15)	279
6.3.4.6	Coupling bushes of final drive shafts (16)	279
6.3.4.7	Rear-axle king pins (17)	280
6.3.4.8	Evaporator (18)	280
6.3.4.9	Condenser (19)	281
6.3.4.10	Engine radiator and hydraulic oil radiator (20)	282
6.3.4.11	Adjusting the rotary screen brushes and aspirator brushes	283
6.3.4.12	Grain-tank filling auger gearbox (21)	284
6.3.4.13	Track frames (22)	285
6.3.4.14	Rear straw walker shaft supports (23)	286
6.3.5	Interval - 100 hours	287
6.3.5.1	Unloading auger bottom gearbox (31)	287
6.3.5.2	Crop-unloading auger drive belt tensioner (32)	288
6.3.5.3	Main crop-elevator belt tensioner (33)	288
6.3.5.4	Chaff spreader drive (if installed) (34)	289
6.3.5.5	Crop unloading-auger control cylinder (35)	289
6.3.5.6	Main crop elevator adapter (36)	290
6.3.5.7	MCS belt tensioner (if installed) (37)	290
6.3.5.8	Threshing-mechanism belt tensioner (38)	291
6.3.5.9	Hydrostatic-pump belt tensioner (39)	291
6.3.5.10	Cab access ladder (40)	292
6.3.5.11	Tires (41)	292
6.3.5.12	Main crop elevator supports (42)	293
6.3.5.13	Rear wheel 4WD tie rod (if fitted) (43)	294
6.3.5.14	Engine (44)	294
6.3.5.15	Engine air filter (45)	295
6.3.5.16	Park brake (46)	296
6.3.6	Interval - 250 hours	297
6.3.6.1	Gearbox (61)	297
6.3.6.2	Reduction gearbox (62)	297
6.3.6.3	Main clutch (63)	298
6.3.6.4	Unloading auger support (64)	298
6.3.6.5	Straw chopper driven-belt tensioner (65)	299
6.3.6.6	Straw chopper drive-belt tensioner (66)	299
6.3.6.7	Straw chopper idler shaft (67)	300
6.3.6.8	Tank unloading-auger clutch (68)	300
6.3.6.9	Aspirator drive-belt tensioner (69)	301
6.3.6.10	Rotary-screen belt tensioner (70)	301
6.3.6.11	Windshield wash fluid reservoir (71)	302
6.3.6.12	Engine oil and filters (72)	302
6.3.6.13	Tailing-auger left support (73)	304
6.3.6.14	Unloading-auger top angle gear (74)	305
6.3.7	Interval - 500 hours	306
6.3.7.1	Hydraulic systems oil (81)	306
6.3.7.2	Hydraulic and hydrostatic systems return filter (82)	307
6.3.7.3	Hydraulic-oil intake filter (83)	308
6.3.7.4	Hydrostatic transmission filter (84)	308
6.3.7.5	Engine diesel-fuel filters (85)	309
6.3.7.6	Dehydrator filter (86)	310

6.3.7.7 Catalytic fluid filter (87)	311
6.3.7.8 Reduction gears (88)	312
6.3.7.9 Gearbox (89)	312
6.3.7.10 Air compressor (if installed) (90)	313
6.3.7.11 Battery (91)	313
6.4 Periodical maintenance operations	314
6.4.1 Description	314
6.4.1.1 Engine valves (1)	315
6.4.1.2 Coolant (2)	316
6.4.1.3 Service brake circuit fluid (3)	317
6.4.1.4 Diesel fuel tank (4)	317
6.4.1.5 Turbocharger (5)	318
6.4.1.6 Hydraulic hoses (6)	318
6.5 Lubrication	319
6.5.1 Summary table	319
7 Adjustments	321
7.1 Adjustments	323
7.1.1 Important information	323
7.2 Belt and chain adjustment	324
7.2.1 Belts and chains (left-hand side)	324
7.2.1.1 Feeder drive belt (1)	325
7.2.1.2 Threshing unit drive belt (2)	326
7.2.1.3 Multi-Crop Separator drive belt (3)	327
7.2.1.4 Unloading-auger drive belt (4)	328
7.2.1.5 Belt drive for hydrostatic pump (5)	329
7.2.1.6 Belt drive for chaff spreader (if fitted) (6)	330
7.2.1.7 Belt drive for reversing (7)	331
7.2.1.8 Main transmission belt (8)	332
7.2.1.9 Belt drives for good grain and tailings augers (9)	333
7.2.1.10 Belt drive for straw walkers (10)	333
7.2.1.11 Belt drive for cutting table (11)	334
7.2.1.12 Chain drive for unloading auger (12)	334
7.2.1.13 Belt drive for straw chopper (if fitted) (13)	335
7.2.1.14 Belt drive for straw chopper (if fitted) (14)	335
7.2.1.15 Air-compressor drive belt (if installed) (15)	336
7.2.2 Belts and chains (right-hand side)	338
7.2.2.1 Reel-pump drive belt (20)	339
7.2.2.2 Dust aspirator drive belt (21)	339
7.2.2.3 Rotary-screen drive belt (22)	340
7.2.2.4 Belt drive for engine coolant pump (23)	340
7.2.2.5 Drive belt for engine fan and alternator (24)	341
7.2.2.6 Belt drive for cylinder variator (25)	341
7.2.2.7 Belt drive for fanning mill variator (26)	342
7.2.2.8 Top chain drive for tailings auger (27)	343
7.2.2.9 Crop elevator chain (28)	343
7.2.2.10 Chain drive for tailings elevator (29)	344
7.2.2.11 Front crop elevator chain (30)	344
7.2.2.12 Finger-feed-roller drive chain (31)	345
7.2.2.13 Tank filling-auger drive chain (32)	345
7.2.2.14 Belt drive for cab air conditioning compressor (33)	346
7.3 Reverse drive system	347
7.3.1 Adjustment of control tie rod	347
7.3.2 Adjustment of the distance between disks	348
7.4 Slip clutches	349
7.4.1 Description	349
7.4.1.1 Clutch for main crop elevator upper shaft (1)	349

7.4.1.2	Clutch on finger feed roller (2)	349
7.4.1.3	Clutch for shaker shoe counter drive (3)	350
7.4.1.4	Shear bolt for unloading-auger counter drive (4)	350
7.5	Grain tank unloading auger	351
7.5.1	Adjustment of the support	351
7.6	Tires	352
7.6.1	Tire pressure	352
7.6.2	Replacement of Front Wheels	353
7.6.3	Replacement of Rear Wheels	354
7.6.4	Front and rear wheels assembly	355
7.7	Brakes	356
7.7.1	Service brakes	356
7.7.2	Park brake	357
7.8	Rear axle	358
7.8.1	Toe-in setting	358
7.8.2	Steering ram ball joints	358
7.8.3	Width setting	359
7.8.4	Telescopic arm position	360
7.8.5	Rear axle support	362
7.9	Battery	363
7.9.1	Battery Replacement	363
7.9.2	Suggestions regarding the battery	363
8	Systems	365
8.1	Safety Precautions	367
8.1.1	Notes	367
8.2	Engine supply system	368
8.2.1	Permitted fuels	368
8.2.2	Fuel Circuit	369
8.2.3	Bleeding the Fuel Supply Circuit	370
8.2.4	Catalytic fluid tank (DEF)	371
8.2.5	Injection system operation	371
8.3	Engine air intake and exhaust system	373
8.3.1	Operation	373
8.4	Engine cooling system	375
8.4.1	Coolant	375
8.4.2	Engine cooling system operation	376
8.5	Engine lubrication system	377
8.5.1	Operation	377
8.5.2	Oil vapor recovery system	378
8.6	SCR system	379
8.6.1	Operation	379
8.7	Hydraulics system	382
8.7.1	Pumps and fuel tank	382
8.7.2	Table positioning hydraulic circuits	384
8.7.2.1	Cutting table oleopneumatic shock absorbers	385
8.7.2.2	Flow rate proportional valve	385
8.7.2.3	Hose burst valves	386
8.7.2.4	Table horizontal positioning circuit	386
8.7.3	Reel rotation control hydraulic circuit	387
8.7.4	Hydraulic steering system	388
8.7.5	Auxiliary hydraulics circuit	389
8.8	Hydrostatic transmission system	390
8.8.1	Front-wheel drive	390
8.8.2	Rear-wheel drive	391

8.9 Electrical system	392
8.9.1 Main components	392
8.9.2 Computerized system	393
8.9.3 Fuses	394
8.9.4 Additional fuses	398
8.9.5 Relays	400
8.9.5.1 Additional relays	405
8.9.6 Control units	406
8.9.6.1 EXT control unit	407
8.9.6.2 ENEDC control unit	407
8.9.6.3 FTD1 control unit	408
8.9.6.4 FTD2 control unit	408
8.9.6.5 Engine control unit	409
8.9.6.6 Engine sensors and control unit	410
8.9.7 Electric motors	411
8.9.7.1 Engine ignition control motor	411
8.9.7.2 Concave position control motors	411
8.9.7.3 MCS concave position control motor (if installed)	412
8.9.7.4 Grain tank cover position control motor	413
8.9.7.5 Straw deflector control motor (if fitted)	413
8.9.7.6 Fanning mill variator control motor	414
8.9.7.7 Top sieve control motor	414
8.9.7.8 Lower sieve motor	415
8.9.8 Sensors	415
8.9.8.1 Forward speed sensor	415
8.9.8.2 Cylinder speed sensor	416
8.9.8.3 Fanning mill speed sensor	416
8.9.8.4 Reel speed sensor	417
8.9.8.5 Straw chopper speed sensor	417
8.9.8.6 Performance control sensors	418
8.9.8.7 Exhaust gas sensors	419
8.9.8.8 Returns control sensors	420
8.9.9 Electric connectors	420
8.9.10 Connections for diagnostics	423
8.9.11 Flashing lights	423
9 Troubleshooting	425
9.1 Description	427
9.1.1 Feeding	427
9.1.2 Threshing	427
9.1.3 Separation and cleaning	429
9.1.4 Hydrostatic Transmission	432
9.1.5 Engine	433
9.1.5.1 EEM4 engine troubleshooting (self-diagnosis)	435
9.1.5.2 Fault codes	435
9.1.6 Hydraulics system	447
9.1.7 Electrical system	448
9.1.8 Air conditioning circuit	448
9.1.9 Straw chopper	449
10 Off-Season Storage	451
10.1 Procedure to follow	453
10.1.1 Operations to be carried out after the harvest	453
10.1.2 Ordering spare parts	454
10.1.3 Operations to be carried out before the new season	454
11 Optional equipment	457

11.1 Information	459
11.1.1 General considerations	459
11.2 Optional equipment	460
11.2.1 Four-wheel drive	460
11.2.2 Camera	460
11.2.3 Windbreak	461
11.2.4 Additional lights	461
11.2.5 Additional lights for flip-up maize headers	463
11.2.6 Additional mirrors	463
11.2.7 Additional fire extinguisher	464
11.2.8 Diesel fuel filter	464
11.2.9 Air compressor for maintenance	465
11.2.10 Weight and moisture control monitor	466
11.2.11 Multimedia navigation system	466
11.2.12 Trailer hitch	467
11.2.13 Refrigerator	467
11.2.14 Vertical Knives	468
11.2.15 Electrically-operated sieves and returns sensors	468
11.2.16 Cylinder cover	469
11.2.17 Tailings cover plate	470
11.2.18 Top sieve	470
11.2.19 Bottom sieve	471
11.3 Equipment for threshing	472
11.3.1 Equipment for maize	472
11.3.2 Equipment for corn-cob	474
11.3.3 Equipment for rice	474
11.3.4 Equipment for light seed crops	475
11.3.5 Equipment for soya and peas	475
11.4 Ballast weights	476
11.4.1 Description	476
11.4.2 Ballast weights on rear axle	477
11.4.3 Ballast weights on the straw walker hood for machines without straw chopper	478
11.4.4 Ballast weights on the rear wheels with a liquid mix (for tubeless tires)	479
11.4.5 Filling tires with anti-freeze solutions	480
11.5 Straw chopper	481
11.5.1 Electrically operated straw chopper straw deflectors	481
11.5.2 Transport position	481
11.5.3 Working position	482
11.5.4 Operating the straw chopper	484
11.5.5 Disengaging the straw chopper	485
11.5.6 Access to the straw chopper rotor	485
11.5.7 Straw chopper rotor knives	486
11.5.8 Counter-knives	487
11.5.9 Chopping quality	487
11.5.10 Use of straw chopper in maize	488
11.6 Chaff Spreader	490
11.6.1 Working and maintenance positions	490
11.6.2 Chaff spreader speed	492
11.6.3 Disengaging the chaff spreader	492
11.6.4 Chaff spreader belt tensioning	492
11.7 Tracks	493
11.7.1 Use and maintenance	493
11.7.2 Track chain tension	494
12 Technical Specifications	495
12.1 Wheels and tires	497

12.1.1	information	497
12.1.2	Wheel tightening torque	497
12.1.3	Tire capacity	497
12.1.4	Tire equipment	498
12.1.5	Description	501
12.2	Dimensions	502
12.2.1	Combine dimensions	502
12.2.2	Clearance between unloading auger and table	506
12.3	Technical specifications	508
12.3.1	Feeding unit	508
12.3.2	Threshing sys.	509
12.3.3	Cleaning unit	514
12.3.4	Grain tank	515
12.3.5	Hydraulic system	516
12.3.6	Hydrostatic system	516
12.3.7	Engine	517
12.3.8	Electrical components	517
12.3.9	Transmission	518
12.3.10	Rear axle	519
12.3.11	Weight	519
13	Index	521



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

1. General Information

1.1 Information	17
1.1.1 Introduction	17
1.1.2 Company policy	17
1.1.3 Optional equipment	17
1.1.4 Spare parts and accessories	18
1.1.5 Warranty	18
1.1.6 Lubricants	18
1.2 Use	20
1.2.1 Use of the combine	20
1.3 Identification	21
1.3.1 Combine identification	21
1.3.2 Engine Identification	22
1.3.3 Cutting table identification	23
1.3.4 Operator seat identification	23
1.3.5 Hydrostatic pump identification	24
1.3.6 Hydrostatic motor identification	24
1.3.7 Straw chopper identification (if fitted)	25
1.3.8 Chaff spreader identification (if fitted)	25
1.3.9 Trailer hitch identification (if fitted)	26
1.4 Identification form	27
1.4.1 Machine data	27
1.5 Conformity	28
1.5.1 EC Declaration of Conformity	28
1.6 Information	29
1.6.1 Ecology	29
1.6.2 Hydraulic systems: hoses	29
1.6.3 Scrapping and disposal	30
1.7 Weight	31
1.7.1 Weight distribution	31

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>