



FENDT 5270 C from serial No. 552310097

FENDT 5270 C-AL from serial No. 552410055

FENDT 6300 C from serial No. 563010120

FENDT 6300 C-AL from serial No. 563410051

**OPERATOR'S
MANUAL**

FENDT



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

TABLE OF CONTENTS

- 1. General Information**
- 2. Operation - Controls and Instruments**
- 3. Field Operations**
- 4. Lubrication and Maintenance**
- 5. Adjustments**
- 6. Troubleshooting**
- 7. Off-season storage**
- 8. Optional Equipment**
- 9. Technical Specifications**
- 10. Alphabetical Index**

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

CONTENTS

	Section-Page
1. GENERAL INFORMATION	
Customer information	1-1
Combine identification	1-3
Ecology: information for the prevention of environmental pollution	1-8
Safety	1-9
Emergency exit	1-31
Safety devices	1-32
Machine lifting	1-38
Appropriate use	1-39
Noise level in the cab	1-40
Fire resistance inside the cab	1-40
Statutory regulations	1-40
Vibrations in the cab	1-41
Hydraulic systems: hose safety requirements	1-41
Scrapping and disposal	1-42
Electromagnetic emissions	1-42
Notes for road transport	1-43
Weight distribution	1-45
2. OPERATION - CONTROLS AND INSTRUMENTS	
Operation - Crop Processing	2-1
Steering column	2-5
Control Pedals	2-6
Multifunction lever	2-7
Gearshift lever and reversing lever	2-8
Control panel (5270 C and 6300 C models)	2-9
Control panel (5270 C-AL and 6300 C-AL models)	2-10
Agritronicplus	2-16
Levelling system	2-35
Cab	2-37
Access to combine components	2-46
Engine: starting	2-49
Stopping the engine	2-50
Driving the combine	2-51
Operations to be carried out before road transport	2-51
Before using the combine	2-53
Towing the combine	2-54
Moving the machine in emergency situations	2-54
3. FIELD OPERATIONS	
General Information	3-1
Starting and Stopping the Combine	3-2
Cutting table	3-3
Main Crop Elevator	3-11
Cylinder Housing	3-17
Concave	3-18
Rear beater	3-23
Multi Crop Separator	3-24
Straw walkers	3-27
Main Grain Pan	3-28
Fanning mill	3-29
Top sieve	3-30
Bottom sieve	3-31
Returns	3-32
Grain tank	3-33

4. LUBRICATION AND MAINTENANCE

General information	4-1
Preliminary Service Inspection	4-2
Scheduled Service Inspection	4-3
Where and When to Carry Out Service Inspection	4-4
Routine Service Inspection	4-8
Scheduled Service Inspection	4-10
Capacities and Specifications (5270 C - 6300 C)	4-33
Capacities and Specifications (5270 C-AL - 6300 C-AL)	4-37

5. ADJUSTMENTS

Belt and chain adjustment	5-1
Belts and chains (left-hand side)	5-2
Belts and chains (right-hand side)	5-10
Slip clutches	5-16
Tyres	5-17
Brakes	5-21
Rear axle	5-22
Engine	5-25
Hydraulic System	5-28
Electrical System	5-30

6. TROUBLESHOOTING

Feeding	6-1
Threshing	6-1
Separation and cleaning	6-3
Hydrostatic Transmission	6-5
Engine	6-6
Hydraulic system	6-14
Levelling Hydraulics System	6-15
Electrical System	6-15
Air conditioning circuit	6-15
Straw Chopper	6-19

7. OFF-SEASON STORAGE**8. OPTIONAL EQUIPMENT****9. TECHNICAL SPECIFICATIONS**

Wheels and tyres	9-1
Combine Dimensions with Tyres (mm)	9-4
Combine Dimensions with Tracks (mm)	9-5
Tracks with runners	9-6
Clearance between unloading auger and table (mm)	9-7
Technical specifications - 5270 C - 6300 C	9-8
Dimensions of 5270 C-AL - 6300 C-AL models (mm)	9-14
Technical specifications - 5270 C-AL and 6300 C-AL models	9-15

10. ALPHABETICAL INDEX

1. GENERAL INFORMATION

1.1 CUSTOMER INFORMATION

INTRODUCTION

Your new self-propelled combine is manufactured for harvesting seed and cereal crops, for threshing, separating, cleaning and conveying the grain into the tank and depositing the straw on the ground.

This Operator's Manual contains all the necessary practical information on the operation, adjustment and maintenance of your new machine and should be used as a practical reference guide.

The combine is designed and built to ensure optimum performance, comfort and ease-of-operation in a wide variety of crops and conditions.

The combine has been thoroughly inspected prior to delivery both at the factory and by your Dealer, to ensure you receive it in perfect condition.

To keep the combine in perfect condition and to ensure trouble-free performance, the periodical maintenance operations listed in this manual should be carried out at the recommended intervals.

Before operating or driving the combine, read this Operator's Manual carefully, paying particular attention to the section on safety rules. Always keep this manual on hand for further reference.

The terms "left" and "right" are always used with reference to the travelling direction.

Should you require further information about the machine, please do not hesitate to contact your authorised Dealer. Your Dealer provides specially trained personnel, genuine quality spare parts and the required tools to solve any problems that may arise.

NOTE:

- This combine has been designed and built in compliance with the Machine Directive 98/37/EC. A CE Declaration of Conformity is supplied with the machine. The manufacturer disclaims all liability to any claim resulting from unauthorised modification or alteration.
- This manual is published for world wide distribution, and the availability of equipment shown as basic or accessory varies according to the territory in which the combine is to be used. Specifications may differ from those contained in this Operator's Manual according to the customer's requirements.
- In order to provide a better view, certain illustrations in this manual may show an assembly with standard guards, or the guards required by law in different countries, open or removed. **However, a machine should never be operated in this condition. For your own safety, always ensure all safety guards are closed and correctly fitted before operating the machine.**
- **This Operator's Manual, along with the Operator's Manual for table and PTO shaft, must always be kept in the pocket provided on the right-hand side of the operator seat for convenient reference..**

Modifications and improvements

In accordance with the Company's policy of continuous improvements to its products, the Company reserves the right to modify and improve its products whenever necessary and to the required extent, without any obligation to apply such modifications to previously sold products.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>