

Combines

1 General Information	15
1.1 Information	17
1.1.1 Introduction	17
1.1.2 Company policy	17
1.1.3 Optional equipment	17
1.1.4 Spare parts and accessories	18
1.1.5 Warranty	18
1.1.6 Lubricants	18
1.2 Use of the combine	20
1.3 Identification	22
1.3.1 Combine identification	22
1.3.2 Engine Identification	23
1.3.3 Cutting table identification	24
1.3.4 Operator seat identification	24
1.3.5 Hydrostatic pump identification	25
1.3.6 Hydrostatic motor identification	25
1.3.7 Straw chopper identification (if fitted)	26
1.3.8 Chaff spreader identification (if fitted)	26
1.3.9 Trailer hitch identification (if fitted)	27
1.4 Identification form	28
1.4.1 Machine data	28
1.5 Conformity	29
1.5.1 EC Declaration of Conformity	29
1.6 Information	30
1.6.1 Ecology	30
1.6.2 Hydraulic systems: hoses	30
1.6.3 Scrapping and disposal	31
1.7 Weight	32
1.7.1 Weight distribution	32
2 Safety	35
2.1 Warning symbols and safety instructions	37
2.1.1 Warnings	37
2.2 Information for road transport	38
2.2.1 Road transport	38
2.3 Information for operations	41
2.3.1 Field Operations	41
2.4 Information for maintenance	45
2.4.1 Maintenance work	45
2.5 Information on the engine	49
2.5.1 Engine	49
2.6 Leveling information	52
2.7 Safety and function decals	53
2.7.1 Location of decals	53
2.7.2 Description of decals	56
2.8 Work on the battery	68
2.8.1 Battery	68
2.9 Safety devices	69
2.9.1 Emergency exit	69

2.9.2	Operator presence device	70
2.9.2.1	Returning the machine to normal operation	70
2.9.2.2	Operator presence device anomaly	71
2.9.3	Safety belts	72
2.9.4	Cutting table safety stops	73
2.9.5	Safety guard for main crop elevator	74
2.9.6	Sprags for wheels	74
2.9.7	Audible alarm for reversing	75
2.9.8	Reflectors for road transport	76
2.9.9	Safety Guards	77
2.9.10	Fall protection rails	77
2.9.11	Safety devices for operations to be carried out in the upper part of the machine	79
2.9.12	Straw chopper	80
2.9.13	Fire extinguisher	80
2.10	Trailer hitch	81
2.10.1	Automatic towing hooks	81
2.10.2	CUNA and CE trailer hitches	82
2.10.2.1	Procedure for attaching and removing	83
2.10.2.2	Drawbar coupling	84
2.10.3	ROCKINGER trailer hitch	84
2.10.3.1	Removal	84
2.10.3.2	Drawbar coupling	85
2.10.4	Fixed trailer hitch (non-automatic - CUNA type)	86
2.11	Machine lifting	87
2.11.1	Attachment points	87
2.12	Towing	88
2.12.1	Towing the combine	88
2.13	Further information	89
2.13.1	Noise level in the cab	89
2.13.2	Vibrations in the cab	89
2.13.3	Statutory regulations	89
2.13.4	Electromagnetic emissions	90
2.14	Notes	91
2.14.1	Notes for road transport	91
3	Operation	93
3.1	Combine operation	95
3.1.1	Crop processing	95
3.2	Stage 1	96
3.2.1	Feeding	96
3.3	Stage 2	97
3.3.1	Threshing	97
3.4	Stage 3	98
3.4.1	Separation	98
3.5	Stage 4	99
3.5.1	Cleaning	99
3.6	Stage 5	100
3.6.1	Grain storage and unloading	100
3.7	Transmission	101
3.7.1	Rear-wheel drive	101
3.8	Leveling	102
3.8.1	Cross leveling	102
3.8.2	Cross and longitudinal leveling (FENDT 5275 C PLI – 6335 C PLI models only)	102
4	Controls and Instruments	103

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

4.1 Steering column	107
4.1.1 Adjustments	107
4.1.2 Ignition switch	108
4.1.3 Direction indicators	109
4.2 Brakes	110
4.2.1 Service brakes	110
4.2.2 Park brake	110
4.3 Multifunction lever	112
4.3.1 Main components	112
4.3.2 Push buttons on the multifunction lever	113
4.4 Gear shift lever and reversing lever	115
4.4.1 General Information	115
4.5 Instrument panel	117
4.5.1 Components (FENDT 5275 C - 6335 C models)	117
4.5.2 Components (FENDT 5275 C PL - 6335 C PL models)	118
4.5.3 Components (FENDT 5275 C PLI - 6335 C PLI models)	119
4.5.4 Armrest	120
4.5.5 Throttle control	120
4.5.6 Switch for threshing mechanism and straw chopper	121
4.5.7 Switch for feed mechanism engagement	121
4.5.8 Switch for rear-wheel drive	122
4.5.9 Toggle switch for parking brake	122
4.5.10 Miscellaneous push buttons	123
4.5.11 Push button for road transport mode	123
4.5.12 Switch for cross leveling mode	124
4.5.13 Toggle switch for machine front position	124
4.5.14 Toggle switch for cross leveling	125
4.5.15 Control switch for longitudinal leveling mode	125
4.6 Computer	126
4.6.1 Description	126
4.6.1.1 Screen	127
4.6.1.2 Push buttons and knob	128
4.6.2 Main function controls	128
4.6.2.1 Activated device checks	130
4.6.2.2 Meaning of the symbols:	130
4.6.3 Machine information	133
4.6.3.1 Fields 4 and 5	134
4.6.4 Combine main menu	135
4.6.5 Machine settings and performance control	136
4.6.6 Setting straw chopper deflectors	137
4.6.7 Monitoring performance and returns	138
4.6.8 Header settings	139
4.6.8.1 Header configuration	139
4.6.8.2 Advanced header settings	140
4.6.8.3 Header settings	141
4.6.9 Reel	142
4.6.10 Automatic controls	143
4.6.11 Preset height	144
4.6.12 Automatic height	146
4.6.13 Field pressure	148
4.6.14 Lateral floatation	149
4.6.15 Header compensation (FENDT 5275 C PLI - 6335 C PLI models only)	150
4.6.16 Automatic control combinations	150
4.6.16.1 Pre-set height and Automatic height	151
4.6.16.2 Pre-set height and Field pressure	153
4.6.16.3 Pre-set height and Lateral floatation	153
4.6.16.4 Pre-set height, Automatic height and Field pressure	154

4.6.16.5	Pre-set height, Automatic height and Lateral floatation	156
4.6.16.6	Pre-set height, Field pressure and Lateral floatation	156
4.6.16.7	Pre-set height, Automatic height, Field pressure and Lateral floatation (recommended setting)	157
4.6.16.8	Automatic height and Field pressure	158
4.6.16.9	Automatic height and Lateral floatation	160
4.6.16.10	Automatic height, Field pressure and Lateral floatation	160
4.6.16.11	Field pressure and Lateral floatation	161
4.6.17	Settings for harvesting specific crops	162
4.6.18	Levelling combine settings	163
4.6.19	Maintenance & calibration	164
4.6.19.1	Calibrations	165
4.6.19.2	Information on the management system	166
4.6.19.3	System setup	167
4.6.20	Error codes	170
4.6.21	Diagnostics	171
4.6.22	Meters	175
4.6.23	Display adjustment	176
4.6.23.1	Night-time screen brightness	177
4.6.23.2	Cleaning the screen	178
4.6.24	Additional information	179
4.6.25	Camera	183
4.7	Cab	184
4.7.1	Main components	184
4.7.2	Air conditioning	185
4.7.2.1	Control unit	185
4.7.2.2	Compressor	186
4.7.2.3	Condenser	186
4.7.2.4	Expansion valve – evaporator	187
4.7.3	Pressurization and heating	187
4.7.4	Cab controls	189
4.7.4.1	Rear-view mirrors	193
4.7.5	Cab seats	194
4.7.6	Other cab components	196
4.7.6.1	Refrigerator	196
4.7.6.2	Document Pocket	196
4.7.6.3	Sun visor	197
4.7.6.4	Rear Cab Window	197
4.7.6.5	Reading light	198
4.7.6.6	Footrest	198
4.7.6.7	Preparation for radio installation	199
4.8	Access to combine components	200
4.8.1	Access to the operator platform	200
4.8.2	Access to and cleaning of the front windshield of the cab	201
4.8.3	Cleaning the rear-view mirrors	202
4.8.4	Cleaning the camera	203
4.8.5	Access to the engine compartment	203
4.8.6	Access to the grain tank	205
4.8.7	Access to the inside of the grain tank	206
4.9	Engine	207
4.9.1	Starting the engine	207
4.9.2	Useful advice	208
4.9.3	Stopping the engine	209
4.10	Road transport	210
4.11	Using the combine	213
4.11.1	Operations to be carried out before use	213

5 Field Operations	215
5.1 General Information	217
5.1.1 Notes	217
5.1.2 Before operating the machine in the field	217
5.2 Starting and Stopping the Combine	219
5.2.1 Procedure to follow	219
5.3 Cutting table	221
5.3.1 Attaching and removing the table	221
5.3.2 Table lateral floatation	225
5.4 Main Crop Elevator	227
5.4.1 Adjustments	227
5.4.1.1 Access to the main components	229
5.4.1.2 P.F.R. — Finger feed roller	230
5.4.2 Reverse drive system	231
5.4.3 Stone trap	232
5.4.3.1 Stone trap assembly removal/refitting	233
5.5 Cylinder Housing	235
5.5.1 Threshing drum	235
5.5.1.1 Unblocking the cylinder	236
5.5.2 Concave	237
5.5.2.1 Concave filler plates (wheat concave)	238
5.5.2.2 Parallelism between the cylinder and concave	239
5.5.3 Sectional concave	240
5.5.3.1 Concave filler plates	241
5.5.3.2 Parallelism between the cylinder and concave	242
5.5.4 Universal wheat/maize concave	243
5.5.4.1 Basic settings - universal concave	244
5.5.5 Spike-toothed Cylinder/Concave (for rice)	245
5.5.6 Rear beater	246
5.6 Multi-Crop Separator (MCS)	248
5.6.1 Operational description	248
5.6.2 Checking the concave position	249
5.6.3 Disengaging the Multi Crop Separator concaves	250
5.6.4 Multi Crop Separator speed	251
5.7 Straw walkers	253
5.7.1 Description and adjustments	253
5.8 Main Grain Pan	255
5.8.1 Description	255
5.8.2 Checking the main grain pan	256
5.8.3 Cleaning the main grain pan	257
5.9 Fanning Mill	258
5.9.1 Description and adjustments	258
5.9.1.1 Fanning mill for threshing light seed crops	260
5.10 Top sieve	261
5.10.1 Adjustment	261
5.11 Bottom sieve	265
5.11.1 Adjustment	265
5.12 Tailings	267
5.12.1 Description and adjustments	267
5.13 Grain tank	269
5.13.1 Description	269
5.13.1.1 Grain tank unloading auger	269
5.13.1.2 Sensors to check tank filling	270
5.13.1.3 Grain tank control window	271

5.13.1.4	Doors for Grain Tank Maintenance and Cleaning	272
5.13.1.5	Vertical auger tank drain door	273
5.13.1.6	Tank bottom door	274
5.13.1.7	Grain Tank Cover	275
5.13.2	Basic Settings	278
6	Lubrication and Maintenance	281
6.1	General Information	283
6.1.1	Lubrication and Maintenance	283
6.2	Preliminary Service Inspection	285
6.2.1	After the first 50 working hours	285
6.3	Scheduled Service Inspection	286
6.3.1	Operation and adjustment	286
6.3.2	When and where to carry it out	287
6.3.3	Interval - 10 hours	292
6.3.3.1	Hydraulic and hydrostatic systems tank (1)	292
6.3.3.2	Engine oil (2)	293
6.3.3.3	Threshing drum variator (3)	294
6.3.3.4	Coolant expansion tank (4)	294
6.3.3.5	Prefilter/water separator (5)	295
6.3.3.6	Straw chopper rotor (6)	295
6.3.4	Interval - 50 hours	296
6.3.4.1	Rear axle support (11)	296
6.3.4.2	Table drive-belt tensioner (12)	296
6.3.4.3	Service brakes (13)	297
6.3.4.4	Cab air filters (14)	297
6.3.4.5	Fanning mill variator (15)	299
6.3.4.6	Coupling bushes of final drive shafts (16)	299
6.3.4.7	Rear-axle king pins (17)	300
6.3.4.8	Evaporator (18)	300
6.3.4.9	Condenser (19)	301
6.3.4.10	Engine radiator and hydraulic oil radiator (20)	302
6.3.4.11	Adjusting the rotary screen brushes and aspirator brushes	303
6.3.4.12	Grain-tank filling auger gearbox (21)	304
6.3.4.13	Track frames (22)	305
6.3.4.14	Rear straw walker shaft supports (23)	306
6.3.5	Interval - 100 hours	307
6.3.5.1	Unloading auger bottom gearbox (31)	307
6.3.5.2	Crop-unloading auger drive belt tensioner (32)	308
6.3.5.3	Main crop-elevator belt tensioner (33)	308
6.3.5.4	Chaff spreader drive (if installed) (34)	309
6.3.5.5	Crop unloading-auger control cylinder (35)	309
6.3.5.6	Main crop elevator adapter (36)	310
6.3.5.7	MCS belt tensioner (37)	310
6.3.5.8	Threshing-mechanism belt tensioner (38)	311
6.3.5.9	Hydrostatic-pump belt tensioner (39)	311
6.3.5.10	Cab access ladder (40)	312
6.3.5.11	Tires (41)	312
6.3.5.12	Main crop elevator supports (42)	313
6.3.5.13	Rear wheel 4WD tie rod (if fitted) (43)	314
6.3.5.14	Engine (44)	314
6.3.5.15	Engine air filter (45)	316
6.3.5.16	Front levelling (46)	317
6.3.5.17	Rear leveling control cylinders (FENDT 5275 C PLI – 6335 C PLI models only) (47)	317
6.3.5.18	Cutting table levelling cylinders (48)	318
6.3.6	Interval - 250 hours	318

6.3.6.1	Gearbox (61)	318
6.3.6.2	Reduction gearbox (62)	319
6.3.6.3	Main clutch (63)	319
6.3.6.4	Unloading auger support (64)	320
6.3.6.5	Straw chopper driven-belt tensioner (65)	320
6.3.6.6	Straw chopper drive-belt tensioner (66)	321
6.3.6.7	Straw chopper idler shaft (67)	321
6.3.6.8	Tank unloading-auger clutch (68)	322
6.3.6.9	Aspirator drive-belt tensioner (69)	322
6.3.6.10	Rotary-screen belt tensioner (70)	323
6.3.6.11	Windshield wash fluid reservoir (71)	323
6.3.6.12	Engine oil and filters (72)	323
6.3.6.13	Tailing-auger left support (73)	327
6.3.6.14	Unloading-auger top angle gear (74)	327
6.3.7	Interval - 500 hours	328
6.3.7.1	Hydraulic systems oil (81)	328
6.3.7.2	Hydraulic and hydrostatic systems return filter (82)	329
6.3.7.3	Hydraulic-oil intake filter (83)	330
6.3.7.4	Hydrostatic transmission filter (84)	330
6.3.7.5	Engine diesel-fuel filters (85)	331
6.3.7.6	Dehydrator filter (86)	332
6.3.7.7	Catalytic fluid filter (87)	333
6.3.7.8	Reduction gears (88)	334
6.3.7.9	Gearbox (89)	334
6.3.7.10	Air compressor (if installed) (90)	335
6.3.7.11	Battery (91)	335
6.4	Periodical maintenance operations	336
6.4.1	Description	336
6.4.1.1	Engine valves (1)	336
6.4.1.2	Coolant (2)	338
6.4.1.3	Service brake circuit fluid (3)	339
6.4.1.4	Diesel fuel tank (4)	339
6.4.1.5	Turbocharger (5)	340
6.4.1.6	Hydraulic hoses (6)	340
6.4.1.7	Catalytic fluid tank (DEF) (7)	341
6.5	Lubrication	342
7	Adjustments	345
7.1	Adjustments	347
7.1.1	Important information	347
7.2	Belt and chain adjustment	348
7.2.1	Belts and chains (left-hand side)	348
7.2.1.1	Feeder drive belt (1)	349
7.2.1.2	Threshing unit drive belt (2)	350
7.2.1.3	Multi-Crop Separator drive belt (3)	351
7.2.1.4	Unloading-auger drive belt (4)	351
7.2.1.5	Belt drive for hydrostatic pump (5)	352
7.2.1.6	Belt drive for chaff spreader (if fitted) (6)	353
7.2.1.7	Belt drive for reversing (7)	353
7.2.1.8	Main transmission belt (8)	354
7.2.1.9	Belt drives for good grain and tailings augers (9)	355
7.2.1.10	Belt drive for straw walkers (10)	355
7.2.1.11	Belt drive for cutting table (11)	356
7.2.1.12	Chain drive for unloading auger (12)	356
7.2.1.13	Belt drive for straw chopper (if fitted) (13)	357
7.2.1.14	Belt drive for straw chopper (if fitted) (14)	358
7.2.1.15	Air-compressor drive belt (if installed) (15)	359

7.2.1.16	Leveling pump drive belt (FENDT 5275 C PL - FENDT 6335 C PL - FENDT 5275 C PLI - FENDT 6335 C PLI models only) (16)	360
7.2.2	Belts and chains (right-hand side)	361
7.2.2.1	Reel-pump drive belt (20)	361
7.2.2.2	Dust aspirator drive belt (21)	362
7.2.2.3	Rotary-screen drive belt (22)	362
7.2.2.4	Belt drive for engine coolant pump (23)	363
7.2.2.5	Drive belt for engine fan and alternator (24)	363
7.2.2.6	Belt drive for cylinder variator (25)	364
7.2.2.7	Belt drive for fanning mill variator (26)	365
7.2.2.8	Top chain drive for tailings auger (27)	366
7.2.2.9	Crop elevator chain (28)	366
7.2.2.10	Chain drive for tailings elevator (29)	367
7.2.2.11	Front crop elevator chain (30)	367
7.2.2.12	Finger-feed-roller drive chain (31)	368
7.2.2.13	Tank filling-auger drive chain (32)	368
7.2.2.14	Belt drive for cab air conditioning compressor (33)	369
7.3	Shuttle	370
7.3.1	Adjustment of control tie rod	370
7.3.2	Adjustment of the distance between disks	371
7.4	Slip clutches	372
7.4.1	Description	372
7.4.1.1	Clutch for main crop elevator upper shaft (1)	372
7.4.1.2	Clutch on finger feed roller (2)	372
7.4.1.3	Clutch for shaker shoe counter drive (3)	373
7.4.1.4	Shear bolt for unloading-auger counter drive (4)	373
7.5	Grain tank unloading auger	374
7.5.1	Adjustment of the support	374
7.6	Tires	375
7.6.1	Tire pressure	375
7.6.2	Replacement of Front Wheels	375
7.6.3	Replacement of Rear Wheels	378
7.6.4	Front and rear wheels assembly	380
7.7	Brakes	382
7.7.1	Service brakes	382
7.7.2	Park brake	383
7.7.2.1	Disengaging the brake	383
7.8	Rear axle	385
7.8.1	Toe-in setting	385
7.8.2	Steering ram ball joints	385
7.8.3	Width setting	386
7.8.4	Telescopic arm position	387
7.8.5	Rear axle support	389
7.9	Battery	390
7.9.1	Battery Replacement	390
7.9.2	Suggestions regarding the battery	391
8	Systems	393
8.1	Safety Precautions	395
8.1.1	Notes	395
8.2	Engine supply system	396
8.2.1	Permitted fuels	396
8.2.2	Fuel Circuit	397
8.2.3	Bleeding the Fuel Supply Circuit	398
8.2.4	Catalytic fluid tank (DEF)	399
8.2.5	Injection system operation	400

8.3 Engine air intake and exhaust system	402
8.3.1 Operation	402
8.4 Engine cooling system	405
8.4.1 Coolant	405
8.4.2 Engine cooling system operation	406
8.5 Engine lubrication system	407
8.5.1 Operation	407
8.5.2 Oil vapor recovery system	408
8.6 SCR system	409
8.6.1 Operation	409
8.7 Hydraulics system	412
8.7.1 Pumps and fuel tank	412
8.7.2 Table positioning hydraulic circuits	413
8.7.2.1 Cutting table oleopneumatic shock absorbers	414
8.7.2.2 Flow rate proportional valve	415
8.7.2.3 Hose burst valves	415
8.7.2.4 Table horizontal positioning circuit	416
8.7.3 Reel rotation control hydraulic circuit	417
8.7.4 Hydraulic steering system	418
8.7.5 Auxiliary hydraulics circuit	419
8.7.6 Leveling hydraulic circuit	420
8.7.6.1 Rear automatic leveling (FENDT 5275 C PLI and FENDT 6335 C PLI models only)	422
8.7.6.2 Manual leveling	423
8.8 Hydrostatic transmission system	424
8.8.1 Front-wheel drive	424
8.8.2 Rear-wheel drive	425
8.9 Electrical system	426
8.9.1 Main components	426
8.9.2 Computerized system	427
8.9.3 Fuses	428
8.9.4 Additional fuses	433
8.9.5 Relays	435
8.9.5.1 Additional relays	440
8.9.6 Control units	441
8.9.6.1 EXT control unit	441
8.9.6.2 ENEDC control unit	441
8.9.6.3 FTD1 control unit	442
8.9.6.4 FTD2 control unit	442
8.9.6.5 I/O module (leveling)	443
8.9.6.6 Engine control unit	443
8.9.6.7 Engine sensors and control unit	444
8.9.7 Electric motors	445
8.9.7.1 Engine ignition control motor	445
8.9.7.2 Concave position control motors	445
8.9.7.3 MCS concave position control motor	446
8.9.7.4 Grain tank cover position control motor	446
8.9.7.5 Straw deflector control motor (if fitted)	447
8.9.7.6 Fanning mill variator control motor	447
8.9.7.7 Top sieve control motor	448
8.9.7.8 Lower sieve motor	448
8.9.8 Sensors	449
8.9.8.1 Forward speed sensor	449
8.9.8.2 Cylinder speed sensor	449
8.9.8.3 Fanning mill speed sensor	450
8.9.8.4 Reel speed sensor	450
8.9.8.5 Straw chopper speed sensor	451



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

8.9.8.6 Performance control sensors	451
8.9.8.7 Exhaust gas sensors	452
8.9.8.8 Returns control sensors	452
8.9.9 Electric connectors	453
8.9.10 Connections for diagnostics	455
8.9.11 Flashing lights	456
9 Troubleshooting	457
9.1 Description	459
9.1.1 Feeding	459
9.1.2 Threshing	459
9.1.3 Separation and cleaning	461
9.1.4 Hydrostatic Transmission	464
9.1.5 Engine	465
9.1.5.1 EEM4 engine troubleshooting (self-diagnosis)	467
9.1.5.2 Fault codes	467
9.1.6 Hydraulics system	479
9.1.7 Electrical system	481
9.1.8 Air conditioning circuit	481
9.1.9 Straw chopper	482
10 Off-Season Storage	485
10.1 Procedure to follow	487
10.1.1 Operations to be carried out after the harvest	487
10.1.2 Ordering spare parts	488
10.1.3 Operations to be carried out before the new season	488
11 Optional equipment	491
11.1 Information	493
11.1.1 General considerations	493
11.2 Optional equipment	494
11.2.1 Four-wheel drive	494
11.2.2 Windbreak	494
11.2.3 Additional lights	495
11.2.4 Additional lights for flip-up maize headers	496
11.2.5 Additional fire extinguisher	496
11.2.6 Diesel fuel prefilter	497
11.2.7 Air compressor for maintenance	498
11.2.8 Weight and moisture control monitor	499
11.2.9 Multimedia navigation system	499
11.2.10 Trailer hitch	500
11.2.11 Vertical Knives	500
11.2.12 Cylinder cover	501
11.2.13 Tailings cover plate	501
11.2.14 Top sieve	502
11.2.15 Bottom sieve	503
11.2.16 Auto-Guide	504
11.2.17 AGCOMMAND	504
11.3 Equipment for threshing	505
11.3.1 Equipment for maize	505
11.3.2 Equipment for corn-cob	506
11.3.3 Equipment for rice	507
11.3.4 Equipment for light seed crops	507
11.3.5 Equipment for soya and peas	508
11.4 Ballast weights	509
11.4.1 Description	509
11.4.2 Ballast weights on rear axle	509

11.4.3	Ballast weights on the straw walker hood for machines without straw chopper . . .	510
11.4.4	Ballast weights on the rear wheels with a liquid mix (for tubeless tires)	511
11.4.5	Filling tires with anti-freeze solutions	512
11.5	Straw chopper	513
11.5.1	Electrically operated straw chopper straw deflectors	513
11.5.2	Transport position	513
11.5.3	Working position	514
11.5.4	Operating the straw chopper	516
11.5.5	Disengaging the straw chopper	517
11.5.6	Access to the straw chopper rotor	517
11.5.7	Straw chopper rotor knives	518
11.5.8	Counter-knives	519
11.5.9	Chopping quality	519
11.5.10	Use of straw chopper in maize	520
11.6	Chaff Spreader	522
11.6.1	Working and maintenance positions	522
11.6.2	Chaff spreader speed	524
11.6.3	Disengaging the chaff spreader	524
11.6.4	Chaff spreader belt tensioning	524
11.7	Tracks	525
11.7.1	Use and maintenance	525
11.7.2	Track chain tension	526
12	Technical Specifications	527
12.1	Wheels and tires	529
12.1.1	information	529
12.1.2	Wheel tightening torque	529
12.1.3	Tire capacity	529
12.1.4	Front tire equipment	530
12.1.5	Rear tire equipment	534
12.1.6	Ballast weights	535
12.2	Dimensions	536
12.2.1	Combine dimensions	536
12.2.2	Clearance between unloading auger and table	544
12.3	Technical specifications	545
12.3.1	Feeding unit	545
12.3.2	Threshing sys.	545
12.3.3	Cleaning unit	551
12.3.4	Grain tank	552
12.3.5	Hydraulic system	553
12.3.6	Hydrostatic system	553
12.3.7	Engine	554
12.3.8	Electrical components	555
12.3.9	Transmission	555
12.3.10	Rear axle	557
12.3.11	Weight	557
13	Index	561

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>