

Operator's Manual

FENDT

Combines

FENDT 5275 C - 6335 C

*FENDT 5275 C - S/N => 553910019
FENDT 5275 C PL/PLI - S/N => 554010025
FENDT 6335 C - S/N => 564010083
FENDT 6335 C PL -S/N => 564110054*



Breganze
AGCO S.p.A. - Via F. Laverda, 15/17 - 36042
BREGANZE (VI) – Italy.
FENDT is a worldwide brand of AGCO
© AGCO 2016
Original Operator's Manual

May 2016
FENDT 5275C-6335C_EN_327317015
EAME
English

Combines

1 General Information	15
1.1 Information	17
1.1.1 Introduction	17
1.1.2 Company policy	17
1.1.3 Optional equipment	17
1.1.4 Spare parts and accessories	18
1.1.5 Warranty	18
1.1.6 Lubricants	18
1.2 Use of the combine	20
1.3 Identification	22
1.3.1 Combine identification	22
1.3.2 Engine Identification	23
1.3.3 Cutting table identification	24
1.3.4 Operator seat identification	24
1.3.5 Hydrostatic pump identification	25
1.3.6 Hydrostatic motor identification	25
1.3.7 Straw chopper identification (if fitted)	26
1.3.8 Chaff spreader identification (if fitted)	26
1.3.9 Trailer hitch identification (if fitted)	27
1.4 Identification form	28
1.4.1 Machine data	28
1.5 Conformity	29
1.5.1 EC Declaration of Conformity	29
1.6 Information	30
1.6.1 Ecology	30
1.6.2 Hydraulic systems: hoses	30
1.6.3 Scrapping and disposal	31
1.7 Weight	32
1.7.1 Weight distribution	32
2 Safety	35
2.1 Warning symbols and safety instructions	37
2.1.1 Warnings	37
2.2 Information for road transport	38
2.2.1 Road transport	38
2.3 Information for operations	41
2.3.1 Field Operations	41
2.4 Information for maintenance	45
2.4.1 Maintenance work	45
2.5 Information on the engine	49
2.5.1 Engine	49
2.6 Leveling information	53
2.7 Safety and function decals	54
2.7.1 Location of decals	54
2.7.2 Description of decals	57
2.8 Work on the battery	69
2.8.1 Battery	69
2.9 Safety devices	70
2.9.1 Emergency exit	70

2.9.2	Operator presence device	71
2.9.2.1	Returning the machine to normal operation	72
2.9.3	Safety belts	73
2.9.4	Cutting table safety stops	74
2.9.5	Safety guard for main crop elevator	75
2.9.6	Sprags for wheels	75
2.9.7	Audible alarm for reversing	76
2.9.8	Reflectors for road transport	77
2.9.9	Safety Guards	78
2.9.10	Fall protection rails	78
2.9.11	Safety devices for operations to be carried out in the upper part of the machine	80
2.9.12	Straw chopper	81
2.9.13	Fire extinguisher	81
2.10	Trailer hitch	82
2.10.1	Automatic towing hooks	82
2.10.2	CUNA and CE trailer hitches	83
2.10.2.1	Procedure for attaching and removing	84
2.10.2.2	Drawbar coupling	85
2.10.3	ROCKINGER trailer hitch	85
2.10.3.1	Removal	85
2.10.3.2	Drawbar coupling	86
2.10.4	Fixed trailer hitch (non-automatic - CUNA type)	87
2.11	Machine lifting	88
2.11.1	Attachment points	88
2.12	Towing	89
2.12.1	Towing the combine	89
2.13	Further information	90
2.13.1	Noise level in the cab	90
2.13.2	Vibrations in the cab	90
2.13.3	Statutory regulations	90
2.13.4	Electromagnetic emissions	91
2.14	Notes	92
2.14.1	Notes for road transport	92
3	Operation	95
3.1	Combine operation	97
3.1.1	Crop processing	97
3.2	Stage 1	98
3.2.1	Feeding	98
3.3	Stage 2	99
3.3.1	Threshing	99
3.4	Stage 3	100
3.4.1	Separation	100
3.5	Stage 4	101
3.5.1	Cleaning	101
3.6	Stage 5	102
3.6.1	Grain storage and unloading	102
3.7	Transmission	103
3.7.1	Rear-wheel drive	103
3.8	Leveling	104
3.8.1	Cross leveling	104
3.8.2	Cross and longitudinal leveling (FENDT 5275 C PLI model only)	104
4	Controls and Instruments	105
4.1	Steering column	109

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

4.1.1	Adjustments	109
4.1.2	Ignition switch	110
4.1.3	Direction indicators	111
4.2	Brakes	112
4.2.1	Service brakes	112
4.2.2	Park brake	112
4.3	Multifunction lever	114
4.3.1	Main components	114
4.3.2	Push buttons on the multifunction lever	115
4.4	Gear shift lever and reversing lever	117
4.4.1	General Information	117
4.5	Instrument panel	119
4.5.1	Components (FENDT 5275 C - 6335 C models)	119
4.5.2	Components (FENDT 5275 C PL - 6335 C PL models)	120
4.5.3	Components (FENDT 5275 C PLI model)	121
4.5.4	Armrest	122
4.5.5	Throttle control	122
4.5.6	Switch for threshing mechanism and straw chopper	123
4.5.7	Switch for feed mechanism engagement	123
4.5.8	Switch for rear-wheel drive	124
4.5.9	Toggle switch for parking brake	124
4.5.10	Miscellaneous push buttons	125
4.5.11	Push button for road transport mode	125
4.5.12	Switch for cross leveling mode	126
4.5.13	Toggle switch for machine front position	126
4.5.14	Toggle switch for cross leveling	127
4.5.15	Switch for longitudinal levelling mode control	127
4.6	Computer	128
4.6.1	Description	128
4.6.1.1	Screen	128
4.6.1.2	Push buttons and knob	129
4.6.2	Main function controls	130
4.6.2.1	Activated device checks	131
4.6.2.2	Meaning of the symbols:	132
4.6.3	Machine information	133
4.6.4	Combine main menu	134
4.6.5	Machine settings and performance control	135
4.6.6	Setting straw chopper deflectors	136
4.6.7	Monitoring performance and returns	137
4.6.8	Header settings	138
4.6.8.1	Header configuration	138
4.6.8.2	Advanced header settings	139
4.6.8.3	Header settings	140
4.6.9	Reel	141
4.6.10	Automatic controls	142
4.6.11	Preset height	143
4.6.12	Automatic height	145
4.6.13	Field pressure	147
4.6.14	Lateral floatation	148
4.6.15	Header compensation (only FENDT 5275 C PLI model)	149
4.6.16	Automatic control combinations	149
4.6.16.1	Pre-set height and Automatic height	150
4.6.16.2	Pre-set height and Field pressure	152
4.6.16.3	Pre-set height and Lateral floatation	152
4.6.16.4	Pre-set height, Automatic height and Field pressure	153
4.6.16.5	Pre-set height, Automatic height and Lateral floatation	155
4.6.16.6	Pre-set height, Field pressure and Lateral floatation	155

4.6.16.7	Pre-set height, Automatic height, Field pressure and Lateral floatation (recommended setting)	156
4.6.16.8	Automatic height and Field pressure	157
4.6.16.9	Automatic height and Lateral floatation	159
4.6.16.10	Automatic height, Field pressure and Lateral floatation	159
4.6.16.11	Field pressure and Lateral floatation	160
4.6.17	Settings for harvesting specific crops	161
4.6.18	Levelling combine settings	162
4.6.19	Maintenance & calibration	163
4.6.19.1	Calibrations	164
4.6.19.2	Information on the management system	165
4.6.19.3	System setup	166
4.6.20	Error codes	169
4.6.21	Diagnostics	171
4.6.22	Meters	175
4.6.23	Display adjustment	176
4.6.23.1	Night-time screen brightness	177
4.6.23.2	Screen calibration	178
4.6.23.3	Cleaning the screen	179
4.6.24	Additional information	180
4.6.25	Camera	184
4.7	Cab	185
4.7.1	Main components	185
4.7.2	Air conditioning	186
4.7.2.1	Control unit	186
4.7.2.2	Compressor	187
4.7.2.3	Condenser	187
4.7.2.4	Expansion valve – evaporator	188
4.7.3	Pressurization and heating	188
4.7.4	Cab controls	190
4.7.4.1	Rear-view mirrors	194
4.7.5	Cab seats	195
4.7.6	Other cab components	197
4.7.6.1	Refrigerator	197
4.7.6.2	Document Pocket	197
4.7.6.3	Sun visor	198
4.7.6.4	Rear Cab Window	199
4.7.6.5	Reading light	199
4.7.6.6	Footrest	200
4.7.6.7	Preparation for radio installation	200
4.8	Access to combine components	201
4.8.1	Access to the operator platform	201
4.8.2	Access to and cleaning of the front windshield of the cab	202
4.8.3	Cleaning the rear-view mirrors	203
4.8.4	Cleaning the camera	204
4.8.5	Access to the engine compartment	204
4.8.6	Access to the grain tank	206
4.8.7	Access to the inside of the grain tank	207
4.9	Engine	208
4.9.1	Starting the engine	208
4.9.2	Useful advice	209
4.9.3	Stopping the engine	210
4.10	Road transport	211
4.11	Using the combine	214
4.11.1	Operations to be carried out before use	214
5	Field Operations	215

5.1 General Information	217
5.1.1 Notes	217
5.1.2 Before operating the machine in the field	217
5.2 Starting and Stopping the Combine	219
5.2.1 Procedure to follow	219
5.3 Cutting table	221
5.3.1 Attaching and removing the table	221
5.3.2 Table lateral floatation	225
5.4 Main Crop Elevator	227
5.4.1 Adjustments	227
5.4.1.1 Access to the main components	229
5.4.1.2 P.F.R. — Finger feed roller	230
5.4.2 Reverse drive system	231
5.4.3 Stone trap	232
5.4.3.1 Stone trap assembly removal/refitting	233
5.5 Cylinder Housing	235
5.5.1 Threshing drum	235
5.5.1.1 Unblocking the cylinder	236
5.5.2 Concave	237
5.5.2.1 Concave filler plates	238
5.5.2.2 Parallelism between the cylinder and concave	240
5.5.2.3 Universal wheat/maize concave	241
5.5.2.4 Basic settings - universal concave	242
5.5.2.5 Spike-toothed Cylinder/Concave (for rice)	243
5.5.3 Rear beater	244
5.6 Multi-Crop Separator (MCS)	246
5.6.1 Operational description	246
5.6.2 Checking the concave position	247
5.6.3 Disengaging the Multi Crop Separator concaves	248
5.6.4 Multi Crop Separator speed	249
5.7 Straw walkers	251
5.7.1 Description and adjustments	251
5.8 Main Grain Pan	253
5.8.1 Description	253
5.8.2 Checking the main grain pan	254
5.8.3 Cleaning the main grain pan	254
5.9 Fanning Mill	256
5.9.1 Description and adjustments	256
5.9.1.1 Fanning mill for threshing light seed crops	258
5.10 Top sieve	259
5.10.1 Adjustment	259
5.11 Bottom sieve	263
5.11.1 Adjustment	263
5.12 Tailings	265
5.12.1 Description and adjustments	265
5.13 Grain tank	267
5.13.1 Description	267
5.13.1.1 Grain tank unloading auger	267
5.13.1.2 Sensors to check tank filling	268
5.13.1.3 Grain tank control window	269
5.13.1.4 Doors for Grain Tank Maintenance and Cleaning	270
5.13.1.5 Vertical auger tank drain door	271
5.13.1.6 Tank bottom door	271
5.13.1.7 Grain Tank Cover	272
5.13.2 Basic Settings	275

6 Lubrication and Maintenance	277
6.1 General Information	279
6.1.1 Lubrication and Maintenance	279
6.2 Preliminary Service Inspection	281
6.2.1 After the first 50 working hours	281
6.3 Scheduled Service Inspection	282
6.3.1 Operation and adjustment	282
6.3.2 When and where to carry it out	283
6.3.3 Interval - 10 hours	288
6.3.3.1 Hydraulic and hydrostatic systems tank (1)	288
6.3.3.2 Engine oil (2)	289
6.3.3.3 Threshing drum variator (3)	290
6.3.3.4 Coolant expansion tank (4)	290
6.3.3.5 Prefilter/water separator (5)	291
6.3.3.6 Straw chopper rotor (6)	291
6.3.4 Interval - 50 hours	292
6.3.4.1 Rear axle support (11)	292
6.3.4.2 Table drive-belt tensioner (12)	292
6.3.4.3 Service brakes (13)	293
6.3.4.4 Cab air filters (14)	293
6.3.4.5 Fanning mill variator (15)	295
6.3.4.6 Coupling bushes of final drive shafts (16)	296
6.3.4.7 Rear-axle king pins (17)	297
6.3.4.8 Evaporator (18)	297
6.3.4.9 Condenser (19)	298
6.3.4.10 Engine radiator and hydraulic oil radiator (20)	299
6.3.4.11 Adjusting the rotary screen brushes and aspirator brushes	300
6.3.4.12 Grain-tank filling auger gearbox (21)	301
6.3.4.13 Track frames (22)	302
6.3.4.14 Rear straw walker shaft supports (23)	303
6.3.5 Interval - 100 hours	304
6.3.5.1 Unloading auger bottom gearbox (31)	304
6.3.5.2 Crop-unloading auger drive belt tensioner (32)	305
6.3.5.3 Main crop-elevator belt tensioner (33)	305
6.3.5.4 Chaff spreader drive (if installed) (34)	306
6.3.5.5 Crop unloading-auger control cylinder (35)	306
6.3.5.6 Main crop elevator adapter (36)	307
6.3.5.7 MCS belt tensioner (37)	307
6.3.5.8 Threshing-mechanism belt tensioner (38)	308
6.3.5.9 Hydrostatic-pump belt tensioner (39)	308
6.3.5.10 Cab access ladder (40)	309
6.3.5.11 Tires (41)	309
6.3.5.12 Main crop elevator supports (42)	310
6.3.5.13 Rear wheel 4WD tie rod (if fitted) (43)	311
6.3.5.14 Engine (44)	311
6.3.5.15 Engine air filter (45)	312
6.3.5.16 Front levelling (46)	313
6.3.5.17 Rear levelling control cylinders (FENDT 5275 C PLI model only) (47)	314
6.3.5.18 Cutting table levelling cylinders (48)	314
6.3.6 Interval - 250 hours	315
6.3.6.1 Gearbox (61)	315
6.3.6.2 Reduction gearbox (62)	315
6.3.6.3 Main clutch (63)	316
6.3.6.4 Unloading auger support (64)	316
6.3.6.5 Straw chopper driven-belt tensioner (65)	317
6.3.6.6 Straw chopper drive-belt tensioner (66)	317

6.3.6.7	Straw chopper idler shaft (67)	318
6.3.6.8	Tank unloading-auger clutch (68)	318
6.3.6.9	Aspirator drive-belt tensioner (69)	319
6.3.6.10	Rotary-screen belt tensioner (70)	319
6.3.6.11	Windshield wash fluid reservoir (71)	320
6.3.6.12	Engine oil and filters (72)	320
6.3.6.13	Tailing-auger left support (73)	323
6.3.6.14	Unloading-auger top angle gear (74)	323
6.3.7	Interval - 500 hours	324
6.3.7.1	Hydraulic systems oil (81)	324
6.3.7.2	Hydraulic and hydrostatic systems return filter (82)	325
6.3.7.3	Hydraulic-oil intake filter (83)	326
6.3.7.4	Hydrostatic transmission filter (84)	326
6.3.7.5	Engine diesel-fuel filters (85)	327
6.3.7.6	Dehydrator filter (86)	328
6.3.7.7	Catalytic fluid filter (87)	329
6.3.7.8	Reduction gears (88)	330
6.3.7.9	Gearbox (89)	330
6.3.7.10	Air compressor (if installed) (90)	331
6.3.7.11	Battery (91)	331
6.4	Periodical maintenance operations	332
6.4.1	Description	332
6.4.1.1	Engine valves (1)	332
6.4.1.2	Coolant (2)	334
6.4.1.3	Service brake circuit fluid (3)	335
6.4.1.4	Diesel fuel tank (4)	335
6.4.1.5	Turbocharger (5)	336
6.4.1.6	Hydraulic hoses (6)	337
6.5	Lubrication	338
7	Adjustments	341
7.1	Adjustments	343
7.1.1	Important information	343
7.2	Belt and chain adjustment	344
7.2.1	Belts and chains (left-hand side)	344
7.2.1.1	Feeder drive belt (1)	345
7.2.1.2	Threshing unit drive belt (2)	346
7.2.1.3	Multi-Crop Separator drive belt (3)	347
7.2.1.4	Unloading-auger drive belt (4)	348
7.2.1.5	Belt drive for hydrostatic pump (5)	349
7.2.1.6	Belt drive for chaff spreader (if fitted) (6)	350
7.2.1.7	Belt drive for reversing (7)	351
7.2.1.8	Main transmission belt (8)	352
7.2.1.9	Belt drives for good grain and tailings augers (9)	353
7.2.1.10	Belt drive for straw walkers (10)	353
7.2.1.11	Belt drive for cutting table (11)	354
7.2.1.12	Chain drive for unloading auger (12)	354
7.2.1.13	Belt drive for straw chopper (if fitted) (13)	355
7.2.1.14	Belt drive for straw chopper (if fitted) (14)	355
7.2.1.15	Air-compressor drive belt (if installed) (15)	356
7.2.1.16	Levelling pump drive belt (only on FENDT 5275 C PL - FENDT 6335 C PL - FENDT 5275 C PLI models) (16)	357
7.2.2	Belts and chains (right-hand side)	358
7.2.2.1	Reel-pump drive belt (20)	358
7.2.2.2	Dust aspirator drive belt (21)	359
7.2.2.3	Rotary-screen drive belt (22)	359
7.2.2.4	Belt drive for engine coolant pump (23)	360

7.2.2.5	Drive belt for engine fan and alternator (24)	360
7.2.2.6	Belt drive for cylinder variator (25)	361
7.2.2.7	Belt drive for fanning mill variator (26)	362
7.2.2.8	Top chain drive for tailings auger (27)	363
7.2.2.9	Crop elevator chain (28)	363
7.2.2.10	Chain drive for tailings elevator (29)	364
7.2.2.11	Front crop elevator chain (30)	364
7.2.2.12	Finger-feed-roller drive chain (31)	365
7.2.2.13	Tank filling-auger drive chain (32)	365
7.2.2.14	Belt drive for cab air conditioning compressor (33)	366
7.3	Reverse drive system	367
7.3.1	Adjustment of control tie rod	367
7.3.2	Adjustment of the distance between disks	368
7.4	Slip clutches	369
7.4.1	Description	369
7.4.1.1	Clutch for main crop elevator upper shaft (1)	369
7.4.1.2	Clutch on finger feed roller (2)	369
7.4.1.3	Clutch for shaker shoe counter drive (3)	370
7.4.1.4	Shear bolt for unloading-auger counter drive (4)	370
7.5	Grain tank unloading auger	371
7.5.1	Adjustment of the support	371
7.6	Tires	372
7.6.1	Tire pressure	372
7.6.2	Replacement of Front Wheels	373
7.6.3	Replacement of Rear Wheels	375
7.6.4	Front and rear wheels assembly	377
7.7	Brakes	379
7.7.1	Service brakes	379
7.7.2	Park brake	380
7.7.2.1	Disengaging the brake	380
7.8	Rear axle	382
7.8.1	Toe-in setting	382
7.8.2	Steering ram ball joints	382
7.8.3	Width setting	383
7.8.4	Telescopic arm position	384
7.8.5	Rear axle support	386
7.9	Battery	387
7.9.1	Battery Replacement	387
7.9.2	Suggestions regarding the battery	387
8	Systems	389
8.1	Safety Precautions	391
8.1.1	Notes	391
8.2	Engine supply system	392
8.2.1	Permitted fuels	392
8.2.2	Fuel Circuit	393
8.2.3	Bleeding the Fuel Supply Circuit	394
8.2.4	Catalytic fluid tank (DEF)	395
8.2.5	Injection system operation	396
8.3	Engine air intake and exhaust system	398
8.3.1	Operation	398
8.4	Engine cooling system	401
8.4.1	Coolant	401
8.4.2	Engine cooling system operation	402
8.5	Engine lubrication system	403
8.5.1	Operation	403

8.5.2 Oil vapor recovery system	404
8.6 SCR system	405
8.6.1 Operation	405
8.7 Hydraulics system	408
8.7.1 Pumps and fuel tank	408
8.7.2 Table positioning hydraulic circuits	410
8.7.2.1 Cutting table oleopneumatic shock absorbers	411
8.7.2.2 Flow rate proportional valve	412
8.7.2.3 Hose burst valves	412
8.7.2.4 Table horizontal positioning circuit	413
8.7.3 Reel rotation control hydraulic circuit	414
8.7.4 Hydraulic steering system	415
8.7.5 Auxiliary hydraulics circuit	416
8.7.6 Leveling hydraulic circuit	417
8.7.6.1 Rear automatic levelling (only on FENDT 5275 C PLI model)	419
8.7.6.2 Manual leveling	420
8.8 Hydrostatic transmission system	421
8.8.1 Front-wheel drive	421
8.8.2 Rear-wheel drive	422
8.9 Electrical system	423
8.9.1 Main components	423
8.9.2 Computerized system	424
8.9.3 Fuses	425
8.9.4 Additional fuses	430
8.9.5 Relays	432
8.9.5.1 Additional relays	437
8.9.6 Control units	438
8.9.6.1 EXT control unit	438
8.9.6.2 ENEDC control unit	438
8.9.6.3 FTD1 control unit	439
8.9.6.4 FTD2 control unit	439
8.9.6.5 I/O module (leveling)	440
8.9.6.6 Engine control unit	440
8.9.6.7 Engine sensors and control unit	441
8.9.7 Electric motors	442
8.9.7.1 Engine ignition control motor	442
8.9.7.2 Concave position control motors	442
8.9.7.3 MCS concave position control motor	443
8.9.7.4 Grain tank cover position control motor	444
8.9.7.5 Straw deflector control motor (if fitted)	444
8.9.7.6 Fanning mill variator control motor	445
8.9.7.7 Top sieve control motor	445
8.9.7.8 Lower sieve motor	446
8.9.8 Sensors	446
8.9.8.1 Forward speed sensor	446
8.9.8.2 Cylinder speed sensor	447
8.9.8.3 Fanning mill speed sensor	447
8.9.8.4 Reel speed sensor	448
8.9.8.5 Straw chopper speed sensor	448
8.9.8.6 Performance control sensors	449
8.9.8.7 Exhaust gas sensors	450
8.9.8.8 Returns control sensors	451
8.9.9 Electric connectors	451
8.9.10 Connections for diagnostics	454
8.9.11 Flashing lights	454
9 Troubleshooting	455



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

9.1 Description	457
9.1.1 Feeding	457
9.1.2 Threshing	457
9.1.3 Separation and cleaning	459
9.1.4 Hydrostatic Transmission	462
9.1.5 Engine	463
9.1.5.1 EEM4 engine troubleshooting (self-diagnosis)	465
9.1.5.2 Fault codes	465
9.1.6 Hydraulics system	477
9.1.7 Electrical system	479
9.1.8 Air conditioning circuit	479
9.1.9 Straw chopper	480
10 Off-Season Storage	483
10.1 Procedure to follow	485
10.1.1 Operations to be carried out after the harvest	485
10.1.2 Ordering spare parts	486
10.1.3 Operations to be carried out before the new season	486
11 Optional equipment	489
11.1 Information	491
11.1.1 General considerations	491
11.2 Optional equipment	492
11.2.1 Four-wheel drive	492
11.2.2 Windbreak	492
11.2.3 Additional lights	493
11.2.4 Additional lights for flip-up maize headers	494
11.2.5 Additional fire extinguisher	494
11.2.6 Diesel fuel filter	495
11.2.7 Air compressor for maintenance	496
11.2.8 Weight and moisture control monitor	497
11.2.9 Multimedia navigation system	497
11.2.10 Trailer hitch	498
11.2.11 Vertical Knives	498
11.2.12 Cylinder cover	499
11.2.13 Tailings cover plate	499
11.2.14 Top sieve	500
11.2.15 Bottom sieve	501
11.2.16 Auto-Guide	502
11.2.17 AGCOMMAND	502
11.3 Equipment for threshing	503
11.3.1 Equipment for maize	503
11.3.2 Equipment for corn-cob	505
11.3.3 Equipment for rice	505
11.3.4 Equipment for light seed crops	506
11.3.5 Equipment for soya and peas	506
11.4 Ballast weights	507
11.4.1 Description	507
11.4.2 Ballast weights on rear axle	508
11.4.3 Ballast weights on the straw walker hood for machines without straw chopper	509
11.4.4 Ballast weights on the rear wheels with a liquid mix (for tubeless tires)	510
11.4.5 Filling tires with anti-freeze solutions	511
11.5 Straw chopper	512
11.5.1 Electrically operated straw chopper straw deflectors	512
11.5.2 Transport position	512
11.5.3 Working position	513
11.5.4 Operating the straw chopper	515

11.5.5	Disengaging the straw chopper	516
11.5.6	Access to the straw chopper rotor	516
11.5.7	Straw chopper rotor knives	517
11.5.8	Counter-knives	518
11.5.9	Chopping quality	518
11.5.10	Use of straw chopper in maize	519
11.6	Chaff Spreader	521
11.6.1	Working and maintenance positions	521
11.6.2	Chaff spreader speed	523
11.6.3	Disengaging the chaff spreader	523
11.6.4	Chaff spreader belt tensioning	523
11.7	Tracks	524
11.7.1	Use and maintenance	524
11.7.2	Track chain tension	525
12	Technical Specifications	527
12.1	Wheels and tires	529
12.1.1	information	529
12.1.2	Wheel tightening torque	529
12.1.3	Tire capacity	529
12.1.4	Front tire equipment	530
12.1.5	Rear tire equipment	533
12.1.6	Ballast weights	534
12.2	Dimensions	535
12.2.1	Combine dimensions	535
12.2.2	Clearance between unloading auger and table	542
12.3	Technical specifications	543
12.3.1	Feeding unit	543
12.3.2	Threshing sys.	543
12.3.3	Cleaning unit	549
12.3.4	Grain tank	550
12.3.5	Hydraulic system	551
12.3.6	Hydrostatic system	551
12.3.7	Engine	552
12.3.8	Electrical components	553
12.3.9	Transmission	553
12.3.10	Rear axle	555
12.3.11	Weight	555
13	Index	557

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>