

Workshop Service Manual

Combine series

Fendt 5275 C - 6335 C



5275 C-S/N 553910001 - 5275 C PL/PLI-S/N 554010001
6335 C-S/N 564010001 - 6335 C PL-S/N 564110001

AGCO S.p.A. - Via F. Laverda, 15/17 - 36042 Breganze (VI) - Italy
FENDT GmbH is a worldwide brand of AGCO
© AGCO

January 2015 - No. LA327301013F
FENDT 5275 C - 6335 C - EAME
English

TABLE OF CONTENT

Preface	1
Section 00 - General information	2
Section 10 - Engine	3
Section 14 - Drive transmission	4
Section 21 - Gearbox	5
Section 25 - Front drive axle	6
Section 29 - Hydrostatic transmission	7
Section 33 - Brakes	8
Section 35 - Hydraulic system	9
Section 41 - Steering	10
Section 44 - Axles and wheels	11
Section 50 - Cab air conditioning system	12
Section 55 - Electrical system	13
Section 58 - Attachments / Headers	14
Section 60 - Product feeding	15
Section 66 - Threshing	16
Section 72 - Separation	17
Section 73 - Straw chopper	18
Section 74 - Cleaning	19
Section 80 - Grain storage	20
Grain-maize conversion	21

Preface

Preface..... 3

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Preface

1	Introductory notes	5
2	Important warnings.....	6
3	Identification number	7

1 **Introductory notes**

- This manual is divided into sections numbered with two-digit numbers, each section having independent page numbering. For quick reference, these sections have the same identification number and description as the relevant Flat Time Rate Manual.
- The subjects covered and the information sought can easily be found using the index on the following pages.
- The information in this manual was updated on the date shown on the booklet. As AGCO is constantly improving its product range, some information may not be updated due to modifications made for technical or commercial reasons as well as for compliance with legal requirements in the various countries. If there are any inconsistencies, contact our AGCO Sales and Service Networks.



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

2 Important warnings

- **Warning: Some of the models listed in this manual are not marketed in your country. For more details, contact your dealer.**
- All repair and maintenance work listed in this manual must be carried out exclusively by the AGCO Service Network, in strict compliance with the instructions provided and using, where necessary, the special tools required.
- Anybody who carries out the above operations without scrupulously complying with the instructions shall be held personally liable for any damage caused as a result of their actions.
- The Manufacturer and all the organisations in its distribution chain, including (without limitation) national, regional or local dealers, reject any responsibility for damage due to the abnormal behaviour of parts and/or components not approved by the Manufacturer, including those used for the servicing or repair of the product manufactured or marketed by the Manufacturer. In any case, no warranty of any type is issued or imposed concerning the product manufactured or marketed by the Manufacturer for damage due to abnormal behaviour of parts and/or components not approved by the Manufacturer.

LITERARY AND ARTISTIC PROPERTY OF AGCO CORPORATION

Reproduction of text and illustrations, even partially, is prohibited

PRINTED IN ITALY

3 Identification number



CAUTION:

Some of the models listed in this manual are not marketed in your country

Model	Model identification code
5275 C	X5
5275 C PL	X5AL
5275 C PLI	X5BL
6335 C	X6
6335 C PL	X6AL

Description of combine identification number

a	b	c
*	*	*
5640	5640	10001
	d	

a Technical type

d Identification number **564010001**

It is made up of two parts:

- Part 1 (**b**), made up of 4 digits "5640", identifies the technical type (machine model).
- Part 2 (**c**), made up of 5 digits "10001", which increase in numerical order of production and identify the sequential number of the produced machine model.

*5539*55391.. ...*	For the 5275 C model
*5540*55401.. ...*	For the 5275 C PL/PLI model
*5640*56401.. ...*	For the 6335 C model
*5641*56411.. ...*	For the 6335 C PL model

FreeFlow grain header identification number

7116.. ...	For the 16 ft (m 4.80) model
7118.. ...	For the 18 ft (m 5.40) model
7120.. ...	For the 20 ft (m 6.00) model
7123.. ...	For the 23 ft (m 7.00) model
7125.. ...	For the 25 ft (m 7.60) model

PowerFlow grain header identification number

7018.. ...	For the 18 ft model
7020.. ...	For the 20 ft model
7022... ...	For the 22 ft model
7025... ...	For the 25 ft model

NOTE: The 22 and 25 ft PowerFlow header cannot be installed on model X5BL.
The 25 ft PowerFlow header can be installed on model X6 only.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>