

---

*OPERATOR'S MANUAL*

---

*FENDT*

*FENDT 8370 P*

*FENDT 8370 P AL*

*FENDT 8400 P*

*FENDT 8400 P AL*

---



# Operator's Manual for Fendt 8370 P / 8400 P Combine Series

<b>1</b>	<b>General Information</b>	11
1.1	<b>Dear Customer</b>	13
1.1.1	Appropriate Use	13
1.1.2	Changes and Improvements	13
1.1.3	Directives	13
1.1.4	Preface	14
1.1.5	EC Declaration of Conformity for Combine and Table	15
1.1.6	Product Identification	18
1.1.7	Sketch and parts identification	19
1.1.8	Disposal	20
<b>2</b>	<b>Safety</b>	23
2.1	<b>Safety</b>	25
2.1.1	General Safety Precautions	25
2.1.2	Attention - Warning Symbols	25
2.1.3	Safety Precautions	25
2.1.4	Road Transport	27
2.1.5	Warning/Instruction decals	28
2.1.6	CE Marking and Type Plate on the Combine	31
2.1.7	Placing of CE Markings and Type Plate	41
<b>3</b>	<b>Operation, Controls and Cab</b>	45
3.1	<b>Before Start</b>	47
3.1.1	Before Start	47
3.2	<b>Operator Cab</b>	49
3.2.1	Arrangement and Controls	49
3.2.2	Optional Extra	50
3.3	<b>Safety Precautions - on the Move</b>	51
3.3.1	Safety Precautions - on the Move	51
3.4	<b>Starting and Stopping the Engine</b>	52
3.4.1	Starting the engine	52
3.5	<b>Drive Controls</b>	55
3.5.1	Multifunction lever	55
3.5.2	Adjustable Armrest and Control Panel	56
3.5.3	Change of Gears	57
3.5.4	Reduced Engine Revolutions in Road Transport (Speed Matching System)	58
3.5.5	Steering column	58
3.5.6	Brakes	59
3.6	<b>Seats</b>	60
3.6.1	Adjustment of Operator Seat	60
3.6.2	Adjustment of air-suspended seat	60
3.6.3	EF declaration of conformity for the operator seat	61
3.6.4	Safety Switch in Operator Seat - (Operator Present Switch)	62
3.6.5	Instructor seat	63
3.7	<b>Mirrors</b>	64
3.7.1	Electrically adjustable rearview mirrors	64
3.8	<b>Accessibility</b>	65
3.8.1	Ladder for Cab	65
3.8.2	Ladder for engine compartment	66
3.8.3	Cleaning the windscreens	67
3.9	<b>Emergency Situations</b>	68
3.9.1	Emergency Exit	68

3.9.2	Fire Extinguisher	69
<b>3.10</b>	<b>Light and Lamps</b>	70
3.10.1	Lights	70
3.10.2	Main Light and Work Light	71
<b>3.11</b>	<b>Climate Control</b>	72
3.11.1	Maintenance and overview	72
3.11.2	Operation of Climate Control	73
<b>3.12</b>	<b>Printer</b>	75
3.12.1	Exchanging Paper and Ribbon in Printer	75
3.12.2	Inserting the Paper Roll	75
3.12.3	Fitting the Ribbon	76
<b>3.13</b>	<b>Optional Extra</b>	77
3.13.1	Four-wheel drive	77
3.13.2	Reversing camera	79
3.13.3	Auto-Guide	79
<b>4</b>	<b>Operation, FIELDSTAR</b>	81
<b>4.1</b>	<b>Safety Precautions</b>	83
4.1.1	Safety precautions, Operating FIELDSTAR	83
<b>4.2</b>	<b>FIELDSTAR</b>	84
4.2.1	FIELDSTAR in general	84
4.2.2	Operating FIELDSTAR on Terminal	85
4.2.3	Operating the Terminal by Remote Control in the Multi-Function Lever	86
4.2.4	Contrast and Brightness Control	87
4.2.5	Cleaning of terminal	87
4.2.6	Data card	88
4.2.7	FIELDSTAR Menu Structure	88
<b>4.3</b>	<b>Harvest Menu</b>	90
4.3.1	Reading	90
<b>4.4</b>	<b>Main Menu</b>	94
4.4.1	Main menu structure	94
<b>4.5</b>	<b>Monitoring</b>	96
4.5.1	Monitoring in general	96
4.5.2	Shaft Speeds	97
4.5.3	Engine Monitoring/Alarm	97
4.5.4	Engine Safety Alarm	97
4.5.5	Information	98
4.5.6	Shaft speeds	99
<b>4.6</b>	<b>Harvesting Data</b>	100
4.6.1	Standard data	100
4.6.2	Data Logging in General	101
4.6.3	Using Data Logging	102
4.6.4	Data logging setup	109
4.6.5	Using Markers	112
<b>4.7</b>	<b>Operator's Manual</b>	113
4.7.1	Harvest Settings	113
4.7.2	Routine Servicing	114
4.7.3	FIELDSTAR	114
<b>4.8</b>	<b>Diagnostics</b>	115
4.8.1	Trouble shooting in FIELDSTAR	115
<b>4.9</b>	<b>Coding</b>	121
4.9.1	Coding in general	121
4.9.2	Clock Adjustment	122
4.9.3	Language	122
4.9.4	Area measuring	122
4.9.5	Table Calibration	124
4.9.6	Returns Volume	125
4.9.7	Grain Loss Monitor	125
4.9.8	Shaft alarm calibration	125
4.9.9	Concave Calibration	126
4.9.10	Constant Flow	126
4.9.11	Wheel Track and Auto Level Combine	126

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

4.9.12	Coding of Electrical Straw Deflectors . . . . .	127
4.9.13	Lead Time and Lag Time . . . . .	129
4.9.14	Calibration of actuator for electrical sieves . . . . .	130
<b>4.10</b>	<b>Settings</b> . . . . .	131
4.10.1	Harvest Settings . . . . .	131
4.10.2	Table Settings . . . . .	134
4.10.3	Machine Settings . . . . .	136
<b>4.11</b>	<b>Returns Volume Monitor</b> . . . . .	139
4.11.1	Returns volume . . . . .	139
4.11.2	Coding . . . . .	139
<b>4.12</b>	<b>Grain Loss Monitoring</b> . . . . .	141
4.12.1	Sensors . . . . .	141
4.12.2	Adjustment of Grain Loss Sensors . . . . .	141
<b>4.13</b>	<b>Shaft Alarm Limits</b> . . . . .	143
4.13.1	Shaft alarm calibration . . . . .	143
<b>4.14</b>	<b>Yield Meter</b> . . . . .	144
4.14.1	Yield meter (Isotopic) . . . . .	144
4.14.2	Micro-Trak Yield Meter . . . . .	146
4.14.3	Yieldmeter Calibration . . . . .	148
<b>4.15</b>	<b>Moisture Meter</b> . . . . .	150
4.15.1	Limitations in the use of the moisture meter . . . . .	150
4.15.2	Continuous Moisture Measuring . . . . .	150
4.15.3	Measuring Principle . . . . .	150
4.15.4	Using the Moisture Meter . . . . .	151
4.15.5	Cleaning the Moisture Meter, . . . . .	151
4.15.6	Calibration of moisture meter . . . . .	152
<b>4.16</b>	<b>Cutting Height Control</b> . . . . .	154
4.16.1	Adjustment and operation of cutting height control . . . . .	154
4.16.2	Coding of table . . . . .	157
<b>4.17</b>	<b>Field Pressure Control</b> . . . . .	158
4.17.1	Adjustment and operation of field pressure control . . . . .	158
<b>4.18</b>	<b>Interaction between the Table Controls</b> . . . . .	160
4.18.1	Table controls, an outline . . . . .	160
<b>4.19</b>	<b>Auto Level Table</b> . . . . .	162
4.19.1	Principle of Auto Level table . . . . .	162
4.19.2	Bleeding . . . . .	163
4.19.3	Coding of Auto Level Table . . . . .	164
4.19.4	Calibration of Table Angle . . . . .	164
<b>4.20</b>	<b>Operation of Auto Level Table</b> . . . . .	166
4.20.1	Operation of Auto Level Table . . . . .	166
<b>4.21</b>	<b>Ground sensors</b> . . . . .	168
4.21.1	Checking and Adjusting the Ground Sensors . . . . .	168
<b>4.22</b>	<b>Constant Flow</b> . . . . .	170
4.22.1	Constant Flow functional description . . . . .	170
4.22.2	Start-up and Adjustment of Constant Flow . . . . .	171
4.22.3	Constant Flow Engagement . . . . .	173
<b>5</b>	<b>Operation, Auto Level Combine</b> . . . . .	175
<b>5.1</b>	<b>Safety Precautions</b> . . . . .	177
5.1.1	Safety precautions, Operation of Auto Level Combine . . . . .	177
5.1.2	Safety System . . . . .	177
<b>5.2</b>	<b>Attachment of Auto Level Table</b> . . . . .	178
5.2.1	Attachment of table on Auto Level combine . . . . .	178
<b>5.3</b>	<b>Combinations</b> . . . . .	179
5.3.1	Automatically or manually . . . . .	179
5.3.2	Selecting Combination . . . . .	179
5.3.3	Combinations for Auto Level combine and Auto Level table . . . . .	179
5.3.4	Priority of hydraulic functions . . . . .	181
<b>5.4</b>	<b>Auto Level</b> . . . . .	182
5.4.1	Auto Level combine . . . . .	182
5.4.2	Manual Control of Auto Level Combine . . . . .	182

<b>5.5</b>	<b>Auto Level Combine/Table</b> .....	183
5.5.1	Combine .....	183
5.5.2	Transport .....	184
5.5.3	Auto Level Table .....	185
<b>5.6</b>	<b>Calibration</b> .....	186
5.6.1	Calibration of Auto Level Combine .....	186
5.6.2	Errors during Calibration .....	187
<b>5.7</b>	<b>Coding</b> .....	188
5.7.1	Coding of Auto Level Table .....	188
5.7.2	Zero Cutting Height .....	188
<b>5.8</b>	<b>Safety System</b> .....	189
5.8.1	Safety System, Auto Level .....	189
5.8.2	Automatic Control of the Tilt Sensor Function .....	189
5.8.3	About the system .....	190
5.8.4	Hose Breach Protection for Auto Level Hydraulics .....	190
<b>5.9</b>	<b>Troubleshooting</b> .....	191
5.9.1	Trouble shooting in general .....	191
5.9.2	Machine Not Levelling Correctly .....	192
<b>5.10</b>	<b>Servicing and User Tips</b> .....	193
5.10.1	Retrofit of new FIELDSTAR Auto Level Job Computer and Sensors .....	193
5.10.2	Unintentional Use of Manual Keys in Automatic Mode .....	193
5.10.3	Diagnostics - Auto Level Combine Functions and Sensors .....	194
<b>6</b>	<b>Engine</b> .....	195
<b>6.1</b>	<b>Safety Precautions</b> .....	197
6.1.1	Safety Precautions, Engine .....	197
<b>6.2</b>	<b>Engines</b> .....	198
6.2.1	Engine Types .....	198
<b>6.3</b>	<b>Air-intake</b> .....	199
6.3.1	Filter system .....	199
<b>6.4</b>	<b>Cooling System</b> .....	200
6.4.1	Rotary Screen and Dust Aspirator .....	200
6.4.2	Coolers .....	201
6.4.3	Coolant .....	202
6.4.4	Checking the Fan Belt Tension .....	202
<b>6.5</b>	<b>Fuel System</b> .....	203
6.5.1	Fuel system .....	203
6.5.2	Filter change .....	204
<b>6.6</b>	<b>Engine Oil/Change</b> .....	205
6.6.1	Oil and Filter Change .....	205
<b>6.7</b>	<b>Cleaning</b> .....	206
6.7.1	Cleaning of engine compartment .....	206
<b>6.8</b>	<b>EEM3 Engine Management</b> .....	207
6.8.1	Electronic Engine Management .....	207
6.8.2	Engine Trouble Shooting (Self-Diagnosis) .....	208
6.8.3	EEM3 codes .....	209
<b>7</b>	<b>Cutting Tables</b> .....	215
<b>7.1</b>	<b>Safety Precautions</b> .....	217
7.1.1	Safety Precautions, Cutting Tables .....	217
<b>7.2</b>	<b>Attachment/Removal of Table</b> .....	218
7.2.1	Attachment of Table, Standard and Auto Level .....	218
7.2.2	Removal of Table .....	219
7.2.3	Supports .....	220
<b>7.3</b>	<b>Table Trailer</b> .....	221
7.3.1	Attachment of combine and trailer .....	221
7.3.2	Table Trailer Brakes .....	221
<b>7.4</b>	<b>Reel</b> .....	222
7.4.1	Reel Adjustment Up/Down, Fore/Aft .....	222
7.4.2	Bleeding .....	223
7.4.3	Reel Rotation .....	223
7.4.4	Reel tine bars .....	224

7.4.5	Adjustment of the Reel in the Table	224
<b>7.5</b>	<b>Knife</b>	225
7.5.1	Knife and Knife Drive	225
<b>7.6</b>	<b>Feeding</b>	226
7.6.1	Table auger	226
7.6.2	Cut-off strip and distribution strip	227
7.6.3	Replacement of Feathering Fingers	228
7.6.4	Auger Flight Extensions, 20-22-25-30' Tables	228
7.6.5	Reversing	229
<b>7.7</b>	<b>Transmission</b>	230
7.7.1	PowerFlow Table, Knife Drive and Table Auger	230
7.7.2	Slip Clutch for Table Auger	230
<b>7.8</b>	<b>PowerFlow Table</b>	231
7.8.1	PowerFlow belts	231
7.8.2	Inspection and Start-Up of PowerFlow Belts	231
7.8.3	Adjustment of belts	232
7.8.4	Scrapers, front	232
7.8.5	Scrapers, Rear, and Adjustment of Bearing Housings	233
7.8.6	Table bottom	233
7.8.7	Cleaning	234
<b>7.9</b>	<b>Crop Lifters</b>	235
7.9.1	Using Crop Lifters	235
<b>7.10</b>	<b>Vertical Knives, Rape Auger and Straw Dividers</b>	236
7.10.1	Vertical knife	236
7.10.2	Mounting of Vertical Knife	236
7.10.3	Rape auger	237
7.10.4	Folding torpedo dividers and bow dividers	237
7.10.5	Mounting of Straw Dividers	238
7.10.6	Adjustment of Torpedo Divider	238
<b>7.11</b>	<b>Fixed Fingers</b>	239
7.11.1	Fitting of fixed table auger fingers	239
7.11.2	Using Fixed Table Auger Fingers	239
7.11.3	High Table Sides	239
<b>7.12</b>	<b>Main Crop Elevator</b>	241
7.12.1	Elevator Chain	241
7.12.2	Transmission for Table	241
7.12.3	Stone Trap	242
7.12.4	Initial Adjustment of Cutting Height Indication	243
<b>8</b>	<b>Operation of Table and Threshing Unit</b>	245
<b>8.1</b>	<b>Safety Precautions</b>	247
8.1.1	Safety Precautions, Operation of Machine and Cutting Table	247
<b>8.2</b>	<b>Operation of Table</b>	249
8.2.1	Table Height and Table Automatic Control	249
8.2.2	Cutting height control	250
8.2.3	Field pressure control	251
8.2.4	Preset cutting height	252
8.2.5	Auto Level Table	252
8.2.6	Table Engagement - Emergency Stop	253
<b>8.3</b>	<b>Threshing Unit Transmission</b>	254
8.3.1	Threshing unit engagement	254
8.3.2	Cylinder Variator	255
8.3.3	Turning Tool for Cylinder	255
<b>8.4</b>	<b>Concave Setting, Electrically Adjustable</b>	256
8.4.1	Operation of Concave	256
8.4.2	Concave Setting	256
<b>8.5</b>	<b>Threshing</b>	258
8.5.1	Concave filler plates	258
8.5.2	Straw walkers	258
8.5.3	Rear beater curtain	259
<b>8.6</b>	<b>Straw Chopper and Spreader Hood</b>	260
8.6.1	Straw chopper	260

8.6.2	Adjustment of Spreader Hood	261
8.6.3	Counter knives and cross bar	262
8.6.4	Replacement of Knives	264
<b>8.7</b>	<b>Fanning Mill and Sieves</b>	265
8.7.1	Fanning mill	265
8.7.2	Shaker shoe	265
8.7.3	Shaker Shoe with Electrical Sieves	266
8.7.4	Manual Adjustment of Sieves	266
8.7.5	Cleaning of Sieves and Main Grain Pan	267
8.7.6	Cleaning the Sieves	268
8.7.7	Shaker Shoe Light	270
8.7.8	Special sieves	270
<b>8.8</b>	<b>Internal Grain Transport</b>	271
8.8.1	Auger Housing/Elevators	271
8.8.2	Returns thresher	271
8.8.3	Tank filling auger	272
8.8.4	Grain tank	273
8.8.5	Unloading auger	275
8.8.6	Unloading Auger Clutch	276
8.8.7	Unloading tube	277
<b>8.9</b>	<b>Rotary Separator</b>	278
8.9.1	Adjusting the revolutions	278
8.9.2	Concave setting	279
<b>8.10</b>	<b>Straw Hood</b>	280
8.10.1	Alarm switch for straw hood blocked	280
8.10.2	Light in straw hood	281
<b>8.11</b>	<b>Chaff Spreader</b>	282
8.11.1	Setting	282
<b>8.12</b>	<b>Maxi Spreader</b>	284
8.12.1	Adjustment and operation	284
8.12.2	Adjustment of sensors	285
<b>8.13</b>	<b>Maize Threshing</b>	286
8.13.1	Threshing of maize in general	286
8.13.2	Attachment of Maize Header	286
8.13.3	Area measuring	287
8.13.4	Main crop elevator	287
8.13.5	Concave/Initial Settings	288
8.13.6	Threshing cylinder	288
8.13.7	Rotary Separator	288
8.13.8	Shaker shoe	289
8.13.9	Straw walkers	289
8.13.10	Bottom auger cover plate	290
8.13.11	Scrapers	290
8.13.12	Rear beater curtain	290
8.13.13	Straw chopper	291
8.13.14	Maxi Spreader	291
<b>8.14</b>	<b>Harvest Settings</b>	292
8.14.1	Harvest charts and settings	292
<b>8.15</b>	<b>Threshing</b>	294
8.15.1	A guide to threshing	294
<b>9</b>	<b>Transmissions</b>	295
<b>9.1</b>	<b>Safety Precautions</b>	297
9.1.1	Safety Precautions, Transmissions	297
<b>9.2</b>	<b>Adjustment of Transmissions</b>	298
9.2.1	General	298
9.2.2	Threshing unit clutch	298
9.2.3	Hydrostatic transmission	299
<b>9.3</b>	<b>Transmissions</b>	300
9.3.1	Rear beater	300
9.3.2	Crop Elevator and Table	300
9.3.3	Straw chopper	301



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**

9.3.4	Threshing cylinder	301
9.3.5	Unloading auger	302
9.3.6	Shaker Shoe and Chaff Spreader Counter Drive, and Straw Walker Drive	303
9.3.7	Filling and Returns System Countershaft	304
9.3.8	Returns Elevator and Returns Thresher	304
9.3.9	Tank Filling Elevator and Tank Filling Auger	305
9.3.10	Dust aspirator	305
9.3.11	Rotary screen	306
9.3.12	Fanning mill	307
9.3.13	Rotary Separator	307
9.3.14	Alternator and Fan	308
9.3.15	Climate control	308
<b>9.4</b>	<b>Transmission Diagrams</b>	<b>309</b>
9.4.1	Transmission Diagram, Left-Hand Side	309
9.4.2	Transmission Diagram, Right-Hand Side	311
<b>10</b>	<b>Hydraulics</b>	<b>313</b>
<b>10.1</b>	<b>Safety Precautions</b>	<b>315</b>
10.1.1	Safety Precautions, Hydraulic System	315
<b>10.2</b>	<b>Hydraulic System</b>	<b>316</b>
10.2.1	Hydraulic system, standard combine	316
10.2.2	Hydraulic System, Four-Wheel Drive	317
<b>10.3</b>	<b>Oil Change</b>	<b>318</b>
10.3.1	Draining and refilling hydraulic oil	318
<b>10.4</b>	<b>Filter Change</b>	<b>319</b>
10.4.1	Filter change in general	319
10.4.2	Return oil filter	319
10.4.3	Storage of Hydraulic System	320
<b>10.5</b>	<b>Auxiliary Hydraulics</b>	<b>321</b>
10.5.1	Auxiliary hydraulics in general	321
10.5.2	Functions and Auxiliary Hydraulics	321
10.5.3	Reel Adjustment Fore/Aft - Up/down	321
<b>10.6</b>	<b>Hydraulics Diagrams</b>	<b>322</b>
10.6.1	Hydraulics Diagram, Standard Combine	322
10.6.2	Hydraulics Diagram, Auto Level Combine	325
10.6.3	Hydraulics Diagram for Chaff Spreader	328
10.6.4	Hydraulics diagram for Maxi Spreader	329
<b>11</b>	<b>Maintenance</b>	<b>331</b>
<b>11.1</b>	<b>Safety Precautions</b>	<b>333</b>
11.1.1	Safety Precautions, Maintenance	333
<b>11.2</b>	<b>Undercarriage</b>	<b>335</b>
11.2.1	Undercarriage in general	335
11.2.2	Wheel nut torques	335
11.2.3	Tyre Pressure	335
<b>11.3</b>	<b>Lubrication Intervals</b>	<b>337</b>
11.3.1	Lubrication chart, time intervals	337
11.3.2	Lubrication chart, right- and left-hand side	340
11.3.3	Lubrication chart, main crop elevator and front axle	342
11.3.4	Lubrication points, left-hand machine side	343
11.3.5	Lubrication points, right-hand machine side	357
11.3.6	Lubricants and Operating Fluids	368
11.3.7	Preliminary Service Inspections	369
11.3.8	Maintenance Required	370
<b>11.4</b>	<b>Oil Change, Gear</b>	<b>373</b>
11.4.1	Gearbox	373
11.4.2	Final drives	373
11.4.3	Right-angle gear for returns thresher	374
<b>11.5</b>	<b>Climate Control</b>	<b>375</b>
11.5.1	Diagram for Climate Control System	375
11.5.2	Maintenance	375

<b>11.6</b>	<b>Cleaning and Off-Season Storage</b> .....	376
11.6.1	Cleaning .....	376
11.6.2	Off-season storage .....	377
11.6.3	Storage of Engine, Fuel System and Hydraulic System .....	378
11.6.4	Periodical Start-Up .....	378
11.6.5	Removal of Crop Elevator .....	379
11.6.6	Removal of Elevator Chains .....	379
11.6.7	After Off-Season Storage .....	379
<b>11.7</b>	<b>Adjustment of Brakes</b> .....	380
11.7.1	Adjustment of Foot Brakes, Disc Brakes .....	380
11.7.2	Adjustment of Parking Brake .....	380
<b>12</b>	<b>Electrical System</b> .....	381
<b>12.1</b>	<b>Safety Precautions</b> .....	383
12.1.1	Safety Precautions, Electric System .....	383
<b>12.2</b>	<b>Electrical System</b> .....	384
12.2.1	Charging system .....	384
12.2.2	Electric Boxes and Main Switch .....	385
12.2.3	External connectors 12V .....	386
<b>12.3</b>	<b>Electro-Hydraulic System</b> .....	388
12.3.1	Electro-Hydraulic System in general .....	388
<b>12.4</b>	<b>Key to Signatures for Wiring Harness</b> .....	389
12.4.1	Wire Codes .....	389
12.4.2	Component Codes .....	389
<b>12.5</b>	<b>Overview, Electric Box and Cab</b> .....	390
12.5.1	Position of Connectors in Electric Boxes .....	390
12.5.2	Fuses and Relays, Electric Box and Cab .....	391
<b>12.6</b>	<b>Wiring Diagrams</b> .....	393
12.6.1	Key to symbols .....	393
12.6.2	Diagrams overview .....	394
12.6.3	Fuse Values .....	394
12.6.4	Components .....	395
12.6.5	Electric diagrams .....	403
<b>13</b>	<b>Specifications</b> .....	415
<b>13.1</b>	<b>Specifications</b> .....	417
13.1.1	Dimensions and specifications .....	417

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**