
OPERATOR'S MANUAL

FENDT

FENDT 8370 P

FENDT 8370 P AL

FENDT 8400 P

FENDT 8400 P AL



Operator's Manual for Fendt 8370 P / 8400 P Combine Series

1	General Information	11
1.1	Dear Customer	13
1.1.1	Appropriate Use	13
1.1.2	Changes and Improvements	13
1.1.3	Directives	13
1.1.4	Preface	14
1.1.5	EC Declaration of Conformity for Combine and Table	15
1.1.6	Product Identification	18
1.1.7	Sketch and parts identification	19
1.1.8	Disposal	20
2	Safety	23
2.1	Safety	25
2.1.1	General Safety Precautions	25
2.1.2	Attention - Warning Symbols	25
2.1.3	Safety Precautions	25
2.1.4	Road Transport	27
2.1.5	Warning/Instruction decals	28
2.1.6	CE Marking and Type Plate on the Combine	32
2.1.7	Position of CE Markings and Type Plate	41
3	Operation, Controls and Cab	45
3.1	Before Start	47
3.1.1	Before Start	47
3.2	Operator cab	49
3.2.1	Arrangement and Controls	49
3.2.2	Optional Extra	50
3.3	Safety Precautions - on the Move	51
3.3.1	Safety Precautions - on the Move	51
3.4	Starting and Stopping the Engine	52
3.4.1	Starting the engine	52
3.5	Drive Controls	55
3.5.1	Multifunction Lever	55
3.5.2	Adjustable Armrest and Control Panel	56
3.5.3	Change of Gears	57
3.5.4	Reduced Engine Revolutions in Road Transport (Speed Matching System)	58
3.5.5	Steering column	58
3.5.6	Brakes	59
3.6	Seats	60
3.6.1	Adjustment of Operator Seat	60
3.6.2	Adjustment of Air-Suspended Seat	60
3.6.3	EF declaration of conformity for the operator seat	61
3.6.4	Safety Switch in Operator Seat - (Operator Present Switch)	62
3.6.5	Safety belt	63
3.6.6	Passenger seat	63
3.7	Mirrors	64
3.7.1	Electrically adjustable rearview mirrors	64
3.8	Accessibility	65
3.8.1	Ladder for Cab	65
3.8.2	Ladder for Engine Compartment	65
3.8.3	Cleaning the Windscreens	66

3.9	Emergency Situations	68
3.9.1	Emergency Exit	68
3.9.2	Fire Extinguisher	69
3.10	Light and Lamps	70
3.10.1	Lights	70
3.10.2	Main Light and Work Light	71
3.11	Climate control	72
3.11.1	Maintenance and overview	72
3.11.2	Operation of climate control	73
3.12	Printer	75
3.12.1	Exchanging Paper and Ribbon in Printer	75
3.12.2	Inserting the Paper Roll	75
3.12.3	Fitting the Ribbon	76
3.13	Optional Extra	77
3.13.1	Four-Wheel Drive	77
3.13.2	Reversing camera	79
3.13.3	Auto-Steering	79
4	Operation, FIELDSTAR	81
4.1	Safety precautions	83
4.1.1	Safety precautions, Operating FIELDSTAR	83
4.2	FIELDSTAR	84
4.2.1	FIELDSTAR in general	84
4.2.2	Operating FIELDSTAR on Terminal	85
4.2.3	Operating the Terminal by Remote Control in the Multi-Function Lever	86
4.2.4	Contrast and Brightness Control	87
4.2.5	Cleaning of terminal	87
4.2.6	Data card	88
4.2.7	FIELDSTAR Menu Structure	88
4.3	Harvest Menu	90
4.3.1	Instrument Reading	90
4.4	Main Menu	94
4.4.1	Main menu structure	94
4.5	Monitoring	96
4.5.1	Monitoring in general	96
4.5.2	Shaft Speeds	97
4.5.3	Engine Monitoring/Alarm	97
4.5.4	Engine Safety Alarm	97
4.5.5	Information	98
4.5.6	Shaft Speeds	99
4.6	Harvesting Data	100
4.6.1	Standard data	100
4.6.2	Data Logging in General	101
4.6.3	Using Data Logging	102
4.6.4	Data Logging Setup	109
4.6.5	Using Markers	112
4.7	Operator's Manual	113
4.7.1	Harvest Settings	113
4.7.2	Routine Servicing	114
4.7.3	FIELDSTAR	114
4.8	Diagnostics	115
4.8.1	Troubleshooting in FIELDSTAR	115
4.9	Coding	121
4.9.1	Coding in general	121
4.9.2	Clock Adjustment	122
4.9.3	Language	122
4.9.4	Area Measuring	122
4.9.5	Table Calibration	124
4.9.6	Returns Volume	125
4.9.7	Grain Loss Monitor	125
4.9.8	Shaft alarm calibration	125
4.9.9	Concave Calibration	126

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

4.9.10	Constant Flow	126
4.9.11	Wheel Track and Auto Level Combine	126
4.9.12	Coding of Electrical Straw Deflectors	127
4.9.13	Lead Time and Lag Time	129
4.9.14	Calibration of actuator for electrical sieves	130
4.10	Settings	131
4.10.1	Harvest Settings	131
4.10.2	Table Settings	134
4.10.3	Machine Settings	136
4.11	Returns Volume Monitor	139
4.11.1	Returns volume	139
4.11.2	Coding	139
4.12	Grain Loss Monitoring	141
4.12.1	Sensors	141
4.12.2	Adjustment of Grain Loss Sensors	141
4.13	Shaft Alarm Limits	143
4.13.1	Shaft Alarm Calibration	143
4.14	Yield meter	144
4.14.1	Yield Meter (Isotopic)	144
4.14.2	Micro-Trak Yield Meter	146
4.14.3	Yield Meter Calibration	148
4.15	Moisture meter	150
4.15.1	Limitations in the use of the moisture meter	150
4.15.2	Continuous Moisture Measuring	150
4.15.3	Measuring Principle	150
4.15.4	Using the Moisture Meter	151
4.15.5	Cleaning the Moisture Meter	151
4.15.6	Calibration of moisture meter	152
4.16	Cutting height control	154
4.16.1	Adjustment and operation of cutting height control	154
4.16.2	Coding of table	157
4.17	Field pressure control	158
4.17.1	Adjustment and operation of field pressure control	158
4.18	Interaction between the Table Controls	160
4.18.1	Table controls, an outline	160
4.19	Auto Level Table	162
4.19.1	Principle of Auto Level table	162
4.19.2	Bleeding	163
4.19.3	Coding of Auto Level Table	164
4.19.4	Calibration of Table Angle	164
4.20	Operation of Auto Level Table	166
4.20.1	Using the Auto Level Table	166
4.21	Ground sensors	168
4.21.1	Checking and Adjusting the Ground Sensors	168
4.22	Constant Flow	170
4.22.1	Constant Flow functional description	170
4.22.2	Start-up and Adjustment of Constant Flow	171
4.22.3	Constant Flow Engagement	173
5	Operation, Auto Level Combine	175
5.1	Safety precautions	177
5.1.1	Safety precautions, operation of Auto Level Combine	177
5.1.2	Safety System	177
5.2	Attachment of Auto Level Table	178
5.2.1	Attachment of Table to Auto Level Combine	178
5.3	Combinations	179
5.3.1	Automatically or manually	179
5.3.2	Selecting Combination	179
5.3.3	Combinations for Auto Level combine and Auto Level table	179
5.3.4	Priority of hydraulic functions	181
5.4	Auto Level	182
5.4.1	Auto Level combine	182

5.4.2	Manual Control of Auto Level Combine	182
5.5	Auto Level Combine/Table	183
5.5.1	Combine	183
5.5.2	Transport	184
5.5.3	Auto Level Table	185
5.6	Calibration	186
5.6.1	Calibration of Auto Level Combine	186
5.6.2	Errors during Calibration	187
5.7	Coding	188
5.7.1	Coding of Auto Level Table	188
5.7.2	Zero Cutting Height	188
5.8	Safety System	189
5.8.1	Safety System, Auto Level	189
5.8.2	Automatic Control of the Tilt Sensor Function	189
5.8.3	About the system	190
5.8.4	Hose Breach Protection for Auto Level Hydraulics	190
5.9	Troubleshooting	191
5.9.1	Trouble shooting in general	191
5.9.2	Machine Not Levelling Correctly	192
5.10	Servicing and User Tips	194
5.10.1	Retrofit of new FIELDSTAR Auto Level Job Computer and Sensors	194
5.10.2	Unintentional Use of Manual Keys in Automatic Mode	194
5.10.3	Diagnostics - Auto Level Combine Functions and Sensors	195
6	Motor	197
6.1	Safety precautions	199
6.1.1	Safety Precautions, Engine	199
6.2	Engines	200
6.2.1	Engine Types	200
6.3	Air-intake	201
6.3.1	Filter system	201
6.4	Cooling System	202
6.4.1	Rotary Screen and Dust Aspirator	202
6.4.2	Coolers	203
6.4.3	Coolant	204
6.4.4	Checking the Fan Belt Tension	204
6.5	Fuel System	205
6.5.1	Fuel system	205
6.5.2	Filter Change	206
6.6	Engine oil/change	207
6.6.1	Oil and Filter Change	207
6.7	Cleaning	208
6.7.1	Cleaning of engine compartment	208
6.8	EEM3 Engine Management	209
6.8.1	Electronic Engine Management	209
6.8.2	Engine Trouble Shooting (Self-Diagnosis)	210
6.8.3	EEM3 codes	211
7	Cutting Tables	217
7.1	Safety precautions	219
7.1.1	Safety Precautions, Cutting Tables	219
7.2	Attachment/Removal of Table	220
7.2.1	Attachment of Table, Standard and Auto Level	220
7.2.2	Removal of Table	221
7.2.3	Supports	222
7.3	Table trailer	223
7.3.1	Attachment of combine and trailer	223
7.3.2	Table Trailer Brakes	223
7.4	Reel	224
7.4.1	Reel Adjustment Up/Down, Fore/Aft	224
7.4.2	Bleeding	225
7.4.3	Reel Rotation	225

7.4.4	Reel tine bars	226
7.4.5	Adjustment of the Reel in the Table	226
7.5	Knife	227
7.5.1	Knife and knife drive	227
7.6	Feeding	228
7.6.1	Table auger	228
7.6.2	Cut-off strip and distribution strip	229
7.6.3	Replacement of Feathering Fingers	230
7.6.4	Auger Flight Extensions, 20-22-25-30' Tables	230
7.6.5	Reversing	231
7.7	Transmission	232
7.7.1	PowerFlow Table, Knife Drive and Table Auger	232
7.7.2	Slip Clutch for Table Auger	232
7.8	PowerFlow Table	233
7.8.1	PowerFlow belts	233
7.8.2	Inspection and Start-Up of PowerFlow Belts	233
7.8.3	Adjustment of belts	234
7.8.4	Scrapers, front	234
7.8.5	Scrapers, Rear, and Adjustment of Bearing Housings	235
7.8.6	Table bottom	235
7.8.7	Cleaning	236
7.9	Crop Lifters	237
7.9.1	Using Crop Lifters	237
7.10	Vertical Knives, Rape Auger and Straw Dividers	238
7.10.1	Vertical knife	238
7.10.2	Mounting of Vertical Knife	238
7.10.3	Rape auger	239
7.10.4	Folding torpedo dividers and bow dividers	239
7.10.5	Mounting of Straw Dividers	240
7.10.6	Adjustment of Torpedo Divider	240
7.11	Fixed Fingers	241
7.11.1	Fitting of fixed table auger fingers	241
7.11.2	Using Fixed Table Auger Fingers	241
7.11.3	High Table Sides	241
7.12	Main crop elevator	243
7.12.1	Elevator Chain	243
7.12.2	Transmission for Table	243
7.12.3	Stone Trap	244
7.12.4	Initial Adjustment of Cutting Height Indication	245
8	Operation of Table and Threshing Unit	247
8.1	Safety precautions	249
8.1.1	Safety Precautions, Operation of Machine and Cutting Table	249
8.2	Operation of Table	251
8.2.1	Table Height and Table Automatic Control	251
8.2.2	Cutting Height Control	252
8.2.3	Field Pressure Control	253
8.2.4	Preset cutting height	254
8.2.5	Auto Level Table	254
8.2.6	Table Engagement - Emergency Stop	255
8.3	Threshing Unit Transmission	256
8.3.1	Threshing unit engagement	256
8.3.2	Cylinder Variator	257
8.3.3	Turning Tool for Cylinder	257
8.4	Concave Setting, Electrically Adjustable	258
8.4.1	Operation of Concave	258
8.4.2	Concave Setting	258
8.5	Threshing	260
8.5.1	Concave filler plates	260
8.5.2	Straw walkers	260
8.5.3	Rear beater curtain	261

8.6	Straw Chopper and Spreader Hood	262
8.6.1	Straw chopper	262
8.6.2	Adjustment of Spreader Hood	264
8.6.3	Counter Knives and Cross Bar	265
8.6.4	Replacement of Knives	267
8.7	Fanning Mill and Sieves	268
8.7.1	Fanning mill	268
8.7.2	Shaker shoe	268
8.7.3	Shaker Shoe with Electrical Sieves	269
8.7.4	Manual Adjustment of Sieves	269
8.7.5	Cleaning of Sieves and Main Grain Pan	270
8.7.6	Cleaning the Sieves	271
8.7.7	Shaker Shoe Light	273
8.7.8	Special sieves	273
8.8	Internal Grain Transport	274
8.8.1	Auger Housing/Elevators	274
8.8.2	Returns thresher	274
8.8.3	Tank filling auger	275
8.8.4	Grain tank	276
8.8.5	Unloading auger	278
8.8.6	Unloading Auger Clutch	279
8.8.7	Unloading tube	280
8.9	Rotary Separator	281
8.9.1	Adjusting the revolutions	281
8.9.2	Concave setting	282
8.10	Straw hood	283
8.10.1	Alarm switch for straw hood blocked	283
8.10.2	Light in straw hood	284
8.11	Chaff spreader	285
8.11.1	Setting	285
8.12	Maxi Spreader	287
8.12.1	Operation and Adjustment	287
8.12.2	Adjustment of Sensors	288
8.13	Maize Threshing	289
8.13.1	Maize Threshing in General	289
8.13.2	Attachment of Maize Header	289
8.13.3	Area measuring	290
8.13.4	Main crop elevator	290
8.13.5	Concave/Initial Settings	291
8.13.6	Threshing cylinder	291
8.13.7	Rotary Separator	291
8.13.8	Shaker shoe	292
8.13.9	Straw walkers	292
8.13.10	Bottom auger cover plate	293
8.13.11	Scrapers	293
8.13.12	Rear beater curtain	293
8.13.13	Straw chopper	294
8.13.14	Maxi Spreader	294
8.14	Harvest settings	295
8.14.1	Harvest charts and settings	295
8.15	Threshing	297
8.15.1	Threshing Directions	297
9	Transmissions	299
9.1	Safety precautions	301
9.1.1	Safety Precautions, Transmissions	301
9.2	Adjustment of Transmissions	302
9.2.1	General	302
9.2.2	Threshing unit clutch	302
9.2.3	Hydrostatic transmission	303
9.3	Transmissions	304
9.3.1	Rear beater	304



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

9.3.2	Crop Elevator and Table	304
9.3.3	Straw chopper	305
9.3.4	Threshing cylinder	305
9.3.5	Unloading auger	306
9.3.6	Shaker Shoe and Chaff Spreader Counter Drive, and Straw Walker Drive	307
9.3.7	Filling and Returns System Countershaft	308
9.3.8	Returns Elevator and Returns Thresher	308
9.3.9	Tank Filling Elevator and Tank Filling Auger	309
9.3.10	Dust aspirator	309
9.3.11	Rotary screen	310
9.3.12	Fanning mill	311
9.3.13	Rotary Separator	311
9.3.14	Alternator and Fan	312
9.3.15	Climate control	312
9.4	Transmission Diagrams	313
9.4.1	Transmission Diagram, Left-Hand Side	313
9.4.2	Transmission Diagram, Right-Hand Side	315
10	Hydraulics	317
10.1	Safety precautions	319
10.1.1	Safety Precautions, Hydraulic System	319
10.2	Hydraulic System	320
10.2.1	Hydraulic system, standard combine	320
10.2.2	Hydraulic System, Four-Wheel Drive	321
10.3	Oil change	322
10.3.1	Draining and refilling hydraulic oil	322
10.4	Filter Change	323
10.4.1	Filter change in general	323
10.4.2	Return Oil Filter	323
10.4.3	Storage of Hydraulic System	324
10.5	Auxiliary Hydraulics	325
10.5.1	Auxiliary hydraulics in general	325
10.5.2	Functions and Auxiliary Hydraulics	325
10.5.3	Reel Adjustment Fore/Aft - Up/down	325
10.6	Hydraulic diagrams	326
10.6.1	Hydraulics Diagram, Standard Combine	326
10.6.2	Hydraulics Diagram, Auto Level Combine	329
10.6.3	Hydraulics Diagram for Chaff Spreader	331
10.6.4	Hydraulics diagram for Maxi Spreader	332
11	Maintenance	335
11.1	Safety precautions	337
11.1.1	Safety Precautions, Maintenance	337
11.2	Undercarriage	339
11.2.1	Undercarriage in general	339
11.2.2	Wheel Nut Torques	339
11.2.3	Tyre Pressure	339
11.3	Lubrication Intervals	341
11.3.1	Lubrication chart, time intervals	341
11.3.2	Lubrication chart, right- and left-hand side	344
11.3.3	Lubrication chart, main crop elevator and front axle	346
11.3.4	Lubrication points, left-hand machine side	347
11.3.5	Lubrication points, right-hand machine side	361
11.3.6	Lubricants and Operating Fluids	372
11.3.7	Preliminary Service Inspections	373
11.3.8	Maintenance Required	374
11.4	Oil Change, Gear	377
11.4.1	Gearbox	377
11.4.2	Final drives	377
11.4.3	Right-angle gear for returns thresher	378
11.5	Climate control	379
11.5.1	Diagram for Climate Control System	379

11.5.2	Maintenance	379
11.6	Cleaning and Off-Season Storage	380
11.6.1	Cleaning	380
11.6.2	Off-season Storage	381
11.6.3	Storage of Engine, Fuel System and Hydraulic System	382
11.6.4	Periodical Start-Up	382
11.6.5	Removal of Crop Elevator	383
11.6.6	Removal of Elevator Chains	383
11.6.7	After Off-Season Storage	383
11.7	Adjustment of Brakes	384
11.7.1	Adjustment of Foot Brakes, Disc Brakes	384
11.7.2	Adjustment of Parking Brake	384
12	Electrical System	385
12.1	Safety precautions	387
12.1.1	Safety Precautions, Electric System	387
12.2	Electrical System	388
12.2.1	Charging system	388
12.2.2	Electric Boxes and Main Switch	389
12.2.3	External connectors 12V	390
12.3	Electro-Hydraulic System	392
12.3.1	Electro-Hydraulic System in general	392
12.4	Key to Signatures for Wiring Harness	393
12.4.1	Wire Codes	393
12.4.2	Component Codes	393
12.5	Overview, Electric Box and Cab	394
12.5.1	Position of Connectors in Electric Boxes	394
12.5.2	Fuses and Relays, Electric Box and Cab	395
12.6	Wiring diagrams	397
12.6.1	Key to symbols	397
12.6.2	Diagrams overview	398
12.6.3	Fuse Ratings	398
12.6.4	Components	399
12.6.5	Wiring diagrams	407
13	Specifications	421
13.1	Specifications	423
13.1.1	Dimensions and specifications	423

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>