
OPERATOR'S MANUAL

FENDT

FENDT 8370 P

FENDT 8370 P AL

FENDT 8400 P

FENDT 8400 P AL



Operator's Manual for Fendt 8370 P / 8400 P Combine Series

1	General Information	11
1.1	Dear Customer	13
1.1.1	Appropriate Use	13
1.1.2	Changes and Improvements	13
1.1.3	Directives	13
1.1.4	Preface	14
1.1.5	EC Declaration of Conformity for Combine and Table	15
1.1.6	Product Identification	18
1.1.7	Sketch and parts identification	19
1.1.8	Disposal	20
2	Safety	23
2.1	Safety	25
2.1.1	General Safety Precautions	25
2.1.2	Attention - Warning Symbols	25
2.1.3	Safety Precautions	25
2.1.4	Road Transport	27
2.1.5	Warning/Instruction decals	28
2.1.6	CE Marking and Type Plate on the Combine	31
2.1.7	Position of CE Markings and Type Plate	40
3	Operation, Controls and Cab	45
3.1	Before start	47
3.1.1	Before start	47
3.2	Operator cab	49
3.2.1	Arrangement and Controls	49
3.2.2	Optional Extra	50
3.3	Safety Precautions - on the Move	51
3.3.1	Safety Precautions - on the Move	51
3.4	Starting and Stopping the Engine	52
3.4.1	Starting the Engine	52
3.5	Drive Controls	54
3.5.1	Multifunction lever	54
3.5.2	Adjustable armrest and control panel	55
3.5.3	Gearshift	56
3.5.4	Reduced engine revolutions in road transport (Speed Matching System)	57
3.5.5	Steering column	57
3.5.6	Brakes	58
3.6	Seats	59
3.6.1	Adjustment of Operator Seat	59
3.6.2	Adjustment of Air-Suspended Seat	59
3.6.3	EF declaration of conformity for the operator seat	60
3.6.4	Safety switch in operator seat - (Operator Present Switch)	61
3.6.5	Safety belt	62
3.6.6	Passenger seat	62
3.7	Mirrors	63
3.7.1	Electrically adjustable rearview mirrors	63
3.8	Accessibility	64
3.8.1	Ladder for Cab	64
3.8.2	Ladder for Engine Compartment	64
3.8.3	Cleaning the Windscreens	66

3.9	Emergency situations	67
3.9.1	Emergency Exit	67
3.9.2	Fire extinguisher	68
3.10	Light and Lamps	69
3.10.1	Lights	69
3.10.2	Main Light and Work Light	70
3.11	Climate control	71
3.11.1	Maintenance and overview	71
3.11.2	Operation of Climate Control	72
3.12	Printer	74
3.12.1	Exchanging Paper and Ribbon in Printer	74
3.12.2	Inserting the Paper Roll	74
3.12.3	Fitting the Ribbon	75
3.13	Optional Extra	76
3.13.1	Four-Wheel Drive	76
3.13.2	Reversing camera	77
3.13.3	Auto-Steering	78
4	Operation, FIELDSTAR	79
4.1	Safety precautions	81
4.1.1	Safety precautions, Operating FIELDSTAR	81
4.2	FIELDSTAR	82
4.2.1	FIELDSTAR, general description	82
4.2.2	Operating FIELDSTAR on Terminal	84
4.2.3	Operating the Terminal by Remote Control in the Multi-Function Lever	85
4.2.4	Contrast and Brightness Control	86
4.2.5	Cleaning of terminal	86
4.2.6	Data card	87
4.2.7	FIELDSTAR menu structure	87
4.3	Harvest menu	89
4.3.1	Instrument reading	89
4.4	Main Menu	93
4.4.1	Main Menu Structure	93
4.5	Monitoring	95
4.5.1	Monitoring in general	95
4.5.2	Shaft Speeds	96
4.5.3	Engine monitoring/alarm	96
4.5.4	Engine Safety Alarm	96
4.5.5	Information	97
4.5.6	Shaft speeds	98
4.6	Harvesting Data	99
4.6.1	Standard data	99
4.6.2	Data logging in general	100
4.6.3	Using Data Logging	101
4.6.4	Data logging setup	108
4.6.5	Using Markers	111
4.7	Operator's Manual	112
4.7.1	Harvest Settings	112
4.7.2	Routine servicing	113
4.7.3	FIELDSTAR	113
4.8	Diagnostics	114
4.8.1	Troubleshooting in FIELDSTAR	114
4.9	Coding	120
4.9.1	Coding in general	120
4.9.2	Clock Adjustment	121
4.9.3	Language	121
4.9.4	Area Measuring	121
4.9.5	Table Calibration	123
4.9.6	Returns Volume	124
4.9.7	Grain loss monitor	124
4.9.8	Shaft alarm calibration	124
4.9.9	Concave Calibration	124

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

4.9.10	Constant Flow	124
4.9.11	Wheel Track and Auto Level Combine	124
4.9.12	Coding of electrical straw deflectors	125
4.9.13	Lead Time and Lag Time	127
4.9.14	Calibration of actuator for electrical sieves	128
4.10	Settings	129
4.10.1	Harvest Settings	129
4.10.2	Table settings	132
4.10.3	Machine settings	134
4.11	Returns Volume Monitor	137
4.11.1	Returns volume	137
4.11.2	Coding	137
4.12	Grain Loss Monitoring	139
4.12.1	Sensors	139
4.12.2	Adjustment of Grain Loss Sensors	139
4.13	Shaft Alarm Limits	141
4.13.1	Shaft alarm calibration	141
4.14	Yield meter	142
4.14.1	Yield meter (isotopic)	142
4.14.2	Micro-Trak Yield Meter	144
4.14.3	Yield Meter Calibration	146
4.15	Moisture meter	148
4.15.1	Limitations in the use of the moisture meter	148
4.15.2	Continuous Moisture Measuring	148
4.15.3	Measuring Principle	148
4.15.4	Using the Moisture Meter	149
4.15.5	Cleaning the Moisture Meter,	149
4.15.6	Calibration of moisture meter	150
4.16	Cutting height control	152
4.16.1	Adjustment and Operation of Cutting Height Control	152
4.16.2	Coding the Table	155
4.17	Field pressure control	156
4.17.1	Adjustment and operation of field pressure control	156
4.18	Interaction between the Table Controls	158
4.18.1	Table Controls, an outline	158
4.19	Auto Level table	160
4.19.1	Principle of Auto Level Table	160
4.19.2	Bleeding	161
4.19.3	Coding of Auto Level Table	162
4.19.4	Calibration of Table Angle	162
4.20	Operation of Auto Level Table	164
4.20.1	Using the Auto Level table	164
4.21	Ground sensors	166
4.21.1	Checking and Adjusting the Ground Sensors	166
4.22	Constant Flow	168
4.22.1	Constant Flow functional description	168
4.22.2	Start-up and Adjustment of Constant Flow	169
4.22.3	Constant Flow Engagement	171
5	Operation, Auto Level Combine	173
5.1	Safety precautions	175
5.1.1	Safety precautions, operation of Auto Level Combine	175
5.1.2	Safety System	175
5.2	Attachment of Auto Level Table	176
5.2.1	Attachment of table to Auto Level combine	176
5.3	Combinations	177
5.3.1	Automatic or Manual	177
5.3.2	Selecting Combination	177
5.3.3	Adjustment Combinations for Auto Level Combine and Auto Level Table	177
5.3.4	Priority of hydraulic functions	179
5.4	Auto Level	180
5.4.1	Auto Level Combine	180

5.4.2	Manual Control of Auto Level Combine	180
5.5	Auto Level Combine/Table	181
5.5.1	Combine	181
5.5.2	Transport	182
5.5.3	Auto Level Table	183
5.6	Calibration	184
5.6.1	Calibration of Auto Level Combine	184
5.6.2	Errors during Calibration	185
5.7	Coding	186
5.7.1	Coding of Auto Level Table	186
5.7.2	Zero Cutting Height	186
5.8	Safety system	187
5.8.1	Safety system, Auto Level	187
5.8.2	Automatic Control of the Tilt Sensor Function	187
5.8.3	About the System	188
5.8.4	Hose Breach Protection for Auto Level Hydraulics	188
5.9	Troubleshooting	189
5.9.1	Troubleshooting in General	189
5.9.2	Machine Not Levelling Correctly	190
5.10	Servicing and User Tips	192
5.10.1	Retrofit of new FIELDSTAR Auto Level Job Computer and Sensors	192
5.10.2	Unintentional Use of Manual Keys in Automatic Mode	192
5.10.3	Diagnostics - Auto Level Combine Functions and Sensors	193
6	Engine	195
6.1	Safety precautions	197
6.1.1	Safety Precautions, Engine	197
6.2	Engines	198
6.2.1	Engine types	198
6.3	Air-Intake	199
6.3.1	Filter System	199
6.4	Cooling System	200
6.4.1	Rotary Screen and Dust Aspirator	200
6.4.2	Coolers	200
6.4.3	Coolant	201
6.4.4	Checking the fan belt tension	201
6.4.5	Checking the water pump belt	202
6.5	Fuel system	203
6.5.1	Fuel and quality requirements	203
6.5.2	Fuel system	204
6.5.3	Filter change	205
6.5.4	Bleeding the fuel system	206
6.6	SCR	207
6.6.1	The SCR system in general	207
6.6.2	Components and functions	208
6.6.3	Filling and storing AdBlue	209
6.6.4	Filter change	210
6.6.5	SCR system failure	211
6.7	Crankcase ventilation	212
6.7.1	Closed crankcase ventilation	212
6.8	Engine oil/change	213
6.8.1	Oil and Filter Change	213
6.9	Cleaning	214
6.9.1	Cleaning of engine compartment	214
6.10	EEM4 engine control	215
6.10.1	Electronic Engine Management and Monitoring	215
6.10.2	Engine Trouble Shooting (Self-Diagnosis)	216
6.10.3	EEM4 Codes	218
7	Cutting Tables	231
7.1	Safety precautions	233
7.1.1	Safety Precautions, Cutting Tables	233

7.2	Attachment/Removal of Table	234
7.2.1	Attachment of Table, Standard and Auto Level.	234
7.2.2	Removal of Table	235
7.2.3	Supports	236
7.3	Table trailer	237
7.3.1	Attachment of combine and trailer	237
7.3.2	Table Trailer Brakes	237
7.4	Reel	238
7.4.1	Reel Adjustment Up/Down, Fore/Aft.	238
7.4.2	Bleeding	239
7.4.3	Reel Rotation.	239
7.4.4	Reel tine bars	240
7.4.5	Adjustment of the Reel in the Table	240
7.5	Knife	241
7.5.1	Knife and knife drive	241
7.6	Feeding	242
7.6.1	Table auger	242
7.6.2	Cut-off strip and distribution strip.	243
7.6.3	Replacement of Feathering Fingers	244
7.6.4	Auger Flight Extensions, 20-22-25-30' Tables	244
7.6.5	Reversing	245
7.7	Transmission	246
7.7.1	PowerFlow table, knife drive and table auger	246
7.7.2	Slip Clutch for Table Auger	246
7.8	PowerFlow Table	247
7.8.1	PowerFlow belts	247
7.8.2	Inspection and Start-Up of Powerflow Belts	247
7.8.3	Adjustment of belts	248
7.8.4	Scrapers, front	248
7.8.5	Scrapers, Rear, and Adjustment of Bearing Housings	249
7.8.6	Table Bottom	249
7.8.7	Cleaning	250
7.9	Crop lifters	251
7.9.1	Using Crop Lifters.	251
7.10	Vertical Knives, Rape Auger and Straw Dividers	252
7.10.1	Vertical knife	252
7.10.2	Mounting of Vertical Knife.	252
7.10.3	Rape auger	253
7.10.4	Folding torpedo dividers and bow dividers	253
7.10.5	Mounting of Straw Dividers	254
7.10.6	Adjustment of Torpedo Divider.	254
7.11	Fixed Table Auger Fingers	255
7.11.1	Fitting of fixed table auger fingers	255
7.11.2	Using Fixed Table Auger Fingers	255
7.11.3	High Table Sides.	255
7.12	Main crop elevator	257
7.12.1	Elevator Chain.	257
7.12.2	Transmission for Table	258
7.12.3	Stone Trap.	258
7.12.4	Initial Adjustment of Cutting Height Indication	259
8	Operation of Table and Threshing Unit	261
8.1	Safety precautions	263
8.1.1	Safety Precautions, Operation of Machine and Cutting Table	263
8.2	Operation of Table	265
8.2.1	Table Height and Table Automatic Control	265
8.2.2	Cutting Height Control.	266
8.2.3	Field Pressure Control	267
8.2.4	Preset cutting height	268
8.2.5	Auto Level table	268
8.2.6	Table Engagement - Emergency Stop	269

8.3	Threshing Unit Transmission	270
8.3.1	Threshing unit engagement	270
8.3.2	Cylinder Variator	271
8.3.3	Turning Tool for Cylinder	271
8.4	Concave Setting, Electrically Adjustable	272
8.4.1	Operation of Concave	272
8.4.2	Concave Setting	272
8.5	Threshing	274
8.5.1	Concave filler plates	274
8.5.2	Straw walkers	274
8.5.3	Rear beater curtain	275
8.6	Straw Chopper and Spreader Hood	276
8.6.1	Straw chopper	276
8.6.2	Adjustment of spreader hood	278
8.6.3	Counter Knives and Cross Bar	279
8.6.4	Replacement of Knives	281
8.7	Fanning Mill and Sieves	282
8.7.1	Fanning mill	282
8.7.2	Shaker shoe	282
8.7.3	Shaker Shoe with Electrical Sieves	283
8.7.4	Manual Adjustment of Sieves	283
8.7.5	Cleaning of Sieves and Main Grain Pan	284
8.7.6	Cleaning the Sieves	285
8.7.7	Shaker Shoe Light	287
8.7.8	Special sieves	287
8.8	Internal Grain Transport	288
8.8.1	Auger Housing/Elevators	288
8.8.2	Returns thresher	288
8.8.3	Tank filling auger	289
8.8.4	Grain tank	290
8.8.5	Unloading auger	292
8.8.6	Unloading Auger Clutch	293
8.8.7	Unloading tube	294
8.9	Rotary Separator	295
8.9.1	Adjusting the revolutions	295
8.9.2	Concave setting	296
8.10	Straw hood	297
8.10.1	Alarm switch for straw hood blocked	297
8.10.2	Light in straw hood	298
8.11	Chaff spreader	299
8.11.1	Setting	299
8.12	Maxi Spreader	301
8.12.1	Operation and Adjustment	301
8.12.2	Adjustment of Sensors	302
8.13	Maize Threshing	303
8.13.1	Maize threshing in general	303
8.13.2	Attachment of Maize Header	303
8.13.3	Area measuring	304
8.13.4	Main crop elevator	304
8.13.5	Concave/initial settings	305
8.13.6	Threshing cylinder	305
8.13.7	Rotary Separator	305
8.13.8	Shaker shoe	306
8.13.9	Straw walkers	306
8.13.10	Bottom auger cover plate	307
8.13.11	Scrapers	307
8.13.12	Rear beater curtain	307
8.13.13	Straw chopper	308
8.13.14	Maxi Spreader	308
8.14	Harvest settings	309
8.14.1	Harvest charts and settings	309



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

8.15	Threshing	311
8.15.1	Threshing directions	311
9	Transmissions	313
9.1	Safety precautions	315
9.1.1	Safety Precautions, Transmissions	315
9.2	Adjustment of Transmissions	316
9.2.1	General	316
9.2.2	Threshing unit clutch	316
9.2.3	Hydrostatic transmission	317
9.3	Transmissions	318
9.3.1	Rear beater	318
9.3.2	Table and crop elevator	318
9.3.3	Straw chopper	319
9.3.4	Threshing cylinder	320
9.3.5	Unloading auger	320
9.3.6	Shaker Shoe and Chaff Spreader Counter Drive, and Straw Walker Drive ...	321
9.3.7	Filling and Returns System Countershaft.	322
9.3.8	Returns Elevator and Returns Thresher	322
9.3.9	Tank Filling Elevator and Tank Filling Auger	323
9.3.10	Dust aspirator	323
9.3.11	Rotary screen	324
9.3.12	Fanning mill	325
9.3.13	Rotary Separator	325
9.3.14	Alternator and fan	326
9.3.15	Climate control	326
9.4	Transmission Diagrams	327
9.4.1	Transmission diagram, left-hand side	327
9.4.2	Transmission Diagram, Right-Hand Side	329
10	Hydraulics	331
10.1	Safety precautions	333
10.1.1	Safety Precautions, Hydraulic System	333
10.2	Hydraulic System	334
10.2.1	Hydraulic system, standard combine	334
10.2.2	Hydraulic System, Four-Wheel Drive	335
10.3	Oil change	336
10.3.1	Draining and refilling hydraulic oil	336
10.4	Filter Change	337
10.4.1	Filter change in general	337
10.4.2	Return Oil Filter	337
10.4.3	Storage of Hydraulic System	338
10.5	Auxiliary Hydraulics	339
10.5.1	Auxiliary hydraulics in general	339
10.5.2	Functions and Auxiliary Hydraulics	339
10.5.3	Reel adjustment fore/aft - up/down	339
10.6	Hydraulic diagrams	340
10.6.1	Hydraulics Diagram, Standard Combine	340
10.6.2	Hydraulics Diagram, Auto Level Combine	342
10.6.3	Hydraulics Diagram for Chaff Spreader	344
10.6.4	Hydraulics diagram for Maxi Spreader	345
11	Maintenance	347
11.1	Safety precautions	349
11.1.1	Safety Precautions, Maintenance	349
11.2	Undercarriage	351
11.2.1	Undercarriage in general	351
11.2.2	Wheel nut torques	351
11.2.3	Tyre pressure	351
11.3	Lubrication Intervals	353
11.3.1	Lubrication chart, time intervals	353
11.3.2	Lubrication chart, right- and left-hand side	356

11.3.3	Lubrication chart, main crop elevator and front axle	358
11.3.4	Lubrication points, left-hand machine side	359
11.3.5	Lubrication points, right-hand machine side	373
11.3.6	Lubricants and operating fluids	384
11.3.7	Preliminary service inspections	385
11.3.8	Maintenance required	386
11.4	Gear Oil Change	389
11.4.1	Gearbox	389
11.4.2	Final drives	389
11.4.3	Right-angle gear for returns thresher	390
11.5	Climate control	391
11.5.1	Diagram for Climate Control System	391
11.5.2	Maintenance	391
11.6	Cleaning and Off-Season Storage	392
11.6.1	Cleaning	392
11.6.2	Off-season storage	393
11.6.3	Storage of Engine, Fuel System, SCR System and Hydraulic System	394
11.6.4	Periodical Start-Up	394
11.6.5	Removal of Crop Elevator	395
11.6.6	Removal of Elevator Chains	395
11.6.7	After Off-Season Storage	395
11.7	Adjustment of Brakes	396
11.7.1	Adjustment of Foot Brakes, Disc Brakes	396
11.7.2	Adjustment of parking brake	396
12	Electrical System	397
12.1	Safety precautions	399
12.1.1	Safety Precautions, Electric System	399
12.2	Electrical System	400
12.2.1	Charging system	400
12.2.2	Electric Boxes and Main Switch	401
12.2.3	External connectors 12V	402
12.3	Electro-Hydraulic System	404
12.3.1	Electro-Hydraulic System in General	404
12.4	Key to Signatures for Wiring Harness	405
12.4.1	Wire Codes	405
12.4.2	Component Codes	405
12.5	Overview, Electric Box and Cab	406
12.5.1	Position of Connectors in Electric Boxes	406
12.5.2	Fuses and Relays, Electric Box and Cab	407
12.6	Wiring diagrams	409
12.6.1	Key to symbols	409
12.6.2	Diagrams overview	410
12.6.3	Fuse ratings	410
12.6.4	Components	411
12.6.5	Wiring diagrams	420
13	Specifications	433
13.1	Specifications	435
13.1.1	Dimensions and specifications	435

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>