

---

# *WORKSHOP SERVICE MANUAL*

---

*FENDT*

---

*FENDT 8370 P*

---

*FENDT 8370 P AL*

---

*FENDT 8400 P*

---

*FENDT 8400 P AL*

---



# Workshop Manual for Fendt 8370 P / 8400 P Combine Series

<b>1</b>	<b>Introduction - Specifications</b>	13
<b>1.1</b>	<b>Using the manual</b>	15
1.1.1	Using the manual	15
<b>1.2</b>	<b>General specifications</b>	16
1.2.1	General specifications	16
1.2.2	Tyre pressure	19
<b>1.3</b>	<b>Dimensions and weight</b>	21
1.3.1	Dimensions and weight	21
<b>1.4</b>	<b>Safety precautions</b>	23
1.4.1	Safety precautions	23
1.4.2	Safety in the workshop	23
1.4.3	Safety - a word to the mechanic	23
1.4.4	Safety - danger, warning and caution	23
1.4.5	Safety decals	24
1.4.6	General	24
1.4.7	Personal safety	24
1.4.8	Considerations with regard to equipment	25
1.4.9	General considerations	26
1.4.10	Operational considerations	26
1.4.11	Maintenance techniques	27
<b>1.5</b>	<b>Practical advice</b>	29
1.5.1	Practical advice	29
<b>1.6</b>	<b>Start-up instructions</b>	33
1.6.1	General	33
1.6.2	Pre-delivery checks	33
1.6.3	Instruction of combine operator	35
<b>1.7</b>	<b>Conversion tables</b>	38
1.7.1	Conventional units of measurement	38
<b>1.8</b>	<b>Locking and sealing agents</b>	39
1.8.1	Locking and sealing agents	39
<b>1.9</b>	<b>Wheel nut torques</b>	40
1.9.1	Wheels	40
1.9.2	Bolts with metric threads	40
1.9.3	Nuts with metric threads	41
<b>2</b>	<b>Cutting table</b>	43
<b>2.1</b>	<b>General</b>	45
2.1.1	Cutting table, general	45
<b>2.2</b>	<b>Knife drive - wobble box</b>	46
2.2.1	Removal	46
2.2.2	Assembly	46
2.2.3	Reconditioning the wobble box	47
2.2.4	Positioning the double fingers, knife and crop lifters	53
<b>2.3</b>	<b>Table auger</b>	54
2.3.1	Removal	54
2.3.2	Assembly	55
2.3.3	Replacing the shaft on the right-hand side	55
2.3.4	Replacing the shaft on the left-hand side	56
2.3.5	Replacing the crankshaft	57
2.3.6	Replacing the feathering fingers, bearings and bushes	58
2.3.7	Adjusting the table auger and feathering fingers	59

<b>2.4</b>	<b>Table body</b> .....	60
2.4.1	Adjusting the cut-off strips .....	60
2.4.2	Adjusting and positioning the ground sensor - PowerFlow .....	61
<b>2.5</b>	<b>Slip clutch and chain drive</b> .....	63
2.5.1	Removal .....	63
2.5.2	Assembly .....	63
2.5.3	Replacing the bearings and sprockets .....	64
<b>2.6</b>	<b>Countershaft</b> .....	65
2.6.1	Removal .....	65
2.6.2	Assembly .....	66
<b>2.7</b>	<b>PowerFlow table</b> .....	67
2.7.1	PowerFlow Table .....	67
2.7.2	Removal, belts .....	67
2.7.3	Assembly, belts .....	70
2.7.4	Replacing the front rollers and bearings, scraper adjustment .....	71
2.7.5	Replacing the rear rollers and bearings, scraper adjustment .....	73
2.7.6	Replacing and aligning the bearing housing, rear rollers .....	74
2.7.7	Belt tensioning and running-in .....	75
<b>3</b>	<b>Reel</b> .....	79
<b>3.1</b>	<b>Reel</b> .....	81
3.1.1	Removal .....	81
3.1.2	Assembly .....	82
3.1.3	Replacing the reel tine bar and plastic bearings .....	83
3.1.4	Replacing the guide rollers, eccentric, guide ring and bearings .....	84
3.1.5	Replacing the reel plates .....	85
3.1.6	Replacing the reel tube, bearings .....	85
<b>3.2</b>	<b>Oil motor and chain drive</b> .....	86
3.2.1	Replacing the oil motor .....	86
3.2.2	Replacing the flow divider .....	86
<b>3.3</b>	<b>Hydraulic cylinders</b> .....	90
3.3.1	Replacing the cylinder – reel up/down .....	90
3.3.2	Replacement of cylinder – reel forward/back .....	91
3.3.3	Reconditioning of hydraulic cylinders .....	91
<b>4</b>	<b>Main crop elevator</b> .....	95
<b>4.1</b>	<b>General</b> .....	97
4.1.1	Main crop elevator, general .....	97
<b>4.2</b>	<b>Main crop elevator</b> .....	98
4.2.1	Removal .....	98
4.2.2	Assembly .....	99
4.2.3	Bearing block on machine frame .....	100
4.2.4	Replacement of lifting ram .....	100
4.2.5	Reconditioning of hydraulic cylinder .....	100
4.2.6	Replacing the cutting height preset sensor .....	101
<b>4.3</b>	<b>Crop elevator chain</b> .....	103
4.3.1	Crop elevator chain, general .....	103
4.3.2	Removal .....	103
4.3.3	Assembly .....	103
4.3.4	Replacement of slats .....	105
4.3.5	Replacing the slide rails in the crop elevator .....	105
4.3.6	Replacing the intermediate plate .....	106
<b>4.4</b>	<b>Elevator chain top shaft</b> .....	107
4.4.1	Removal .....	107
4.4.2	Assembly .....	108
4.4.3	Replacing the bearings .....	108
4.4.4	Replacing the sprockets .....	108
4.4.5	Replacing the shaft protection tube .....	110
<b>4.5</b>	<b>Elevator chain front shaft</b> .....	111
4.5.1	Removal .....	111
4.5.2	Assembly .....	111
4.5.3	Replacing the shaft, bearings and plate wheels .....	112

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

<b>4.6</b>	<b>Elevator countershaft</b> .....	113
4.6.1	Removal .....	113
4.6.2	Assembly .....	114
4.6.3	Replacing the bearings, belt pulley .....	114
<b>4.7</b>	<b>Table clutch and chain drive</b> .....	115
4.7.1	Removal .....	115
4.7.2	Assembly .....	115
4.7.3	Reconditioning the clutch .....	116
<b>4.8</b>	<b>Adapter</b> .....	117
4.8.1	Removal .....	117
4.8.2	Assembly .....	118
4.8.3	Replacing the cylinder/connecting rod .....	118
4.8.4	Reconditioning of hydraulic cylinder .....	118
4.8.5	Replacing the angle sensor .....	119
<b>4.9</b>	<b>Hydraulic reversing</b> .....	120
4.9.1	Removal .....	120
4.9.2	Assembly .....	120
<b>5</b>	<b>Threshing unit</b> .....	121
<b>5.1</b>	<b>General</b> .....	123
5.1.1	Threshing unit, general .....	123
<b>5.2</b>	<b>Stone trap</b> .....	124
5.2.1	Removal .....	124
5.2.2	Assembly .....	125
<b>5.3</b>	<b>Concave</b> .....	126
5.3.1	Removal .....	126
5.3.2	Assembly .....	127
5.3.3	Adjusting the concave laterally .....	127
5.3.4	Concave setting - initial setting .....	128
5.3.5	Replacing the actuator .....	128
5.3.6	Replacing the lead-in plate .....	129
5.3.7	Replacing the shaft for concave setting .....	130
<b>5.4</b>	<b>Threshing cylinder</b> .....	131
5.4.1	Removal .....	131
5.4.2	Assembly .....	132
5.4.3	Replacing the bearings .....	133
5.4.4	Replacing the rasp bars and backing bars .....	134
5.4.5	Replacing the shaft and cylinder spiders .....	134
<b>5.5</b>	<b>Cylinder variator - table clutch</b> .....	136
5.5.1	Removal, hydraulic variator .....	136
5.5.2	Assembly, hydraulic variator .....	137
5.5.3	Reconditioning the hydraulic variator pulley .....	137
5.5.4	Removal, mechanical variator .....	139
5.5.5	Assembly, mechanical variator .....	139
5.5.6	Reconditioning the mechanical variator pulley .....	140
5.5.7	Removal, magnetic clutch .....	141
5.5.8	Assembly, magnetic clutch .....	142
5.5.9	Reconditioning the magnetic clutch .....	143
<b>5.6</b>	<b>Bracket for counter drive</b> .....	146
5.6.1	Removal .....	146
5.6.2	Assembly and alignment .....	146
<b>5.7</b>	<b>Rear beater</b> .....	148
5.7.1	Removal .....	148
5.7.2	Assembly .....	149
5.7.3	Replacing the bearings .....	150
<b>5.8</b>	<b>Rear beater concave</b> .....	151
5.8.1	Removal .....	151
5.8.2	Assembly .....	151
<b>5.9</b>	<b>Rotary separator cylinder</b> .....	152
5.9.1	Removal .....	152
5.9.2	Assembly .....	153
5.9.3	Replacing the bearings .....	154

5.9.4	Replacing the rasp bars	155
<b>5.10</b>	<b>Rotary separator concave</b>	156
5.10.1	Removal	156
5.10.2	Assembly	157
5.10.3	Concave setting - initial setting	158
5.10.4	Replacing the shaft for concave setting	159
<b>6</b>	<b>Straw walkers</b>	161
<b>6.1</b>	<b>General</b>	163
6.1.1	Straw walkers, general	163
<b>6.2</b>	<b>Straw walkers</b>	164
6.2.1	Removal	164
6.2.2	Assembly	164
<b>6.3</b>	<b>Crank - front</b>	166
6.3.1	Removal	166
6.3.2	Fitting	167
6.3.3	Replacing the bearings	167
<b>6.4</b>	<b>Crank - rear</b>	169
6.4.1	Removal	169
6.4.2	Fitting	169
6.4.3	Replacing the bearings	169
<b>7</b>	<b>Shaker shoe - Fanning mill</b>	171
<b>7.1</b>	<b>General</b>	173
7.1.1	Shaker shoe - fanning mill, general	173
<b>7.2</b>	<b>Fanning mill</b>	174
7.2.1	Removal	174
7.2.2	Assembly	175
7.2.3	Replacing the fan blades	175
7.2.4	Replacing the fanning mill deflectors	176
7.2.5	Replacement of seals	177
<b>7.3</b>	<b>Main grain pan frame</b>	178
7.3.1	General	178
7.3.2	Removal	178
7.3.3	Assembly	179
7.3.4	Replacing the swivel arm and bearings	180
7.3.5	Replacing the seals	181
<b>7.4</b>	<b>Second grain pan</b>	182
7.4.1	Removal	182
7.4.2	Assembly	182
7.4.3	Replacing the swivel arm and bearings	183
7.4.4	Adjusting second grain pan	184
<b>7.5</b>	<b>Top shaker shoe</b>	186
7.5.1	Removal	186
7.5.2	Assembly	187
7.5.3	Replacing the swivel arm and bearings	188
7.5.4	Replacement of seals	189
7.5.5	Replacing and calibrating the actuator - sieves	189
<b>7.6</b>	<b>Bottom shaker shoe</b>	191
7.6.1	Removal	191
7.6.2	Assembly	192
7.6.3	Replacing the swivel arm and bearings	193
7.6.4	Replacing the seals	193
7.6.5	Electric sieve setting – initial setting	193
<b>7.7</b>	<b>Bottom augers</b>	194
7.7.1	Bottom augers	194
7.7.2	Removal	194
7.7.3	Assembly	195
<b>7.8</b>	<b>Eccentric drive</b>	196
7.8.1	Removal	196
7.8.2	Assembly	197
7.8.3	Adjusting the connecting rod / aligning the shaker shoes	198

7.8.4	Replacing the connecting rod bearing	199
7.8.5	Replacing the bearings and eccentric shaft	200
<b>7.9</b>	<b>Transmissions</b>	201
7.9.1	Replacing and reconditioning the fanning mill variator	201
7.9.2	Adjusting the fanning mill variator	202
7.9.3	Replacing and reconditioning the counter drive	203
<b>8</b>	<b>Elevators</b>	205
<b>8.1</b>	<b>Tank filling elevator</b>	207
8.1.1	Removal	207
8.1.2	Assembly	208
8.1.3	Replacing the top shaft, bearings and sprockets	209
8.1.4	Replacement of bottom sprocket	210
8.1.5	Replacing the elevator chain	210
8.1.6	Moisture sensor	211
8.1.7	Yieldmeter sensor	211
<b>8.2</b>	<b>Returns elevator</b>	212
8.2.1	Removal	212
8.2.2	Assembly	213
8.2.3	Replacing the top shaft, bearings and sprockets	213
8.2.4	Replacing the bottom sprocket	214
8.2.5	Replacing the elevator chain	214
8.2.6	Returns volume sensor	214
<b>8.3</b>	<b>Returns thresher</b>	215
8.3.1	Removal	215
8.3.2	Fitting	215
8.3.3	Replacing the sprockets	215
8.3.4	Replacement of threshing cylinder	216
8.3.5	Reconditioning the right-angle gear	216
<b>8.4</b>	<b>Tank filling auger</b>	219
8.4.1	Removal	219
8.4.2	Fitting	219
8.4.3	Replacing the top bearing	219
8.4.4	Reconditioning the right-angle gear	220
<b>8.5</b>	<b>Transmission</b>	221
8.5.1	Replacing the shaft, bearings and sprockets	221
<b>9</b>	<b>Engine</b>	223
<b>9.1</b>	<b>General</b>	225
9.1.1	Engine, general	225
<b>9.2</b>	<b>Replacing the engine</b>	226
9.2.1	Removing the engine assembly	226
9.2.2	Fitting the engine assembly	228
<b>10</b>	<b>Unloading auger - Grain tank</b>	231
<b>10.1</b>	<b>Unloading auger - horizontal</b>	233
10.1.1	Removal	233
10.1.2	Assembly	233
<b>10.2</b>	<b>Unloading auger - vertical</b>	235
10.2.1	Removal	235
10.2.2	Assembly	235
10.2.3	Reconditioning the right-angle gear	236
<b>10.3</b>	<b>Unloading tube - horizontal</b>	237
10.3.1	Removal	237
10.3.2	Assembly	237
<b>10.4</b>	<b>Unloading tube - vertical</b>	238
10.4.1	Removal	238
10.4.2	Assembly	238
10.4.3	Replacing the swivel bearing	239
10.4.4	Replacing the hydraulic cylinder	240
10.4.5	Reconditioning of hydraulic cylinder	240

<b>10.5 Unloading tube elbow</b> .....	241
10.5.1 Removal .....	241
10.5.2 Assembly .....	241
10.5.3 Reconditioning the right-angle gear .....	242
<b>10.6 Bottom auger and cover plate</b> .....	244
10.6.1 Removal .....	244
10.6.2 Fitting .....	245
10.6.3 Replacing the bearings, safety clutch .....	245
<b>10.7 Transmission</b> .....	247
10.7.1 Replacing the unloading auger shaft, bearings .....	247
10.7.2 Replacing and reconditioning the magnetic clutch .....	248
<b>10.8 Grain tank covers</b> .....	250
10.8.1 Removal .....	250
10.8.2 Assembly .....	251
<b>11 Drive unit</b> .....	253
<b>11.1 Radiator – intercooler</b> .....	255
11.1.1 Removal .....	255
11.1.2 Fitting .....	256
<b>11.2 Oil cooler</b> .....	257
11.2.1 Removal .....	257
11.2.2 Assembly .....	257
<b>11.3 Fuel cooler</b> .....	258
11.3.1 Removal .....	258
11.3.2 Assembly .....	258
<b>11.4 Condenser – air conditioning</b> .....	259
11.4.1 Removal .....	259
11.4.2 Assembly .....	259
<b>11.5 Rotary screen</b> .....	260
11.5.1 Removal .....	260
11.5.2 Assembly .....	261
11.5.3 Adjusting the rotary screen and cleaning blade .....	262
11.5.4 Replacing the drive shaft and clutch .....	263
<b>11.6 Dust aspirator</b> .....	266
11.6.1 Removal .....	266
11.6.2 Assembly .....	267
<b>11.7 Hydrostatic pump</b> .....	268
11.7.1 Removal .....	268
11.7.2 Assembly .....	270
11.7.3 Tensioning device .....	271
<b>11.8 Auxiliary hydraulic pump</b> .....	272
11.8.1 Removal .....	272
11.8.2 Fitting .....	272
<b>11.9 Hydraulic pump - Maxi Spreader</b> .....	273
11.9.1 Removal .....	273
11.9.2 Assembly .....	273
<b>11.10 Hydraulic oil tank</b> .....	274
11.10.1 Removal .....	274
11.10.2 Fitting .....	274
<b>11.11 Fuel tank</b> .....	275
11.11.1 Removal .....	275
11.11.2 Fitting .....	275
11.11.3 Tank gauge .....	275
<b>11.12 Diesel additive and dosing equipment</b> .....	276
11.12.1 Removal .....	276
11.12.2 Assembly .....	276
11.12.3 Supply module .....	276
11.12.4 Dosing module .....	277
11.12.5 Tank sensor .....	277
<b>11.13 Compressor – air conditioning</b> .....	278
11.13.1 Removal .....	278
11.13.2 Assembly .....	278

<b>11.14 Power take-off</b> .....	279
11.14.1 Removal .....	279
11.14.2 Assembly .....	279
11.14.3 Replacing the clutch disc .....	280
11.14.4 Replacing the output shaft, bearing and hub .....	281
<b>12 Transmissions</b> .....	283
<b>12.1 General</b> .....	285
12.1.1 Transmissions, General .....	285
<b>12.2 Countershaft</b> .....	286
12.2.1 Removal .....	286
12.2.2 Assembly .....	288
12.2.3 Replacing the bearings .....	288
12.2.4 Reconditioning the safety clutch .....	289
<b>12.3 Replacing the belts, right-hand side</b> .....	290
12.3.1 Rear beater - counter drive, cylinder variator .....	290
12.3.2 Counter drive, variator - threshing cylinder .....	291
12.3.3 Rear beater - rotary separator .....	292
12.3.4 Fanning mill - fanning mill variator .....	292
12.3.5 Rear beater - fanning mill variator .....	293
12.3.6 Unloading auger shaft - unloading auger .....	293
12.3.7 Unloading auger shaft - rotary screen clutch .....	294
12.3.8 Unloading auger shaft - dust aspirator .....	295
12.3.9 Countershaft - counter drive, elevators .....	296
<b>12.4 Replacing the chains, right-hand side</b> .....	297
12.4.1 Counter drive, elevators - returns elevator .....	297
12.4.2 Counter drive, elevators - tank filling elevator .....	297
12.4.3 Counter drive, elevators - tank filling auger .....	298
12.4.4 Returns elevator - returns thresher .....	298
12.4.5 Reel drive .....	299
<b>12.5 Replacing the belts, left-hand side</b> .....	300
12.5.1 Countershaft - rear beater .....	300
12.5.2 Countershaft - counter drive, straw chopper .....	300
12.5.3 Counter drive - straw chopper .....	301
12.5.4 Engine - countershaft .....	301
12.5.5 Rear beater - countershaft, shaker shoe drive .....	303
12.5.6 Countershaft, shaker shoe drive - eccentric shaft .....	304
12.5.7 Countershaft, shaker shoe drive - straw walker crank .....	304
12.5.8 Rear beater - elevator chain top shaft / front shaft .....	305
12.5.9 Engine - unloading auger shaft .....	307
12.5.10 Engine - hydrostatic pump .....	307
12.5.11 PTO shaft - table countershaft .....	308
12.5.12 Table countershaft - knife drive .....	309
12.5.13 Countershaft - hydraulic pump, chaff spreader .....	309
<b>12.6 Replacing the chains, left-hand side</b> .....	310
12.6.1 Table countershaft - table auger .....	310
12.6.2 Table auger - belt rollers (PowerFlow) .....	310
12.6.3 Hydraulic motor, reversing - elevator countershaft .....	311
12.6.4 Bottom auger - unloading auger .....	312
<b>13 Undercarriage</b> .....	313
<b>13.1 Auto Level final drive bracket</b> .....	315
13.1.1 Removal .....	315
13.1.2 Assembly .....	316
13.1.3 Replacing the bushing .....	318
13.1.4 Replacing the hydraulic cylinder .....	319
13.1.5 Reconditioning of hydraulic cylinder .....	319
13.1.6 Adjusting the Auto Level potentiometer .....	320
<b>13.2 Final drives</b> .....	321
13.2.1 Removal .....	321
13.2.2 Assembly .....	322
13.2.3 Reconditioning the final drives .....	323

<b>13.3 Gearbox</b> .....	327
13.3.1 Removal .....	327
13.3.2 Assembly .....	328
13.3.3 Replacing the shifter cylinders and sensor .....	329
13.3.4 Adjusting the shifter cylinders and sensor .....	330
13.3.5 Replacing the lubrication pump .....	333
13.3.6 Replacing the shifter forks .....	334
13.3.7 Reconditioning the differential .....	335
13.3.8 Reconditioning the gearbox .....	338
<b>13.4 Hydrostatic motor</b> .....	342
13.4.1 Removal .....	342
13.4.2 Assembly .....	342
<b>13.5 Brakes</b> .....	343
13.5.1 Replacing the brake blocks .....	343
13.5.2 Replacement of brake discs .....	344
13.5.3 Bleeding the brakes .....	346
13.5.4 Brake pedals and main cylinder .....	346
13.5.5 Replacing the handbrake shoes .....	349
13.5.6 Adjustment of hydraulic hand brake .....	350
<b>13.6 Rear axle</b> .....	351
13.6.1 General .....	351
13.6.2 Removal .....	351
13.6.3 Assembly .....	352
13.6.4 Replacing the king pins and bushings .....	353
13.6.5 Replacing the steering cylinder .....	354
13.6.6 Reconditioning the hydraulic cylinder, rear axle .....	354
13.6.7 Adjusting the toe-in and steering deflection .....	355
<b>14 Cab</b> .....	359
<b>14.1 Multi-function lever and control panel</b> .....	361
14.1.1 Control panel .....	361
14.1.2 Armrest .....	362
14.1.3 Multi-function lever .....	363
<b>14.2 Replacing the windscreen</b> .....	365
14.2.1 Replacing the windscreen .....	365
<b>14.3 Control panel in roof</b> .....	366
14.3.1 Control panel in roof .....	366
<b>14.4 Roof</b> .....	367
14.4.1 Outer roof .....	367
14.4.2 Inspection doors .....	368
14.4.3 Replacing the windscreen wiper .....	368
14.4.4 Replacing the blower .....	369
14.4.5 Replacing the heating element/tap .....	370
14.4.6 Replacing evaporator .....	370
<b>14.5 Troubleshooting – Climate control</b> .....	371
14.5.1 Climate control faults in general .....	371
14.5.2 ECS – Electronic control unit .....	371
14.5.3 Troubleshooting table .....	371
<b>15 Hydraulics</b> .....	375
<b>15.1 General</b> .....	377
15.1.1 Hydraulics, general .....	377
15.1.2 Emptying and filling the hydrostatic system .....	379
15.1.3 Running in and bleeding the hydrostatic system .....	380
15.1.4 Running in and bleeding the auxiliary hydraulics .....	381
<b>15.2 Hydraulic diagrams</b> .....	382
15.2.1 Hydraulic diagrams .....	382
<b>15.3 Hydrostatic system</b> .....	385
15.3.1 Hydrostatic system .....	385
<b>15.4 Gearshift</b> .....	387
15.4.1 Gearshift .....	387



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**

<b>15.5 Handbrake</b> .....	388
15.5.1 Hand brake .....	388
<b>15.6 Auxiliary hydraulics</b> .....	389
15.6.1 Auxiliary hydraulics .....	389
<b>15.7 Cutting table</b> .....	391
15.7.1 Cutting table .....	391
<b>15.8 Auto Level</b> .....	394
15.8.1 Auto Level - hydraulic cylinders .....	394
<b>15.9 Reel</b> .....	395
15.9.1 Reel .....	395
<b>15.10 Steering</b> .....	398
15.10.1 Steering - hydraulics .....	398
<b>15.11 Cylinder variator</b> .....	399
15.11.1 Cylinder variator - hydraulics .....	399
<b>15.12 Unloading auger</b> .....	400
15.12.1 Unloading auger - hydraulics .....	400
<b>15.13 Reversing</b> .....	401
15.13.1 Reversing - hydraulics .....	401
<b>15.14 Chaff spreader</b> .....	402
15.14.1 Chaff spreader - hydraulics .....	402
<b>15.15 Maxi Spreader</b> .....	403
15.15.1 Maxi Spreader - hydraulics .....	403
<b>15.16 Troubleshooting - hydrostatic transmission</b> .....	405
15.16.1 Hydrostatic transmission faults in general .....	405
15.16.2 Pump and motor specifications .....	405
15.16.3 Functional diagram, HPV pump - HMF motor .....	406
15.16.4 Connecting test equipment .....	408
15.16.5 Troubleshooting table .....	409
15.16.6 Checking the charge pump .....	410
15.16.7 Checking the high pressure valves .....	410
15.16.8 Checking the cold start valve .....	410
15.16.9 Checking the servo control .....	411
15.16.10 Checking the hydraulic pump .....	412
15.16.11 Checking the hydraulic motor .....	413
<b>16 Electrical system</b> .....	415
<b>16.1 General</b> .....	417
16.1.1 Electrical system, general .....	417
<b>16.2 Description of FIELDSTAR</b> .....	418
16.2.1 Description of FIELDSTAR .....	418
<b>16.3 Electric box</b> .....	419
16.3.1 Replacing the terminal .....	419
16.3.2 Replacing the job computers .....	419
<b>16.4 Calibrations</b> .....	422
16.4.1 Speed calibration .....	422
16.4.2 Calibrating the concave .....	422
16.4.3 Shaft alarm calibration .....	422
16.4.4 Calibrating the electrical sieves .....	423
16.4.5 Calibrating the electrical straw deflectors .....	423
16.4.6 Calibrating the Auto Level combine .....	423
16.4.7 Table calibration .....	424
<b>16.5 Diagrams overview</b> .....	426
16.5.1 Diagrams overview .....	426
<b>16.6 Wiring diagrams</b> .....	430
16.6.1 Wiring diagrams .....	430
<b>16.7 Diagrams - computer input/output</b> .....	444
16.7.1 Diagrams input/output .....	444
<b>16.8 Diagramme ECU sensor connections</b> .....	448
16.8.1 Diagramme ECU sensor connections, Stage 3B engine, 6 cylinders .....	448
<b>16.9 Connectors</b> .....	450
16.9.1 Connectors .....	450

<b>16.10 W-connecting points</b> .....	457
16.10.1 W-connecting points .....	457
<b>16.11 Components</b> .....	458
16.11.1 Components .....	458
<b>16.12 Key to symbols</b> .....	526
16.12.1 Key to symbols .....	526
<b>16.13 Wiring overview</b> .....	527
16.13.1 Wiring overview .....	527
<b>17 Straw chopper</b> .....	573
<b>17.1 General</b> .....	575
17.1.1 Replacing and calibrating the electric actuator – straw deflectors .....	575
<b>18 General assembly instructions</b> .....	577
<b>18.1 Fitting gib-head keys</b> .....	579
18.1.1 Fitting gib-head keys .....	579
<b>18.2 Fitting tightening pins</b> .....	580
18.2.1 Fitting tightening pins .....	580
<b>18.3 Fitting hydraulic pipes and screw connections</b> .....	581
18.3.1 Fitting hydraulic pipes and screw connections .....	581
<b>18.4 Fitting a flanged bearing with locking collar</b> .....	583
18.4.1 Fitting a flanged bearing with locking collar .....	583
<b>18.5 Fitting sliding bushings</b> .....	584
18.5.1 Fitting sliding bushings .....	584
<b>18.6 Removing the revolution sensor</b> .....	585
18.6.1 Removing the revolution sensor .....	585
<b>18.7 Fitting tightening rings</b> .....	586
18.7.1 Fitting tightening rings .....	586
<b>19 Miscellaneous data</b> .....	587
<b>19.1 General</b> .....	589
19.1.1 Miscellaneous data, general .....	589
<b>19.2 Speeds - adjustment values</b> .....	590
19.2.1 Speeds - adjustment values .....	590
<b>19.3 Maintenance</b> .....	591
19.3.1 Lubrication chart, intervals .....	591
19.3.2 Lubrication chart, right- and left-hand side .....	594
19.3.3 Lubrication chart, main crop elevator and front axle .....	596
19.3.4 Lubrication points, left-hand machine side .....	597
19.3.5 Lubrication points, right-hand machine side .....	611
19.3.6 Recommended lubricants .....	622
19.3.7 Gear .....	623
19.3.8 Air-conditioning .....	624

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**