

**Operator's Manual**



# **9300 DynaFlex™ Draper Header**

**9325**

**9330**

**9335**

**9340**

**9345**

**9350**

# 9300 DynaFlex™ Draper Header

|            |   |           |
|------------|---|-----------|
| <b>1</b>   | <b>Safety</b>                                 | <b>7</b>  |
| <b>1.1</b> | <b>Introduction</b>                           | <b>9</b>  |
| 1.1.1      | Safety symbol                                 | 9         |
| 1.1.2      | Safety messages                               | 9         |
| 1.1.3      | Information messages                          | 9         |
| 1.1.4      | Safety signs                                  | 9         |
| 1.1.5      | A word to the operator                        | 10        |
| 1.1.6      | This manual                                   | 11        |
| <b>1.2</b> | <b>Operation</b>                              | <b>12</b> |
| 1.2.1      | General information                           | 12        |
| 1.2.2      | Prepare for operation                         | 13        |
| 1.2.3      | Personal protective equipment                 | 14        |
| 1.2.4      | Seat instructions                             | 14        |
| 1.2.5      | Shield and guards                             | 15        |
| 1.2.6      | Exhaust warning                               | 15        |
| 1.2.7      | Flying debris                                 | 16        |
| 1.2.8      | Handrails                                     | 16        |
| 1.2.9      | Agricultural chemicals                        | 16        |
| <b>1.3</b> | <b>Travel on public roads</b>                 | <b>17</b> |
| <b>1.4</b> | <b>Maintenance</b>                            | <b>19</b> |
| 1.4.1      | General maintenance information               | 19        |
| 1.4.2      | Fire prevention and first aid                 | 20        |
| 1.4.3      | High pressure leaks                           | 21        |
| 1.4.4      | Accumulator safety                            | 22        |
| 1.4.5      | Tire safety                                   | 22        |
| 1.4.6      | Replacement parts                             | 23        |
| <b>1.5</b> | <b>Cylinder stops</b>                         | <b>24</b> |
| 1.5.1      | Engage the stop for the reel lift cylinder    | 24        |
| 1.5.2      | Disengage the stop for the reel lift cylinder | 24        |
| 1.5.3      | Engage the center reel stop                   | 24        |
| 1.5.4      | Disengage the center reel stop                | 25        |
| 1.5.5      | Header lift cylinder stop                     | 26        |
| <b>1.6</b> | <b>Shields</b>                                | <b>27</b> |
| 1.6.1      | Draper drive shields                          | 27        |
| 1.6.2      | Auger shaft shield                            | 27        |
| 1.6.3      | End shields                                   | 27        |
| 1.6.4      | Reel drive shield                             | 28        |
| 1.6.5      | Top covers                                    | 29        |
| <b>1.7</b> | <b>Safety and informational signs</b>         | <b>30</b> |
| 1.7.1      | Operators manual                              | 32        |
| 1.7.2      | Warning - Hydraulic fluid pressure            | 32        |
| 1.7.3      | Warning - Entanglement hazard                 | 33        |
| 1.7.4      | Warning - Crushing hazard                     | 33        |
| 1.7.5      | Warning - Crushing hazard                     | 33        |
| 1.7.6      | Reflector yellow                              | 33        |
| 1.7.7      | Reflector red                                 | 34        |
| 1.7.8      | Reflector orange                              | 34        |
| 1.7.9      | Informational decals                          | 34        |
| <b>2</b>   | <b>Introduction</b>                           | <b>39</b> |
| <b>2.1</b> | <b>Introduction</b>                           | <b>41</b> |

|             |  |           |
|-------------|--|-----------|
| 2.1.1       | Units of measurement   | 41        |
| 2.1.2       | Replacement parts  | 41        |
| 2.1.3       | Intended use   | 41        |
| 2.1.4       | Recommended header/combine usage                               | 41        |
| 2.1.5       | Proper disposal of waste                                       | 41        |
| <b>2.2</b>  | <b>Machine identification</b>                                  | <b>42</b> |
| 2.2.1       | Serial number plate  | 42        |
| 2.2.2       | Serial number description                                      | 42        |
| <b>3</b>    | <b>Operation</b>   | <b>45</b> |
| <b>3.1</b>  | <b>Checklists</b>  | <b>47</b> |
| 3.1.1       | Daily checklist  | 47        |
| 3.1.2       | Before each season checklist                                   | 47        |
| 3.1.3       | End of season checklist  | 47        |
| <b>3.2</b>  | <b>Set up the combine</b>                                      | <b>48</b> |
| 3.2.1       | Configure a header   | 48        |
| 3.2.2       | Required kits to install the header on the combines            | 48        |
| 3.2.3       | Break in the header  | 49        |
| 3.2.4       | Check draper belt  | 49        |
| 3.2.5       | Parking stands   | 50        |
| <b>3.3</b>  | <b>Set up the IDEAL combine</b>                                | <b>51</b> |
| 3.3.1       | Configure a header   | 51        |
| <b>3.4</b>  | <b>Connect header to IDEAL combine</b>                         | <b>53</b> |
| 3.4.1       | Attach header to the combine                                   | 53        |
| 3.4.2       | Remove header from the combine                                 | 54        |
| <b>3.5</b>  | <b>Install the header</b>                                      | <b>57</b> |
| <b>3.6</b>  | <b>Remove the header</b>                                       | <b>60</b> |
| <b>3.7</b>  | <b>Reel</b>  | <b>62</b> |
| 3.7.1       | Reel position  | 62        |
| 3.7.2       | Reel speed   | 65        |
| 3.7.3       | Reel speed sensors   | 65        |
| <b>3.8</b>  | <b>Tine pitch</b>  | <b>66</b> |
| 3.8.1       | Adjust the tine pitch  | 66        |
| <b>3.9</b>  | <b>Header control sensors</b>                                  | <b>67</b> |
| 3.9.1       | Drag rod sensors   | 67        |
| 3.9.2       | Cutterbar sensors  | 67        |
| <b>3.10</b> | <b>Header pitch</b>  | <b>69</b> |
| 3.10.1      | Adjust header pitch - IDEAL combines                           | 69        |
| 3.10.2      | Adjust header pitch - 2009 and later axial combines            | 69        |
| 3.10.3      | Adjust header pitch - 2003 to 2008 axial combines              | 70        |
| <b>3.11</b> | <b>Cutterbar</b>   | <b>72</b> |
| 3.11.1      | Recommended cutterbar flex pressure                            | 72        |
| 3.11.2      | Adjust the cutterbar flex pressure - IDEAL                     | 72        |
| 3.11.3      | Adjust cutterbar flex pressure - 2009 and later axial combines | 72        |
| 3.11.4      | Adjust cutterbar flex pressure - 2003 to 2008 axial combines   | 73        |
| 3.11.5      | Lock and unlock the cutterbar                                  | 74        |
| <b>3.12</b> | <b>Sickle storage</b>  | <b>75</b> |
| <b>3.13</b> | <b>Header extremity lights</b>                                 | <b>76</b> |
| <b>3.14</b> | <b>Flighting filler</b>  | <b>77</b> |
| <b>3.15</b> | <b>Header transport kit</b>                                    | <b>78</b> |
| 3.15.1      | Put the header transport into field position                   | 78        |
| 3.15.2      | Position from field to transport                               | 84        |
| 3.15.3      | Connect the header transport to the hitch                      | 84        |
| <b>4</b>    | <b>Maintenance</b>   | <b>85</b> |

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

|            |  |            |
|------------|--|------------|
| <b>4.1</b> | <b>Lubrication and maintenance</b>                               | <b>87</b>  |
| 4.1.1      | Lubrication details  | 87         |
| 4.1.2      | Gear box oil level   | 91         |
| <b>4.2</b> | <b>Sealed chain</b>  | <b>93</b>  |
| 4.2.1      | Lubricate and clean the sealed chain                             | 93         |
| 4.2.2      | Maintain roller chains   | 93         |
| 4.2.3      | Roller chain don'ts  | 93         |
| 4.2.4      | Adjust the roller chain  | 94         |
| <b>4.3</b> | <b>Drive belts</b>   | <b>95</b>  |
| 4.3.1      | Maintain drive belts   | 95         |
| 4.3.2      | Adjust main drive belt tension                                   | 95         |
| 4.3.3      | Adjust the center draper drive belt tension                      | 96         |
| 4.3.4      | Adjust auger drive belt tension                                  | 97         |
| 4.3.5      | Adjust variable speed belt                                       | 97         |
| <b>4.4</b> | <b>Draper maintenance</b>  | <b>98</b>  |
| 4.4.1      | Draper care  | 98         |
| 4.4.2      | Adjust left and right draper tension                             | 98         |
| 4.4.3      | Remove the draper  | 99         |
| 4.4.4      | Adjust the draper roller scraper                                 | 99         |
| 4.4.5      | Adjust flotation spring for the center deck                      | 100        |
| <b>4.5</b> | <b>Reel</b>  | <b>101</b> |
| 4.5.1      | Replace the reel tines   | 101        |
| 4.5.2      | Adjust the minimum reel lift height                              | 101        |
| 4.5.3      | Synchronize the reel lift arms                                   | 102        |
| <b>4.6</b> | <b>Cutterbar</b>   | <b>104</b> |
| 4.6.1      | Remove sickle  | 104        |
| 4.6.2      | Inspect the sickle   | 107        |
| 4.6.3      | Install the sickle   | 109        |
| 4.6.4      | Adjust the hold-down pressure for the standard sickle            | 117        |
| 4.6.5      | Adjust the sickle register                                       | 118        |
| 4.6.6      | Replace the standard sickle sections                             | 118        |
| 4.6.7      | Replace the SCH sickle sections                                  | 125        |
| 4.6.8      | Guards, wear plates, knife back rollers for SCH, and hold-downs. | 133        |
| 4.6.9      | Set the sickle time  | 146        |
| 4.6.10     | Replace the shear bolt for the sickle drive                      | 146        |
| <b>4.7</b> | <b>Sensor adjustment and calibration</b>                         | <b>148</b> |
| 4.7.1      | Calibrate the automatic header height control (AHHC)             | 148        |
| 4.7.2      | Calibrate the header sensor                                      | 148        |
| 4.7.3      | Adjust reel speed sensors  | 148        |
| 4.7.4      | Adjust drag rod sensors  | 148        |
| 4.7.5      | Adjust and measure cutterbar sensors                             | 150        |
| 4.7.6      | Verify cutterbar sensor adjustment                               | 152        |
| <b>4.8</b> | <b>Torque the transport wheel</b>                                | <b>154</b> |
| <b>4.9</b> | <b>Hydraulics</b>  | <b>155</b> |
| 4.9.1      | Bleed reel lift cylinders  | 155        |
| 4.9.2      | Bleed cutterbar flotation cylinders                              | 155        |
| 4.9.3      | Bleed header pitch cylinders                                     | 155        |
| <b>5</b>   | <b>Troubleshooting</b>   | <b>157</b> |
| <b>5.1</b> | <b>Cutterbar</b>   | <b>159</b> |
| <b>5.2</b> | <b>Reel</b>  | <b>161</b> |
| <b>5.3</b> | <b>Draper</b>  | <b>162</b> |
| <b>6</b>   | <b>Specifications</b>  | <b>165</b> |
| <b>6.1</b> | <b>Dimensions and weights</b>                                    | <b>167</b> |
| 6.1.1      | Header depth   | 167        |

|             |   |            |
|-------------|---|------------|
| 6.1.2       | Header width                                | 168        |
| 6.1.3       | Weights                                     | 168        |
| <b>6.2</b>  | <b>Pick up reel</b>                         | <b>169</b> |
| <b>6.3</b>  | <b>Reel drive</b>                           | <b>170</b> |
| <b>6.4</b>  | <b>Reel height control</b>                  | <b>171</b> |
| <b>6.5</b>  | <b>Cutterbar</b>                            | <b>172</b> |
| <b>6.6</b>  | <b>Sickle</b>                               | <b>173</b> |
| <b>6.7</b>  | <b>Header tilt</b>                          | <b>174</b> |
| <b>6.8</b>  | <b>Drapers</b>                              | <b>175</b> |
| 6.8.1       | Side drapers                                | 175        |
| 6.8.2       | Center drapers                              | 175        |
| <b>6.9</b>  | <b>Center conveyor</b>                      | <b>176</b> |
| <b>6.10</b> | <b>General lubrication</b>                  | <b>177</b> |
| <b>6.11</b> | <b>Wheels</b>                               | <b>178</b> |
| <b>6.12</b> | <b>Header transport</b>                     | <b>179</b> |
| <b>6.13</b> | <b>Bolt torque values</b>                   | <b>180</b> |
| <b>6.14</b> | <b>Conversion table</b>                     | <b>182</b> |
| <b>7</b>    | <b>Accessories</b>                          | <b>185</b> |
| <b>7.1</b>  | <b>Reel divider</b>                         | <b>187</b> |
| <b>7.2</b>  | <b>Divider rod</b>                          | <b>188</b> |
| <b>7.3</b>  | <b>Center crop deflector</b>                | <b>189</b> |
| <b>7.4</b>  | <b>Stabilizer wheels</b>                    | <b>190</b> |
| <b>8</b>    | <b>Assembly</b>                             | <b>191</b> |
| <b>8.1</b>  | <b>Header assembly</b>                      | <b>193</b> |
| 8.1.1       | Remove the shipping stand                   | 193        |
| 8.1.2       | Set the reel lift cylinders                 | 195        |
| 8.1.3       | Set the reel                                | 196        |
| 8.1.4       | Remove the bracket and wire                 | 198        |
| 8.1.5       | Install the left hand and right hand draper | 199        |
| 8.1.6       | Install the center draper                   | 201        |
| <b>8.2</b>  | <b>Pre-delivery checklist</b>               | <b>203</b> |
| <b>8.3</b>  | <b>Delivery checklist</b>                   | <b>204</b> |
| <b>9</b>    | <b>Index</b>                                | <b>205</b> |

# 1 Safety

|            |   |           |
|------------|---|-----------|
| <b>1.1</b> | <b>Introduction</b>                           | <b>9</b>  |
| 1.1.1      | Safety symbol                                 | 9         |
| 1.1.2      | Safety messages                               | 9         |
| 1.1.3      | Information messages                          | 9         |
| 1.1.4      | Safety signs                                  | 9         |
| 1.1.5      | A word to the operator                        | 10        |
| 1.1.6      | This manual                                   | 11        |
| <b>1.2</b> | <b>Operation</b>                              | <b>12</b> |
| 1.2.1      | General information                           | 12        |
| 1.2.2      | Prepare for operation                         | 13        |
| 1.2.3      | Personal protective equipment                 | 14        |
| 1.2.4      | Seat instructions                             | 14        |
| 1.2.5      | Shield and guards                             | 15        |
| 1.2.6      | Exhaust warning                               | 15        |
| 1.2.7      | Flying debris                                 | 16        |
| 1.2.8      | Handrails                                     | 16        |
| 1.2.9      | Agricultural chemicals                        | 16        |
| <b>1.3</b> | <b>Travel on public roads</b>                 | <b>17</b> |
| <b>1.4</b> | <b>Maintenance</b>                            | <b>19</b> |
| 1.4.1      | General maintenance information               | 19        |
| 1.4.2      | Fire prevention and first aid                 | 20        |
| 1.4.3      | High pressure leaks                           | 21        |
| 1.4.4      | Accumulator safety                            | 22        |
| 1.4.5      | Tire safety                                   | 22        |
| 1.4.6      | Replacement parts                             | 23        |
| <b>1.5</b> | <b>Cylinder stops</b>                         | <b>24</b> |
| 1.5.1      | Engage the stop for the reel lift cylinder    | 24        |
| 1.5.2      | Disengage the stop for the reel lift cylinder | 24        |
| 1.5.3      | Engage the center reel stop                   | 24        |
| 1.5.4      | Disengage the center reel stop                | 25        |
| 1.5.5      | Header lift cylinder stop                     | 26        |
| <b>1.6</b> | <b>Shields</b>                                | <b>27</b> |
| 1.6.1      | Draper drive shields                          | 27        |
| 1.6.2      | Auger shaft shield                            | 27        |
| 1.6.3      | End shields                                   | 27        |
| 1.6.4      | Reel drive shield                             | 28        |
| 1.6.5      | Top covers                                    | 29        |
| <b>1.7</b> | <b>Safety and informational signs</b>         | <b>30</b> |
| 1.7.1      | Operators manual                              | 32        |
| 1.7.2      | Warning - Hydraulic fluid pressure            | 32        |
| 1.7.3      | Warning - Entanglement hazard                 | 33        |
| 1.7.4      | Warning - Crushing hazard                     | 33        |
| 1.7.5      | Warning - Crushing hazard                     | 33        |
| 1.7.6      | Reflector yellow                              | 33        |
| 1.7.7      | Reflector red                                 | 34        |
| 1.7.8      | Reflector orange                              | 34        |
| 1.7.9      | Informational decals                          | 34        |



## 1.1 Introduction

### 1.1.1 Safety symbol

The safety symbol tells you about a potentially hazardous area!

Look for the safety symbol in this manual and on the machine. The safety symbols tell you that there is important safety instructions in the manual.



Fig. 1

### 1.1.2 Safety messages

The words DANGER, WARNING or CAUTION are used with the safety symbol. Learn these safety messages and obey the recommended precautions and safety instructions.



**DANGER:**  
If you do not obey the recommended precautions and safety instructions, **DEATH OR INJURY will occur.**



**WARNING:**  
If you do not obey the recommended precautions and safety instructions, **DEATH OR INJURY can occur.**



**CAUTION:**  
If you do not obey the recommended precautions and safety instructions, **INJURY can possibly occur.**



Fig. 2

### 1.1.3 Information messages

The words important and note are not related to personal safety, and are used to give information about the operation and servicing of the machine.

**IMPORTANT:** Identifies special instructions or procedures which, if not followed, can cause damage to the machine, the process, or the area around the machine.

**NOTE:** Information to make procedures easier.

### 1.1.4 Safety signs



**WARNING:**  
**Do not remove the safety signs. Replace safety signs that you cannot read, are damaged, or are missing.**

Clean the machine surface with a weak soap and water solution before you replace the safety signs. Replacement safety signs are available from your dealer.

## 1. Safety

Always make sure that safety signs are in the correct locations and that you can read the safety signs. Illustrations of safety sign locations are in this section.

Keep the safety signs clean. If necessary, use a weak soap and water solution.

### 1.1.5 A word to the operator

It is your responsibility to read and understand the safety section in this manual and the manual for all implements before you operate this machine. You are responsible for your safety. Good safety procedures prevent injury to you and the persons around you.

Make the information in the safety section of this manual a part of your safety procedure. This safety section is written only for this type of machine. Safety is your responsibility. You can prevent injury and death.

This safety section gives basic safety examples that can occur during the operation and maintenance of your machine. This safety section is not a replacement for safety instruction in other sections of this manual.

Injury or death can occur if the safety instruction is not obeyed.

Learn how to operate the machine and how to use the controls correctly.

Do not operate the machine if you do not know how to operate the machine. Do not let persons operate the machine that do not know how to operate the machine.

Follow all safety instructions in the manuals and on the safety signs on the machine, the implements, and the attachments.

Use only approved attachments and implements.

Make sure that your machine has the correct equipment that is necessary by the local regulations.

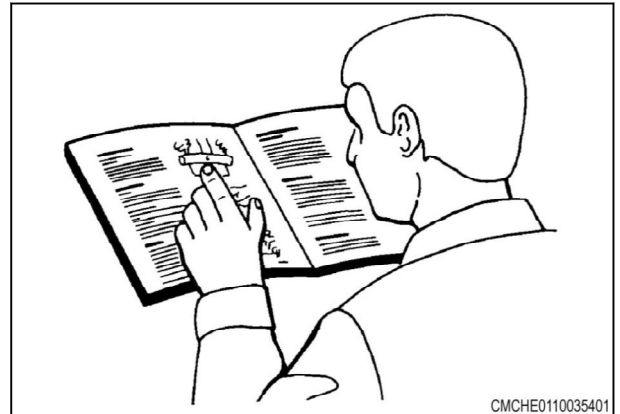 


Fig. 3



**WARNING:**

**Do not use alcohol or drugs that can have an effect on alertness or coordination. If you use prescription or 'over the counter' drugs, get medical advice about the safe operation of machines.**



**CAUTION:**

**If attachments or implements used with this machine have a different operator manual, see that operator manual for other important safety instructions.**

**CAUTION:**

See the engine operation and maintenance manual for other important safety instructions.

**CAUTION:**

See the combine operator manual for other important safety instructions.

---

**1.1.6 This manual**

---

This manual covers general safety instructions for this machine. Keep this manual with the machine.

Right and left, as used in this manual, are given as if you are in the operator seat.

The photos, illustrations, and data used in this manual were up to date when published, but in-line production changes can make your machine have small differences. The manufacturer reserves the right to redesign and change the machine as necessary without notification.

**WARNING:**

**In some of the illustrations and photos used in this manual, shields or guards are removed. Operate the machine only with all shields and guards in the correct installed positions. If the removal of shields or guards is necessary to make a repair, they must be installed before operation.**

## 1.2 Operation

### 1.2.1 General information

When parking, park the machine on a solid level surface and lower the header to the ground. Put all controls in neutral and apply the park brake. Stop the engine and take the key with you.



**WARNING:**  
**Do not leave the machine unattended with the header raised. Lower the header fully before leaving the machine. A sudden loss of hydraulic pressure can cause the header to drop without warning.**

Make sure the machine is in the proper operating condition according to the Operator Manual.

Always operate the machine with the control console turned on.

Do not dismount from moving machinery.

Stay off slopes too steep for operation.

Be aware of the size of the machine and have enough space available to allow for operation.

Use extra care and reduce speed when operating on hillsides or near ditches or embankments especially with a full grain tank to avoid rollover. Travel speed must be such that complete control and machine stability is maintained at all times. Shift to a lower gear before descending a steep hill.

Regulate ground speed to field conditions, and maintain control at all times.

Do not dismount from moving machinery.

Avoid contact with electrical power lines. Always put the grain tank unloader tube in the transport position and lower radio aerial before moving the machine near electrical wires. Contact with electrical power lines can cause electrical shock, resulting in very serious injury or death.

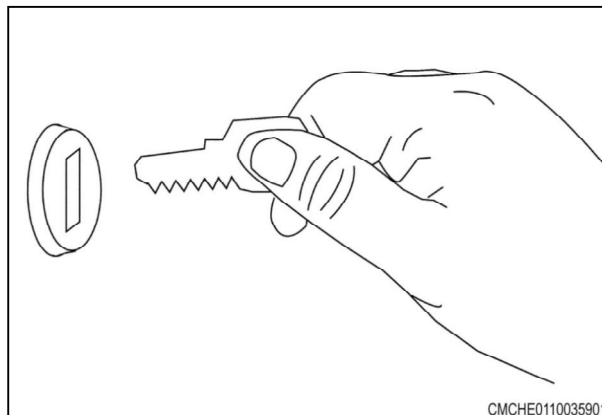 


Fig. 4

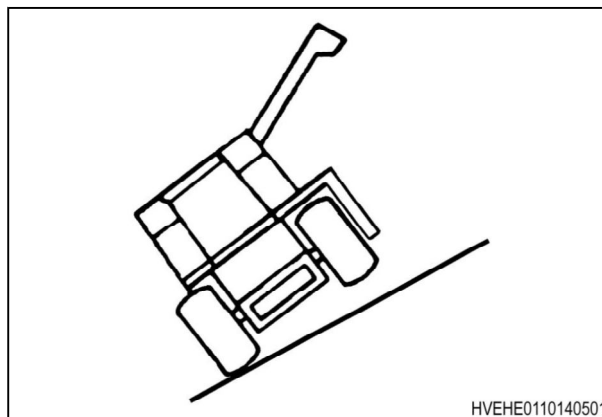 


Fig. 5

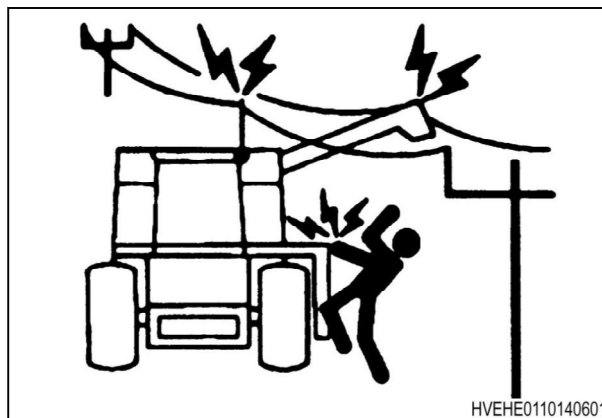 


Fig. 6

Never permit anyone on any part of the machine or attachments except in the operator's seat and the instructional seat when the engine is running.

Do not get on or off the machine while the machine is moving.



Fig. 7

Always stop the engine, shift the transmission to neutral, set park brake and remove the start key before leaving the operator's station or before permitting anyone to inspect, clean, lubricate, adjust or repair any part of the machine or attachments unless specifically instructed otherwise in this manual. Never leave machine unattended while the engine is operating.



Fig. 8

## 1.2.2 Prepare for operation

Read and understand the operating instructions and precautions in this manual before you operate or perform service on the machine.

Make sure that you know and understand the positions and operations of all controls. Make sure that all controls are in neutral and the parking brake is applied before you start the machine.

Make sure that all persons are a sufficient distance from your area of work before you start or operate the machine. Do checks on the controls and learn all controls in an area clear of persons and objects before you start work with the machine. Know the dimensions of the machine and have sufficient space available for operation. Do not operate the machine at high speeds around persons, buildings, other equipment, etc.

Always use correct procedures when you do tasks around and operate the machine. Do not let children or persons who do not know how to operate the machine operate the machine. Keep other persons away from your area of work. Do not let other persons ride on the machine.

Make sure that the machine is in the good mechanical condition. Make sure that the machine has the correct equipment as necessary by local regulations.

All equipment has a limit. Make sure you understand the speed, brakes, steering, stability, and load characteristics of this equipment before you start.

### 1.2.3 Personal protective equipment

Put on all personal protective equipment (PPE) and protective clothes that are supplied to you or that are necessary for the conditions and by applicable laws. PPE includes equipment to prevent injury to your eyes, lungs, ears, head, hands and feet.

Always keep hands, feet, hair, and your clothes away from parts that move. Do not put on loose clothing, jewelry, watches, or other items that can tangle in parts that move. Tie up long hair that can also tangle in moving parts.

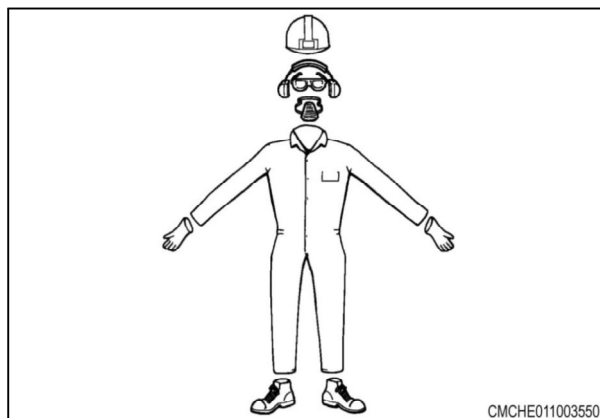 


Fig. 9

### 1.2.4 Seat instructions

Put on the seat belt before you operate the machine. Always sit in the seat and have the seat belt on while you operate the machine. Replace the seat belts when they become worn or broken.

Do not use a seat belt loosely. Make sure that there is some tension on the seat belt. Do not wear the seat belt in a twisted condition or pinched between the structural parts of the seat.

Put on the seat belt if the instructional seat is used. Use the instructional seat only to train new operators or to find a problem. The instructional seat is only for short periods of use.

Do not let children use the instructional seat or be in the cab. Do not let other persons use the instructional seat or be in the cab.

Drive the machine at slower speed and on level ground when the instructional seat is used. Do not start, stop, or turn quickly when the instructional seat is used. Do not drive on highways or public roads when the instructional seat is used.

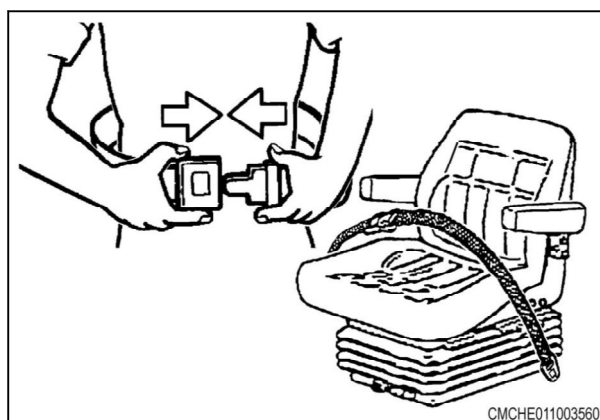 


Fig. 10



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**

## 1.2.5 Shield and guards



**WARNING: Entanglement hazard.**  
Belts and components that rotate.

**Severe personal injury or death can occur.**

**Do not open, remove, or put your hand behind shields if the engine is running. Stop the machine before doing service to the machine.**

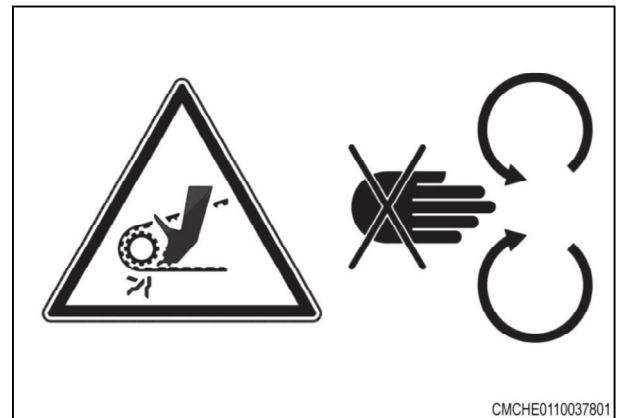 


Fig. 11

All shields and guards must be in the correct position and in good condition. Keep away from the components that rotate.



**DANGER: Entanglement hazard.**  
Rotating components.

**Severe personal injury or death can occur.**

**Do not make adjustments or repairs to components while they are moving. Stop the machine before doing service to the machine.**

Do not operate the machine with the drive shaft shields open or removed.

Keep away from the components that turn.

Make sure guards that turn are free.



Fig. 12

## 1.2.6 Exhaust warning



**WARNING: Inhalation hazard. Exhaust gases.**

**Death or serious illness can occur.**

**Do not operate the engine in a closed building unless the exhaust is ventilated to the outside.**

Do not tamper with or modify the exhaust system with unapproved extensions.

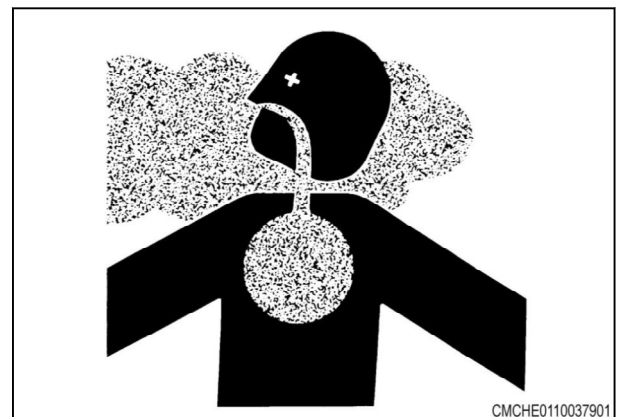 


Fig. 13

### 1.2.7 Flying debris



**WARNING:**  
**Be careful when you operate along the side of a road or structures. Rocks and other materials can be thrown from the machine during operation and can cause injury.**

Stay away from the machine during operation. Some materials can be thrown from the machine during operation and cause injury.



Fig. 14

### 1.2.8 Handrails



**WARNING: Falling hazard.**  
**Personal injury or death can occur.**  
**Use appropriate safety precautions when working off the ground.**

Point your body in the direction of the ladder and use the handrails when you are on the machine ladders. Always keep three points of contact with the ladder.



Fig. 15

### 1.2.9 Agricultural chemicals

Agricultural chemicals are very dangerous. Incorrect procedures with fertilizer, fungicides, herbicides, insecticides and pesticides can cause injuries to plants, animals, soil and other persons property.

Always read and follow all manufacturers instructions before you open chemical containers.

Read and follow instructions each time you use a chemical.

Use the same precautions when you do adjustments, do servicing, clean or store the machine as used when you put chemicals into the hoppers or tanks.

Tell all persons who are near chemicals of the possible dangerous results and the safety precautions that are necessary.

Stay upwind and away from smoke from a chemical fire.

Keep or discard all chemicals that are not used as specified by the chemical manufacturer.

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**