
OPERATOR'S MANUAL

FENDT

FENDT 9470x

FENDT 9470x AL



Operator's Manual for Fendt 9470x Combine Series

1	General Information	11
1.1	Dear Customer	13
1.1.1	Appropriate Use	13
1.1.2	Changes and Improvements	13
1.1.3	Directives	13
1.1.4	Preface	14
1.1.5	EC Declaration of Conformity for Combine and Table	15
1.1.6	Product Identification	18
1.1.7	Sectional Drawing and Parts Identification	19
1.1.8	Disposal	21
2	Safety	23
2.1	Safety	25
2.1.1	General Safety Precautions	25
2.1.2	Attention - Warning Symbols	25
2.1.3	Safety Precautions	25
2.1.4	Road Transport	27
2.1.5	Warning/Instruction Decals	28
2.1.6	CE Marking and Type Plate on the Combine	31
2.1.7	Position of CE Markings and Type Plate	41
3	Operation, Controls and Cab	45
3.1	Before Start	47
3.1.1	Before Start	47
3.2	Operator Cab	49
3.2.1	Arrangement and Controls	49
3.2.2	Optional Extra	50
3.3	Safety Precautions - on the Move	51
3.3.1	Safety Precautions - on the Move	51
3.4	Starting and Stopping the Engine	52
3.4.1	Starting the engine	52
3.5	Drive Controls	55
3.5.1	Multifunction Lever	55
3.5.2	Adjustable Armrest and Control Panel	56
3.5.3	Gearshift	57
3.5.4	Reduced Engine Revolutions in Road Transport (Speed Matching System)	58
3.5.5	Steering column	58
3.5.6	Brakes	59
3.6	Seats	60
3.6.1	Adjustment of Operator Seat	60
3.6.2	Adjustment of air-suspended seat	60
3.6.3	EF declaration of conformity for the operator seat	61
3.6.4	Safety Switch in Operator Seat - (Operator Present Switch)	62
3.6.5	Instructor seat	63
3.7	Mirrors	64
3.7.1	Electrically adjustable rearview mirrors	64
3.7.2	Dead angle mirror	64
3.8	Accessibility	65
3.8.1	Ladder for Cab	65
3.8.2	Ladder for Engine Compartment	66
3.8.3	Cleaning the Windscreens	67

3.9	Emergency Situations	68
3.9.1	Emergency Exit	68
3.9.2	Fire Extinguisher	69
3.10	Light and Lamps	70
3.10.1	Lights	70
3.10.2	Main Light and Work Light	71
3.11	Climate control	72
3.11.1	Maintenance and overview	72
3.11.2	Operation of climate control	73
3.12	Printer	75
3.12.1	Exchanging Paper and Ribbon in Printer	75
3.12.2	Inserting the Paper Roll	75
3.12.3	Fitting the Ribbon	76
3.13	Optional Extra	77
3.13.1	Four-Wheel Drive	77
3.13.2	Reversing camera	79
3.13.3	Auto-Guide	79
4	Operation, FIELDSTAR	81
4.1	Safety precautions	83
4.1.1	Safety precautions, Operating FIELDSTAR	83
4.2	FIELDSTAR	84
4.2.1	DATAVISION, General Description	84
4.2.2	Operating FIELDSTAR on Terminal	86
4.2.3	Operating the Terminal by Remote Control in the Multi-Function Lever	87
4.2.4	Contrast and Brightness Control	88
4.2.5	Cleaning of terminal	88
4.2.6	Data card	89
4.2.7	DATAVISION, Menu Structure	89
4.3	Harvest Menu	91
4.3.1	Instrument Reading	91
4.4	Main Menu	95
4.4.1	Main menu structure	95
4.5	Monitoring	97
4.5.1	Monitoring in general	97
4.5.2	Shaft Speeds	99
4.5.3	Engine Monitoring/Alarm	99
4.5.4	Engine Safety Alarm	99
4.5.5	Information	100
4.5.6	Shaft Speeds	101
4.6	Harvesting Data	102
4.6.1	Standard data	102
4.6.2	Data Logging in General	103
4.6.3	Using Data Logging	104
4.6.4	Data Logging Setup	111
4.6.5	Using Markers	114
4.7	Operator's Manual	115
4.7.1	Harvest Settings	115
4.7.2	Routine Servicing	116
4.7.3	FIELDSTAR	116
4.8	Diagnostics	117
4.8.1	Troubleshooting in FIELDSTAR	117
4.9	Coding	124
4.9.1	Coding in general	124
4.9.2	Clock Adjustment	125
4.9.3	Language	125
4.9.4	Area Measuring	125
4.9.5	Table Calibration	127
4.9.6	Returns Volume	128
4.9.7	Grain Loss Monitor	128
4.9.8	Shaft alarm calibration	128
4.9.9	Concave Calibration	129

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

4.9.10	Constant Flow	129
4.9.11	Wheel Track and Auto Level Combine	129
4.9.12	Coding of Electrical Straw Deflectors	130
4.9.13	Lead Time and Lag Time	132
4.9.14	Calibration of actuator for electrical sieves	133
4.10	Settings	134
4.10.1	Harvest Settings	134
4.10.2	Table Settings	138
4.10.3	Machine Settings	141
4.11	Returns Volume Monitor	144
4.11.1	Returns volume	144
4.11.2	Coding	144
4.12	Grain Loss Monitoring	146
4.12.1	Sensors	146
4.12.2	Adjustment of Grain Loss Sensors	146
4.13	Shaft Alarm Limits	148
4.13.1	Shaft Alarm Calibration	148
4.14	Yield Meter	149
4.14.1	Yield Meter (Isotopic)	149
4.14.2	Micro-Trak Yield Meter	151
4.14.3	Yield Meter Calibration	153
4.15	Moisture Meter	155
4.15.1	Limitations in the use of the moisture meter	155
4.15.2	Continuous Moisture Measuring	155
4.15.3	Measuring Principle	155
4.15.4	Using the Moisture Meter	156
4.15.5	Cleaning the Moisture Meter	156
4.15.6	Calibration of moisture meter	157
4.16	Cutting height control	159
4.16.1	Adjustment and operation of cutting height control	159
4.16.2	Coding of table	162
4.17	Field pressure control	163
4.17.1	Adjustment and operation of field pressure control	163
4.18	Interaction between the Table Controls	165
4.18.1	Table controls, an outline	165
4.19	Auto Level Table	167
4.19.1	Principle of Auto Level table	167
4.19.2	Bleeding	168
4.19.3	Coding of Auto Level Table	169
4.19.4	Calibration of Table Angle	169
4.20	Operation of Auto Level Table	171
4.20.1	Using the Auto Level Table	171
4.21	Ground sensors	173
4.21.1	Checking and Adjusting the Ground Sensors	173
4.22	Constant Flow	175
4.22.1	Constant Flow functional description	175
4.22.2	Start-up and Adjustment of Constant Flow	176
4.22.3	Constant Flow Engagement	178
5	Operation, Auto Level Combine	181
5.1	Safety precautions	183
5.1.1	Safety precautions, operation of Auto Level Combine	183
5.1.2	Safety System	183
5.2	Attachment of Auto Level Table	184
5.2.1	Attachment of Table to Auto Level Combine	184
5.3	Combinations	185
5.3.1	Automatically or manually	185
5.3.2	Selecting Combination	185
5.3.3	Combinations for Auto Level combine and Auto Level table	185
5.3.4	Priority of hydraulic functions	187
5.4	Auto Level	188
5.4.1	Auto Level combine	188

5.4.2	Manual Control of Auto Level Combine	188
5.5	Auto Level Combine/Table	189
5.5.1	Combine	189
5.5.2	Transport	190
5.5.3	Auto Level Table	191
5.6	Calibration	192
5.6.1	Calibration of Auto Level Combine	192
5.6.2	Errors during Calibration	193
5.7	Coding	194
5.7.1	Coding of Auto Level Table	194
5.7.2	Zero Cutting Height	194
5.8	Safety System	195
5.8.1	Safety System, Auto Level	195
5.8.2	Automatic Control of the Tilt Sensor Function	195
5.8.3	About the system	196
5.8.4	Hose Breach Protection for Auto Level Hydraulics	196
5.9	Troubleshooting	197
5.9.1	Trouble shooting in general	197
5.9.2	Machine Not Levelling Correctly	198
5.10	Servicing and User Tips	200
5.10.1	Retrofit of new FIELDSTAR Auto Level Job Computer and Sensors	200
5.10.2	Unintentional Use of Manual Keys in Automatic Mode	200
5.10.3	Diagnostics - Auto Level Combine Functions and Sensors	201
6	Engine	203
6.1	Safety precautions	205
6.1.1	Safety Precautions, Engine	205
6.2	Engines	206
6.2.1	Engine Type	206
6.3	Air-intake	207
6.3.1	Filter System	207
6.4	Cooling System	208
6.4.1	Rotary Screen and Dust Aspirator	208
6.4.2	Coolers	209
6.4.3	Coolant	210
6.4.4	Checking the Fan Belt Tension	210
6.5	Fuel System	211
6.5.1	Fuel system	211
6.5.2	Filter Change	212
6.6	SCR	213
6.6.1	The SCR system in general	213
6.6.2	Components and functions	213
6.6.3	Filling and storing AdBlue	215
6.6.4	Filter Change	216
6.7	Engine oil/change	217
6.7.1	Oil and Filter Change	217
6.8	Cleaning	218
6.8.1	Cleaning of engine compartment	218
6.8.2	Vibration damper	218
6.9	EEM3 Engine Management	219
6.9.1	Electronic Engine Management and Monitoring	219
6.9.2	Engine Trouble Shooting (Self-Diagnosis)	220
6.9.3	EEM3 Codes	222
6.9.4	SCR failure codes	227
7	Cutting Tables	233
7.1	Safety precautions	235
7.1.1	Safety Precautions, Cutting Tables	235
7.2	Attachment/Removal of Table	236
7.2.1	Attachment of Table, Standard and Auto Level	236
7.2.2	Removal of Table	237
7.2.3	Supports	238

7.3	Table trailer	239
7.3.1	Attachment of combine and trailer	239
7.3.2	Table Trailer Brakes	239
7.4	Reel	240
7.4.1	Safety stop for reel	240
7.4.2	Reel Adjustment Up/Down, Fore/Aft	241
7.4.3	Bleeding	242
7.4.4	Reel Rotation	242
7.4.5	Reel tine bars	243
7.4.6	Adjustment of the Reel in the Table	243
7.5	Knife	244
7.5.1	Knife and Knife Drive	244
7.6	Feeding	245
7.6.1	Table auger	245
7.6.2	Cut-off strip and distribution strip	246
7.6.3	Replacement of Feathering Fingers	247
7.6.4	Auger Flight Extensions, 20-22-25-30' Tables	247
7.6.5	Reversing	248
7.7	Transmission	249
7.7.1	PowerFlow Table, Knife Drive and Table Auger	249
7.7.2	Slip Clutch for Table Auger	249
7.8	PowerFlow Table	250
7.8.1	PowerFlow belts	250
7.8.2	Inspection and Start-Up of PowerFlow Belts	250
7.8.3	Adjustment of belts	251
7.8.4	Scrapers, front	251
7.8.5	Scrapers, Rear, and Adjustment of Bearing Housings	252
7.8.6	Table bottom	252
7.8.7	Cleaning	253
7.9	Crop Lifters	254
7.9.1	Using Crop Lifters	254
7.10	Vertical Knives, Rape Auger and Straw Dividers	255
7.10.1	Vertical knife	255
7.10.2	Mounting of Vertical Knife	255
7.10.3	Rape auger	256
7.10.4	Folding torpedo dividers and bow dividers	256
7.10.5	Mounting of Straw Dividers	257
7.10.6	Adjustment of Torpedo Divider	257
7.11	Fixed Fingers	258
7.11.1	Fitting of fixed table auger fingers	258
7.11.2	Using Fixed Table Auger Fingers	258
7.11.3	High Table Sides	258
7.12	Main crop elevator	260
7.12.1	Elevator Chain	260
7.12.2	Transmission for Table	260
7.12.3	Stone Trap	261
7.12.4	Initial Adjustment of Cutting Height Indication	262
8	Operation of Table and Threshing Unit	263
8.1	Safety precautions	265
8.1.1	Safety Precautions, Operation of Machine and Cutting Table	265
8.2	Operation of Table	267
8.2.1	Table Height and Table Automatic Control	267
8.2.2	Cutting Height Control	268
8.2.3	Field Pressure Control	269
8.2.4	Preset cutting height	270
8.2.5	Auto Level Table	270
8.2.6	Table Engagement - Emergency Stop	271
8.3	Threshing Unit Transmission	272
8.3.1	Threshing unit engagement	272
8.3.2	Cylinder Variator	273
8.3.3	Turning Tool for Cylinder	273

8.4	Concave Setting, Electrically Adjustable	274
8.4.1	Operation of Concave	274
8.4.2	Concave Setting	274
8.5	Threshing	277
8.5.1	Concave filler plates	277
8.5.2	Rotors	277
8.6	Straw Chopper and Spreader Hood	279
8.6.1	Straw chopper	279
8.6.2	Adjustment of Spreader Hood	280
8.6.3	Counter Knives and Cross Bar	281
8.6.4	Replacement of Knives	283
8.7	Fanning Mill and Sieves	284
8.7.1	Fanning mill	284
8.7.2	Shaker shoe	284
8.7.3	Shaker Shoe with Electrical Sieves	285
8.7.4	Manual Adjustment of Sieves	285
8.7.5	Cleaning of main grain pan and sieves	286
8.7.6	Cleaning of main grain pan	287
8.7.7	Cleaning the Sieves	288
8.7.8	Shaker Shoe Light	290
8.7.9	Special sieves	290
8.8	Internal Grain Transport	291
8.8.1	Auger Housing/Elevators	291
8.8.2	Returns thresher	291
8.8.3	Tank filling auger	292
8.8.4	Grain tank	293
8.8.5	Unloading auger	295
8.8.6	Unloading Auger Clutch	296
8.8.7	Unloading tube	297
8.9	Rotor Feeder	298
8.9.1	Adjustment of Rotor Feeder	298
8.9.2	Rotor Feeder Concave	299
8.9.3	Reversing	299
8.10	Straw hood	300
8.10.1	Light in straw hood	300
8.11	Chaff spreader	301
8.11.1	Setting	301
8.12	Maxi Spreader	303
8.12.1	Adjustment and operation	303
8.12.2	Adjustment of sensors	304
8.13	Maize Threshing	305
8.13.1	Maize Threshing in General	305
8.13.2	Attachment of Maize Header	305
8.13.3	Area measuring	306
8.13.4	Main crop elevator	306
8.13.5	Concave/Initial Settings	307
8.13.6	Threshing cylinder	307
8.13.7	Rotor Feeder	307
8.13.8	Shaker shoe	308
8.13.9	Rotors	308
8.13.10	Bottom auger cover plate	309
8.13.11	Scrapers	309
8.13.12	Straw chopper	309
8.13.13	Maxi Spreader	310
8.14	Harvest settings	311
8.14.1	Suggested Harvest Settings	312
8.15	Threshing	316
8.15.1	Threshing Directions	317
9	Transmissions	319
9.1	Safety precautions	321
9.1.1	Safety Precautions, Transmissions	321



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

9.2	Adjustment of Transmissions	322
9.2.1	General	322
9.2.2	Threshing unit clutch	322
9.2.3	Hydrostatic transmission	323
9.3	Transmissions	324
9.3.1	Rear beater	324
9.3.2	Crop Elevator and Table	324
9.3.3	Straw chopper	325
9.3.4	Threshing cylinder	325
9.3.5	Unloading auger	326
9.3.6	Shaker shoe and chaff spreader counter drive	326
9.3.7	Countershaft for Rotors	327
9.3.8	Variator Belt for Rotors	327
9.3.9	Filling and Returns System Countershaft	328
9.3.10	Returns Elevator and Returns Thresher	328
9.3.11	Tank Filling Elevator and Tank Filling Auger	329
9.3.12	Dust aspirator	329
9.3.13	Rotary screen	330
9.3.14	Fanning mill	331
9.3.15	Rotor Feeder	331
9.3.16	Alternator and Fan	332
9.3.17	Climate control	332
9.4	Transmission Diagrams	333
9.4.1	Transmission Diagram, Left-Hand Side	333
9.4.2	Transmission Diagram, Right-Hand Side	335
10	Hydraulics	337
10.1	Safety precautions	339
10.1.1	Safety Precautions, Hydraulic System	339
10.2	Hydraulic System	340
10.2.1	Hydraulic system, standard combine	340
10.2.2	Hydraulic System, Four-Wheel Drive	341
10.3	Oil change	342
10.3.1	Draining and refilling hydraulic oil	342
10.4	Filter Change	343
10.4.1	Filter change in general	343
10.4.2	Return Oil Filter	343
10.4.3	Storage of Hydraulic System	344
10.5	Auxiliary Hydraulics	345
10.5.1	Auxiliary hydraulics in general	345
10.5.2	Functions and Auxiliary Hydraulics	345
10.5.3	Reel Adjustment Fore/Aft - Up/down	345
10.6	Hydraulics Diagrams	346
10.6.1	Hydraulics Diagram, Standard Combine	346
10.6.2	Hydraulics Diagram, Auto Level Combine	349
10.6.3	Hydraulics Diagram for Chaff Spreader	351
10.6.4	Hydraulics diagram for Maxi Spreader	352
11	Maintenance	355
11.1	Safety precautions	357
11.1.1	Safety Precautions, Maintenance	357
11.2	Undercarriage	359
11.2.1	Undercarriage in general	359
11.2.2	Wheel Nut Torques	359
11.2.3	Tyre Pressure	359
11.3	Lubrication Intervals	361
11.3.1	Lubrication chart, time intervals	361
11.3.2	Lubrication chart, right- and left-hand side	364
11.3.3	Lubrication chart, main crop elevator and front axle	366
11.3.4	Lubrication points, left-hand machine side	367
11.3.5	Lubrication points, right-hand machine side	382
11.3.6	Lubricants and Operating Fluids	397

11.4 Maintenance Schedules	398
11.4.1 Preliminary Service Inspections	398
11.4.2 Maintenance Required	399
11.5 Oil Change, Gear	402
11.5.1 Gearbox	402
11.5.2 Final drives	402
11.5.3 Right-angle gear for returns thresher	403
11.5.4 Right-Angle Gear for Rotors	403
11.6 Climate control	404
11.6.1 Diagram for Climate Control System	404
11.6.2 Maintenance	404
11.7 Cleaning and Off-Season Storage	405
11.7.1 Cleaning	405
11.7.2 Off-season Storage	406
11.7.3 Storage of Engine, Fuel System, SCR System and Hydraulic System	407
11.7.4 Periodical Start-Up	407
11.7.5 Removal of Crop Elevator	408
11.7.6 Removal of Elevator Chains	408
11.7.7 After Off-Season Storage	408
11.8 Adjustment of Brakes	409
11.8.1 Adjustment of Foot Brakes, Disc Brakes	409
11.8.2 Adjustment of Parking Brake	409
12 Electrical System	411
12.1 Safety precautions	413
12.1.1 Safety Precautions, Electric System	413
12.2 Electrical System	414
12.2.1 Charging system	414
12.2.2 Electric Boxes and Main Switch	415
12.2.3 External connectors 12V	416
12.3 Electro-Hydraulic System	418
12.3.1 Electro-Hydraulic System in General	418
12.4 Key to Signatures for Wiring Harness	419
12.4.1 Wire Codes	419
12.4.2 Component Codes	419
12.5 Overview, Electric Box and Cab	420
12.5.1 Position of Connectors in Electric Boxes	420
12.5.2 Fuses and Relays, Electric Box and Cab	421
12.6 Wiring Diagrams	423
12.6.1 Key to symbols	423
12.6.2 Diagrams Overview	424
12.6.3 Fuse Ratings	424
12.6.4 Components	425
12.6.5 Wiring Diagrams	434
13 Specifications	447
13.1 Specifications	449
13.1.1 Dimensions and Specifications	449

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>