
OPERATOR'S MANUAL

FENDT

FENDT 9470x

FENDT 9470x AL



Operator's Manual for Fendt 9470x Combine Series

1	General Information	11
1.1	Dear Customer	13
1.1.1	Appropriate Use	13
1.1.2	Changes and Improvements	13
1.1.3	Directives	13
1.1.4	Preface	14
1.1.5	EC Declaration of Conformity for Combine and Table	15
1.1.6	Product Identification	18
1.1.7	Sectional Drawing and Parts Identification	19
1.1.8	Disposal	20
2	Safety	23
2.1	Safety	25
2.1.1	General Safety Precautions	25
2.1.2	Attention - Warning Symbols	25
2.1.3	Safety Precautions	25
2.1.4	Road Transport	27
2.1.5	Warning/Instruction decals	28
2.1.6	CE Marking and Type Plate on the Combine	32
2.1.7	Position of CE Markings and Type Plate	42
3	Operation, Controls and Cab	47
3.1	Before Start	49
3.1.1	Before Start	49
3.2	Operator cab	51
3.2.1	Arrangement and Controls	51
3.2.2	Optional Extra	52
3.3	Safety Precautions - on the Move	53
3.3.1	Safety Precautions - on the Move	53
3.4	Starting and Stopping the Engine	54
3.4.1	Starting the Engine	54
3.5	Drive Controls	57
3.5.1	Multifunction Lever	57
3.5.2	Adjustable Armrest and Control Panel	58
3.5.3	Gearshift	59
3.5.4	Reduced Engine Revolutions in Road Transport (Speed Matching System)	60
3.5.5	Steering column	60
3.5.6	Brakes	61
3.6	Seats	62
3.6.1	Adjustment of Operator Seat	62
3.6.2	Adjustment of Air-Suspended Seat	62
3.6.3	EF declaration of conformity for the operator seat	63
3.6.4	Safety Switch in Operator Seat - (Operator Present Switch)	64
3.6.5	Safety belt	65
3.6.6	Passenger seat	65
3.7	Mirrors	66
3.7.1	Electrically adjustable rearview mirrors	66
3.7.2	Dead angle mirror	66
3.8	Accessibility	67
3.8.1	Ladder for Cab	67
3.8.2	Ladder for Engine Compartment	67
3.8.3	Cleaning the Windscreens	68

3.9	Emergency Situations	70
3.9.1	Emergency Exit	70
3.9.2	Fire Extinguisher	71
3.10	Light and Lamps	72
3.10.1	Lights	72
3.10.2	Main Light and Work Light	73
3.11	Climate control	74
3.11.1	Maintenance and overview	74
3.11.2	Operation of climate control	75
3.12	Printer	77
3.12.1	Exchanging Paper and Ribbon in Printer	77
3.12.2	Inserting the Paper Roll	77
3.12.3	Fitting the Ribbon	78
3.13	Optional Extra	79
3.13.1	Four-Wheel Drive	79
3.13.2	Reversing camera	81
3.13.3	Auto-Steering	81
4	Operation, FIELDSTAR	83
4.1	Safety precautions	85
4.1.1	Safety precautions, Operating FIELDSTAR	85
4.2	FIELDSTAR	86
4.2.1	FIELDSTAR, general description	86
4.2.2	Operating FIELDSTAR on Terminal	88
4.2.3	Operating the Terminal by Remote Control in the Multi-Function Lever	89
4.2.4	Contrast and Brightness Control	90
4.2.5	Cleaning of terminal	90
4.2.6	Data card	91
4.2.7	FIELDSTAR Menu Structure	91
4.3	Harvest Menu	93
4.3.1	Instrument Reading	93
4.4	Main Menu	97
4.4.1	Main menu structure	97
4.5	Monitoring	99
4.5.1	Monitoring in general	99
4.5.2	Shaft Speeds	101
4.5.3	Engine Monitoring/Alarm	101
4.5.4	Engine Safety Alarm	101
4.5.5	Information	102
4.5.6	Shaft Speeds	103
4.6	Harvesting Data	104
4.6.1	Standard data	104
4.6.2	Data Logging in General	105
4.6.3	Using Data Logging	106
4.6.4	Data Logging Setup	113
4.6.5	Using Markers	116
4.7	Operator's Manual	117
4.7.1	Harvest Settings	117
4.7.2	Routine Servicing	118
4.7.3	FIELDSTAR	118
4.8	Diagnostics	119
4.8.1	Troubleshooting in FIELDSTAR	119
4.9	Coding	126
4.9.1	Coding in general	126
4.9.2	Clock Adjustment	127
4.9.3	Language	127
4.9.4	Area Measuring	127
4.9.5	Table Calibration	129
4.9.6	Returns Volume	130
4.9.7	Grain Loss Monitor	130
4.9.8	Shaft alarm calibration	130
4.9.9	Concave Calibration	131

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

4.9.10	Constant Flow	131
4.9.11	Wheel Track and Auto Level Combine	131
4.9.12	Coding of Electrical Straw Deflectors	132
4.9.13	Lead Time and Lag Time	134
4.9.14	Calibration of actuator for electrical sieves	135
4.10	Settings	136
4.10.1	Harvest Settings	136
4.10.2	Table Settings	140
4.10.3	Machine Settings	143
4.11	Returns Volume Monitor	146
4.11.1	Returns volume	146
4.11.2	Coding	146
4.12	Grain Loss Monitoring	148
4.12.1	Sensors	148
4.12.2	Adjustment of Grain Loss Sensors	148
4.13	Shaft Alarm Limits	150
4.13.1	Shaft Alarm Calibration	150
4.14	Yield meter	151
4.14.1	Yield Meter (Isotopic)	151
4.14.2	Micro-Trak Yield Meter	153
4.14.3	Yield Meter Calibration	155
4.15	Moisture meter	157
4.15.1	Limitations in the use of the moisture meter	157
4.15.2	Continuous Moisture Measuring	157
4.15.3	Measuring Principle	157
4.15.4	Using the Moisture Meter	158
4.15.5	Cleaning the Moisture Meter	158
4.15.6	Calibration of moisture meter	159
4.16	Cutting height control	161
4.16.1	Adjustment and operation of cutting height control	161
4.16.2	Coding of table	164
4.17	Field pressure control	165
4.17.1	Adjustment and operation of field pressure control	165
4.18	Interaction between the Table Controls	167
4.18.1	Table controls, an outline	167
4.19	Auto Level Table	169
4.19.1	Principle of Auto Level table	169
4.19.2	Bleeding	170
4.19.3	Coding of Auto Level Table	171
4.19.4	Calibration of Table Angle	171
4.20	Operation of Auto Level Table	173
4.20.1	Using the Auto Level Table	173
4.21	Ground sensors	175
4.21.1	Checking and Adjusting the Ground Sensors	175
4.22	Constant Flow	177
4.22.1	Constant Flow functional description	177
4.22.2	Start-up and Adjustment of Constant Flow	178
4.22.3	Constant Flow Engagement	180
5	Operation, Auto Level Combine	183
5.1	Safety precautions	185
5.1.1	Safety precautions, operation of Auto Level Combine	185
5.1.2	Safety System	185
5.2	Attachment of Auto Level Table	186
5.2.1	Attachment of Table to Auto Level Combine	186
5.3	Combinations	187
5.3.1	Automatically or manually	187
5.3.2	Selecting Combination	187
5.3.3	Combinations for Auto Level combine and Auto Level table	187
5.3.4	Priority of hydraulic functions	189
5.4	Auto Level	190
5.4.1	Auto Level combine	190

5.4.2	Manual Control of Auto Level Combine	190
5.5	Auto Level Combine/Table	191
5.5.1	Combine	191
5.5.2	Transport	192
5.5.3	Auto Level Table	193
5.6	Calibration	194
5.6.1	Calibration of Auto Level Combine	194
5.6.2	Errors during Calibration	195
5.7	Coding	196
5.7.1	Coding of Auto Level Table	196
5.7.2	Zero Cutting Height	196
5.8	Safety System	197
5.8.1	Safety System, Auto Level	197
5.8.2	Automatic Control of the Tilt Sensor Function	197
5.8.3	About the system	198
5.8.4	Hose Breach Protection for Auto Level Hydraulics	198
5.9	Troubleshooting	199
5.9.1	Trouble shooting in general	199
5.9.2	Machine Not Levelling Correctly	200
5.10	Servicing and User Tips	202
5.10.1	Retrofit of new FIELDSTAR Auto Level Job Computer and Sensors	202
5.10.2	Unintentional Use of Manual Keys in Automatic Mode	202
5.10.3	Diagnostics - Auto Level Combine Functions and Sensors	203
6	Engine	205
6.1	Safety precautions	207
6.1.1	Safety Precautions, Engine	207
6.2	Engines	208
6.2.1	Engine Type	208
6.3	Air-intake	209
6.3.1	Filter System	209
6.4	Cooling System	210
6.4.1	Rotary Screen and Dust Aspirator	210
6.4.2	Coolers	211
6.4.3	Coolant	212
6.4.4	Checking the Fan Belt Tension	212
6.5	Fuel System	213
6.5.1	Fuel and quality requirements	213
6.5.2	Fuel System	214
6.5.3	Filter Change	215
6.6	SCR	216
6.6.1	The SCR system in general	216
6.6.2	Components and functions	217
6.6.3	Filling and storing AdBlue	218
6.6.4	Filter change	219
6.6.5	SCR system failure	220
6.7	Crankcase ventilation	221
6.7.1	Closed crankcase ventilation	221
6.8	Engine oil/change	222
6.8.1	Oil and Filter Change	222
6.9	Cleaning	223
6.9.1	Cleaning of engine compartment	223
6.9.2	Vibration damper	223
6.10	EEM4 engine control	224
6.10.1	Electronic Engine Management and Monitoring	224
6.10.2	Engine Trouble Shooting (Self-Diagnosis)	225
6.10.3	EEM4 Codes	227
7	Cutting Tables	241
7.1	Safety precautions	243
7.1.1	Safety Precautions, Cutting Tables	243

7.2	Attachment/Removal of Table	244
7.2.1	Attachment of Table, Standard and Auto Level.	244
7.2.2	Removal of Table	245
7.2.3	Supports	246
7.3	Table trailer	247
7.3.1	Attachment of combine and trailer	247
7.3.2	Table Trailer Brakes	247
7.4	Reel	248
7.4.1	Safety stop for reel.	248
7.4.2	Reel Adjustment Up/Down, Fore/Aft.	249
7.4.3	Bleeding	250
7.4.4	Reel Rotation.	250
7.4.5	Reel tine bars	251
7.4.6	Adjustment of the Reel in the Table	251
7.5	Knife	252
7.5.1	Knife and knife drive	252
7.6	Feeding	253
7.6.1	Table auger	253
7.6.2	Cut-off strip and distribution strip.	254
7.6.3	Replacement of Feathering Fingers	255
7.6.4	Auger Flight Extensions, 20-22-25-30' Tables	255
7.6.5	Reversing	256
7.7	Transmission	257
7.7.1	PowerFlow Table, Knife Drive and Table Auger	257
7.7.2	Slip Clutch for Table Auger	257
7.8	PowerFlow Table	258
7.8.1	PowerFlow belts	258
7.8.2	Inspection and Start-Up of PowerFlow Belts	258
7.8.3	Adjustment of belts	259
7.8.4	Scrapers, front	259
7.8.5	Scrapers, Rear, and Adjustment of Bearing Housings	260
7.8.6	Table bottom.	260
7.8.7	Cleaning	261
7.9	Crop Lifters	262
7.9.1	Using Crop Lifters.	262
7.10	Vertical Knives, Rape Auger and Straw Dividers	263
7.10.1	Vertical knife	263
7.10.2	Mounting of Vertical Knife	263
7.10.3	Rape auger	264
7.10.4	Folding torpedo dividers and bow dividers	264
7.10.5	Mounting of Straw Dividers	265
7.10.6	Adjustment of Torpedo Divider.	265
7.11	Fixed Fingers	266
7.11.1	Fitting of fixed table auger fingers	266
7.11.2	Using Fixed Table Auger Fingers	266
7.11.3	High Table Sides.	266
7.12	Main crop elevator	268
7.12.1	Elevator Chain.	268
7.12.2	Transmission for Table	268
7.12.3	Stone Trap.	269
7.12.4	Initial Adjustment of Cutting Height Indication	270
8	Operation of Table and Threshing Unit	271
8.1	Safety precautions	273
8.1.1	Safety Precautions, Operation of Machine and Cutting Table	273
8.2	Operation of Table	275
8.2.1	Table Height and Table Automatic Control	275
8.2.2	Cutting Height Control.	276
8.2.3	Field Pressure Control	277
8.2.4	Preset cutting height	278
8.2.5	Auto Level Table	278
8.2.6	Table Engagement - Emergency Stop	279

8.3	Threshing Unit Transmission	280
8.3.1	Threshing unit engagement	280
8.3.2	Cylinder Variator	281
8.3.3	Turning Tool for Cylinder	281
8.4	Concave Setting, Electrically Adjustable	282
8.4.1	Operation of Concave	282
8.4.2	Concave Setting	282
8.5	Threshing	285
8.5.1	Concave filler plates	285
8.5.2	Rotors	285
8.6	Straw Chopper and Spreader Hood	287
8.6.1	Straw chopper	287
8.6.2	Adjustment of Spreader Hood	288
8.6.3	Counter Knives and Cross Bar	289
8.6.4	Replacement of Knives	291
8.7	Fanning Mill and Sieves	292
8.7.1	Fanning mill	292
8.7.2	Shaker shoe	292
8.7.3	Shaker Shoe with Electrical Sieves	293
8.7.4	Manual Adjustment of Sieves	293
8.7.5	Cleaning of main grain pan and sieves	294
8.7.6	Cleaning of main grain pan	295
8.7.7	Cleaning the Sieves	296
8.7.8	Shaker Shoe Light	298
8.7.9	Special sieves	298
8.8	Internal Grain Transport	299
8.8.1	Auger Housing/Elevators	299
8.8.2	Returns thresher	299
8.8.3	Tank filling auger	300
8.8.4	Grain tank	301
8.8.5	Unloading auger	303
8.8.6	Unloading Auger Clutch	304
8.8.7	Unloading tube	305
8.9	Rotor Feeder	306
8.9.1	Adjustment of Rotor Feeder	306
8.9.2	Rotor Feeder Concave	307
8.9.3	Reversing	307
8.10	Straw hood	308
8.10.1	Light in straw hood	308
8.11	Chaff spreader	309
8.11.1	Setting	309
8.12	Maxi Spreader	311
8.12.1	Operation and Adjustment	311
8.12.2	Adjustment of Sensors	312
8.13	Maize Threshing	313
8.13.1	Maize Threshing in General	313
8.13.2	Attachment of Maize Header	313
8.13.3	Area measuring	314
8.13.4	Main crop elevator	314
8.13.5	Concave/Initial Settings	315
8.13.6	Threshing cylinder	315
8.13.7	Rotor Feeder	315
8.13.8	Shaker shoe	316
8.13.9	Rotors	316
8.13.10	Bottom auger cover plate	317
8.13.11	Scrapers	317
8.13.12	Straw chopper	317
8.13.13	Maxi Spreader	318
8.14	Harvest settings	319
8.14.1	Suggested Harvest Settings	319
8.15	Threshing	321
8.15.1	Threshing Directions	321



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

9	Transmissions	323
9.1	Safety precautions	325
9.1.1	Safety Precautions, Transmissions	325
9.2	Adjustment of Transmissions	326
9.2.1	General	326
9.2.2	Threshing unit clutch	326
9.2.3	Hydrostatic Transmission	327
9.3	Transmissions	328
9.3.1	Rear beater	328
9.3.2	Crop Elevator and Table	328
9.3.3	Straw chopper	329
9.3.4	Threshing cylinder	329
9.3.5	Unloading auger	330
9.3.6	Shaker shoe and chaff spreader counter drive	330
9.3.7	Countershaft for Rotors	331
9.3.8	Variator Belt for Rotors	331
9.3.9	Filling and Returns System Countershaft	332
9.3.10	Returns Elevator and Returns Thresher	332
9.3.11	Tank Filling Elevator and Tank Filling Auger	333
9.3.12	Dust aspirator	333
9.3.13	Rotary screen	334
9.3.14	Fanning mill	335
9.3.15	Rotor Feeder	335
9.3.16	Alternator and Fan	336
9.3.17	Climate control	336
9.4	Transmission Diagrams	337
9.4.1	Transmission Diagram, Left-Hand Side	337
9.4.2	Transmission Diagram, Right-Hand Side	339
10	Hydraulics	341
10.1	Safety precautions	343
10.1.1	Safety Precautions, Hydraulic System	343
10.2	Hydraulic System	344
10.2.1	Hydraulic system, standard combine	344
10.2.2	Hydraulic System, Four-Wheel Drive	345
10.3	Oil change	346
10.3.1	Draining and refilling hydraulic oil	346
10.4	Filter Change	347
10.4.1	Filter change in general	347
10.4.2	Return Oil Filter	347
10.4.3	Storage of Hydraulic System	348
10.5	Auxiliary Hydraulics	349
10.5.1	Auxiliary hydraulics in general	349
10.5.2	Functions and Auxiliary Hydraulics	349
10.5.3	Reel Adjustment Fore/Aft - Up/down	349
10.6	Hydraulic diagrams	350
10.6.1	Hydraulics Diagram, Standard Combine	350
10.6.2	Hydraulics Diagram, Auto Level Combine	353
10.6.3	Hydraulics Diagram for Chaff Spreader	355
10.6.4	Hydraulics diagram for Maxi Spreader	356
11	Maintenance	359
11.1	Safety precautions	361
11.1.1	Safety Precautions, Maintenance	361
11.2	Undercarriage	363
11.2.1	Undercarriage in general	363
11.2.2	Wheel Nut Torques	363
11.2.3	Tyre Pressure	363
11.3	Lubrication Intervals	365
11.3.1	Lubrication chart, time intervals	365
11.3.2	Lubrication chart, right- and left-hand side	368
11.3.3	Lubrication chart, main crop elevator and front axle	370

11.3.4	Lubrication points, left-hand machine side	371
11.3.5	Lubrication points, right-hand machine side	386
11.3.6	Lubricants and operating fluids	401
11.4	Maintenance Schedules	402
11.4.1	Preliminary Service Inspections	402
11.4.2	Maintenance required	403
11.5	Oil Change, Gear	406
11.5.1	Gearbox	406
11.5.2	Final drives	406
11.5.3	Right-angle gear for returns thresher	407
11.5.4	Right-Angle Gear for Rotors	407
11.6	Climate control	408
11.6.1	Diagram for Climate Control System	408
11.6.2	Maintenance	408
11.7	Cleaning and Off-Season Storage	409
11.7.1	Cleaning	409
11.7.2	Off-season Storage	410
11.7.3	Storage of Engine, Fuel System, SCR System and Hydraulic System	411
11.7.4	Periodical Start-Up	411
11.7.5	Removal of Crop Elevator	412
11.7.6	Removal of Elevator Chains	412
11.7.7	After Off-Season Storage	412
11.8	Adjustment of Brakes	413
11.8.1	Adjustment of Foot Brakes, Disc Brakes	413
11.8.2	Adjustment of Parking Brake	413
12	Electrical System	415
12.1	Safety precautions	417
12.1.1	Safety Precautions, Electric System	417
12.2	Electrical System	418
12.2.1	Charging system	418
12.2.2	Electric Boxes and Main Switch	419
12.2.3	External connectors 12V	420
12.3	Electro-Hydraulic System	422
12.3.1	Electro-Hydraulic System in General	422
12.4	Key to Signatures for Wiring Harness	423
12.4.1	Wire Codes	423
12.4.2	Component Codes	423
12.5	Overview, Electric Box and Cab	424
12.5.1	Position of Connectors in Electric Boxes	424
12.5.2	Fuses and Relays, Electric Box and Cab	425
12.6	Wiring diagrams	427
12.6.1	Key to symbols	427
12.6.2	Diagrams overview	428
12.6.3	Fuse Ratings	428
12.6.4	Components	429
12.6.5	Wiring diagrams	438
13	Specifications	451
13.1	Specifications	453
13.1.1	Dimensions and Specifications	453

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>