
OPERATOR'S MANUAL

FENDT

FENDT 9470x

FENDT 9470x AL



Operator's Manual for Fendt 9470x Combine Series

1	General Information	11
1.1	Dear Customer	13
1.1.1	Appropriate Use	13
1.1.2	Changes and Improvements	13
1.1.3	Directives	13
1.1.4	Preface	14
1.1.5	EC Declaration of Conformity for Combine and Table	15
1.1.6	Product Identification	18
1.1.7	Sectional Drawing and Parts Identification	19
1.1.8	Disposal	20
2	Safety	23
2.1	Safety	25
2.1.1	General Safety Precautions	25
2.1.2	Attention - Warning Symbols	25
2.1.3	Safety Precautions	25
2.1.4	Road Transport	27
2.1.5	Warning/Instruction decals	28
2.1.6	CE Marking and Type Plate on the Combine	31
2.1.7	Position of CE Markings and Type Plate	40
3	Operation, Controls and Cab	45
3.1	Before Start	47
3.1.1	Before Start	47
3.2	Operator cab	49
3.2.1	Arrangement and Controls	49
3.2.2	Optional Extra	50
3.3	Safety Precautions - on the Move	51
3.3.1	Safety Precautions - on the Move	51
3.4	Starting and Stopping the Engine	52
3.4.1	Starting the Engine	52
3.5	Drive Controls	54
3.5.1	Multifunction Lever	54
3.5.2	Adjustable Armrest and Control Panel	55
3.5.3	Gearshift	56
3.5.4	Reduced Engine Revolutions in Road Transport (Speed Matching System)	57
3.5.5	Steering column	57
3.5.6	Brakes	58
3.6	Seats	59
3.6.1	Adjustment of Operator Seat	59
3.6.2	Adjustment of Air-Suspended Seat	59
3.6.3	EF declaration of conformity for the operator seat	60
3.6.4	Safety Switch in Operator Seat - (Operator Present Switch)	61
3.6.5	Safety belt	62
3.6.6	Passenger seat	62
3.7	Mirrors	63
3.7.1	Electrically adjustable rearview mirrors	63
3.7.2	Dead angle mirror	63
3.8	Accessibility	64
3.8.1	Ladder for Cab	64
3.8.2	Ladder for Engine Compartment	64
3.8.3	Cleaning the Windscreens	66

3.9	Emergency Situations	67
3.9.1	Emergency Exit	67
3.9.2	Fire extinguisher	68
3.10	Light and Lamps	69
3.10.1	Lights	69
3.10.2	Main Light and Work Light	70
3.11	Climate control	71
3.11.1	Maintenance and overview	71
3.11.2	Operation of climate control	72
3.12	Printer	74
3.12.1	Exchanging Paper and Ribbon in Printer	74
3.12.2	Inserting the Paper Roll	74
3.12.3	Fitting the Ribbon	75
3.13	Optional Extra	76
3.13.1	Four-Wheel Drive	76
3.13.2	Reversing camera	77
3.13.3	Auto-Steering	78
4	Operation, FIELDSTAR	79
4.1	Safety precautions	81
4.1.1	Safety precautions, Operating FIELDSTAR	81
4.2	FIELDSTAR	82
4.2.1	FIELDSTAR, general description	82
4.2.2	Operating FIELDSTAR on Terminal	84
4.2.3	Operating the Terminal by Remote Control in the Multi-Function Lever	85
4.2.4	Contrast and Brightness Control	86
4.2.5	Cleaning of terminal	86
4.2.6	Data card	87
4.2.7	FIELDSTAR Menu Structure	87
4.3	Harvest Menu	89
4.3.1	Instrument Reading	89
4.4	Main Menu	93
4.4.1	Main Menu Structure	93
4.5	Monitoring	95
4.5.1	Monitoring in general	95
4.5.2	Shaft Speeds	97
4.5.3	Engine Monitoring/Alarm	97
4.5.4	Engine Safety Alarm	97
4.5.5	Information	98
4.5.6	Shaft Speeds	99
4.6	Harvesting Data	100
4.6.1	Standard data	100
4.6.2	Data logging in general	101
4.6.3	Using Data Logging	102
4.6.4	Data Logging Setup	109
4.6.5	Using Markers	112
4.7	Operator's Manual	113
4.7.1	Harvest Settings	113
4.7.2	Routine Servicing	114
4.7.3	FIELDSTAR	114
4.8	Diagnostics	115
4.8.1	Troubleshooting in FIELDSTAR	115
4.9	Coding	122
4.9.1	Coding in general	122
4.9.2	Clock Adjustment	123
4.9.3	Language	123
4.9.4	Area Measuring	123
4.9.5	Table Calibration	125
4.9.6	Returns Volume	126
4.9.7	Grain Loss Monitor	126
4.9.8	Shaft alarm calibration	126
4.9.9	Concave Calibration	126

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

4.9.10	Constant Flow	126
4.9.11	Wheel Track and Auto Level Combine	126
4.9.12	Coding of Electrical Straw Deflectors	127
4.9.13	Lead Time and Lag Time	129
4.9.14	Calibration of actuator for electrical sieves	130
4.10	Settings	131
4.10.1	Harvest Settings	131
4.10.2	Table Settings	135
4.10.3	Machine Settings	138
4.11	Returns Volume Monitor	141
4.11.1	Returns volume	141
4.11.2	Coding	141
4.12	Grain Loss Monitoring	143
4.12.1	Sensors	143
4.12.2	Adjustment of Grain Loss Sensors	143
4.13	Shaft Alarm Limits	145
4.13.1	Shaft Alarm Calibration	145
4.14	Yield meter	146
4.14.1	Yield Meter (Isotopic)	146
4.14.2	Micro-Trak Yield Meter	148
4.14.3	Yield Meter Calibration	150
4.15	Moisture meter	152
4.15.1	Limitations in the use of the moisture meter	152
4.15.2	Continuous Moisture Measuring	152
4.15.3	Measuring Principle	152
4.15.4	Using the Moisture Meter	153
4.15.5	Cleaning the Moisture Meter	153
4.15.6	Calibration of moisture meter	154
4.16	Cutting height control	156
4.16.1	Adjustment and Operation of Cutting Height Control	156
4.16.2	Coding the Table	159
4.17	Field pressure control	160
4.17.1	Adjustment and operation of field pressure control	160
4.18	Interaction between the Table Controls	162
4.18.1	Table Controls, an outline	162
4.19	Auto Level Table	164
4.19.1	Principle of Auto Level Table	164
4.19.2	Bleeding	165
4.19.3	Coding of Auto Level Table	166
4.19.4	Calibration of Table Angle	166
4.20	Operation of Auto Level Table	168
4.20.1	Using the Auto Level Table	168
4.21	Ground sensors	170
4.21.1	Checking and Adjusting the Ground Sensors	170
4.22	Constant Flow	172
4.22.1	Constant Flow functional description	172
4.22.2	Start-up and Adjustment of Constant Flow	173
4.22.3	Constant Flow Engagement	175
5	Operation, Auto Level Combine	177
5.1	Safety precautions	179
5.1.1	Safety precautions, operation of Auto Level Combine	179
5.1.2	Safety System	179
5.2	Attachment of Auto Level Table	180
5.2.1	Attachment of Table to Auto Level Combine	180
5.3	Combinations	181
5.3.1	Automatic or Manual	181
5.3.2	Selecting Combination	181
5.3.3	Adjustment Combinations for Auto Level Combine and Auto Level Table	181
5.3.4	Priority of hydraulic functions	183
5.4	Auto Level	184
5.4.1	Auto Level Combine	184

5.4.2	Manual Control of Auto Level Combine	184
5.5	Auto Level Combine/Table	185
5.5.1	Combine	185
5.5.2	Transport	186
5.5.3	Auto Level Table	187
5.6	Calibration	188
5.6.1	Calibration of Auto Level Combine	188
5.6.2	Errors during Calibration	189
5.7	Coding	190
5.7.1	Coding of Auto Level Table	190
5.7.2	Zero Cutting Height	190
5.8	Safety System	191
5.8.1	Safety System, Auto Level	191
5.8.2	Automatic Control of the Tilt Sensor Function	191
5.8.3	About the System	192
5.8.4	Hose Breach Protection for Auto Level Hydraulics	192
5.9	Troubleshooting	193
5.9.1	Troubleshooting in General	193
5.9.2	Machine Not Levelling Correctly	194
5.10	Servicing and User Tips	196
5.10.1	Retrofit of new FIELDSTAR Auto Level Job Computer and Sensors	196
5.10.2	Unintentional Use of Manual Keys in Automatic Mode	196
5.10.3	Diagnostics - Auto Level Combine Functions and Sensors	197
6	Engine	199
6.1	Safety precautions	201
6.1.1	Safety Precautions, Engine	201
6.2	Engines	202
6.2.1	Engine Type	202
6.3	Air-Intake	203
6.3.1	Filter System	203
6.4	Cooling System	204
6.4.1	Rotary Screen and Dust Aspirator	204
6.4.2	Coolers	205
6.4.3	Coolant	206
6.4.4	Checking the Fan Belt Tension	206
6.4.5	Checking the water pump belt	207
6.5	Fuel System	208
6.5.1	Fuel and quality requirements	208
6.5.2	Fuel System	209
6.5.3	Filter change	210
6.5.4	Bleeding the fuel system	211
6.6	SCR	212
6.6.1	The SCR system in general	212
6.6.2	Components and functions	213
6.6.3	Filling and storing AdBlue	214
6.6.4	Filter change	215
6.6.5	SCR system failure	216
6.7	Crankcase ventilation	217
6.7.1	Closed crankcase ventilation	217
6.8	Engine oil/change	218
6.8.1	Oil and Filter Change	218
6.9	Cleaning	219
6.9.1	Cleaning of engine compartment	219
6.9.2	Vibration damper	219
6.10	EEM4 engine control	220
6.10.1	Electronic Engine Management and Monitoring	220
6.10.2	Engine Trouble Shooting (Self-Diagnosis)	221
6.10.3	EEM4 Codes	223

7	Cutting Tables	237
7.1	Safety precautions	239
7.1.1	Safety Precautions, Cutting Tables	239
7.2	Attachment/Removal of Table	240
7.2.1	Attachment of Table, Standard and Auto Level	240
7.2.2	Removal of Table	241
7.2.3	Supports	242
7.3	Table trailer	243
7.3.1	Attachment of combine and trailer	243
7.3.2	Table Trailer Brakes	243
7.4	Reel	244
7.4.1	Safety stop for reel	244
7.4.2	Reel Adjustment Up/Down, Fore/Aft	245
7.4.3	Bleeding	246
7.4.4	Reel Rotation	246
7.4.5	Reel tine bars	247
7.4.6	Adjustment of the Reel in the Table	247
7.5	Knife	248
7.5.1	Knife and knife drive	248
7.6	Feeding	249
7.6.1	Table auger	249
7.6.2	Cut-off strip and distribution strip	250
7.6.3	Replacement of Feathering Fingers	251
7.6.4	Auger Flight Extensions, 20-22-25-30' Tables	251
7.6.5	Reversing	252
7.7	Transmission	253
7.7.1	PowerFlow table, knife drive and table auger	253
7.7.2	Slip Clutch for Table Auger	253
7.8	PowerFlow Table	254
7.8.1	PowerFlow belts	254
7.8.2	Inspection and Start-Up of Powerflow Belts	254
7.8.3	Adjustment of belts	255
7.8.4	Scrapers, front	255
7.8.5	Scrapers, Rear, and Adjustment of Bearing Housings	256
7.8.6	Table Bottom	256
7.8.7	Cleaning	257
7.9	Crop lifters	258
7.9.1	Using Crop Lifters	258
7.10	Vertical Knives, Rape Auger and Straw Dividers	259
7.10.1	Vertical knife	259
7.10.2	Mounting of Vertical Knife	259
7.10.3	Rape auger	260
7.10.4	Folding torpedo dividers and bow dividers	260
7.10.5	Mounting of Straw Dividers	261
7.10.6	Adjustment of Torpedo Divider	261
7.11	Fixed Table Auger Fingers	262
7.11.1	Fitting of fixed table auger fingers	262
7.11.2	Using Fixed Table Auger Fingers	262
7.11.3	High Table Sides	262
7.12	Main crop elevator	264
7.12.1	Elevator Chain	264
7.12.2	Transmission for Table	265
7.12.3	Stone Trap	265
7.12.4	Initial Adjustment of Cutting Height Indication	266
8	Operation of Table and Threshing Unit	267
8.1	Safety precautions	269
8.1.1	Safety Precautions, Operation of Machine and Cutting Table	269
8.2	Operation of Table	271
8.2.1	Table Height and Table Automatic Control	271
8.2.2	Cutting Height Control	272
8.2.3	Field Pressure Control	273

8.2.4	Preset cutting height	274
8.2.5	Auto Level Table	274
8.2.6	Table Engagement - Emergency Stop	275
8.3	Threshing Unit Transmission	276
8.3.1	Threshing unit engagement	276
8.3.2	Cylinder Variator	277
8.3.3	Turning Tool for Cylinder	277
8.4	Concave Setting, Electrically Adjustable	278
8.4.1	Operation of Concave	278
8.4.2	Concave Setting	278
8.5	Threshing	281
8.5.1	Concave filler plates	281
8.5.2	Rotors	281
8.6	Straw Chopper and Spreader Hood	283
8.6.1	Straw chopper	283
8.6.2	Adjustment of Spreader Hood	284
8.6.3	Counter Knives and Cross Bar	285
8.6.4	Replacement of Knives	287
8.7	Fanning Mill and Sieves	288
8.7.1	Fanning mill	288
8.7.2	Shaker shoe	288
8.7.3	Shaker Shoe with Electrical Sieves	289
8.7.4	Manual Adjustment of Sieves	289
8.7.5	Cleaning of main grain pan and sieves	290
8.7.6	Cleaning of main grain pan	291
8.7.7	Cleaning the Sieves	292
8.7.8	Shaker Shoe Light	294
8.7.9	Special sieves	294
8.8	Internal Grain Transport	295
8.8.1	Auger Housing/Elevators	295
8.8.2	Returns thresher	295
8.8.3	Tank filling auger	296
8.8.4	Grain tank	297
8.8.5	Unloading auger	299
8.8.6	Unloading Auger Clutch	300
8.8.7	Unloading tube	301
8.9	Rotor Feeder	302
8.9.1	Adjustment of Rotor Feeder	302
8.9.2	Rotor Feeder Concave	303
8.9.3	Reversing	303
8.10	Straw hood	304
8.10.1	Light in straw hood	304
8.11	Chaff spreader	305
8.11.1	Setting	305
8.12	Maxi Spreader	307
8.12.1	Operation and Adjustment	307
8.12.2	Adjustment of Sensors	308
8.13	Maize Threshing	309
8.13.1	Maize Threshing in General	309
8.13.2	Attachment of Maize Header	309
8.13.3	Area measuring	310
8.13.4	Main crop elevator	310
8.13.5	Concave/Initial Settings	311
8.13.6	Threshing cylinder	311
8.13.7	Rotor Feeder	311
8.13.8	Shaker shoe	312
8.13.9	Rotors	312
8.13.10	Bottom auger cover plate	313
8.13.11	Scrapers	313
8.13.12	Straw chopper	313
8.13.13	Maxi Spreader	314



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

8.14 Harvest settings	315
8.14.1 Suggested harvest settings	315
8.14.2 Optimising the harvest settings	316
9 Transmissions	319
9.1 Safety precautions	321
9.1.1 Safety Precautions, Transmissions	321
9.2 Adjustment of Transmissions	322
9.2.1 General	322
9.2.2 Threshing unit clutch	322
9.2.3 Hydrostatic Transmission	323
9.3 Transmissions	324
9.3.1 Rear beater	324
9.3.2 Table and crop elevator	324
9.3.3 Straw chopper	325
9.3.4 Threshing cylinder	326
9.3.5 Unloading auger	326
9.3.6 Shaker shoe and chaff spreader counter drive	327
9.3.7 Countershaft for Rotors	327
9.3.8 Variator Belt for Rotors	328
9.3.9 Filling and Returns System Countershaft	328
9.3.10 Returns Elevator and Returns Thresher	329
9.3.11 Tank Filling Elevator and Tank Filling Auger	329
9.3.12 Dust aspirator	330
9.3.13 Rotary screen	331
9.3.14 Fanning mill	332
9.3.15 Rotor Feeder	332
9.3.16 Alternator and Fan	333
9.3.17 Climate control	333
9.4 Transmission Diagrams	334
9.4.1 Transmission diagram, left-hand side	334
9.4.2 Transmission Diagram, Right-Hand Side	336
10 Hydraulics	339
10.1 Safety precautions	341
10.1.1 Safety Precautions, Hydraulic System	341
10.2 Hydraulic System	342
10.2.1 Hydraulic system, standard combine	342
10.2.2 Hydraulic System, Four-Wheel Drive	343
10.3 Oil change	344
10.3.1 Draining and refilling hydraulic oil	344
10.4 Filter Change	345
10.4.1 Filter change in general	345
10.4.2 Return Oil Filter	345
10.4.3 Storage of Hydraulic System	346
10.5 Auxiliary Hydraulics	347
10.5.1 Auxiliary hydraulics in general	347
10.5.2 Functions and Auxiliary Hydraulics	347
10.5.3 Reel adjustment fore/aft - up/down	347
10.6 Hydraulic diagrams	348
10.6.1 Hydraulics Diagram, Standard Combine	348
10.6.2 Hydraulics Diagram, Auto Level Combine	350
10.6.3 Hydraulics Diagram for Chaff Spreader	352
10.6.4 Hydraulics diagram for Maxi Spreader	353
11 Maintenance	355
11.1 Safety precautions	357
11.1.1 Safety Precautions, Maintenance	357
11.2 Undercarriage	359
11.2.1 Undercarriage in general	359
11.2.2 Wheel Nut Torques	359
11.2.3 Tyre pressure	359

11.3	Lubrication Intervals	361
11.3.1	Lubrication chart, time intervals	361
11.3.2	Lubrication chart, right- and left-hand side	364
11.3.3	Lubrication chart, main crop elevator and front axle	366
11.3.4	Lubrication points, left-hand machine side	367
11.3.5	Lubrication points, right-hand machine side	382
11.3.6	Lubricants and operating fluids	396
11.4	Maintenance Schedules	398
11.4.1	Preliminary Service Inspections	398
11.4.2	Maintenance required	399
11.5	Gear Oil Change	402
11.5.1	Gearbox	402
11.5.2	Final drives	402
11.5.3	Right-angle gear for returns thresher	403
11.5.4	Right-Angle Gear for Rotors	403
11.6	Climate control	404
11.6.1	Diagram for Climate Control System	404
11.6.2	Maintenance	404
11.7	Cleaning and Off-Season Storage	405
11.7.1	Cleaning	405
11.7.2	Off-season Storage	406
11.7.3	Storage of Engine, Fuel System, SCR System and Hydraulic System	407
11.7.4	Periodical Start-Up	407
11.7.5	Removal of Crop Elevator	408
11.7.6	Removal of Elevator Chains	408
11.7.7	After Off-Season Storage	408
11.8	Adjustment of Brakes	409
11.8.1	Adjustment of Foot Brakes, Disc Brakes	409
11.8.2	Adjustment of Parking Brake	409
12	Electrical System	411
12.1	Safety precautions	413
12.1.1	Safety Precautions, Electric System	413
12.2	Electrical System	414
12.2.1	Charging system	414
12.2.2	Electric Boxes and Main Switch	415
12.2.3	External connectors 12V	416
12.3	Electro-Hydraulic System	418
12.3.1	Electro-Hydraulic System in General	418
12.4	Key to Signatures for Wiring Harness	419
12.4.1	Wire Codes	419
12.4.2	Component Codes	419
12.5	Overview, Electric Box and Cab	420
12.5.1	Position of Connectors in Electric Boxes	420
12.5.2	Fuses and Relays, Electric Box and Cab	421
12.6	Wiring diagrams	423
12.6.1	Key to symbols	423
12.6.2	Diagrams overview	424
12.6.3	Fuse Ratings	424
12.6.4	Components	425
12.6.5	Wiring diagrams	434
13	Specifications	447
13.1	Specifications	449
13.1.1	Dimensions and Specifications	449

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>