
OPERATOR'S MANUAL

FENDT

FENDT 9490 x

FENDT 9490 x AL



Operator's Manual for Fendt 9490 x Combine Series

1	General Information	11
1.1	Dear Customer	13
1.1.1	Preface	13
1.1.2	Company policy	13
1.1.3	Optional Extra	13
1.1.4	Spare parts and accessories	13
1.1.5	Warranty	14
1.1.6	Lubricants	14
1.2	Appropriate Use	15
1.2.1	Appropriate Use	15
1.2.2	Directives and standards	15
1.2.3	Statutory requirements	16
1.3	Placement of type and number plates	17
1.3.1	Combine CE markings, type and number plates	17
1.3.2	Product Identification	21
1.3.3	EC Declaration of Conformity for Combine and Table	22
1.4	Sectional Drawing, Parts Identification and Operational Description	27
1.4.1	Sectional Drawing and Parts Identification	27
1.4.2	Crop Processing	29
1.4.3	Feeding	30
1.4.4	Threshing	30
1.4.5	Separation	31
1.4.6	Cleaning	31
1.4.7	Grain Tank and Unloading	32
1.4.8	4-wheel drive	32
1.5	Ecology and environmental considerations	34
1.5.1	Important environmental issues	34
2	Safety	35
2.1	Safety	37
2.1.1	General Safety Precautions	37
2.1.2	Important guidelines and warning symbols	37
2.1.3	Safety precautions	38
2.1.4	Road Transport	40
2.1.5	Warning signs when driving on public roads	43
2.1.6	Field work	44
2.1.7	Maintenance work	46
2.1.8	Engine	49
2.1.9	Battery	51
2.1.10	Disposal	52
2.2	Safety decals	53
2.2.1	Warning/instruction decals on the machine	53
2.2.2	List of warning/instruction decals	65
2.3	Safety devices	73
2.3.1	Emergency Exit	73
2.3.2	Safety belts	74
2.3.3	Safety stop	75
2.3.4	Safety railings	76
2.3.5	Safety guards	77
2.3.6	Safety device for ladder	78
2.3.7	Trailer hitch	79
2.3.8	Wheel sprag and reversing alarm	80

2.3.9	Fire extinguisher and fire safety in the cab	81
2.4	Hydraulic System	82
2.4.1	Hydraulic systems - Hoses	82
2.5	Shafts	83
2.5.1	Weight distribution on the front and rear axle	83
3	Operation, Controls and Cab	85
3.1	Operator cab arrangement	87
3.1.1	Main components	87
3.1.2	Footrest	88
3.1.3	Refrigerator	88
3.1.4	Grain tank window	89
3.1.5	Sun visor	89
3.1.6	Cab storage	90
3.2	Safety Precautions - on the Move	91
3.2.1	Safety Precautions - on the Move	91
3.3	Starting and Stopping the Engine	92
3.3.1	Starting the Engine	92
3.3.2	Stopping the engine	94
3.4	Drive Controls	95
3.4.1	Steering Column	95
3.4.2	Brakes	97
3.4.3	Multifunction lever	99
3.4.4	Control panel	101
3.4.5	Adjustable armrest	106
3.4.6	Switch for road transport	107
3.5	Vario terminal	109
3.5.1	Explanation of icons	109
3.5.2	Interaction	126
3.5.3	Control panel	127
3.5.4	Machine settings	131
3.5.5	Residue discharge	135
3.5.6	Performance and returns	137
3.5.7	Yield measurement settings	138
3.5.8	Constant Flow	142
3.5.9	Grain handling	146
3.5.10	Table settings	147
3.5.11	Reel	150
3.5.12	Cutting height control	151
3.5.13	Preset cutting height	155
3.5.14	Field pressure	156
3.5.15	Crop system	157
3.5.16	Maintenance and calibration	158
3.5.17	Shaft speeds and shaft alarm calibration	160
3.5.18	System information and settings	162
3.5.19	Failure codes	166
3.5.20	Error code list	167
3.5.21	Guide	176
3.5.22	Data	178
3.5.23	Terminal settings	182
3.5.24	Info + information	186
3.5.25	Camera	189
3.5.26	Diagnostics system	190
3.6	Seats	192
3.6.1	Adjustment of Operator Seat	192
3.6.2	Instructor seat	193
3.7	Mirrors	194
3.7.1	Electrically Adjustable Rearview Mirrors	194
3.8	Accessibility	195
3.8.1	Ladder for Cab	195
3.8.2	Ladder for Engine Compartment	195
3.8.3	Cleaning the Windscreens	197

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

3.9	Light and Lamps	198
3.9.1	Lights	198
3.9.2	Lighting panel	199
3.10	Climate control	202
3.10.1	Controller	202
3.10.2	Components and functions	203
3.10.3	Overpressure and heat	204
4	Operation, Auto Level combine and table	207
4.1	Safety precautions	209
4.1.1	Safety precautions, operation of Auto Level Combine	209
4.1.2	Safety system - Alarms	209
4.2	Attachment of Auto Level Table	210
4.2.1	Attachment of table to Auto Level combine	210
4.3	Combinations	211
4.3.1	Automatic or Manual	211
4.3.2	Adjustment Combinations for Auto Level Combine and Auto Level Table ..	212
4.3.3	Priority of hydraulic functions	213
4.4	Auto Level combine	214
4.4.1	Auto Level combine	214
4.4.2	Manual Control of Auto Level Combine	214
4.5	Auto Level table	215
4.5.1	Principle of Auto Level Table	215
4.5.2	Using the Auto Level table	215
4.5.3	Bleeding	216
4.6	Auto Level Combine/Table	217
4.6.1	Combine	217
4.6.2	Transport	217
4.6.3	Auto Level table	218
4.7	Calibration	219
4.7.1	Calibration of Auto Level Combine	219
4.7.2	Calibration of Auto Level Table	220
4.7.3	Zero Cutting Height	220
4.7.4	Checking and Adjusting the Ground Sensors	221
4.8	Troubleshooting	222
4.8.1	Troubleshooting in General	222
4.8.2	Machine Not Levelling Correctly	222
4.9	Servicing and User Tips	224
4.9.1	Retrofit of new Auto Level job computer and sensors	224
4.9.2	Unintentional Use of Manual Keys in Automatic Mode	224
5	Cutting Tables	225
5.1	Safety precautions	227
5.1.1	Safety Precautions, Cutting Tables	227
5.2	Attachment/Removal of Table	228
5.2.1	Attachment of Table, Standard and Auto Level	228
5.2.2	Removal of Table	230
5.3	Table trailer	231
5.3.1	Attachment of Combine and Trailer	231
5.3.2	Table Trailer Brakes	231
5.4	Reel	232
5.4.1	Safety stop for reel	232
5.4.2	Reel Adjustment Up/Down, Fore/Aft	233
5.4.3	Bleeding	234
5.4.4	Rotation	235
5.4.5	Reel tine bars	235
5.4.6	Adjustment of the Reel in the Table	236
5.5	Knife	237
5.5.1	Knife and knife drive	237
5.6	Feeding	238
5.6.1	Table auger	238
5.6.2	Cut-off strip and distribution strip	239

5.6.3	Replacement of Feathering Fingers	240
5.6.4	Auger extensions	241
5.6.5	Reversing	242
5.7	Transmission	243
5.7.1	PowerFlow 18-30 ft cutting table, knife drive and table auger	243
5.7.2	PowerFlow Table, 35 ft cutting table, knife drive and table auger	243
5.7.3	Slip Clutch for Table Auger	245
5.8	PowerFlow Table	246
5.8.1	PowerFlow belts	246
5.8.2	Inspection and Start-Up of Powerflow Belts	247
5.8.3	Adjustment of belts	248
5.8.4	Scrapers, front	248
5.8.5	Rear Scrapers and Adjustment of Bearing Housings	249
5.8.6	Table Bottom	249
5.8.7	Cleaning	250
5.9	Crop lifters	251
5.9.1	Using Crop Lifters	251
5.10	Vertical Knives, Rape Auger and Straw Dividers	252
5.10.1	Vertical Knife	252
5.10.2	Mounting of Vertical Knife	253
5.10.3	Rape auger	253
5.10.4	Folding torpedo dividers and bow dividers	254
5.10.5	Mounting of Straw Dividers	254
5.10.6	Adjustment of Torpedo Divider	255
5.11	Fixed Table Auger Fingers	256
5.11.1	Fitting and using fixed table auger fingers	256
5.12	Main crop elevator	257
5.12.1	Elevator Chain	257
5.12.2	Elevator chain front shaft	257
5.12.3	Transmission for cutting table and feeding	258
5.12.4	Stone Trap	259
5.12.5	Preset cutting height sensor	260
6	Operation of Table and Threshing Unit	261
6.1	Safety precautions	263
6.1.1	Safety Precautions, Operation of Machine and Cutting Table	263
6.2	Operation of Table	264
6.2.1	Table Height and Table Automatic Control	264
6.2.2	Cutting height control	266
6.2.3	Field pressure control	267
6.2.4	Preset cutting height	268
6.2.5	Auto Level table	268
6.2.6	Table engagement	269
6.3	Operation of Threshing Mechanism	270
6.3.1	Threshing unit engagement	270
6.3.2	Cylinder Variator	270
6.3.3	Turning Tool for Cylinder	271
6.4	Concave Setting, Electrically Adjustable	272
6.4.1	Operation of concave	272
6.4.2	Concave Setting	272
6.5	Threshing	275
6.5.1	Concave filler plates	275
6.5.2	Rotors	275
6.6	Straw Chopper and Spreader Hood	277
6.6.1	Straw chopper	277
6.6.2	Adjustment of spreader hood and straw deflectors	278
6.6.3	Counter Knives and Cross Bar	279
6.6.4	Replacement of Knives	281
6.7	Fanning Mill and Sieves	282
6.7.1	Fanning mill	282
6.7.2	Shaker shoe	283
6.7.3	Shaker Shoe with Electrical Sieves	284

6.7.4	Manual Adjustment of Sieves	284
6.7.5	Cleaning of Sieves and Main Grain Pan	285
6.7.6	Cleaning the Sieves	286
6.7.7	Shaker Shoe Light	287
6.7.8	Special Sieves	288
6.8	Internal Grain Transport	289
6.8.1	Returns system	289
6.8.2	Returns Volume Monitor	291
6.8.3	Filling system	292
6.8.4	Grain tank	293
6.8.5	Unloading system	295
6.9	Rotor Feeder	297
6.9.1	Adjustment of Rotor Feeder	297
6.9.2	Rotor Feeder Concave	298
6.9.3	Reversing	298
6.10	Chaff spreader	299
6.10.1	Setting	299
6.11	Maize Threshing	301
6.11.1	Maize threshing in general	301
6.11.2	Attachment of Maize Header	301
6.11.3	Cutting height	301
6.11.4	Main crop elevator	301
6.11.5	Concave/initial settings	302
6.11.6	Threshing cylinder	302
6.11.7	Rotor Feeder	302
6.11.8	Shaker shoe	303
6.11.9	Rotors	303
6.11.10	Scrapers	303
6.11.11	Straw chopper	304
6.11.12	Maxi Spreader	304
6.12	Harvest settings	305
6.12.1	Suggested harvest settings	305
7	Adjustments	307
7.1	Safety precautions	309
7.1.1	Safety Precautions, Transmissions	309
7.2	Adjustment of Transmissions	310
7.2.1	General	310
7.2.2	Hydrostatic Transmission	310
7.3	Transmissions	311
7.3.1	Rear beater	311
7.3.2	Table and crop elevator	312
7.3.3	Straw chopper	313
7.3.4	Threshing cylinder	314
7.3.5	Unloading auger counter drive	315
7.3.6	Shaker shoe and chaff spreader counter drive	317
7.3.7	Countershaft for Rotors	317
7.3.8	Variator Belt for Rotors	318
7.3.9	Returns system	318
7.3.10	Tank Filling Elevator and Tank Filling Auger	319
7.3.11	Dust aspirator	319
7.3.12	Rotary screen	320
7.3.13	Fanning mill	320
7.3.14	Rotor Feeder	321
7.3.15	Alternator and fan	321
7.3.16	Climate control	322
7.3.17	The counter drive for the filling and returns system	322
7.3.18	Maxi Spreader hydraulic pump	323
7.4	Transmission Diagrams	324
7.4.1	Transmission Diagram, Left-Hand Side	324
7.4.2	Transmission Diagram, Right-Hand Side	327
7.4.3	Transmission Diagram, PowerFlow	329



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

7.5	Adjustment of Brakes	331
7.5.1	Adjustment of Foot Brakes, Disc Brakes	331
7.5.2	Adjustment of parking brake	331
8	Engine	333
8.1	Safety precautions	335
8.1.1	Safety Precautions, Engine	335
8.2	Engines	336
8.2.1	Engine type	336
8.3	Air-Intake	337
8.3.1	Filter System	337
8.4	Cooling System	338
8.4.1	Rotary Screen and Dust Aspirator	338
8.4.2	Coolers	339
8.4.3	Coolant	340
8.4.4	Checking the fan belt tension	340
8.4.5	Checking the water pump belt	341
8.5	Fuel system	342
8.5.1	Fuel and quality requirements	342
8.5.2	Fuel system	343
8.5.3	Filter change	344
8.5.4	Bleeding the fuel system	345
8.6	SCR	346
8.6.1	The SCR system in general	346
8.6.2	Components and functions	347
8.6.3	Filling and storing DEF	348
8.6.4	Filter change	349
8.6.5	SCR system failure	349
8.7	Crankcase ventilation	350
8.7.1	Closed crankcase ventilation	350
8.8	Engine oil/change	351
8.8.1	Oil and Filter Change	351
8.9	Cleaning	353
8.9.1	Cleaning of engine compartment	353
8.9.2	Vibration damper	353
8.10	EEM4 engine control	354
8.10.1	Electronic engine monitoring	354
8.10.2	Engine Trouble Shooting (Self-Diagnosis)	355
9	Hydraulic system	357
9.1	Safety precautions	359
9.1.1	Safety Precautions, Hydraulic System	359
9.2	Hydraulic System	360
9.2.1	Hydraulic system	360
9.2.2	Storage of Hydraulic System	362
9.3	Hydrostatic system	363
9.3.1	Hydrostatic system	363
9.3.2	Hydrostatic servo steering	364
9.4	Auxiliary Hydraulics	365
9.4.1	Auxiliary hydraulics in general	365
9.4.2	Functions and Auxiliary Hydraulics	365
9.4.3	Reel hydraulics	365
9.4.4	Cutting table hydraulics	366
9.5	Oil and Filter Change	368
9.5.1	Draining and Filling Hydraulic Oil	368
9.5.2	Filter change in general	369
10	Electrical system	373
10.1	Safety precautions	375
10.1.1	Safety Precautions, Electric System	375
10.2	Electrical System	376
10.2.1	Charging System	376

10.2.2	Electric boxes, fuse test and main switch	376
10.2.3	Fuses and relays	378
10.2.4	External 12V connectors	383
10.3	Electro-Hydraulic System	386
10.3.1	Electro-Hydraulic System in General	386
11	Lubrication and Maintenance	387
11.1	Safety precautions	389
11.1.1	Safety Precautions, Maintenance	389
11.2	Tracks	391
11.2.1	Operational description for tracks	391
11.2.2	Maintenance of tracks	392
11.3	Lubrication Intervals	394
11.3.1	Lubrication chart, intervals	394
11.3.2	Lubrication chart, right- and left-hand sides	397
11.3.3	Lubrication chart, front axles	401
11.3.4	Lubrication points, left-hand machine side	402
11.3.5	Lubrication points, right-hand machine side	421
11.3.6	Lubricants and operating fluids	435
11.4	Maintenance Schedules	437
11.4.1	Preliminary service inspections	437
11.4.2	Maintenance required	438
11.5	Gear Oil Change	441
11.5.1	Gearbox	441
11.5.2	Final drives	441
11.5.3	Right-angle gear for returns thresher	442
11.5.4	Right-Angle Gear for Rotors	442
11.6	Climate control	443
11.6.1	Maintenance	443
11.7	Moisture meter	444
11.7.1	Cleaning the moisture sensor	444
12	Off-season storage	445
12.1	Cleaning and Off-Season Storage	447
12.1.1	Off-season	447
12.1.2	Off-season storage	448
12.1.3	Storage of Engine, Fuel System, SCR System and Hydraulic System	448
12.1.4	Periodical Start-Up	449
12.1.5	Removal of Crop Elevator	449
12.1.6	Removal of Elevator Chains	450
12.1.7	Ordering spare parts	450
12.1.8	After Off-Season Storage	450
13	Optional Extra	451
13.1	Miscellaneous	453
13.1.1	Four-Wheel Drive	453
13.1.2	Extra camera	454
13.1.3	Table trailer	454
13.1.4	Guide system	455
13.1.5	Data - Doc Pro	455
13.1.6	AGCOMMAND	456
13.2	Maxi Spreader	457
13.2.1	Operation and Adjustment	457
13.2.2	Adjustment of Sensors	458
13.2.3	Filter replacement and further maintenance	459
14	Specifications	461
14.1	Specifications	463
14.1.1	Dimensions and specifications	463
14.1.2	Specification table for tyres with equipment	472
	Alphabetical index	475

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>