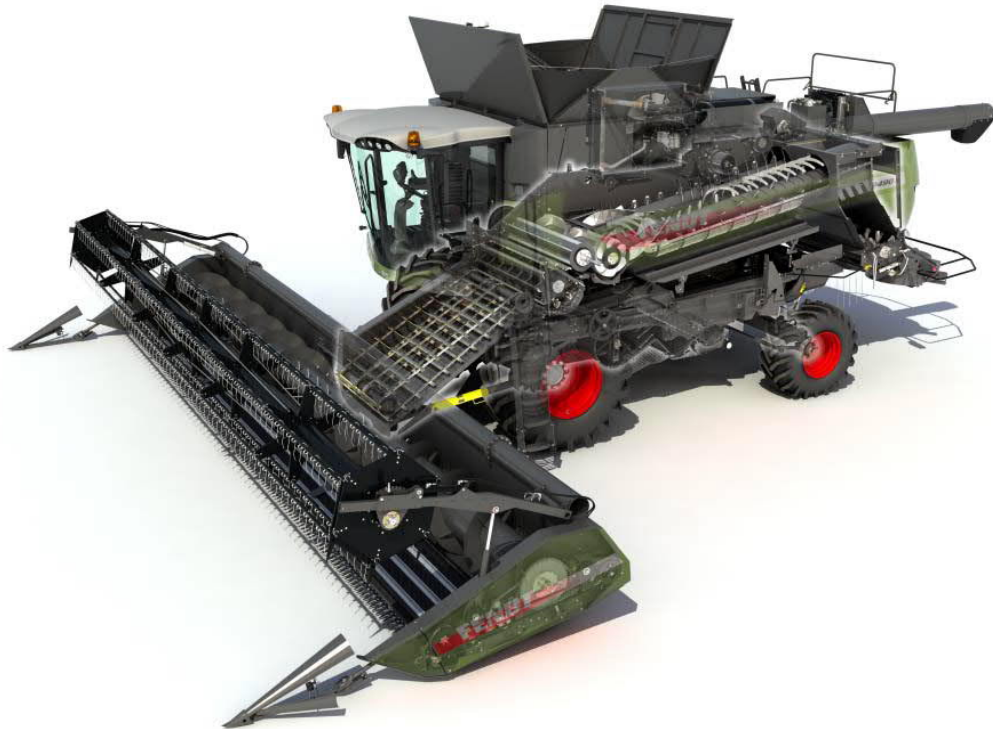

WORKSHOP SERVICE MANUAL

FENDT

FENDT 9490 x

FENDT 9490 x AL



Workshop Manual for 9380 DELTA Combine Series

1	Introduction - Specifications	13
1.1	Using the manual	15
1.1.1	Using the manual	15
1.2	General specifications	16
1.2.1	Dimensions and specifications	16
1.2.2	Specification table for tyres with equipment	25
1.3	Safety precautions	28
1.3.1	Safety precautions	28
1.3.2	Safety in the workshop	28
1.3.3	Safety - a word to the mechanic	28
1.3.4	Safety - danger, warning and caution	28
1.3.5	Safety decals	29
1.3.6	General	29
1.3.7	Personal safety	29
1.3.8	Considerations with regard to equipment	30
1.3.9	General considerations	31
1.3.10	Operational considerations	31
1.3.11	Maintenance techniques	32
1.4	Practical advice	34
1.4.1	Practical advice	34
1.5	Start-up instructions	38
1.5.1	General	38
1.5.2	Pre-delivery checks	38
1.5.3	Instruction of combine operator	40
1.6	Conversion tables	43
1.6.1	Conventional units of measurement	43
1.7	Locking and sealing agents	44
1.7.1	Locking and sealing agents	44
1.8	Wheel nut torques	45
1.8.1	Wheels	45
1.8.2	Bolts with metric threads	45
1.8.3	Nuts with metric threads	46
2	Cutting table	47
2.1	General	49
2.1.1	Table, general	49
2.2	Knife drive - wobble box 18-30 ft	50
2.2.1	Removal	50
2.2.2	Assembly	50
2.2.3	Reconditioning the wobble box	51
2.2.4	Positioning the double fingers, knife and crop lifters	57
2.3	Table auger, 18-30 ft	58
2.3.1	Removal	58
2.3.2	Assembly	59
2.3.3	Replacing the shaft on the left-hand side	59
2.3.4	Replacing the shaft on the right-hand side	59
2.3.5	Replacing the crankshaft	60
2.3.6	Replacing the feathering fingers, bearings and bushes	61
2.3.7	Adjusting the table auger and feathering fingers	62
2.4	Table body, 18-30 ft	64
2.4.1	Adjusting the cut-off strips	64
2.4.2	Adjusting and positioning the ground sensor - PowerFlow	65

2.5	Table body, 35 ft	67
2.5.1	Adjusting the ground sensor - 35' PowerFlow	67
2.6	Friction clutch and chain drive 18-30 ft	69
2.6.1	Removing the friction coupling	69
2.6.2	Assembly	69
2.6.3	Replacing the bearings and sprockets	70
2.7	Countershaft, 18-30 ft.	71
2.7.1	Removing the countershaft	71
2.7.2	Fitting the countershaft	72
2.8	PowerFlow belts, 18-30 ft	73
2.8.1	PowerFlow belts	73
2.8.2	Removal, belts	73
2.8.3	Assembly, belts	76
2.8.4	Replacing the front rollers and bearings, scraper adjustment	77
2.8.5	Replacing the rear rollers and bearings, scraper adjustment	79
2.8.6	Replacing and aligning the bearing housing, rear rollers	80
2.8.7	Belt tensioning and running-in	81
3	Reel	85
3.1	Reel, 18-30 ft.	87
3.1.1	Removal	87
3.1.2	Assembly	88
3.1.3	Replacing the reel tine bar and plastic bearings	89
3.1.4	Replacing the guide rollers, eccentric, guide ring and bearings	90
3.1.5	Replacing the reel plates	91
3.1.6	Replacing the reel tube, bearings	91
3.2	Oil motor and chain drive, 18-30 ft	92
3.2.1	Replacing the oil motor	92
3.2.2	Replacing the flow divider	92
3.3	Hydraulic cylinders, 18-30 ft.	93
3.3.1	Replacing the cylinder – reel up/down	93
3.3.2	Replacing the cylinder – reel forward/back	94
3.3.3	Reconditioning of hydraulic cylinders	94
3.4	Oil motor and chain drive, 35 ft	97
3.4.1	Replacement of oil motor, 35 ft	97
3.4.2	Replacing the flow divider	97
3.5	Hydraulic cylinders, 35 ft	98
3.5.1	Replacing the cylinder – reel forward/back	98
4	Main crop elevator	99
4.1	General	101
4.1.1	Main crop elevator, general	101
4.2	Main crop elevator	102
4.2.1	Removal of Crop Elevator	102
4.2.2	Fitting the crop elevator	103
4.2.3	Bearing block on machine frame	104
4.2.4	Replacing the lifting ram	104
4.2.5	Reconditioning the hydraulic cylinder	105
4.2.6	Replacing the cutting height preset sensor	106
4.3	Crop elevator chain	107
4.3.1	Crop elevator chain, general	107
4.3.2	Removing the crop elevator chain	107
4.3.3	Fitting the crop elevator chain	108
4.3.4	Replacement of slats	109
4.3.5	Replacing the slide rails in the crop elevator	109
4.3.6	Replacing the intermediate plate	110
4.4	Elevator chain top shaft	111
4.4.1	Removing the elevator chain top shaft	111
4.4.2	Fitting the elevator chain top shaft	112
4.4.3	Replacing the bearings	112
4.4.4	Replacing the sprockets and centre bearing	114
4.4.5	Replacing the shaft protection tube	117

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

4.5	Elevator chain front shaft	118
4.5.1	Removing the elevator chain front shaft	118
4.5.2	Fitting the elevator chain front shaft	119
4.5.3	Replacing the shaft bearings	120
4.6	Elevator countershaft	121
4.6.1	Removing the elevator intermediate shaft	121
4.6.2	Fitting elevator intermediate shaft	122
4.7	Friction clutch and belt drive	123
4.7.1	Removal of friction clutch	123
4.7.2	Fitting the friction clutch	123
4.7.3	Reconditioning of the friction clutch	124
4.8	Adapter	125
4.8.1	Removal of adapter	125
4.8.2	Fitting the adapter	126
4.8.3	Replacing the levelling cylinder	126
4.8.4	Reconditioning the hydraulic cylinder	126
4.8.5	Replacing the angle sensor	127
4.9	Hydraulic reversing	128
4.9.1	Removal of hydraulics motor	128
4.9.2	Removing the hydraulic cylinder	129
5	Threshing unit	131
5.1	General	133
5.1.1	Threshing unit, general	133
5.2	Stone trap	134
5.2.1	Removal	134
5.2.2	Assembly	135
5.3	Concave	136
5.3.1	Removing the concave	136
5.3.2	Fitting the concave	137
5.3.3	Adjusting the concave laterally	137
5.3.4	Concave setting - initial setting	138
5.3.5	Replacing the lead-in plate	139
5.3.6	Replacing the shaft for concave setting	139
5.4	Threshing cylinder	141
5.4.1	Removing the threshing cylinder	141
5.4.2	Fitting the threshing cylinder	142
5.4.3	Replacing the bearings	143
5.4.4	Replacing the rasp bars and backing bars	144
5.4.5	Replacing the shaft and cylinder spiders	144
5.5	Cylinder variator – table clutch	146
5.5.1	Removal, hydraulic variator	146
5.5.2	Assembly, hydraulic variator	147
5.5.3	Reconditioning the hydraulic variator pulley	147
5.5.4	Removal, mechanical variator	149
5.5.5	Assembly, mechanical variator	149
5.5.6	Reconditioning the mechanical variator pulley	150
5.5.7	Removal, hydraulic table clutch	151
5.5.8	Fitting the hydraulic table clutch	152
5.5.9	Reconditioning the hydraulic table clutch	153
5.6	Rear beater	158
5.6.1	Removing the rear beater	158
5.6.2	Fitting the rear beater	159
5.7	Rear beater concave	160
5.7.1	Removing the rear beater concave	160
5.7.2	Fitting the rear beater concave	160
5.8	Rotor Feeder	161
5.8.1	Removal, Rotor Feeder	161
5.8.2	Fitting the Rotor Feeder	162
5.8.3	Replacing the bearings	163
5.8.4	Replacing deflector and distributor plates	164

5.9	Rotor Feeder concave	166
5.9.1	Removal, Rotor Feeder concave	166
5.9.2	Fitting the Rotor Feeder concave	166
6	Rotor unit	167
6.1	General	169
6.1.1	General	169
6.2	Rotor variator	170
6.2.1	Removal, hydraulic variator	170
6.2.2	Assembly, hydraulic variator	171
6.2.3	Reconditioning the hydraulic variator pulley	172
6.2.4	Removal, mechanical variator	172
6.2.5	Assembly, mechanical variator	173
6.2.6	Reconditioning the mechanical variator pulley	173
6.2.7	Replacing and reconditioning the magnetic clutch	175
6.3	Shaft for mechanical variator	177
6.3.1	Removal	177
6.3.2	Assembly	177
6.4	Right-angle gear	178
6.4.1	Removing the right-angle gear	178
6.4.2	Fitting the right-angle gear	179
6.5	Rotor	181
6.5.1	Removal, rotor	181
6.5.2	Fitting the rotor	182
6.5.3	Replacing the front bearing	183
6.5.4	Replacing the rear bearing	184
6.6	Rotor cage	185
6.6.1	Removal	185
6.6.2	Assembly	187
6.6.3	Replacing grate sections	187
7	Shaker shoe - Fanning mill	189
7.1	General	191
7.1.1	Shaker shoe - fanning mill, general	191
7.2	Fanning mill	192
7.2.1	Removing the fanning mill	192
7.2.2	Fitting the fanning mill	193
7.2.3	Replacing the fan blades	193
7.2.4	Replacing the fanning mill deflectors	194
7.2.5	Replacing the seals	195
7.3	Main grain pan frame	196
7.3.1	General	196
7.3.2	Removal, main grain pan frame	196
7.3.3	Fitting the main grain pan frame	197
7.3.4	Replacing the swivel arm and bearings	198
7.3.5	Replacing the seals	199
7.4	Second grain pan	200
7.4.1	Removal	200
7.4.2	Fitting the second grain pan	200
7.4.3	Replacing the swivel arm and bearings	201
7.4.4	Adjusting second grain pan	202
7.5	Top shaker shoe	204
7.5.1	Removing the top shaker shoe	204
7.5.2	Assembly	205
7.5.3	Replacing the swivel arm and bearings	206
7.5.4	Replacement of seals	207
7.5.5	Replacing and calibrating the actuator - sieves	207
7.6	Bottom shaker shoe	209
7.6.1	Removing the bottom shaker shoe	209
7.6.2	Assembly	210
7.6.3	Replacing the swivel arm and bearings	211
7.6.4	Replacing the seals	211

7.6.5	Electric sieve setting – initial setting	211
7.7	Bottom augers	212
7.7.1	Removing the grain auger	212
7.7.2	Fitting the grain auger	212
7.7.3	Removing the returns bottom auger	213
7.7.4	Fitting the returns bottom auger	214
7.8	Eccentric drive	215
7.8.1	Removing the eccentric drive	215
7.8.2	Fitting the eccentric drive	216
7.8.3	Adjusting the connecting rod / aligning the shaker shoes	217
7.8.4	Replacing the connecting rod bearing	218
7.8.5	Replacing the bearings and eccentric shaft	219
7.9	Transmissions	220
7.9.1	Replacing and reconditioning the fanning mill variator	220
7.9.2	Adjusting the fanning mill variator	221
7.9.3	Replacing and reconditioning the counter drive	222
8	Elevators - augers	223
8.1	Tank filling elevator	225
8.1.1	Removing the tank filling elevator	225
8.1.2	Fitting the tank filling elevator	226
8.1.3	Replacing the top shaft, bearings and sprockets	227
8.1.4	Replacing the bottom sprocket	228
8.1.5	Replacing the elevator chain	229
8.2	Returns auger	230
8.2.1	Removing the returns auger	230
8.2.2	Fitting the returns auger	232
8.2.3	Replacing the top bearing	233
8.2.4	Removing and reconditioning the right-angle gear	233
8.3	De-awner	235
8.3.1	Removing the de-awner	235
8.3.2	Fitting the de-awner	235
8.4	Tank filling auger	236
8.4.1	Removing the pivotable part	236
8.4.2	Replacing the top bearing	236
8.4.3	Removing the fixed part bearing	237
8.4.4	Reconditioning the right-angle gear	238
8.5	Transmission	240
8.5.1	Replacing the countershaft and bearings	240
9	Engine	241
9.1	General	243
9.1.1	Engine, general	243
9.2	Replacing the engine	244
9.2.1	Removing the engine assembly	244
9.2.2	Fitting the engine assembly	247
10	Unloading auger - Grain tank	249
10.1	Moisture sensor	251
10.1.1	Removing the moisture sensor	251
11	Drive unit	253
11.1	Radiator – intercooler	255
11.1.1	Removal, combined radiator	255
11.1.2	Fitting, combined radiator	256
11.2	Hydraulic oil cooler	258
11.2.1	Removing the oil cooler	258
11.2.2	Fitting the oil cooler	258
11.3	Fuel cooler	259
11.3.1	Removing the fuel cooler	259
11.3.2	Fitting the fuel cooler	259

11.4	Condenser – air conditioning	260
11.4.1	Removing the condenser	260
11.4.2	Fitting the condenser	260
11.5	Rotary screen	261
11.5.1	Removing the rotary screen	261
11.5.2	Fitting the rotary screen	262
11.5.3	Adjusting the radiator cleaning plate	263
11.5.4	Reconditioning the countershaft drive	264
11.6	Dust aspirator	265
11.6.1	Removing the dust aspirator	265
11.6.2	Fitting the dust aspirator	265
11.6.3	Reconditioning the dust aspirator	266
11.7	Hydrostatic pump	267
11.7.1	Removing the hydrostatic pump	267
11.7.2	Fitting the hydrostatic pump	268
11.8	Auxiliary hydraulic pump	269
11.8.1	Removing the hydraulic pump	269
11.8.2	Fitting the hydraulic pump	269
11.9	Hydraulic oil tank	270
11.9.1	Removing the hydraulic oil tank	270
11.9.2	Fitting the hydraulic oil tank	270
11.10	Fuel tank	271
11.10.1	Removing the fuel tank	271
11.10.2	Fitting the fuel tank	272
11.10.3	Tank gauge	272
11.11	SCR system	273
11.11.1	Removing the DEF tank	273
11.11.2	Fitting the DEF tank	273
11.11.3	Removing the DEF catalytic converter	274
11.11.4	Fitting the DEF catalytic converter	275
11.11.5	Supply module	275
11.11.6	Dosing module	276
11.11.7	Tank sensor, DEF	276
11.12	Compressor – air conditioning	277
11.12.1	Removing the A/C compressor	277
11.12.2	Fitting the A/C compressor	277
11.13	Power take-off	278
11.13.1	Removing the power take-off	278
11.13.2	Fitting the power take-off	280
11.13.3	Replacing the clutch	280
11.13.4	Replacing the output shaft/bearings	281
12	Transmissions	283
12.1	General	285
12.1.1	Transmissions, General	285
12.2	Countershaft	286
12.2.1	Removing the countershaft	286
12.2.2	Fitting the countershaft	288
12.2.3	Replacing the bearings	288
12.3	Replacing the belts, right-hand side	289
12.3.1	Cutting table countershaft - knife drive, right side 35 ft	289
12.3.2	Elevator countershaft - hydraulic engine, reversing	289
12.3.3	Rear beater - counter drive, cylinder variator	290
12.3.4	Counter drive, variator - threshing cylinder	291
12.3.5	Rear beater - Rotor Feeder	292
12.3.6	Rear beater - fanning mill variator	293
12.3.7	Fanning mill variator - fanning mill	294
12.3.8	Countershaft - dust aspirator, rotary screen counter drive	294
12.3.9	Countershaft - countershaft	295
12.3.10	Countershaft - tank filling elevator, tank filling auger	295
12.3.11	Countershaft - returns augers	296
12.3.12	Rotary screen counter drive - rotary screen	297

12.3.13	Rotor countershaft - right-angle gear	297
12.4	Replacing the chains, right-hand side	298
12.4.1	Reel drive	298
12.4.2	Reel drive, 35 ft	299
12.5	Replacing the belts, left-hand side	300
12.5.1	Table countershaft - knife drive	300
12.5.2	Cutting table countershaft - knife drive, left side 35 ft	300
12.5.3	PTO shaft – table countershaft	301
12.5.4	Counter pulley - elevator countershaft	301
12.5.5	Rear beater - elevator chain top shaft - idler gear	302
12.5.6	Countershaft - rear beater	303
12.5.7	Engine - countershaft	304
12.5.8	Engine - unloading auger counter drive 1	306
12.5.9	Unloading auger counter drive 1 - unloading auger counter drive 2	309
12.5.10	Countershaft - counter drive, straw chopper	310
12.5.11	Counter drive, straw chopper - straw chopper	310
12.5.12	Rear beater - countershaft, shaker shoe drive	311
12.5.13	Countershaft, shaker shoe drive - eccentric shaft	311
12.5.14	Countershaft – hydraulic pump, chaff spreader	312
12.5.15	Engine - rotor countershaft	312
12.5.16	Rotor countershaft - hydraulic pump, Maxi Spreader	313
12.5.17	Engine - hydrostatic pump	314
12.6	Replacing the chains, left-hand side	315
12.6.1	Table countershaft - table auger	315
12.6.2	Cutting table countershaft - table auger, 35 ft	315
12.6.3	Table auger - belt rollers (PowerFlow)	316
12.6.4	Table auger – belt rollers, 35 ft	316
12.6.5	Unloading auger counter drive 2 - bottom auger	317
13	Undercarriage	319
13.1	Auto Level final drive bracket	321
13.1.1	Removal	321
13.1.2	Assembly	322
13.1.3	Replacing the bushing	324
13.1.4	Replacing the hydraulic cylinder	325
13.1.5	Reconditioning of hydraulic cylinder	325
13.1.6	Adjusting the Auto Level potentiometer	326
13.2	Final drives	328
13.2.1	Removal	328
13.2.2	Assembly	329
13.2.3	Reconditioning the final drives	330
13.3	Gearbox	334
13.3.1	Removal	334
13.3.2	Assembly	335
13.3.3	Replacing the shifter cylinders and sensor	336
13.3.4	Adjusting the shifter cylinders and sensor	337
13.3.5	Replacing the lubrication pump	340
13.3.6	Replacing the shifter forks	341
13.3.7	Reconditioning the differential	342
13.3.8	Reconditioning the gearbox	345
13.4	Hydrostatic motor	349
13.4.1	Removal	349
13.4.2	Assembly	349
13.5	Brakes	351
13.5.1	Replacing the brake blocks	351
13.5.2	Replacing the brake discs	352
13.5.3	Bleeding the brakes	354
13.5.4	Replacing the parking brake shoes	354
13.5.5	Adjustment of hydraulic parking brake	355



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

14	Hydraulics	357
14.1	General	359
14.1.1	Hydraulics, general	359
14.1.2	Emptying and filling the hydrostatic system	359
14.1.3	Running in and bleeding the hydrostatic system 2WD	361
14.1.4	Running in and bleeding the hydrostatic system 4WD	363
14.1.5	Running in and bleeding the auxiliary hydraulics	365
14.2	Hydraulic diagrams	366
14.2.1	Standard Combines	366
14.2.2	Auto Level machines	375
14.3	Hydraulic components	386
14.3.1	Hydraulic valves	386
14.3.2	Hydraulic pumps	397
14.3.3	Hydraulic motors	404
14.4	Hydrostatic system	406
14.4.1	Transmission hydraulics 2WD	406
14.5	Gearshift	407
14.5.1	Gearshift	407
14.6	Parking brake	409
14.6.1	Parking brake	409
14.7	Auxiliary hydraulics	410
14.7.1	Auxiliary hydraulics, oil tank and oil cooler	410
14.8	Cutting table	412
14.8.1	Cutting table - hydraulics	412
14.9	Auto Level	415
14.9.1	Auto Level - hydraulics	415
14.10	Reel	417
14.10.1	Steering - hydraulics	417
14.11	Steering	421
14.11.1	Steering - hydraulics	421
14.12	Cutting table clutch	423
14.12.1	Cutting table engagement - hydraulics	423
14.13	Cylinder variator	424
14.13.1	Cylinder variator - hydraulics	424
14.14	Rotor variator	426
14.14.1	Rotor variator - hydraulics	426
14.15	Threshing unit	428
14.15.1	Threshing mechanism on/off - hydraulics	428
14.16	Unloading auger	429
14.16.1	Unloading auger out/in - hydraulics	429
14.16.2	Unloading auger on/off - hydraulics	431
14.17	Reversing	432
14.17.1	Reversing - hydraulics	432
14.18	Chaff spreader	434
14.18.1	Chaff spreader - hydraulics	434
14.19	Maxi Spreader	435
14.19.1	Maxi Spreader - hydraulics	435
15	Electrical system	437
15.1	General	439
15.1.1	Electrical system, general	439
15.2	Description of VarioDoc	440
15.2.1	Description of VarioDoc	440
15.3	CAN connections	441
15.3.1	CAN connections	441
15.4	Failure codes	444
15.4.1	Machine-related error codes	444
15.4.2	Engine-related error codes	453
15.5	Relays and fuses	480
15.5.1	Relays and fuses	480
15.6	Connectors	486
15.6.1	Front electric box	486

15.6.2	Rear electric box	488
15.7	Diagrams overview	491
15.7.1	Diagrams overview	491
15.8	Wiring diagrams	496
15.8.1	Electric diagrams, Standard Combine	496
15.8.2	Electric diagrams Auto Level machine	533
15.9	Components	569
15.9.1	Components	569
16	Straw chopper	631
16.1	General	633
16.1.1	Replacing and calibrating the electric actuator – straw deflectors	633
16.2	Hydraulic pump - Maxi Spreader	634
16.2.1	Removing the hydraulic pump	634
16.2.2	Fitting the hydraulic pump	635
17	General assembly instructions	637
17.1	Fitting gib-head keys	639
17.1.1	Fitting gib-head keys	639
17.2	Fitting tightening pins	640
17.2.1	Fitting tightening pins	640
17.3	Fitting hydraulic pipes and screw connections	641
17.3.1	Fitting hydraulic pipes and screw connections	641
17.4	Fitting a flanged bearing with locking collar	643
17.4.1	Fitting a flanged bearing with locking collar	643
17.5	Fitting sliding bushings	644
17.5.1	Fitting sliding bushings	644
17.6	Removing the revolution sensor	645
17.6.1	Removing the revolution sensor	645
17.7	Fitting tightening rings	646
17.7.1	Fitting tightening rings	646
18	Miscellaneous data	647
18.1	General	649
18.1.1	Miscellaneous data, general	649
18.2	Speeds - adjustment values	650
18.2.1	Speeds - adjustment values	650
18.3	Maintenance	651
18.3.1	Lubrication chart, intervals	651
18.3.2	Lubrication chart, right- and left-hand sides	654
18.3.3	Lubrication chart, front axles	658
18.3.4	Lubrication points, left-hand machine side	659
18.3.5	Lubrication points, right-hand machine side	678
18.3.6	Lubricants and operating fluids	692
18.3.7	Gear	694
	Alphabetical index	697

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>