

**1. MACHINE SPECIFICATIONS**

1.1	GENERAL DIMENSIONS.....	1-2
1.1.1	CANOPY.....	1-2
1.1.2	CANOPY.....	1-4
1.1.3	CAB.....	1-6
1.1.4	CAB.....	1-8
1.2	SPECIFICATIONS AND PERFORMANCE.....	1-10
1.3	ENGINE SPECIFICATIONS.....	1-16
1.3.1	SPECIFICATIONS.....	1-16
1.3.2	ENGINE PERFORMANCE CURVE.....	1-17
1.3.3	SPECIFICATIONS.....	1-18
1.3.4	ENGINE PERFORMANCE CURVE.....	1-19
1.3.5	SPECIFICATIONS.....	1-20
1.3.6	ENGINE PERFORMANCE CURVE.....	1-21
1.3.7	SPECIFICATIONS.....	1-22
1.3.8	ENGINE PERFORMANCE CURVE.....	1-23
1.4	HYDRAULIC COMPONENTS.....	1-24
1.4.1	SPECIFICATIONS.....	1-24
1.4.2	SPECIFICATIONS.....	1-26
1.4.3	SPECIFICATIONS.....	1-28
1.4.4	SPECIFICATIONS.....	1-30
1.5	MACHINE & COMPONENTS WEIGHT.....	1-32
1.6	WORKING RANGES.....	1-39
1.6.1	CANOPY TYPE.....	1-39
1.6.2	CANOPY TYPE.....	1-40
1.6.3	CAB TYPE.....	1-41
1.6.4	CANOPY TYPE.....	1-42
1.6.5	CAB TYPE.....	1-43
1.6.6	CANOPY TYPE.....	1-44
1.6.7	CAB TYPE.....	1-45
1.6.8	CANOPY TYPE.....	1-46
1.6.9	CAB TYPE.....	1-47
1.6.10	CANOPY TYPE.....	1-48
1.6.11	CAB TYPE.....	1-49
1.6.12	CANOPY TYPE.....	1-50
1.6.13	CAB TYPE.....	1-51
1.7	LIFTING DIAGRAM.....	1-52
1.8	PERFORMANCE TABLE.....	1-64

**2. MAINTENANCE**

2.1	DESIGNATED OIL AND GREASE, AND FILTER ELEMENT.....	2-2
2.1.1	GREASE AND OIL LIST.....	2-2
2.1.2	GREASE AND OIL LIST.....	2-3
2.1.3	GREASE AND OIL LIST.....	2-4
2.1.4	FILTERS & ELEMENTS, AND BUCKET.....	2-5
2.1.5	FILTERS & ELEMENTS, AND BUCKET.....	2-6
2.1.6	FILTERS & ELEMENTS, AND BUCKET.....	2-7



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**

2.1.7	FILTERS & ELEMENTS, AND BUCKET.....	2-8
2.2	MAINTENANCE STANDARDS AND TEST PROCEDURES.....	2-10
2.2.1	STANDARD VALUE TABLE.....	2-10
2.2.2	STANDARD VALUE TABLE.....	2-12
2.2.3	STANDARD VALUE TABLE.....	2-14
2.2.4	STANDARD VALUE TABLE.....	2-16
2.2.5	MEASURING ENGINE SPEED.....	2-18
2.2.6	MEASURING HYDRAULIC OIL PRESSURE.....	2-23
2.2.7	MEASURING TRAVEL PERFORMANCES (ALL MODELS).....	2-37
2.2.8	MEASURING SLEW PERFORMANCES (ALL MODELS).....	2-39
2.2.9	MEASURING ATTACHMENT OPERATING PERFORMANCES (ALL MODELS).....	2-41
2.2.10	MEASURING SLEW BEARING PERFORMANCES (ALL MODELS).....	2-43
2.2.11	MEASURING CRAWLER TENSION (ALL MODELS).....	2-44
2.3	ATTACHMENT MAINTENANCE STANDARD.....	2-46
2.3.1	CLEARANCE OF PIN AND BUSHING.....	2-46
2.3.2	CLEARANCE IN THRUST DIRECTION ON BOOM AND CYLINDER INSTALLATION SECTION.....	2-57
2.3.3	CLEARANCE IN THRUST DIRECTION ON ARM AND CYLINDER INSTALLATION SECTION.....	2-60
2.3.4	CLEARANCE IN THRUST DIRECTION ON THE DOZER AND CYLINDER INSTALLATION SECTION.....	2-65
2.3.5	CLEARANCE IN THRUST DIRECTION ON SWING BRACKET AND CYLINDER INSTALLATION SECTION.....	2-68
2.4	UNDERCARRIAGE.....	2-71
2.4.1	RUBBER CRAWLER.....	2-71
2.4.2	STEEL CRAWLER (SK17SR-3, CX17B, E18SR, SK15SR-3).....	2-72
2.4.3	STEEL CRAWLER (SK20SR-3 / SK27SR-3, CX27B, E27SR / SK30SR-3, CX31B, E30SR / SK35SR-3, CX36B, E35SR).....	2-73
2.4.4	STEEL CRAWLER (SK40SR-3 / SK50SR-3, CX50B, E50SR , SK55SR-3, CX55B).....	2-74
2.4.5	UPPER ROLLER (SK20SR-3 / SK27SR-3, CX27B, E27SR / SK30SR-3, CX31B, E30SR / SK35SR-3, CX36B, E35SR).....	2-75
2.4.6	UPPER ROLLER (SK40SR-3 / SK50SR-3, CX50B, E50SR , SK55SR-3, CX55B).....	2-76
2.4.7	LOWER ROLLER (SK17SR-3, CX17B, E18SR, SK15SR-3).....	2-77
2.4.8	LOWER ROLLER (SK20SR-3 / SK27SR-3, CX27B, E27SR / SK30SR-3, CX31B, E30SR / SK35SR-3, CX36B, E35SR).....	2-78
2.4.9	LOWER ROLLER (SK40SR-3 / SK50SR-3, CX50B, E50SR , SK55SR-3, CX55B).....	2-79
2.4.10	FRONT IDLER (SK17SR-3, CX17B, E18SR, SK15SR-3).....	2-80
2.4.11	FRONT IDLER (SK20SR-3 / SK27SR-3, CX27B, E27SR).....	2-81
2.4.12	FRONT IDLER (SK30SR-3, CX31B, E30SR / SK35SR-3, CX36B, E35SR).....	2-82
2.4.13	FRONT IDLER (SK40SR-3 / SK50SR-3, CX50B, E50SR , SK55SR-3, CX55B).....	2-83
2.4.14	IDLER ADJUSTER (SK17SR-3, CX17B, E18SR, SK15SR-3).....	2-84

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

2.4.15 IDLER ADJUSTER (SK20SR-3 / SK27SR-3, CX27B, E27SR).....	2-84
2.4.16 IDLER ADJUSTER (SK30SR-3, CX31B, E30SR / SK35SR-3, CX36B, E35SR).....	2-85
2.4.17 IDLER ADJUSTER (SK40SR-3 / SK50SR-3, CX50B, E50SR , SK55SR-3, CX55B) .....	2-85
2.4.18 SPROCKET .....	2-86

### 3. CIRCUIT DIAGRAM

3.1 HYDRAULIC CIRCUITS .....	3-2
3.1.1 STANDARD .....	3-2
3.1.2 STANDARD .....	3-4
3.1.3 STANDARD .....	3-6
3.1.4 STANDARD .....	3-12
3.1.5 STANDARD .....	3-14
3.1.6 STANDARD .....	3-16
3.1.7 STANDARD .....	3-18
3.1.8 STANDARD .....	3-20
3.1.9 STANDARD .....	3-22
3.1.10 STANDARD .....	3-24
3.1.11 STANDARD .....	3-26
3.1.12 STANDARD .....	3-28
3.2 ELECTRIC CIRCUIT DIAGRAM .....	3-30

### 4. ATTACHMENT DIMENSIONS

4.1 BOOM.....	4-2
4.1.1 BOOM DIMENSIONAL DRAWING.....	4-2
4.2 ARM.....	4-4
4.2.1 ARM DIMENSIONAL DRAWING.....	4-4
4.3 BUCKET .....	4-6
4.3.1 BUCKET DIMENSIONAL DRAWING .....	4-6
4.3.2 LUG SECTION DIMENSIONAL DRAWING .....	4-8
4.3.3 BOSS SECTION DIMENSIONAL DRAWING.....	4-9
4.4 DOZER.....	4-10
4.4.1 DOZER DIMENSIONAL DRAWING .....	4-10
4.4.2 DOZER DIMENSIONAL DRAWING .....	4-12
4.5 SWING .....	4-14
4.5.1 SWING BRACKET DIMENSIONAL DRAWING .....	4-14
4.6 CYLINDER .....	4-16
4.6.1 HYDRAULIC CYLINDER.....	4-16
4.7 SHAPE AND DIMENSIONS OF PIN .....	4-20
4.7.1 SHAPE OF PIN.....	4-21
4.7.2 DIMENSIONS OF PIN .....	4-23
4.8 SHAPE AND DIMENSIONS OF BUSHING.....	4-25
4.8.1 SHAPE OF BUSHING .....	4-26

4.8.2	DIMENSIONS OF BUSHING .....	4-28
<b>5. DIFFERENTIAL MATERIAL</b>		
5.1	TORQUE SPECIFICATIONS FOR CAPSCREWS & NUTS .....	5-2
5.1.1	Metric Coarse Thread Standard Tightening Torque Values. Make Certain to tighten all Capscrews & Nuts to proper torque values. ....	5-2
5.1.2	Metric Fine Thread Standard Tightening Torque values. Make certain to tighten all Capscrews & Nuts to proper torque values. ....	5-3
5.2	SCREW AND TOOL SIZES .....	5-4
5.2.1	Capscrew.....	5-4
5.2.2	Capscrew (Socket bolt) .....	5-4
5.3	TORQUE SPECIFICATIONS FOR JOINTS AND HOSES .....	5-4
5.3.1	JOINTS FOR PIPING (O-RING SEALING TYPE).....	5-4
5.3.2	HYDRAULIC HOSE (30° FLARE TYPE).....	5-4
5.4	TORQUE SPECIFICATIONS FOR SLEEVE TYPE TUBE FITTINGS .....	5-5
5.4.1	SLEEVE TYPE TUBE FITTINGS .....	5-5
5.4.2	PART NO.....	5-5
5.5	PLUGS .....	5-6
5.5.1	Plug for hydraulic pipe joint .....	5-6
5.5.2	Plug for hydraulic equipment .....	5-7
5.6	SPECIAL SPANNERS FOR TUBES .....	5-8
5.7	SPECIAL TOOLS .....	5-8
5.8	APPLICATION OF SCREW LOCKING AND SEALING COMPOUNDS.....	5-8
5.9	COUNTERWEIGHT LIFTING JIG .....	5-9
5.10	UPPER FRAME LIFTING JIG .....	5-13
5.11	REFERENTIAL TABLE .....	5-16
5.11.1	INTERNATIONAL UNIT .....	5-16
5.11.2	CONVERSION TABLE .....	5-17
5.12	INCLINE CONVERSION TABLE.....	5-19

**Note**

Typical model: Similar model

- SK17SR-3: CX17B, E18SR, SK15SR-3
- SK20SR-3
- SK27SR-3: CX27B, E27SR
- SK30SR-3: CX31B, E30SR
- SK35SR-3: CX36B, E35SR
- SK40SR-3
- SK50SR-3: CX50B, E50SR, SK55SR-3, CX55B

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**