

450 Series Three-Section Folding Grain Drill

**John Deere Des Moines Works
OMN200269 Issue L0
(This manual replaces OMN200269 A0)**

LITHO IN U.S.A.
ENGLISH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.



THIS MACHINE is of metric design. Measurements in this manual are metric with the customary U.S. measurement following. Use only metric hardware and tools as specified.


WRITE PRODUCT IDENTIFICATION NUMBERS in the space provided in the Specifications section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this

manual is kept on the machine, also file the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.

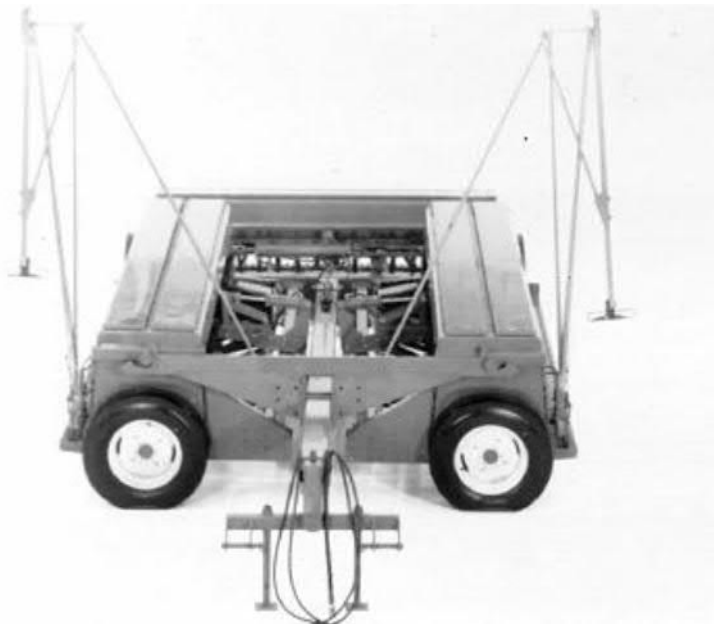

N90007H
-UN-23JAN90

Contents

| | Page | | Page |
|---|------|---|-------|
| Safety | 05-1 | Drilling Depth Adjustment | 30-5 |
| Preparing the Tractor | | Opener Down-Pressure Adjustment | 30-6 |
| All Tractors | 10-1 | Adding Ballast | 30-7 |
| Metering Valve Adjustment | 10-1 | Inside Scraper Adjustment-Single Disk Openers | 30-7 |
| Sway Blocks | 10-1 | Toe Scraper Adjustment-Single Disk Openers | 30-8 |
| Rockshaft Selector Lever Setting | 10-2 | Boot Adjustment-Single Disk Openers | 30-8 |
| Minimum Tractor Tire Size | 10-2 | Double-Disk Outside Scraper Adjustment | 30-9 |
| Tractor Drawbar | 10-3 | Disk Blades-Aluminum Boot | 30-10 |
| Selective Control Valve (SCV)-Drawn Models | 10-4 | TRU-VEE Opener Attachment Adjustment | 30-11 |
| Wide-Swing Drawbar-Support Installation | 10-4 | TRU-VEE Opener Gauge Wheel Tire Adjustment | 30-11 |
| Regular Drawbar-Support Installation | 10-5 | Depth Gauge Wheel Attachment Depth Adjustment | 30-12 |
| Front-End Tractor Ballast | 10-5 | Depth Gauging Press Wheel Adjustment | 30-12 |
| Selective Control Valve (SCV)—Semi-Integral Models | 10-6 | Spill Shield Setting | 30-13 |
| Preparing the Machine | | Grain Feeds-Fluted Feed Drills | 30-14 |
| Hitch Pins | 15-1 | Grain Shifter-Fluted Feed Drills | 30-14 |
| Tire Pressure | 15-1 | Seed Mixtures-Fluted Feed Drills | 30-15 |
| Calibrating Drill | 15-2 | Fluted Feed Cup Setting | 30-16 |
| Wheel Bolts | 15-2 | Feed Shaft Speed-Fluted Feed Drills | 30-16 |
| Grain Drill Lubrication | 15-2 | Extra Slow-Speed Drive Attachment-Fluted Feed Drills | 30-17 |
| Attaching and Detaching | | Seeding Charts-Fluted-Feed Drills | 30-17 |
| Attaching Drill-Drawn Models | 20-1 | Fluted-Feed Drills-7.5-in. (190 mm) Row Spacing | 30-18 |
| Detaching-Drawn Models | 20-2 | Fluted-Feed Drills-10-in. (254 mm) Row Spacing | 30-19 |
| External Raise/Lower Switch | 20-4 | Changing Partition-Model 452 Grain Drill | 30-19 |
| Attaching—Semi-Integral Models | 20-4 | Grain Only Partition Position | 30-20 |
| Detaching—Semi-Integral Models | 20-7 | Partition Position-40% Grain and 60% Fertilizer | 30-24 |
| Transporting | 25-1 | Feed Shaft Speed Setting-Fertilizer Drills | 30-25 |
| Operating the Machine | | Graduated Speed Drive Setting-Fertilizer Drills | 30-25 |
| Guidelines for Use | 30-1 | Density Meter and Fertilizer Charts | 30-26 |
| Leveling the Drill-Drawn Models | 30-1 | Fertilizer Charts | 30-27 |
| Leveling the Drill—Semi-Integral Models | 30-1 | Fertilizer Box Cleaning | 30-27 |
| Folding Drills-All Models | 30-2 | | |
| Unfolding Drills-All Models | 30-3 | | |
| Drill Alignment-All Models | 30-4 | | |

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMN200269 L0-19-04DEC90

COPYRIGHT© 1991
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright 1990 Deere & Company

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Contents

| | Page | | Page |
|--|-------------|--|-------------|
| Checking Feeds-Drills with Grass Seed Attachment | 30-29 | Troubleshooting | 45-1 |
| Setting Feed Shifter-Drills with Grass Seed Attachment | 30-29 | Service | |
| Mixture Usage with Grass Seed Attachment | 30-30 | Service Tires Safely | 50-1 |
| Seeding Chart Usage-Grass Seed Attachment | 30-30 | Metric Torque Chart | 50-2 |
| Spaced Grass Seed Attachment-7.5-in. (190 mm) | 30-31 | Inch Series Torque Chart | 50-3 |
| Spaced Grass Seed Attachment-10-in. (254 mm) | 30-32 | Tire Pressure | 50-4 |
| Density Meter Usage-Grain and Grass Seed Charts | 30-33 | Hitch Wheel Bolts and Wheel Bearings | 50-4 |
| Checking Quantities Drilled-Importance | 30-36 | Cylinder Removal | 50-5 |
| Checking Quantities Drilled-Method 1 | 30-37 | Bleeding Air from Cylinders | 50-6 |
| Checking Quantities Drilled-Method 2 | 30-38 | Reset Fluted-Feed Cups | 50-7 |
| Row Crop Drilling | 30-39 | Feed Shaft Rolling Tongue | 50-8 |
| Transport Lift Height-Gang Press Attachment | 30-41 | Gauge Wheel Arm Replacement—TRU-VEE Attachment | 50-9 |
| Down-Pressure Adjustment-Grag Press Attachment | 30-42 | Drive Chains | 50-10 |
| Gang Press Attachment Wheel Alignment | 30-43 | Fluted-Feed Drive Chains | 50-10 |
| Attachments | | Fertilizer Reed Wheel Replacement | 50-10 |
| Grass Seed Attachment | 35-1 | Single-Disk Boot Replacement | 50-11 |
| Gang Press Attachment | 35-1 | Single-Disk Replacement | 50-11 |
| Grain Agitator | 35-1 | Single Disk Reassemble | 50-12 |
| Cover Chains | 35-2 | Double-Disk Blades on Aluminum Boots | 50-13 |
| TRU-VEE Opener Attachment | 35-2 | Double-Disk Blades on Cast-Iron Boots | 50-14 |
| Depth Gauge Wheel Attachment | 35-3 | Inside Scraper Replacement | 50-15 |
| Extra-Slow Speed Drive—Double-Run Feed | 35-3 | Seed Tube Replacement—Double-Disk Opener | 50-15 |
| Extra-Slow Speed Drive—Fluted-Feed | 35-3 | Single-Disk Opener Seed Tube Replacement | 50-16 |
| Grain Feed Stop | 35-4 | Main Drive Shear Pin | 50-17 |
| Fertilizer Feed Stop | 35-4 | Storage | 55-1 |
| Grass Seed Feed Stop | 35-4 | Crime Prevention Tips | 60-1 |
| Depth Gauging Press Wheel Adjustment | 35-5 | Specifications | |
| Depth Bands-Aluminum Boots | 35-6 | Tractor Requirements | 65-1 |
| Depth Bands-Cast Iron Boots | 35-6 | Machine Specifications | 65-2 |
| Fertilizer Spouts | 35-7 | Drill Identification Number | 65-4 |
| Hydraulic Row Marker Attachment Adjustment | 35-7 | Hitch Number | 65-4 |
| Track Eradicator Attachment S-Tine Setting | 35-8 | Index | |
| Selector Valves | 35-9 | | |
| Fender Attachment | 35-9 | | |
| Row Marker Selector Control | 35-10 | | |
| Lubrication and Maintenance | 40-1 | | |

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-04JUN90

T81389 -UN-07DEC88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-04JUN90

TS187 -19-30SEP88

FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.



DX,READ -19-04JUN90

TS201 -UN-23AUG88



HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.



DX,FIRE1 -19-04JUN90

-UN-23AUG68
TS202

OPERATE SAFELY

DO NOT operate drill with more than one person on the tractor.

DO NOT allow anyone to ride on the drill.

DO NOT operate close to a ditch or creek.


Drive slowly over rough ground.

Shift the tractor into a lower gear when operating on steep slopes.

If your tractor is equipped with a ROLL-GARD® Safety Canopy and seat belt be sure to keep your seat belt fastened when operating or transporting the drill.

Handle and apply chemically treated seeds according to manufacturers recommendations. Properly dispose of unused treated seeds and their containers.

Always shut off tractor engine and shift to park when leaving tractor. Remove key when leaving tractor unattended.

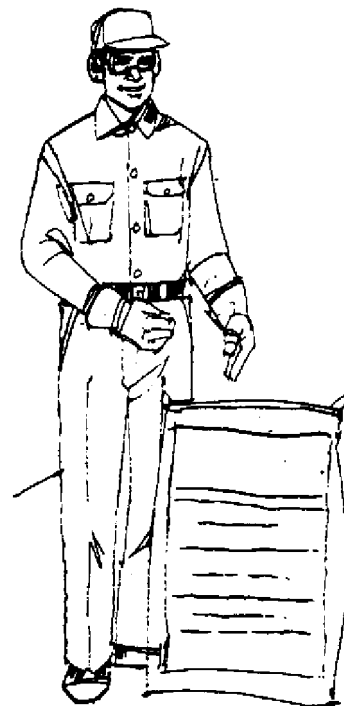

NX,450F,C1 -19-09JUN89

-UN-27SEP88
N36593




AVOID TIP-OVERS

Use a seat belt under almost all operating conditions.

Avoid holes, ditches, and obstructions which may cause the machine to tip, especially on hillsides.

Never drive near the edge of a gully or steep embankment—it might cave in.

Slow down for hillsides, rough ground, and sharp turns.

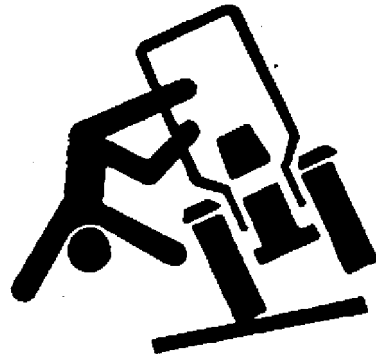


NX,450F,C2 -19-09JUN89

N39084 -UN-30MAR89

KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

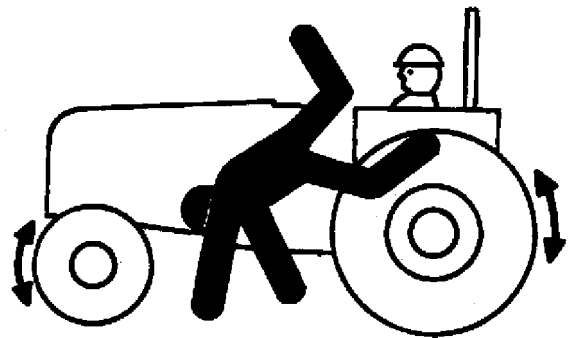

DX,RIDER -19-04JUN90


TS290 -UN-23AUG88

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

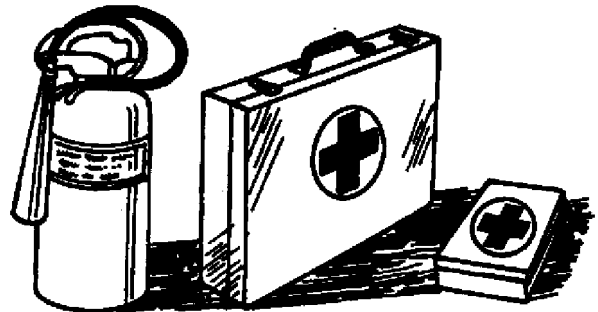


DX,FIRE2 -19-04JUN90

TS291 -UN-23AUG88

WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

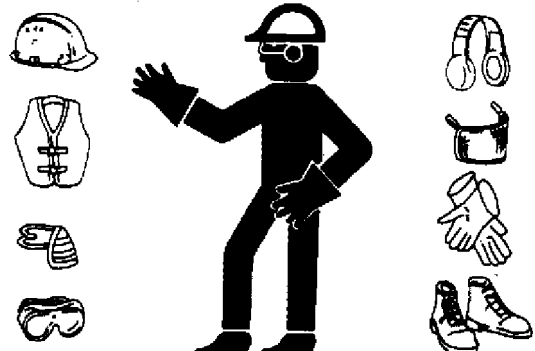

DX,WEAR2 -19-10SEP90

TS206 -UN-23AUG88



PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.



DX.NOISE -19-04JUN90

-UN-23AUG68
TS207

HANDLE CHEMICALS WISELY

Keep dust away from skin and hair.

Keep containers low when pouring.

Let the wind blow fumes away from you when mixing or filling.

Wear a filtered respirator if you cannot avoid dust.



NX.450F,C3 -19-09JUN89

-UN-04OCT88
N35988


Wear goggles to protect your eyes.

Wash exposed skin areas frequently—do not leave chemicals on your skin.

Do not smoke while handling chemicals.

Properly dispose of chemical containers, unused chemicals and left-over treated seed and fertilizer.

Read and observe manufacturer's recommendations.

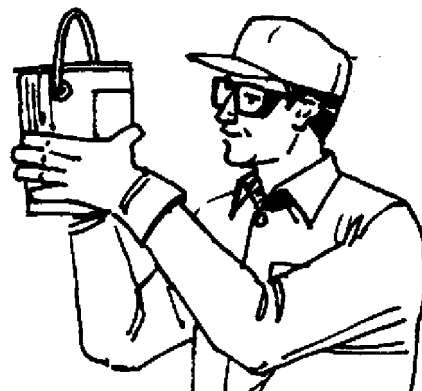


NX.450F,C4 -19-05DEC89

-UN-04OCT88
N35989



Store chemicals in a separate, plainly marked LOCKED building.

Store chemicals in original containers with labels intact.

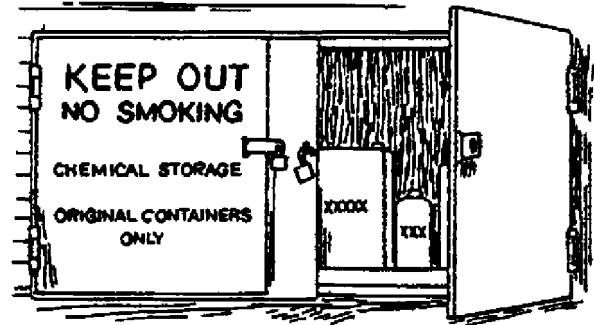

NX,450F,C5 -19-05DEC89


N36950 -19-13MAR89

USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driven on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

Flashing warning lights and turn signals are recommended whenever driving on public roads. To increase visibility, use the lights and devices provided with your machine. For some equipment, install extra flashing warning lights.

Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

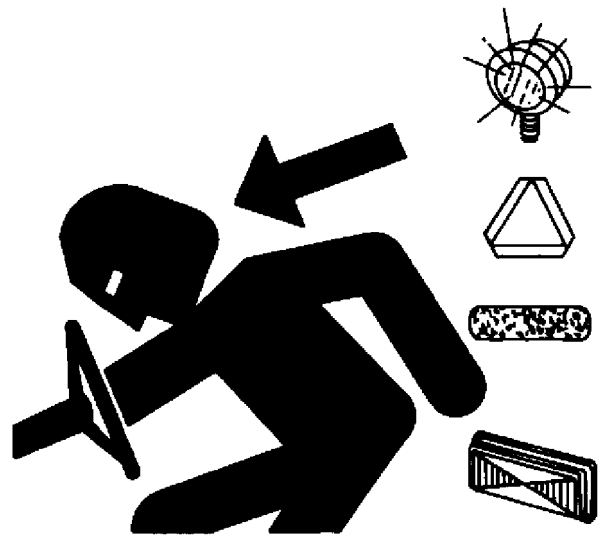

DX,FLASH -19-04JUN90


TS951 -UN-12APR90

USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

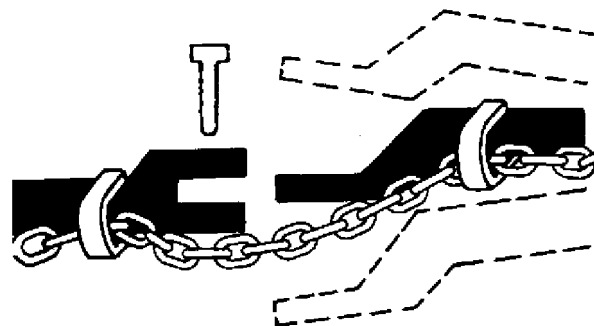

DX,CHAIN -19-04JUN90

TS217 -UN-23AUG88



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.


Thank you so much for reading



TRANSPORT SAFELY—DRAWN MODELS

Raise parking stand (A).

Install safety clevis (B) over cylinder rod and pin in place.

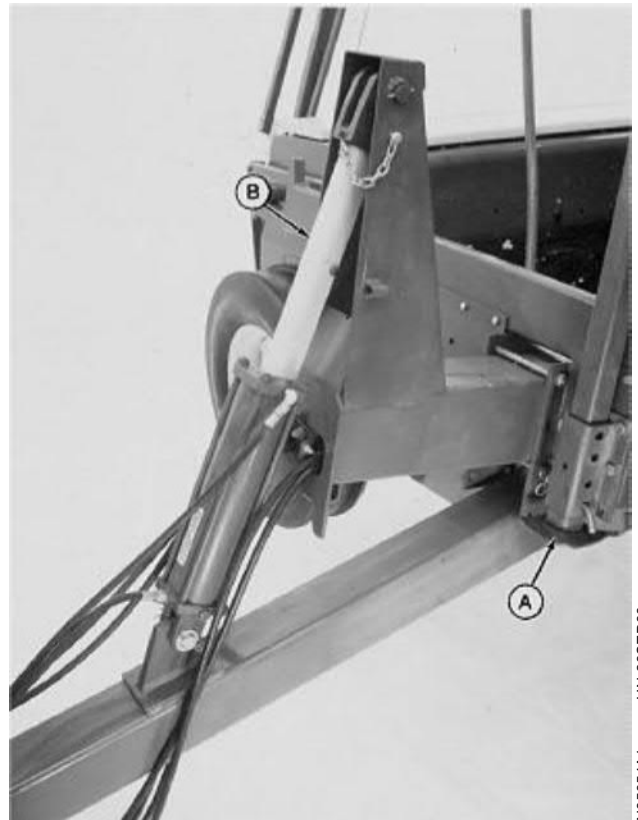


N65354A1 -UN-28SEP88

NX,450F,C6 -19-05DEC89

TRANSPORT SAFELY—SEMI-INTEGRAL MODELS

Raise parking stands (A).

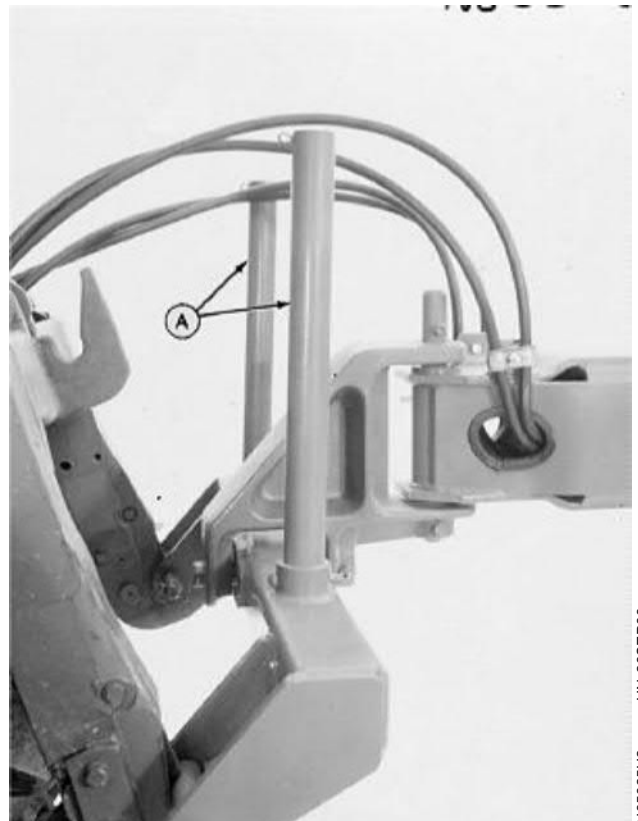

N65325H2 -UN-28SEP88

NX,450F,C7 -19-09JUN89



TRANSPORT SAFELY—ALL MODELS

Use proper ballast for tractor stability and operate safely.

Be sure to latch brakes together.

Shift tractor into lower gear when transporting down steep slopes or hills.

Travel at a safe and reasonable speed. Reduce speed when traveling over rough ground.

Keep SMV emblem and reflectors clean and visible from the rear.

When markers are used, be aware of overhead wires and KNOW the transport height and width of your machine.


NX,450F,C8 -19-12JUN89

REDUCE SPEED WHEN TOWING LOADS

Braking to stop towed loads from transport speeds can cause the towed load to swerve and upset. Reduce speed if towed load weighs more than the tractor and is not equipped with brakes.

Follow recommended speed-weight ratio guidelines:

- Maximum speed is 20 mph (32 km/h) when towing load equal to or less in weight than the tractor.
- Reduce speed to 10 mph (16 km/h) when towing load up to double the tractor weight.
- Do not tow loads exceeding double the tractor weight.
- Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

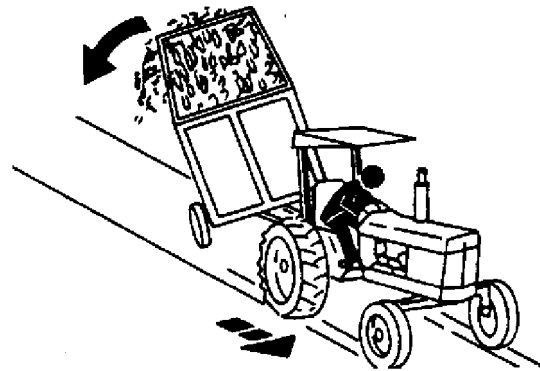

TS216 -UN-23AUG88

DX,TOW -19-04JUN90

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>