

# **750 Series Grain Drill**

**John Deere Des Moines Works**  
**OMN200120 Issue K4**  
**(This manual replaces OMN200120 K3)**

LITHO IN U.S.A.  
**ENGLISH**

# Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should

it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.



N42129L2 -UN-29SEP92

NX.750,3 -19-26SEP94

# Contents

	Page		Page
<b>Safety</b> . . . . .	05-1	<b>Transporting—Two-Unit Hitch</b>	
<b>Identification</b> . . . . .	10-1	Reference View-Transport Position . . . . .	40-1
<b>Preparing the Tractor</b>		Field-To-Transport . . . . .	40-2
Drawbar-Support Installation		Transport Safety . . . . .	40-3
Link Lengths . . . . .	15-1	<b>Convert To Field—Two-Unit Hydraulic Hitch</b> . . . . .	45-1
Sway Blocks . . . . .	15-2	<b>Convert to Field—Two-Unit Hitch</b>	
Regular . . . . .	15-2	Reference View-Transport-To-Field . . . . .	50-1
Wide-Swing . . . . .	15-3	Transport-to-Field Steps . . . . .	50-2
6000 Series Tractors . . . . .	15-4	<b>Convert To Transport—Two-Unit Hyd. Hitch</b> . . . . .	55-1
7000 Series Tractors . . . . .	15-4	<b>Convert to Transport—Two-Unit Hitch</b>	
Safety Chain . . . . .	15-5	Reference View-Transport Position . . . . .	60-1
Metering Valve Adjustment . . . . .	15-5	Field-to-Transport Steps . . . . .	60-2
Using Lever Lock Clip . . . . .	15-7	<b>Operating the Machine</b>	
Installing Lever Lock Clip . . . . .	15-7	Guidelines for Use . . . . .	65-1
<b>Preparing the Machine</b>		Opener Depth Adjustment . . . . .	65-2
Tire Air Pressure . . . . .	20-1	Adjusting Hydraulic	
Tractor Front End Weight Installation . . . . .	20-1	Down-Pressure-Closed Center . . . . .	65-3
Drill Lubrication . . . . .	20-2	Locking SCV Lever . . . . .	65-5
<b>Attaching and Detaching-Single Drill</b>		Opener Depth Down-Pressure Adjustment . . . . .	65-6
Drill to Tractor . . . . .	25-1	Spring Pressure-Press Wheel and	
Installing Hydraulic Hoses-7000 Series Tractors . . . . .	25-5	Closing Wheel Adjustment . . . . .	65-7
Attaching Machine to Tractor		Seed Boot Adjustment . . . . .	65-8
With Quick Coupler (Two-Point Hitch Only) . . . . .	25-8	Boot Spring Installation . . . . .	65-8
Without Quick Coupler (Two-Point Hitch Only) . . . . .	25-9	Closing Wheel Adjusting . . . . .	65-9
Drill from Tractor . . . . .	25-10	Spill Shield . . . . .	65-9
<b>Transporting Single Drill</b>		Fluted-Feed Cup Cleaning/Setting . . . . .	65-10
Empty Drill . . . . .	30-1	Grain Feed Check . . . . .	65-10
Drill Transport Weights . . . . .	30-1	Grain Shifter Setting . . . . .	65-11
Transporting the Drill . . . . .	30-2	Half-Speed Drive-Seed Rates . . . . .	65-11
<b>Transporting—Two-Unit Hydraulic Hitch</b> . . . . .	35-1	Mixture Use . . . . .	65-12
		Grain Seeding Charts . . . . .	65-12

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OMN200120 K4-19-26SEP94

COPYRIGHT© 1994  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION® Manual  
Previous Editions  
Copyright 1993, 1992, 1991, 1990, 1989, 1988 Deere & Company

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

Contents

	<b>Page</b>		<b>Page</b>
Half-Speed Drive Attachment-Fluted-Feed . . .	65-13	Implement Width . . . . .	70-18
Seeding Charts-Fluted-Feed Drills . . . . .	65-14	Number of Rows . . . . .	70-18
Density Meter With Grain and Grass		Row Spacing . . . . .	70-19
Seed Charts . . . . .	65-17	Alternate Opener Pattern . . . . .	70-19
Pounds of Seed Per Acre Chart . . . . .	65-20	Assemble and Attach Drive Disconnect . . . . .	70-21
Checking Quantities Drilled . . . . .	65-21		
Quantities Drilled		<b>Lubrication and Maintenance</b>	
Method 1 . . . . .	65-22	Extreme Pressure Grease . . . . .	75-1
Method 2 . . . . .	65-23	Alternative Lubricants . . . . .	75-1
Grass Seeding Feed Check . . . . .	65-24	Lubrication Symbol . . . . .	75-2
Setting Feed Shifter w/ Grass Seed		Lock-Up Openers . . . . .	75-2
Attachment . . . . .	65-24	Support Wheel Hub . . . . .	75-3
Mixture Use w/ Grass Seed Attachment . . . . .	65-25	Drive Wheel Hub . . . . .	75-3
Grain Seeding Charts . . . . .	65-25	Caster Wheel Hub . . . . .	75-3
Fertilizer Feed Shaft Speed . . . . .	65-28	Caster Wheel Pivot . . . . .	75-3
Fertilizer Drive Settings . . . . .	65-28	Rockshaft Bearings . . . . .	75-4
Density Meter and Fertilizer Charts . . . . .	65-29	Drive Wheel Rockshaft Bearings . . . . .	75-4
Fertilizer Charts . . . . .	65-30	Opener Disk Hubs . . . . .	75-4
Changing Partition-Fertilizer Box . . . . .	65-30	Drive Clutch . . . . .	75-4
Grain Only Partition-Grain Only . . . . .	65-31	Fertilizer Feed Shaft Bearings . . . . .	75-5
Cleaning Fertilizer Box . . . . .	65-35	Fertilizer Gear Case Oil Annual Check . . . . .	75-5
Set Marker Arm Length (Attachment) . . . . .	65-37		
Raising and Lowering Markers		<b>Troubleshooting</b> . . . . .	80-1
(Attachment) . . . . .	65-39		
Replacing Marker Arm Breakaway Bolt . . . . .	65-40	<b>Service</b>	
Bleeding Marker Arm Hydraulic Cylinders . . . . .	65-43	Service Tires Safely . . . . .	85-1
		Torque Charts	
<b>Attachments</b>		Metric Series . . . . .	85-2
Grass Seed Attachment . . . . .	70-1	Inch Series . . . . .	85-3
Single Point Hydraulic Down-Pressure		Preventing Contamination . . . . .	85-4
System . . . . .	70-1	Lock-Up Openers . . . . .	85-6
Marker Arm Attachment . . . . .	70-2	Fluted-Feed Cups Resetting . . . . .	85-6
Front Rank Lock-Ups . . . . .	70-2	Fertilizer Feed Wheel Replacement . . . . .	85-7
Attaching Front Rank Lock-Ups . . . . .	70-3	Gauge Wheel Installation . . . . .	85-8
Feed Stop		Opener Disk	
Grass Seed . . . . .	70-5	Bearing Replacement . . . . .	85-9
Fertilizer . . . . .	70-5	Replacement . . . . .	85-11
Grain-Fluted Feeds . . . . .	70-5	Bearing Replacement	
Grain Agitator . . . . .	70-6	Gauge Wheel . . . . .	85-12
Safety Chain		Press Wheel . . . . .	85-13
Rigid Hitch . . . . .	70-6	Closing Wheel . . . . .	85-14
Caster Hitch . . . . .	70-6	Opener Arm, Pivot Pin, and Bushing	
Two-Unit Hitch-Front Drill . . . . .	70-7	Replacement . . . . .	85-15
Two-Unit Hitch-Rear Drill . . . . .	70-7	Boot Replacement . . . . .	85-16
Half-Speed Drive . . . . .	70-7	Boot Strap Replacement . . . . .	85-18
750 No-Till Drill Monitor Kit-Remove Seed		Hydraulic Diagrams	
Tube . . . . .	70-11	Single Box-Active Down-Pressure . . . . .	85-19
Install Wiring Harness . . . . .	70-14	Separate Placement-Active	
Preparing Computer Trak 150 Monitor . . . . .	70-15	Down-Pressure . . . . .	85-20
Preparing Computer Trak 250 Monitor . . . . .	70-16	Single Point-Single Box . . . . .	85-22
Distance Calibration . . . . .	70-17		

Continued on next page

Contents

	<b>Page</b>
Hydraulic Diagrams—Continued	
Single Point-Separate Placement . . . . .	85-23
<b>Storage</b> . . . . .	90-1
<b>Specifications</b>	
Tractor Recommendations . . . . .	95-1
Machine Dimensions . . . . .	95-2
General Information . . . . .	95-5
Serial Number . . . . .	95-5
<b>Crime Prevention Tips</b> . . . . .	100-1
<b>Index</b>	

*Contents*

# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

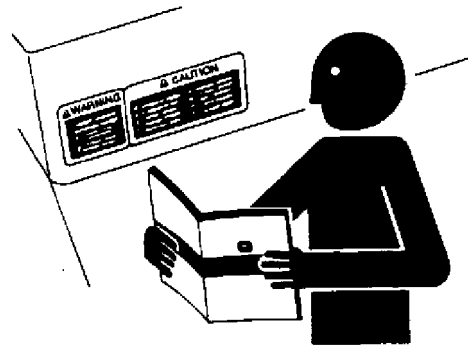

DX,READ -19-03MAR93


TS201 -UN-23AUG88



## OPERATE SAFELY

 Always keep hands away from opener blades during opener adjustment.

Always lock-up opener lift cylinder(s) before performing any maintenance or adjustments under machine.

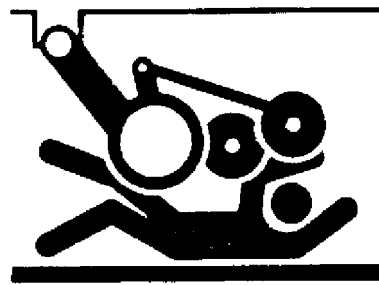

N39627 -UN-22SEP88


N39645 -UN-06OCT88

NX,750,C4 -19-21MAR89

## KEEP RIDERS OFF MACHINE

 Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

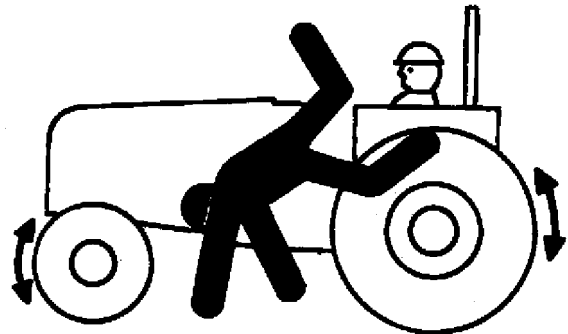

TS290 -UN-23AUG88


DX,RIDER -19-03MAR93

## PREPARE FOR EMERGENCIES

 Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

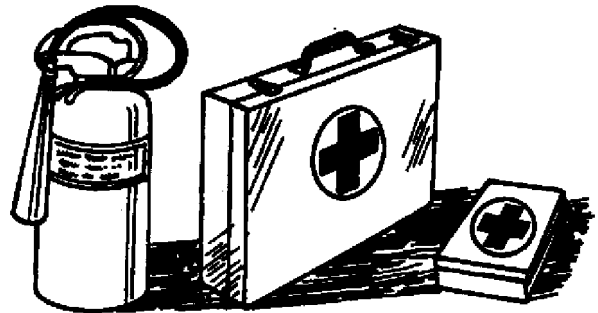

TS291 -UN-23AUG88


DX,FIRE2 -19-03MAR93



## WEAR PROTECTIVE CLOTHING

 Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

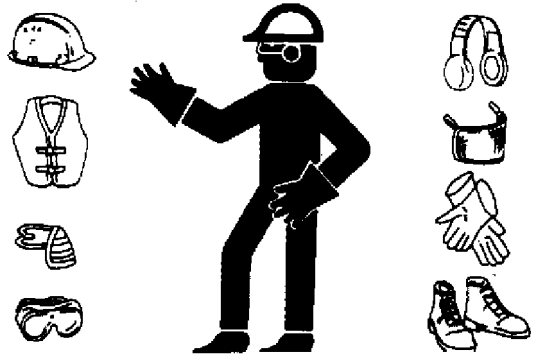

DX,WEAR2 -19-03MAR93

TS206 -UN-23AUG68


## HANDLE CHEMICAL PRODUCTS SAFELY

 Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)

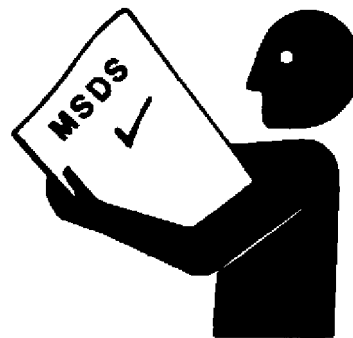

DX,MSDS,NA -19-03MAR93

TS1132 -UN-26NOV90



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**

 


## USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driven on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

Whenever driving on public roads, use flashing warning lights and turn signal according to local regulation. To increase visibility, use the lights and devices provided with your machine. For some equipment, install extra flashing warning lights.

Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

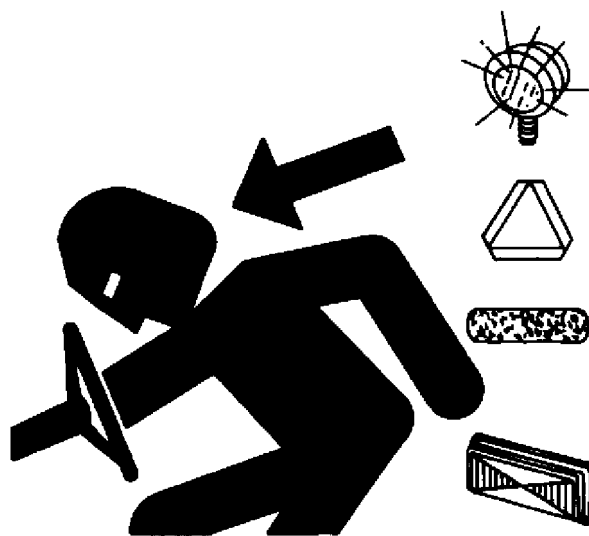

DX,FLASH -19-15MAR93


TS951 -UN-12APR90

## USE A SAFETY CHAIN

 A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

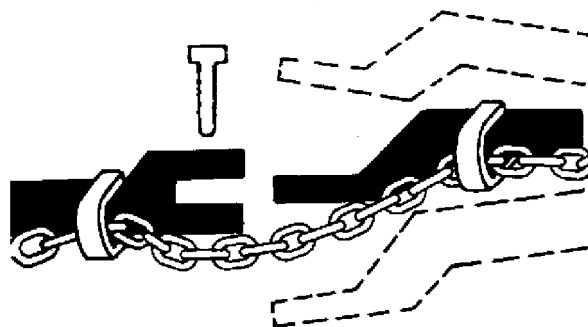

DX,CHAIN -19-03MAR93

TS217 -UN-23AUG88



## TRANSPORT SAFELY

Shift tractor into lower gear when transporting down steep slopes or hills.

Make sure reflectors and SMV emblem are easily visible from rear.

Stop slowly.

Remember transport width for 3.1 m (10 ft) models is 3.2 m (10 ft 6-in.).

 
Remember transport width for 4.6 m (15 ft) models is 4.7 m (15 ft 6-in.).

Always empty all seed and/or fertilizer before transporting drill. DO NOT exceed 16km/h (10 mph) if drill is not empty.

When transporting two unit hitch, DO NOT exceed 16 km/h (10 mph).

Always lock-up opener lift cylinder(s) before transporting drill. Hydraulic failure can allow openers to fall rapidly.

If drill is set up with marker arm attachment, be sure marker arms are raised and locked into position before transporting.

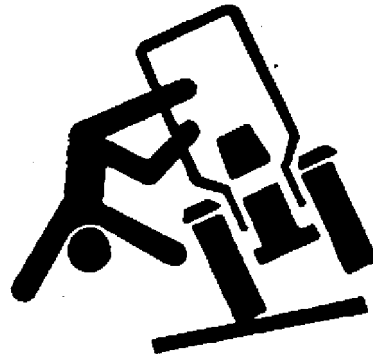

N39084 -UN-30MAR89

NXN,750,C5 -19-07OCT93

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**