

**787
AIR SEEDING
SYSTEM
(SERIAL NO.
N00787X000172-)**



**OPERATORS MANUAL
787 AIR SEEDING SYSTEM (SERIAL
NO. N00787X000172-)**

OMN200371 I2 English

**JOHN DEERE DES MOINES WORKS
OMN200371 I2**

LITHO IN THE U.S.A.
ENGLISH



Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are metric with the customary U.S. measurement following.

 
RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS in the Specifications section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.

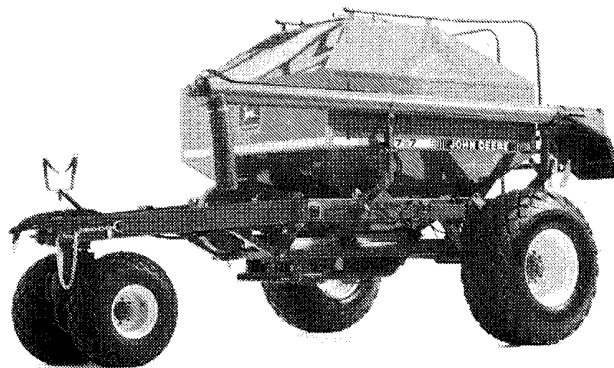

787 Tow-Behind Seed Cart

N43921 -JUN-28OCT91

Contents

	Page		Page
Safety	05-1	Adjusting Plenum Dampers and Manifold Valves (Double Shoot)	20-18
Safety Signs	10-1	Setting Meter Rate	20-19
Preparing the Tractor		Product Listing	20-20
Determining Tractor Requirements	15-1	Rate Charts	
Tractor Hydraulic System Requirements	15-2	Fine Roller	20-21
Securing 3-Point Hitch	15-2	Coarse Roller	20-31
Adjusting Metering Valves	15-3	Calculating Equivalent Rate (Air Velocity) ...	20-41
Install Lever Lock Clip	15-3	Using Air Velocity Chart	20-42
Positioning Drawbar	15-3	Air Velocity Chart	
Convenience Outlet—55 and 60 Series Tractors	15-4	11-51-0 Fertilizer	20-43
Checking Monitor and Switch Unit	15-5	46-0-0 Fertilizer	20-44
		Wheat	20-45
		Canola	20-46
		Lentils	20-47
		Peas	20-48
Preparing the Machine		Preparing and Operating Monitor	
Check Tire Pressure—Air Seeder Cart	20-1	Identifying Monitor Switches	25-1
Checking Wheel Attaching Hardware and Bearings	20-1	Identifying Monitor Displays	25-2
Clean Fan Screen	20-1	Monitor	
Changing Tillage Equipment	20-2	Preparing	25-3
Checking Air Dampers and Manifold Valves—Single Shoot	20-2	Start-Up	25-3
Checking Air Manifolds, Meter Boxes and Rollers	20-3	Preparing—Units of Measure	25-4
Preparing To Operate Auger	20-7	Preparing—Implement Width	25-5
Adjusting Product Divider Blades	20-8	Determining Ground Speed Value—Field Calibration	25-6
Understanding Meter Settings	20-9	Preparing Monitor	
Using Pounds of Seed Per Acre Chart	20-10	Speed Calibration Value	25-7
Pounds of Seed Per Acre—Soybeans	20-12	Single/Double Shoot	25-8
Seeds Per Foot of Row—Soybeans	20-12	Tow-Between/Tow-Behind	25-9
Pounds of Seed Per Acre For Desired Plants Per Acre—Sunflowers	20-13	Setting High Speed Fan Alarm Threshold ...	25-10
Adjusting For Seed Germination—Soybeans and Sunflowers	20-13	Monitoring	
Determining Meter Rate Setting	20-14	Seed Cart Activity	25-11
Confirming Meter Rate Setting	20-15	Displaying and Clearing Accumulated Area and Sub-Area	25-12
Measuring Product Density	20-16	Understanding Air Flow Readings	25-13
Using Front and Rear Tanks	20-17	Understanding Alarms and Error Codes ...	25-14
		Receiving Simultaneous Alarms and Recalling Past Alarms	25-15
		Understanding Air Flow Alarms	25-16

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMN200371 I2-19-31AUG92

COPYRIGHT® 1992
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Contents

	Page		Page
Adjusting Front Air Flow Alarm Set Point	25-16	Transporting	
Adjusting Rear Air Flow Alarm Set Point	25-17	Attach Safety Chain to Tractor	35-1
Disabling Alarms	25-17	Using Warning Lights	35-1
Disabling/Enabling		Keep Riders Off Machine	35-1
Front Alarm	25-18	Follow Safe Transport Procedures	35-2
Rear Alarm	25-18	Transport Auger	35-3
Monitoring Product Application Rates	25-19	Positioning Hitch Jack for Transport	
Disabling/Enabling		Tow Between Cart	35-3
Front Application Rate (Delivery) Alarm	25-20	Tow Behind Cart	35-3
Rear Application Rate (Delivery) Alarm	25-21	Locking Up Depth Control	35-4
Programming Monitor For Application		Operating the Machine	
Rate Display		Checking Metering	
Front Product Type	25-22	Stationary Test	40-2
Rear Product Type	25-22	Field Test	40-6
Front Product Density	25-23	Tank Capacity By Weight—100% Full	40-7
Rear Product Density	25-24	Filling Seed Tanks	40-7
Calculating Rate Display Setting	25-25	Emptying Seed Tanks	40-9
Adjusting Rate Display		Operating Guidelines	40-13
Front	25-26	Setting Selector Valve	40-14
Rear	25-26	Preparing to Operate Machine In Field	40-14
Programming Monitor For Application		Determining Fan Speed	40-14
Rate Display		Setting Fan Speed	40-15
Front Roller Type	25-27	Operating Seeder Switches	40-16
Rear Roller Type	25-28	Remote Seeder Switch	40-16
Front Number of Runs	25-28	Operating In the Field	40-17
Rear Number of Runs	25-29		
Reprogramming Monitor to Display Meter		Lubrication and Maintenance	45-1
Shaft RPM	25-29		
Confirming Front Bin Depth Value	25-30	Troubleshooting	50-1
Confirming Rear Bin Depth Value	25-30		
Calibrating Bin Level Indicators	25-31	Service	
Error Codes		Using Safe Service Procedures	55-1
Communication	25-31	Stay Clear of Air Hoses	55-1
Sensor Failure	25-32	Keep Shields In Place	55-1
Monitor	25-32	Keep Service Area Clean	55-2
Remote Module	25-33	Tightening Hardware	55-2
Digital Display Codes	25-34	Unified Inch Bolt and Cap Screw Torque	
		Values	55-3
Attaching and Detaching		Metric Bolt and Cap Screw Torque	
Attaching		Values	55-4
Machine to Tractor (Seeding Tool or		Checking Wheel Attaching Hardware and	
Tow Between Cart)	30-1	Bearings	55-5
Air Seeder to Seeding Tool (Tow		Service Tires Safely	55-5
Behind Cart)	30-3	Common Circuit Test	55-6
Hand Signals	30-5	Testing	
Attaching Seeding Tool to Air Seeder		Fan RPM Sensor	55-7
(Tow Between Cart)	30-6	Ground Speed/Area Sensor	55-8
Checking Depth Control Operation	30-8		
Checking Fan Operation	30-9		
Checking Wing Fold Operation	30-10		
Detaching	30-11		

Continued on next page

Contents

	Page
Testing—Continued	
Meter Shaft RPM Sensors	55-9
Air Flow Sensors	55-10
Bin Level Sensors	55-11
Main Electric Clutch	55-12
Interdrive Solenoids	55-13
Monitor and Switch Unit Wiring Diagram	55-14
Prevent Hydraulic System Contamination ...	55-15
Repair Fan/Auger Selector Valve	55-16
Disassemble, Inspect and Repair	
Fan Motor	55-18
Auger Control Valve	55-20
Repair Auger Motor	55-22
Hydraulic Schematic	
Seed Cart	55-24
Auger Hydraulics	55-25
Clean Fan	55-26
Storage	60-1
Specifications	
Machine Specifications	
230 Bushel	65-1
170 Bushel	65-2
Repair	65-3
Tractor	65-3
Serial Number	65-4
Crime Prevention Tips	70-1
Index	

 
Contents

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

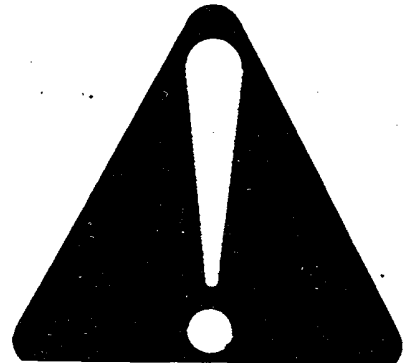

DX,ALERT -19-04JUN90

T81389 -UN-07DEC88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-09JAN92

TS187 -19-30SEP88

 
FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

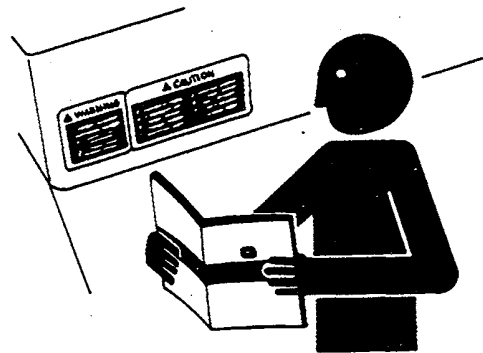

DX,READ -19-04JUN90

TS201 -UN-29AUG88



OPERATE SAFELY

Clear area around machine before raising or lowering machine or wings.

Stop tractor on level ground when raising or lowering wings.

DO NOT enter tank unless another person is present and hydraulic hoses are disconnected from tractor.

Operate machine from the tractor seat only.

 
Lock auger in transport position before operating in the field.

Do not operate with wings raised.

Do not operate close to a ditch or creek.

Slow down when turning or traveling over rough ground.

Shut off tractor and shift to "Park" or set brakes when leaving tractor. Remove key when leaving tractor unattended.

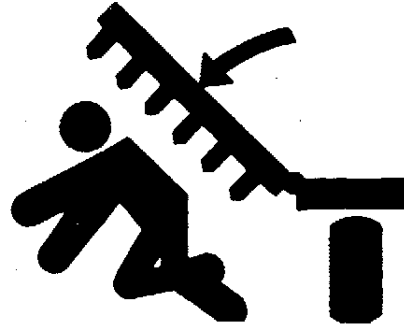

1N4,777C,A28 -19-18DEC91

1N4,777C,A28 -19-18DEC91

STAY CLEAR OF AIR HOSES

Stay clear of hoses when air seeder fan is running. Seed or fertilizer blowing out at high speed can cause blindness and other personal injuries.

Never attempt to clear blockage from air hoses or seeding tool boots while fan is running.



1N4,610STC,A18 -19-14OCT88

1N4,610STC,A18 -19-14OCT88



 
USE A SIGNAL PERSON

Use a signal person to direct movement of the tractor/seed cart/seeding tool combination, whenever the tractor operator's view is obstructed.

Designate one individual as THE signal person. Always have signal person stand in clear view. Be sure signal person stays a safe distance away from the machine when it is moving.

Prior to starting the tractor, discuss hand signals and what each signal means to avoid misunderstandings and confusion which could result in a serious injury or fatal accident for someone.

Keep all bystanders away whenever the machine is moved.

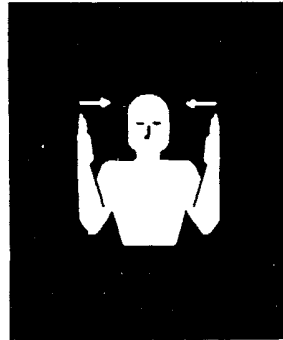

-UN-11DEC91

N43984

NX,787C,A2 -19-18DEC91

KEEP SHIELDS IN PLACE

Do not operate air seeder without safety shields in place.

Rotating parts can crush or dismember causing death or personal injury.

Shut off tractor and disconnect hydraulic hose before remove shields for adjustment or service.



-UN-23AUG88

TS268

 
1N4,777C,A32 -19-01FEB89




PARK SAFELY

Park machine on a level surface and block wheels.

Secure hitch jack(s) with pin(s).

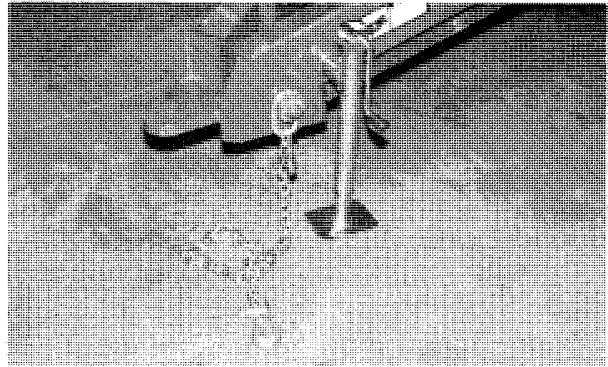

Tow Between

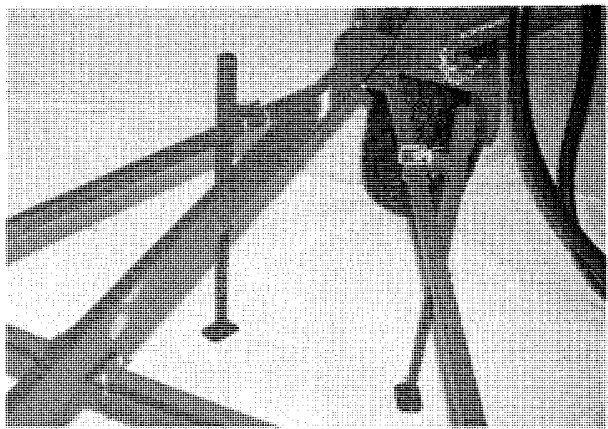 

Tow Behind

N43909 -JUN-28OCT91

 
N40768 -JUN-28NOV90

NX,787C,A1 -19-25OCT91

WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

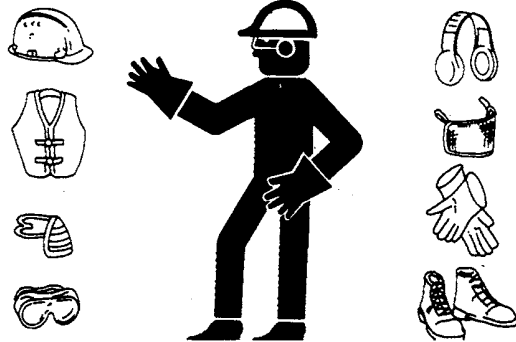

DX,WEAR2 -19-10SEP90

T5206 -JUN-23AUG88



HANDLE PESTICIDES AND FERTILIZERS CAREFULLY

Keep dust away from skin and hair.

Keep containers low when pouring.

Let the wind blow fumes away from you when mixing with seed or when filling tank.

Wear a filtered respirator if you cannot avoid dust.

Wear goggles to protect your eyes.

Wash exposed skin areas frequently—do not leave pesticide on your skin.

 
Do not smoke while handling pesticides.

Properly dispose of pesticide container, unused pesticide and left-over treated seed and fertilizer.

Read and observe manufacturers recommendations.

Store pesticides in a separate, plainly marked LOCKED building.

Store pesticides in original containers with labels intact.

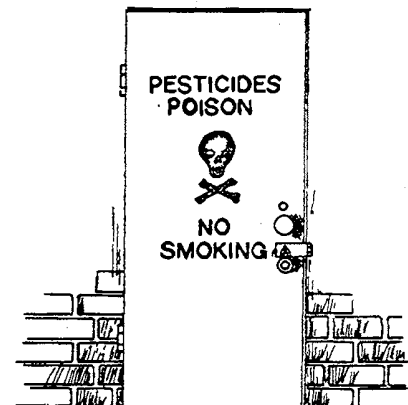

N35988 -JUN-04/OCT88

N35989 -JUN-04/OCT88

N39983 -19-31/JAN89

N04,655C,A -19-05/APR84



KEEP RIDERS OFF MACHINE

Keep riders off.

Riders are subject to injury such as being struck by foreign objects and being thrown off the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.



1N4,810C,A2 -19-21JUN98

 
N40002 -JUN-28SEP88

USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driven on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

Flashing warning lights and turn signals are recommended whenever driving on public roads. To increase visibility, use the lights and devices provided with your machine. For some equipment, install extra flashing warning lights.

Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

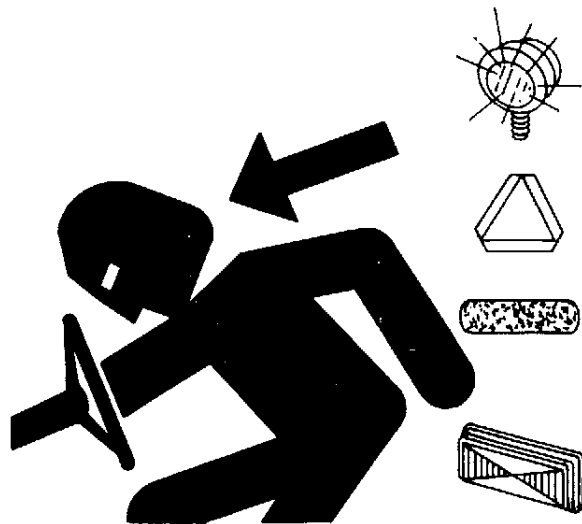

DX,FLASH -19-04JUN90


TS951 -JUN-12APR90

USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

 See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

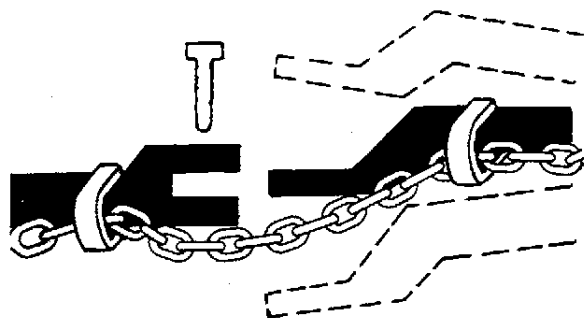

DX,CHAIN -19-04JUN90

TS217 -JUN-23AUG88



TRANSPORT SAFELY

Keep away from overhead power lines. Serious injury or death may result. Know the transport height of your machine.

Always fold wings fully. If wing fold cylinders are removed, chain wings together to prevent accidental lowering.

Install transport lockups on depth control cylinders.

ALWAYS travel at a reasonable and safe speed.

Use transport hitch when traveling without seeding tool (tow behind models).

DO NOT use transport hitch with material in tank.

NEVER transport with air seeder fan running.

 
ALWAYS lock auger in transport position.

NEVER transport with meter shafts engaged.

Shift the tractor into a lower gear when transporting down steep slopes or hills.

Latch the tractor brakes together.

Stop slowly.

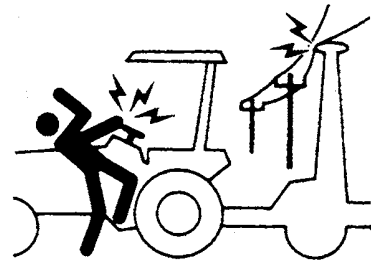

1N4,777C,A30A -19-09SEP91

 
N39394 -JUN-06OCT88

SERVICE MACHINE SAFELY

To help prevent personal injury caused by unexpected movement, be sure to service machine on level surface.

If machine is connected to tractor, engage parking brake and/or place transmission in "PARK", shut off engine and remove key.

If machine is detached from tractor, block wheels and use safety stands to prevent movement.

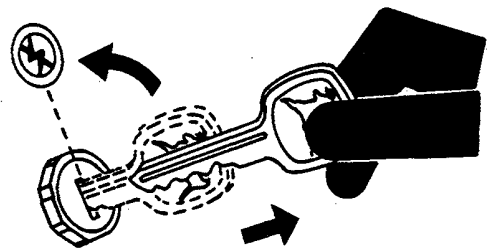

1N4,777C,A31 -19-11FEB88

TS230 -JUN-24MAY89



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading



PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate or service machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



-UN-23AUG88

T5218

DX,SERV -19-04JUN90

 
AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

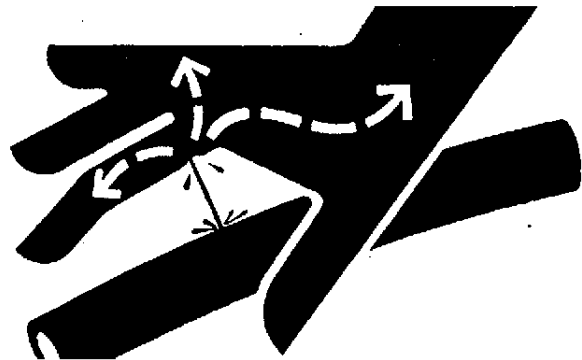

-UN-23AUG88

X9811

DX,FLUID -19-09AUG91



SERVICE TIRES SAFELY

 
Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job.

Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.

When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts.

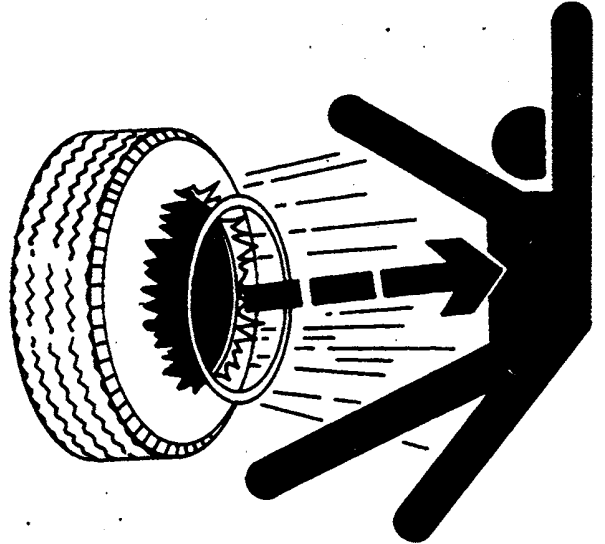

DX,RIM

-19-24AUG90

TS211
-JUN-29AUG88

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>