

38, 48, and 54-Inch Commercial Walk-Behind Mowers

(Serial No. 050001 –)

OPERATOR'S MANUAL

**John Deere
Lawn & Grounds Care Division
OMM124224 J5**

North American Version
Litho in U.S.A
English

TABLE OF CONTENTS

	Page
Safety Signs	
Safety-Alert Symbol.....	1
Machine Safety Labels	1
Controls	
Console Controls	3
Mower Levers	4
Engine Controls	5
Operating The Machine	
Operate Safely.....	6
Operate Sulky Safely.....	7
Park Safely	7
Avoid Tipping.....	7
Keep Riders Off	9
Operator Training Required.....	9
Wear Appropriate Clothing	9
Using Controls	10
Starting Engine	15
Stopping Engine	18
Daily Operating Checklist	19
Testing Safety System.....	19
Avoid Damage To Plastic And Painted Surfaces.....	22
Operating The Mower	
Check Ground Conditions.....	23
Avoid Injury From Contacting Blades	23
Leveling Mower Side-To-Side.....	24
Leveling Mower Front-To-Rear.....	25
Adjusting Level–Early Models.....	26
Adjusting Level–Late Models.....	26
Adjusting Cutting Height And Gauge Wheels–Early Models ..	27
Adjusting Cutting Height And Gauge Wheels–Late Models ..	28
Checking Blade Stop Time	28

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

TABLE OF CONTENTS

	Page
Operating The Mower (Continued)	
Daily Operating Checklist (Mowing)	30
Starting To Mow	31
Travel Speeds	32
Traction Drive	33
PTO Switch	34
Turn And Service Brakes	35
Grass Catcher	36
Transporting	37
Lawn Care	
Mowing Tips	38
Mowing Slopes	39
Trimming Tips	39
To Avoid Scalping	39
After Mowing	40
Bagging Tips	40
Bagging And Composting	41
Mulching Tips	41
Replacement Parts	
WE RECOMMEND JOHN DEERE quality parts and lubricants, available at your John Deere dealer.	43
Service Machine Safely	
Practice Safe Maintenance	44
Wear Appropriate Clothing	44
Service Intervals	47

TABLE OF CONTENTS

	Page
Service - Engine	
Avoid Fumes.....	48
Engine Oil	48
Changing Engine Oil.....	49
Changing Engine Oil Filter.....	50
Cleaning Air Intake Screen.....	51
Cleaning Air Cleaner Foam Element.....	52
Replacing Paper Element.....	53
Choke Adjustment	54
Adjusting Carburetor.....	55
Changing Fuel Filter	56
Service - Transmission	
Transmission Oil	57
Checking Oil Level.....	57
Changing Oil.....	58
Replacing Belt.....	59
Gear Selector Neutral Adjustment.....	60
Service - Mower	
Grease.....	61
Avoid Injury From Contacting Blades	62
Lubricate Front Wheel Spindles And Front Wheel Bearings	62
Lubricate Rear Gage Wheels	63
Lubricate Mower Spindle Bearings.....	63
Lubricate Crank Bushing—Early Models.....	63
Lubricating Idler Arm Bushing (38-Inch Mower)	64
Inspecting Blades	64
Checking Mower Blades	65
Adjusting PTO Clutch	66
Sharpening Blades	67
Balancing Blades	67
Belt Shields.....	68
Replacing Mower Belt.....	70

TABLE OF CONTENTS

	Page
Service - Electrical	
Cleaning Or Replacing Battery.....	72
Checking Battery Electrolyte Level	73
Charging The Battery	74
Charging Rates	76
Using Booster Battery	77
Replacing Fuse	78
Cleaning And Gapping Spark Plug	78
Service - Miscellaneous	
Checking Tire Pressure.....	79
Adjusting Tire Pressure.....	80
Refueling Machine	81
Filling Fuel Tank	82
Adjusting Neutral Lock	83
Troubleshooting	
Using Troubleshooting Chart	84
Engine	84
Mower	87
Storing Machine	
Storing Safety.....	89
Storing Power Unit	90
Storing Mower.....	91
Removing Mower From Storage	91
Assembly	
Assembly For Early Model Mowers.....	92
Early Model Mowers – Install Caster Wheel Assemblies And Left Mower Arm	92
Early Model Mowers – Install Chute.....	93
Early Model Mowers – Install Rod.....	94

TABLE OF CONTENTS

	Page
Assembly (Continued)	
Assembly For Late Model Mowers	95
Late Model Mowers (48 And 54-inch) – Install Chute	97
Take Power Unit Out Of Crate	98
Fasten Mower To Power Unit	99
Adjust Oscillation Stop Bolts	101
Add Engine Oil	101
Activate Battery	102
Checking Tire Pressure	105
Lubricate Front Wheel Spindles And Front Wheel Bearings	106
Leveling Mower Side-To-Side	106
Leveling Mower Front-To-Rear	108
Specifications	
Engine Specifications	109
Machine Specifications	111
Recommended Lubricants	112
Metric Bolt and Cap Screw Torque Values	113
Unified Inch Bolt and Cap Screw Torque Values	116
Warranty Information	
Product Warranty	119
Limited Engine Warranty	119
Limited Battery Warranty	124

TABLE OF CONTENTS

	Page
John Deere Service Literature Available	
Order Form.....	125

All information, illustrations and specifications in this manual are based on the latest information at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT© 1995
John Deere Horicon Works
All rights reserved
Previous Editions
COPYRIGHT© 1994, 1993, 1992, 1991,
and 1990

SAFETY SIGNS

 
Safety-Alert Symbol

Read and recognize safety information. Be alert to the potential for personal injury when you see this safety-alert symbol.


On your machine safety labels, the words DANGER, WARNING, and CAUTION are used with this safety-alert symbol. DANGER identifies the most serious hazards. In this manual, the word CAUTION and this symbol call attention to safety messages.



Machine Safety Labels

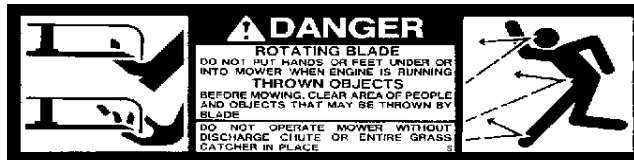


M38613

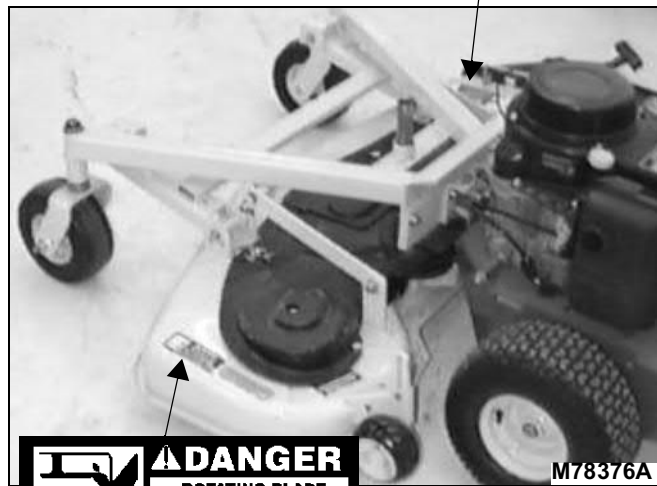 

M38614

 SAFETY SIGNS

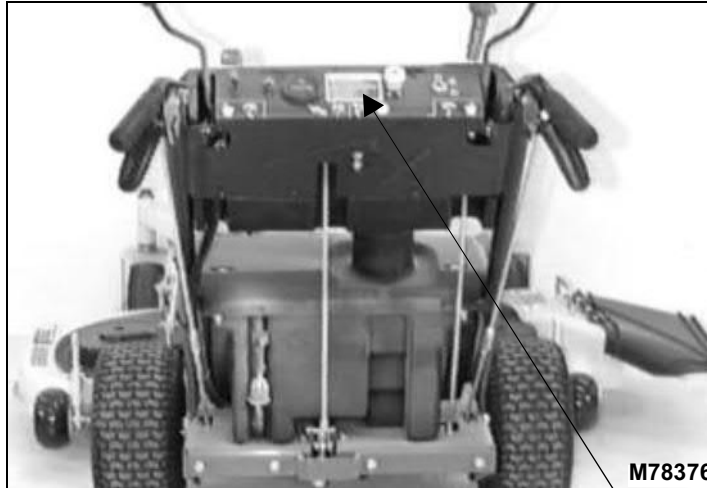

▲WARNING



SULKY

- DO NOT DRIVE ACROSS DITCHES
- SLOW DOWN FOR BUMPS AND HOLES

UNHITCH SULKY TO AVOID INJURY

On Sulky M73466

▲ CAUTION

 
HELP AVOID INJURY

- OPERATOR TRAINING REQUIRED
- KNOW CONTROLS BEFORE OPERATING
- CLEAR AREA OF PEOPLE AND ANIMALS
- STOP ENGINE WHENEVER YOU LEAVE THE MOWER
- KEEP ALL SHIELDS AND SAFETY DEVICES IN PLACE
- READ OPERATORS MANUAL

M73297

CONTROLS


Console Controls

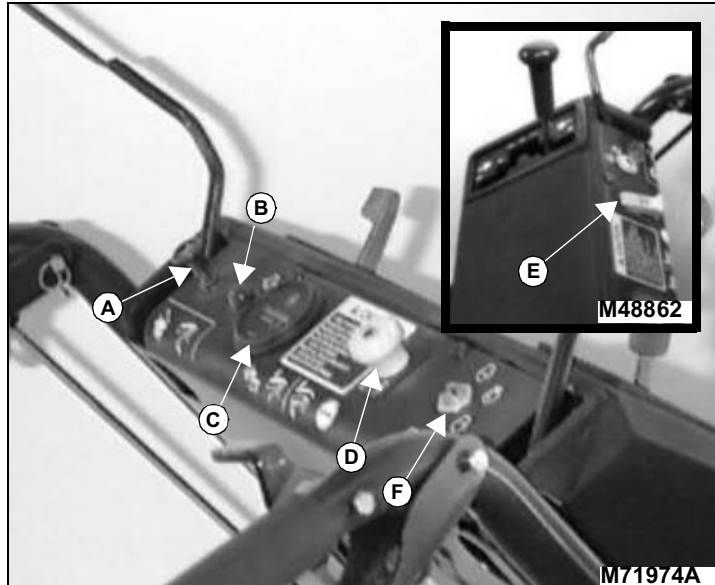

Title	Description
A – Choke Knob	Chokes engine for starting.
B – Low Oil Pressure Indicator	
C – Hour Meter	Hours machine has been run.
D – PTO Switch (Late Models) E – PTO Switch (Early Models)	Engages mower.
F – Key Switch	Starts engine.

CONTROLS

 Mower Levers

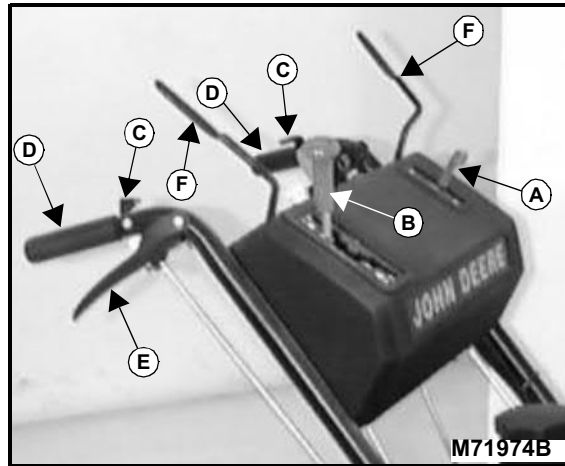

Title	Description
A – Throttle Lever	Controls engine speed.
B – Shift Lever	Changes gears.
C – Neutral Lock	Holds turn/service brake levers in the neutral position.
D – Handle Bars	
E – Turn/Service Brake Levers	Controls direction of travel and stopping.
F – Traction Lever/Park Brake	Controls wheels equally./ Engages park brake.

CONTROLS


Engine Controls



Title	Description
A – Starter Handle (Recoil Start)	Starts engine.
B – Fuel Shutoff	Controls fuel flow.

OPERATING THE MACHINE

 
Operate Safely

- Inspect machine before you operate. Be sure hardware is tight. Repair or replace damaged, badly worn, or missing parts. Be sure guards and shields are in good condition and fastened in place. Make any necessary adjustments before you operate.
- 
- Check brake action before you operate. Adjust or service brakes as necessary.
 - Clear work area of objects that might be thrown. Keep people and pets out of the work area. Stop machine if anyone enters the area.
 - If you hit an object, stop the machine and inspect it. Make repairs before you operate. Keep machine properly maintained and in good working order. Keep all shields and guards in place.
 - DO NOT leave machine unattended when it is running.
 - Only operate during daylight or with good artificial light.
 - Be sure of footing. Be especially careful when you pull machine backwards with the engine running.
 - DO NOT mow wet grass. Reduced traction could cause you to slip.
 - Keep a firm hold on the machine handles.
 - Be careful of traffic when operating near or crossing roadways.
 - Do not wear radio or music headphones while operating the machine. Safe operation requires your full attention.

OPERATING THE MACHINE

Operate Sulky Safely

- Use sulky ONLY on EVEN terrain for mowing mostly in a straight line.
- Be careful when you drive sulky and mower through a dip. Handlebars may hit you, ESPECIALLY when you make a turn.

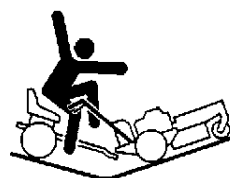

Park Safely

- Stop machine on a level surface, not on a slope.
- Disengage PTO
- Engage park brake.
- STOP engine.
- Remove key.
- Before you leave the machine, wait for engine and all moving parts STOP.

Avoid Tipping

- DO NOT use sulky or grass catcher on slopes or uneven ground.
- Stay alert for holes and other hidden hazards in the terrain.
- Keep away from drop-offs.
- Slow down before you make a sharp turn or operate on a slope.
- Drive up and down a hill - not across. Be careful when you change direction on a slope.
- DO NOT stop when going up hill or down hill. If machine stops going up hill, STOP PTO and back down slowly.
- DO NOT mow a steep slope where you cannot maintain firm footing and control of the mower.
- If operating with a sulky, DO NOT try to stabilize the machine by putting your foot on the ground.



Suggest:

If the above button click is invalid.

Please download this document

 
first, and then click the above link

to download the complete manual.

Thank you so much for reading

OPERATING THE MACHINE

Rotating Blades Are Dangerous - Protect Children and Prevent Accidents

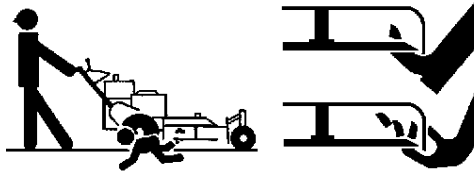

PROTECT CHILDREN:

- Never assume that children will remain where you last saw them. Children are attracted to mowing activity, stay alert to the presence of children.
- Keep children in the house when you are operating the machine.
- Turn machine off if a child enters the area.
- Use extra care when you come to blind corners, shrubs, trees, or other objects that may block your vision.
- DO NOT let children or an untrained person operate the machine.

HELP PREVENT SERIOUS OR FATAL ACCIDENTS:

- Be alert at all times, people especially children can move quickly into the area before you know it.
- Back carefully. Shut off PTO and look behind the machine carefully, ESPECIALLY FOR CHILDREN, before you back up.
- DO NOT mow in reverse unless it is absolutely necessary.
- Shut off PTO when you are not mowing.
- DO NOT operate machine if you are under the influence of drugs or alcohol.
- Keep hands, feet, and clothing away from rotating blades.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>