 


JOHN DEERE
WORLDWIDE COMMERCIAL & CONSUMER
EQUIPMENT DIVISION

Tractor Loader Backhoe
110

OMLVU13606 D2

OPERATOR'S MANUAL

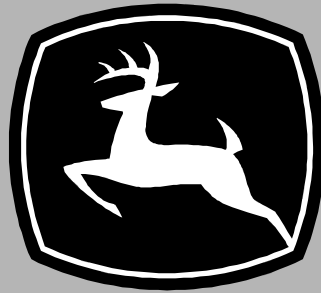

JOHN DEERE

⚠ WARNING: Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

California Proposition 65 Warning

North American Version
Litho in U.S.A.

INTRODUCTION

Thank You for Purchasing a John Deere Product

We appreciate having you as a customer and wish you many years of safe and satisfied use of your machine.

Using Your Operator's Manual

This manual is an important part of your machine and should remain with the machine when you sell it.

Reading your operator's manual will help you and others avoid personal injury or damage to the machine. Information given in this manual will provide the operator with the safest and most effective use of the machine. Knowing how to operate this machine safely and correctly will allow you to train others who may operate this machine.

If you have an attachment, use the safety and operating information in the attachment operator's manual along with the machine operator's manual to operate the attachment safely and correctly.

This manual and safety signs on your machine may also be available in other languages (see your John Deere dealer to order).

Sections in your operator's manual are placed in a specific order to help you understand all the safety messages and learn the controls so you can operate this machine safely. You can also use this manual to answer any specific operating or servicing questions. A convenient index located at the end of this book will help you to find needed information quickly.

The machine shown in this manual may differ slightly from your machine, but will be similar enough to help you understand our instructions.

RIGHT-HAND and LEFT-HAND sides are determined by facing in the direction the machine will travel when going forward. When you see a broken line arrow (----->), the item referred to is hidden from view.

Before delivering this machine, your dealer performed a predelivery inspection to ensure best performance.

Special Messages

Your manual contains special messages to bring attention to potential safety concerns, machine damage as well as helpful operating and servicing information. Please read all the information carefully to avoid injury and machine damage.



CAUTION: Avoid injury! This symbol and text highlight potential hazards or death to the operator or bystanders that may occur if the hazards or procedures are ignored.

IMPORTANT: Avoid damage! This text is used to tell the operator of actions or conditions that might result in damage to the machine.

NOTE: General information is given throughout the manual that may help the operator in the operation or service of the machine.

PRODUCT IDENTIFICATION

Record Identification Numbers

Tractor Loader Backhoe

110 PIN (110001 -)

 
If you need to contact an Authorized Service Center for information on servicing, always provide the product model and identification numbers.

You will need to locate the identifications numbers for the product. Record the information in the spaces provided below.

DATE OF PURCHASE:


DEALER NAME:

DEALER PHONE:

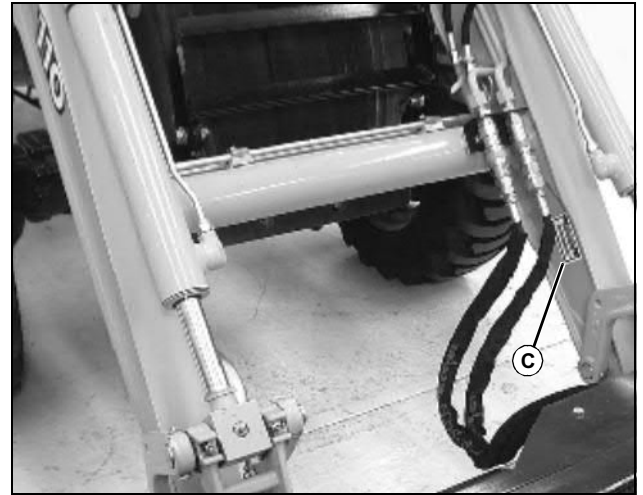


MX15542

 LOADER IDENTIFICATION NUMBER (C):

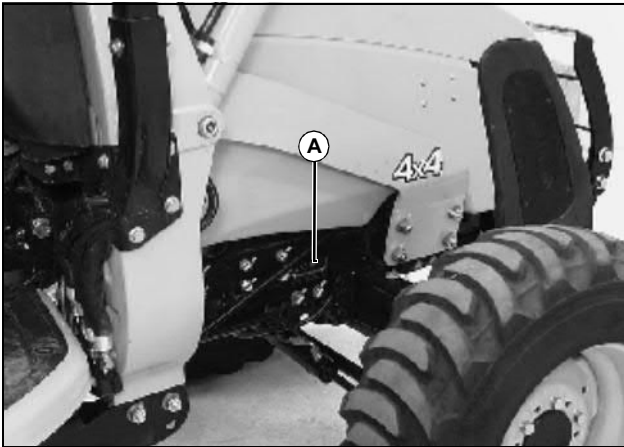

MX13750

 PRODUCT IDENTIFICATION NUMBER (A):

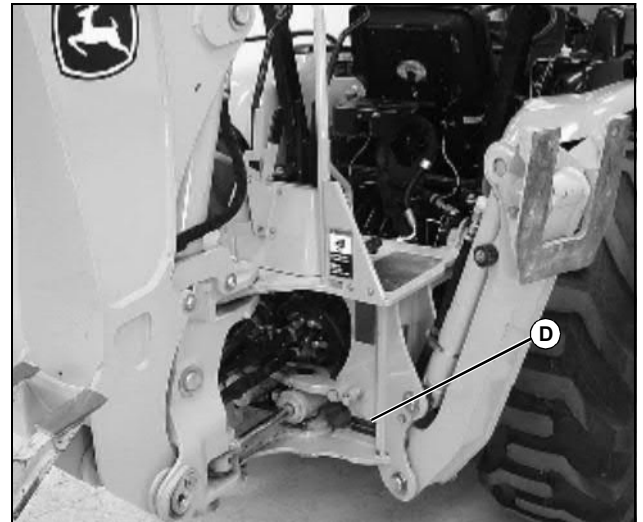

MX13752

BACKHOE IDENTIFICATION NUMBER (D):



MX13751

ENGINE SERIAL NUMBER (B):

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

TABLE OF CONTENTS

Safety	1
Operating Machine	14
Operating Backhoe	49
Replacement Parts	59
Service Intervals	60
Service Lubrication	62
Service Engine	65
Service Transmission.....	77
Service Electrical.....	81
Service Miscellaneous.....	86
Troubleshooting	91
Storage	99
Assembly	101
Specifications	102
Warranty	110
Index.....	115

All information, illustrations and specifications in this manual are based on the latest information at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT© 2002
Deere & Co.
John Deere Worldwide Commercial and
Consumer Equipment Division
All rights reserved
Previous Editions
COPYRIGHT©

OMLVU13606 D2 - English

SAFETY

Understanding The Machine Safety Labels



SAFETY ALERT SYMBOL

The machine safety labels shown in this section are placed in important areas on your machine to draw attention to potential safety hazards.

On your machine safety labels, the words DANGER, WARNING, and CAUTION are used with this safety-alert symbol. DANGER identifies the most serious hazards.

The operator's manual also explains any potential safety hazards whenever necessary in special safety messages that are identified with the word, CAUTION, and the safety-alert symbol.

CAUTION

 


MX13698, LVU10708

1. Read Operator's Manual before operating this machine.
2. Keep all shields in place.
3. Hitch towed loads only to drawbar to avoid rearward upset.
4. Make certain everyone is clear of machine before starting engine or operation.
5. Keep all riders off machine and equipment.

6. Keep hands, feet and clothing away from power-driven parts.
7. Reduce speed when turning or applying individual brakes or operating around hazards on rough ground or steep slopes.
8. Couple brake pedals together for road travel.
9. Use flashing warning lights on highway unless prohibited by law.
10. Stop engine, lower implement to ground and shift to "PARK" or set brake(s) securely before dismounting.
11. Wait for all movement to stop before servicing machinery.
12. Remove key if leaving machine unattended.

WARNING

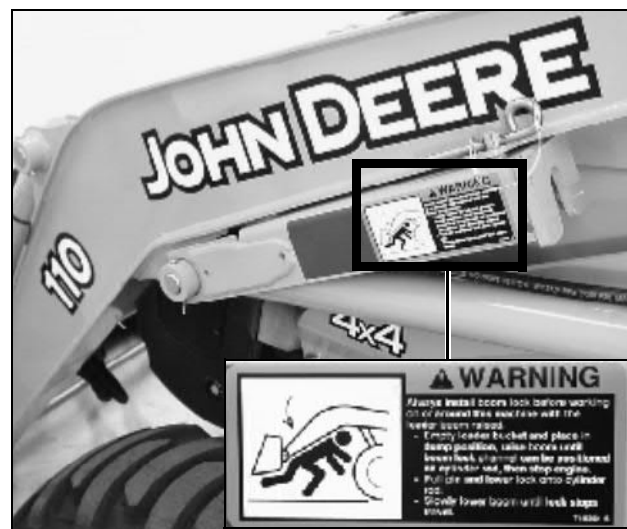


MX13690, T185902

Always install boom lock before working on or around this machine with the loader boom raised.

- Empty loader bucket and place in dump position, raise boom until boom lock channel can be positioned on cylinder rod, then stop engine.
- Pull pin and lower lock onto cylinder rod.
- Slowly lower boom until lock stops travel.

SAFETY

 DANGER/POISON

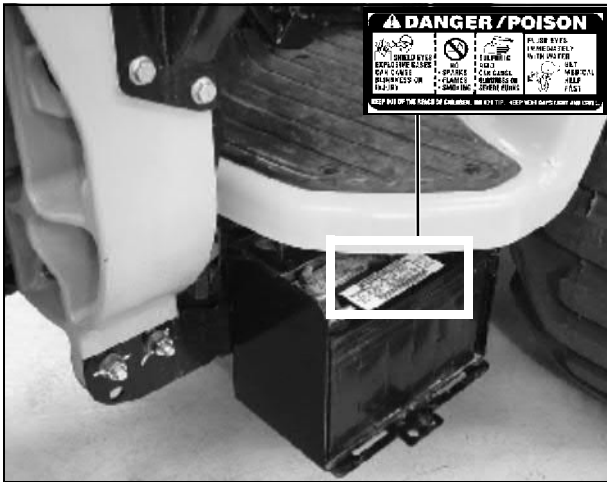

MX13700, M88249

Picture Note: Remove spring locking pins and battery box step plate to locate safety label.

SHIELD EYES: EXPLOSIVE GASES CAN CAUSE BLINDNESS OR INJURY.

NO SPARKS, FLAMES, SMOKING.

SULFURIC ACID CAN CAUSE BLINDNESS OR SEVERE BURNS.

FLUSH EYES IMMEDIATELY WITH WATER. GET MEDICAL HELP FAST.

KEEP OUT OF THE REACH OF CHILDREN. DO NOT TIP. KEEP VENT CAPS TIGHT AND LEVEL.

WARNING



MX13696, KV15055

Picture Note: Label installed on multi-purpose bucket only.

To avoid injury, keep hands and feet away from this area.

WARNING



MX13693, T188358a

- Avoid crushing injury.
- Keep both feet on platform and away from stabilizers when operating.

SAFETY

CAUTION



M13697, T146080

- AVOID DEATH OR SERIOUS INJURY-Read and understand Operator's Manual before operating this machine.
- Operate only from seat.
- Before leaving seat: Lower working tools to ground, place in neutral and engage parking brake.
- Never carry riders.
- Engage backhoe boom and swing locks before transporting.

WARNING



MX13687, T188815a

- STAY CLEAR of swing area.
- Operate controls only from seat.

WARNING



MX13694, T188814a

- Enter and exit only from this side.
- Avoid contact with controls when entering and exiting.
- DO NOT operate controls from the ground.

WARNING




MX13676, MX13677

Picture Note: Label installed on quick attach system wedge bar.

DO NOT OPERATE ATTACHMENT WITHOUT WEDGE BAR BOLT TIGHTENED TO (100 ft. lbs.) AND LYNCH PINS INSERTED INTO WEDGE BAR PINS. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY CAUSE INJURY IF ATTACHMENT COMES OFF.

SAFETY

Emissions Control System Certification Label (Non-Road Diesel)

IMPORTANT ENGINE INFORMATION	
THIS ENGINE CONFORMS TO <input type="checkbox"/> MODEL YEAR U. S. EPA REGULATIONS NONROAD COMPRESSION IGNITION ENGINES.	
THIS ENGINE IS CERTIFIED TO OPERATE ON "US-20" FUEL	
ENGINE FAMILY : <input type="checkbox"/>	DISPLACEMENT : <input type="checkbox"/> LITERS
ENGINE MODEL : <input type="checkbox"/>	EMISSION CONTROL SYSTEM : EM
FUEL RATE : <input type="checkbox"/> L/HK/STROKE @ <input type="checkbox"/> RPM	
REFER OWNER'S MANUAL FOR MAINTENANCE SPECIFICATIONS AND ADJUSTMENTS	
YANMAR DIESEL ENGINE	
Co., Ltd.	

MX5293



CAUTION: Avoid injury! Statutes providing severe penalties for tampering with emissions controls may apply at the user's location.

The emissions warranty described in the warranty section applies only to those engines marketed by John Deere that have been certified by the United States Environmental Protection Agency (EPA) and/or California Air Resources Board (CARB); and used in the United States in non-road mobile (self-propelled or portable/transportable¹) equipment. The presence of an emissions label like the one shown signifies that the engine has been certified with the EPA and/or CARB. The EPA and CARB warranties only apply to new engines having the certification label affixed to the engine and sold as stated above in the geographic areas governed by the regulating agencies.

NOTE: The hp/kW rating on the engine emissions certification label specifies the gross engine hp/kW, which is flywheel power without fan. In most applications this will not be the same rating as the advertised vehicle hp/kW rating.

 
Operator Training Required

- The owner of the machine is responsible for training the users and mechanics of the machine.
- The owner/user can prevent and is responsible for accidents or injuries occurring to themselves, other people, or property.
- Do not allow operation or service of the machine by children or untrained adults.
- Read the operator's manual and study the safety and operation sections before operating the machine.

1. Equipment moved at least once every 12 months.

- If the operator of the machine cannot read or understand this manual, it is the machine's owner responsibility to explain this material to the operator. This publication is available in other languages.
- Operate the machine in an open, unobstructed area under the direction of an experienced operator.
- Learn the use of all controls.
- Operator experience is required to learn the moving, stopping, turning and other operating characteristics of the machine.


Operating Machine Safely

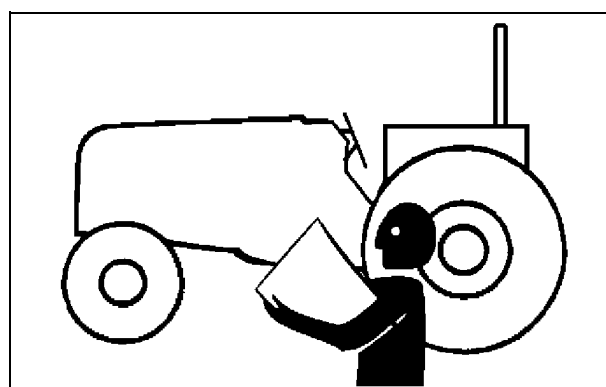

- Inspect machine before you operate. Be sure hardware is tight. Repair or replace damaged, badly worn, or missing parts. Be sure guards and shields are in good condition and fastened in place. Make any necessary adjustments before you operate.
- Check before each use that operator presence controls are functioning correctly. Test safety systems. Do not operate unless they are functioning correctly.
- Check brake action before you operate. Adjust or service brakes as necessary.
- Stop machine if anyone enters the area.
- If you hit an object, stop and inspect the machine. Make repairs before you operate. Keep machine and implements properly maintained and in good working order.
- Do not leave machine unattended when it is running.
- Only operate during daylight or with good artificial light.
- Use only accessories and implements approved by the manufacturer of the machine.

SAFETY

 Operating Backhoe Safely

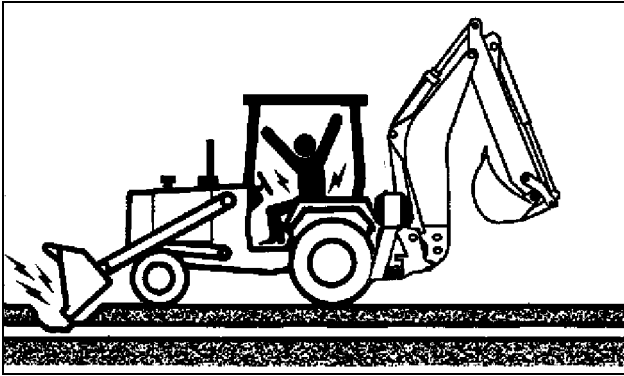


- Check with local utility companies before digging to verify location of cables, gas lines and water lines.
- Avoid accidental machine movement. Before turning seat around:
 - Lower stabilizers so rear wheels are just off the ground.
 - Lower loader bucket to the ground (rolled forward if possible).
 - Lock park brake.
- Use the repositioning creeper drive speed control to reposition the machine. On level ground, an experienced operator may use the backhoe bucket to move the machine. Level machine with stabilizers after moving machine.
- Set stabilizers on firm surface. Do not dig under stabilizers. Be alert to possible machine movement when raising stabilizers and loader bucket.
- Avoid swinging bucket downhill when operating on a slope. Dump on uphill side if possible.
- Move boom slowly when raising loaded bucket to full height.
- Clear all persons from area of operation and machine movement.
- If you must drive on slopes, move backhoe to the uphill side for added stability.

Using a Spark Arrestor

The engine in this machine is not equipped with a spark arrestor muffler. It is a violation of California Public Resource Code Section 4442 to use or operate this engine on or near any forest-covered, brush-covered or grass-covered land unless the exhaust system is equipped with a spark arrestor meeting any applicable local or state laws. Other states or federal areas may have similar laws.

A spark arrestor for your machine may be available from your authorized dealer. An installed spark arrestor must be maintained in good working order by the operator.

 
Avoid Power Lines

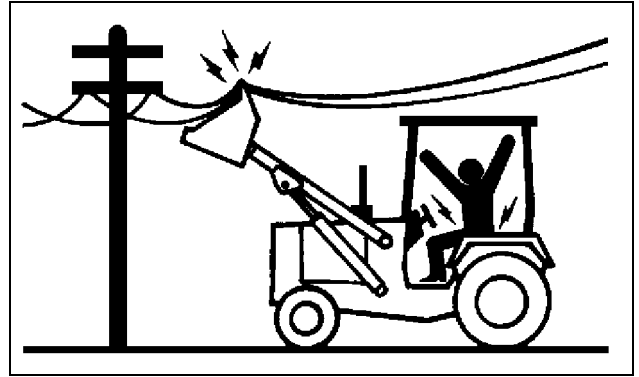

Keep away from power lines. Serious injury or death will result. Never move any part of machine or load closer to power line than 3m (10 ft.) plus twice the line insulator length.

Protect Children and Prevent Accidents

 Protect Children:

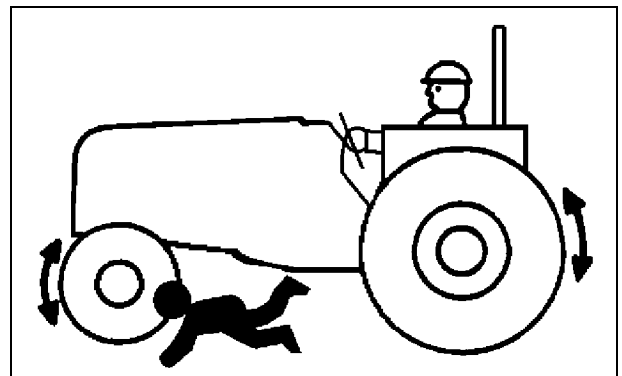

- Never assume that children will remain where you last saw them. Children are attracted to machine activity; stay alert to the presence of children.
- Turn machine off if a child enters the worksite.
- Use extra care when you come to blind corners, shrubs, trees, or other objects that may block your vision.
- Do not carry or let children ride on machine or any attachment.

SAFETY

 
Help Prevent Serious Or Fatal Accidents:

- Be alert at all times; drive forward carefully. People, especially children, can move quickly onto the worksite unnoticed.
- An operator must continuously be aware of all co-workers who share the worksite.
- Back up carefully. An operator must always look to each side and to the rear for co-workers before backing up.

Parking Safely

1. Stop machine on a level surface, not on a slope.
2. Lower all attachments to the ground.
3. If servicing engine, raise front loader boom and install loader boom service lock.
4. Disengage the PTO.
5. Lock park brake.
6. Stop engine.
7. Wait for engine and all moving parts to stop before you leave the operator's station.
8. Remove key.


Avoid Injury From Rollover Accidents

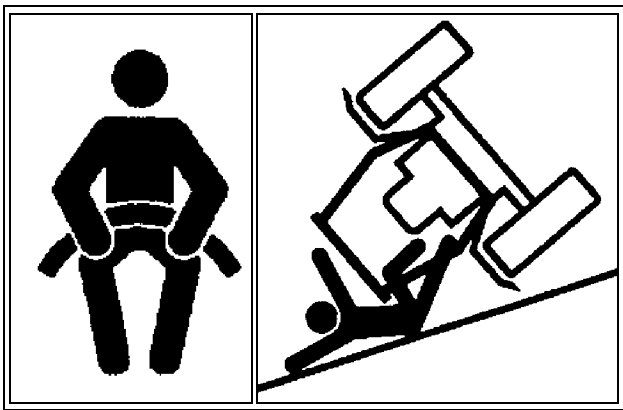

- Wear your seat belt. Do not jump to clear tipping machine. Machine will tip over faster than the operator can jump free.
- Be careful when operating on a slope.
- Avoid sharp turns.
- Balance loads so weight is evenly distributed and load is stable.
- Carry tools close to the ground to aid visibility and lower the center of gravity.

- Reduce speed before turning or swinging load.
- Know capacity of machine. Do not overload.
- Be careful when operating at the edge of an excavation, trench, or drop-off, and loading or unloading from a trailer.

 
Avoid Injury From Backover Accidents

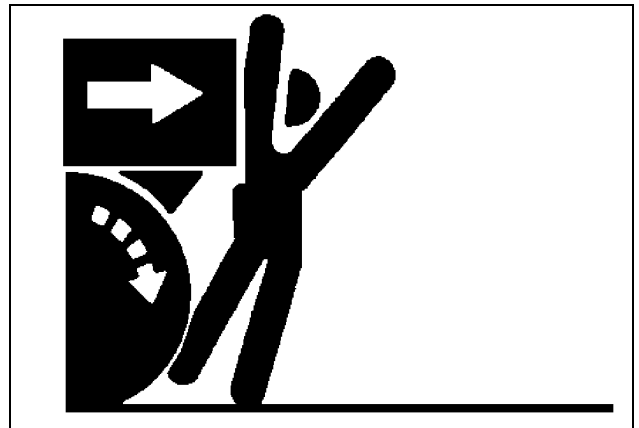

- Know the location of bystanders before moving the machine.
- Always look behind you before you back up. Be sure that everyone is out of the way before moving the machine.
- Use horn or other signal to warn bystanders before moving machine.
- Keep bystanders away from pivot area of an articulated machine.
- Keep reverse warning alarm in working condition to warn people when machine starts to move in reverse.
- Use a signal person when backing up if view is obstructed and in congested areas. Always keep the signal person in view.
- Learn the meaning of all flags, signs and markings used on the job, and who has responsibility for signaling.
- Keep windows, mirrors, and lights clean and in good condition.
- Dust, heavy rain and fog can reduce visibility. As visibility decreases, reduce speed and use proper lighting.


SAFETY

 Avoid Injury From Rollaway Accidents

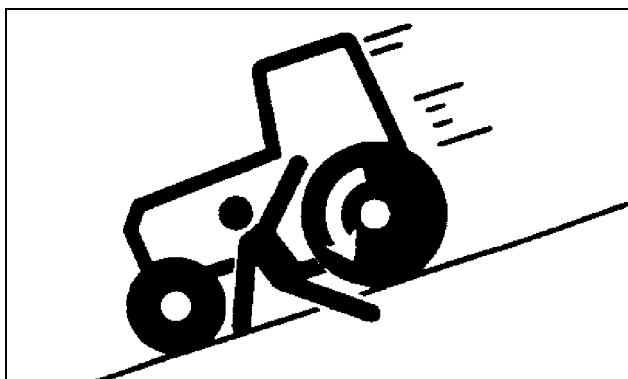


- Always make sure the machine is properly secured and park safely before leaving the operator's station.
- Do not attempt to get on or stop a moving machine.
- Position the machine or block the wheels to prevent the machine from rolling.

 Using Handholds and Steps

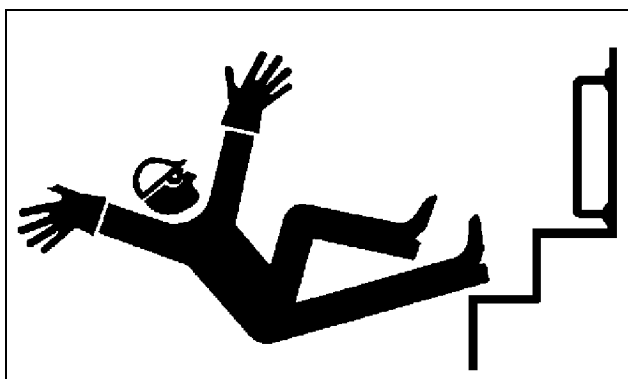


- Falling is a major cause of personal injury. Keep steps and platform clean and dry if possible.
- Be careful of slippery conditions on platforms, steps, and handrails when leaving the machine.
- When you get on and off the machine, always maintain a three point contact with steps and handrails and face the machine. Do not use steering wheel or any controls as handholds.
- Never jump on or off the machine. Never mount or dismount a moving machine.

 Use Seat Belt Properly

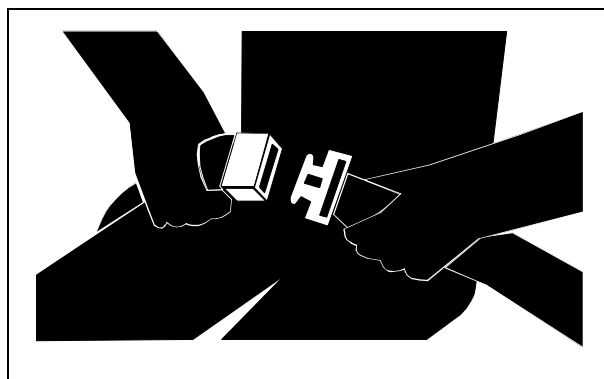

- Use a seat belt when you operate with a Roll-Over Protective Structure (ROPS) to minimize chance of injury from an accident, such as an overturn.
- Do not use a seat belt if operating without a ROPS or cab.
- Replace entire seat belt if mounting hardware, buckle, belt, or retractor show signs of damage.
- Inspect seat belt and mounting hardware at least once a year. Look for signs of loose hardware or belt damage, such as cuts, fraying, extreme or unusual wear, discoloration, or abrasion. Replace only with replacement parts approved by your John Deere dealer.

 Keep Riders Off

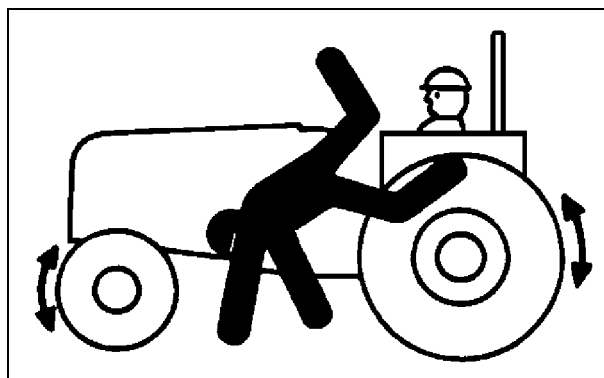


- Only allow the operator on the machine. Keep riders off.
- Riders on the machine or implement may be struck by foreign objects or thrown off the machine causing serious injury.
- Riders obstruct the operator's view resulting in the machine being operated in an unsafe manner.

SAFETY

Checking Wheel Bolts


- A serious accident could occur causing serious injury if wheel bolts are not tight.
- Check wheel bolt tightness often during the first 100 hours of operation.
- Wheel hardware must be tightened to specified torque using the proper procedure anytime it is loosened.

 Wear Appropriate Clothing

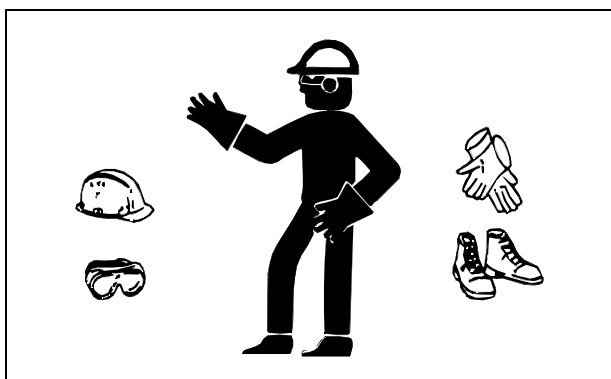

- Always wear safety goggles or safety glasses with side shields and hard hat when operating the machine.
- Wear a suitable protective device such as earplugs. Loud noise can cause impairment or loss of hearing.
- Do not wear radio or music headphones. Safe service and operation requires your full attention.

 Driving Safely on Public Roads

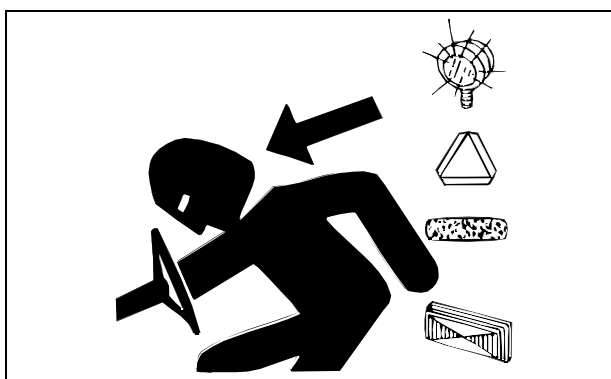

- Slow down and be careful of traffic when operating near or crossing roadways.
- Set boom lock and swing lock pins to center backhoe before driving.

- Lock brake pedals together and lower loader bucket before driving.
- Use safety lights and devices. Slow moving machines when driven on public roads are hard to see, especially at night.
- Use extra care when loading or unloading the machine into a trailer or truck.
- Check state and local regulations for tow vehicle and trailering requirements before transporting the Tractor Loader Backhoe. A trailer with a minimum 4536kg (10,000 lb) gross vehicle weight rating (GVWR) and an appropriate tow vehicle are required to transport the machine. Carrying additional equipment on the trailer will increase the GVWR requirement.
- Whenever driving on public roads, use flashing warning lights and turn signals according to state and local regulations.

Practice Safe Maintenance



- Only qualified, trained adults should service this machine.
- Understand service procedure before doing work. Keep area clean and dry.
- Warn others of service work. Before performing any work on the machine, attach a "DO NOT OPERATE" tag to the steering wheel.
- Never lubricate, service, or adjust machine while it is moving. Keep safety devices in place and in working condition.
- Keep hands, feet, clothing, jewelry, and long hair away from any moving parts, to prevent them from getting caught.
- Stop machine on a level surface and lower implements to the ground before servicing machine. Disengage all power and stop the engine. Lock park brake and remove the key. Let machine cool.

SAFETY

- Before doing service work under the engine hood, raise front loader boom and install loader boom service lock.
- Disconnect battery or remove spark plug wire (for gasoline engines) before making any repairs.
- Before servicing machine, carefully release pressure from components with stored energy such as hydraulic components.
- Keep all nuts and bolts tightened.
- Securely support any machine elements that must be raised for service work. Lock service latches before working on machine with raised implements.
- Use jack stands to support components when needed.
- Never run engine unless park brake is locked.
- Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts.
- Replace all worn or damaged safety and instruction decals. Newly-installed parts must include current safety labels specified by the manufacturer.
- To prevent fires, remove any buildup of grease, oil, or debris from the machine, especially the engine compartment.
- Charge batteries in an open, well-ventilated area, away from sparks. Unplug battery charger before connecting or disconnecting from the battery. Wear protective clothing and use insulated tools.
- Do not modify machine or safety devices. Unauthorized modifications may impair its function and safety.
- Do not wear radio or music headphones while servicing the machine. Safe service requires your full attention.

Using Loader Boom Service Lock

Installing Loader Boom Service Lock

Install loader boom service lock when front loader must be raised for service procedures.

1. Empty loader bucket and place in dump position.



MX13690


Picture Note: Storage position shown.

2. Raise boom until boom lock channel can be positioned on cylinder rod, then stop engine.
3. Remove spring locking pin (A) and retaining pin (B) and lower lock onto cylinder rod.
4. Install retaining pin (B) in lock hole (C) and secure with spring locking pin (A).
5. Slowly lower boom until weight settles onto the loader boom service lock.

Removing Loader Boom Service Lock

1. Start engine.
2. Raise boom slightly to allow clearance between loader boom service lock and cylinder.
3. Remove spring locking pin and retaining pin.
4. Lift loader boom service lock to storage position.
5. Install the retaining pin and spring locking pin.

 Prevent Machine Runaway

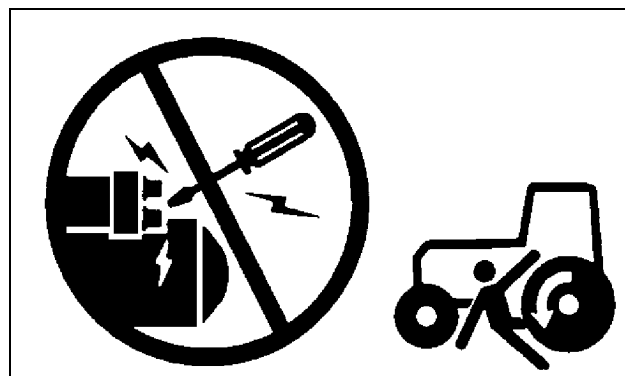



Suggest:

If the above button click is invalid.

Please download this document

first, and then click the above link

to download the complete manual.

Thank you so much for reading

SAFETY

- Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.
- Never start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

Keep ROPS Installed Properly

- Make certain all parts of the ROPS are installed correctly if the ROPS structure is loosened or removed for any reason. Tighten all hardware to the proper torque.
- The protection provided by the ROPS will be impaired if the ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged ROPS should be replaced.

Remove Paint Before Welding or Heating

- Avoid potentially toxic fumes and dust.
- Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.
- Remove paint before heating:
 - Remove paint a minimum of 76mm (3 in.) from areas to be affected by heating.
 - If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
 - If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least fifteen minutes before welding or heating.
- Do all work in an area that is ventilated to carry toxic fumes and dust away.
- Dispose of paint and solvent properly.

Avoid Heating Near Pressurized Fluid Lines

 
Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.

Avoid High Pressure Fluids



- Hydraulic hoses and lines can fail due to physical damage, kinks, age, and exposure. Check hoses and lines regularly. Replace damaged hoses and lines.
- Hydraulic fluid connections can loosen due to physical damage and vibration. Check connections regularly. Tighten loose connections.
- Escaping fluid under pressure can penetrate the skin causing serious injury. Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.
- Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.
- If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A. Information may be obtained in the United States and Canada only by calling 1-800-822-8262.

Prevent Fires

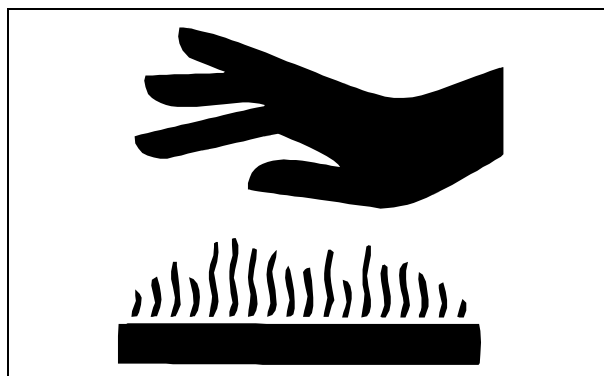

- Never remove fuel cap, or add fuel with engine running

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>