

**244E Loader**

**OMAT168872 E4**

**John Deere  
244E Loader  
(Serial No. 000154—)**


**John Deere Dubuque Works  
OMAT168872 Issue E4  
(Mark old manual OMAT108846 C1 for  
machines up to Serial No. 000154)**

LITHO IN U.S.A.  
ENGLISH



NO POSTAGE  
NECESSARY  
IF MAILED  
IN THE  
UNITED STATES

**BUSINESS REPLY MAIL**  
FIRST CLASS      PERMIT NO 1      MOLINE, IL

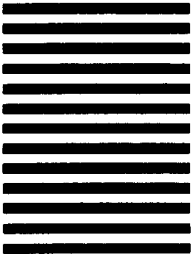

*Postage will be paid by addressee*

**DEERE & COMPANY**  
**DISTRIBUTION SERVICE CENTER**  
ATTN: ORDER PROCESSING  
1400 13TH STREET  
EAST MOLINE IL 61244-9959



**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

## FREE PARTS CATALOG

Mail the attached pre-addressed postcard below, and we will provide you with (1) FREE paper catalog. This catalog will show the current repair and maintenance parts, as well as their locations. Additional manuals can be purchased by using order form in back of manual.



Please furnish me (1) FREE parts catalog for my new John Deere product.

SHIP TO: *(PLEASE PRINT)*

---

**Name**

---

**Address**

---

**City, State or Province**

**Zip or Postal Code**

**Country**

---

Date	Qty.	Stock No.	Product Model No.	Factory
	1	PC2327	244E Loader	TX

# Introduction



**READ THIS MANUAL** carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

**THIS MANUAL SHOULD BE CONSIDERED** a permanent part of your machine and should remain with the machine when you sell it.

**MEASUREMENTS** in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

**RIGHT-HAND AND LEFT-HAND** sides are determined by facing in the direction of forward travel.

**WRITE PRODUCT IDENTIFICATION NUMBERS** (P.I.N.) in the Machine Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these

numbers when you order parts. File the identification numbers in a secure place off the machine.

**WARRANTY** is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

**THE TIRE MANUFACTURER'S** warranty supplied with your machine may not apply outside the U.S.

# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88

## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.



DX,READ -19-03MAR93

TS201 -UN-23AUG88



## **AVOID INJURY FROM ROLLOVER ACCIDENTS**

### **WEAR YOUR SEAT BELT**

**DO NOT ATTEMPT TO JUMP CLEAR OF TIPPING MACHINE--SERIOUS OR FATAL CRUSHING INJURIES WILL RESULT**

**MACHINE WILL TIP OVER FASTER THAN YOU CAN JUMP FREE**

To avoid rollovers:

Be careful when operating on a slope.

Avoid sharp turns.

Balance loads so weight is evenly distributed and load is stable.


Carry tools and loads close to the ground to aid visibility and lower center of gravity.

Reduce speed before turning or swinging load.

Know capacity of machine. Do not overload.

Be careful when operating at the edge of an excavation, trench, or drop-off, and loading or unloading from a trailer.

Read and understand the operating instructions in this operator's manual.

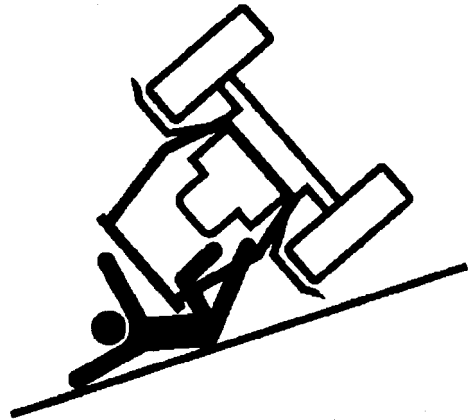

**USE  
SEAT  
BELT**

T7242EA -19-22FEB90

TX,05,DH1525 -19-21JUN91



## **AVOID INJURY FROM BACKOVER ACCIDENTS**

**BEFORE MOVING MACHINE, BE SURE ALL PERSONS ARE CLEAR OF AREA**

**ALWAYS BE ALERT FOR BYSTANDERS MOVING INTO THE WORK AREA. USE HORN OR OTHER SIGNAL TO WARN BYSTANDERS BEFORE MOVING MACHINE**

**WHEN USING A SIGNAL PERSON, KEEP PERSON IN VIEW AT ALL TIMES. BE SURE SIGNAL PERSON IS CLEAR BEFORE BACKING UP**



To avoid backover accidents:

Always look around before you back up. Be sure that everyone is in the clear.

Keep bystanders away from pivot area of an articulated machine.

Keep reverse warning alarm in working condition, if equipped.

Use a signal person when backing up if view is obstructed. Always keep signal person in view.

Learn the meaning of all flags, signs, and markings used on the job, and who has the responsibility for signaling.

Keep windows, mirrors, and lights clean and in good condition.

Dust, heavy rain, fog, etc., can reduce visibility. As visibility decreases, reduce speed and use proper lighting.

Read and understand the operating instructions in this operator's manual.

T7241AY -UN-21FEB90


TX.05.DH1573 -19-18MAR91



## AVOID INJURY FROM ROLLAWAY ACCIDENTS

-----  
**TO PREVENT ROLLAWAY, ALWAYS MAKE SURE MACHINE IS PROPERLY SECURED BEFORE LEAVING OPERATOR'S SEAT**  
-----

 **DEATH OR SERIOUS INJURY MAY RESULT IF YOU ATTEMPT TO MOUNT OR STOP A MOVING MACHINE**

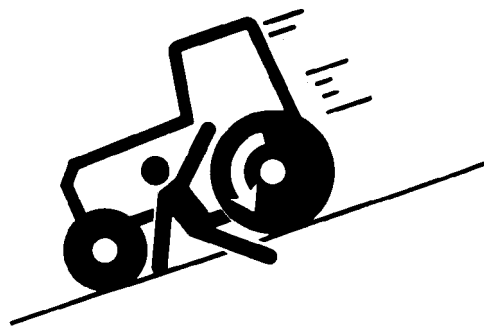

To avoid rollaways:

Select level ground when possible to park machine.

Place transmission controls in neutral, move FNR lever to neutral, and engage park brake.

Lower all equipment to ground.

Stop the engine.

Block all wheels if you must park on a grade. Position machine to prevent rolling.

Park a reasonable distance from other machines.

Read and understand the operating instructions in this operator's manual.

T7241AZ -UN-21FEB90

TX,05,DH1526 -19-26JAN91

## INSPECT MACHINE

Inspect your machine carefully each day by walking around it before you start it. (See Pre-Start Inspection Chapter.)



T6607AQ -UN-18OCT88

T82,BHSA,CL -19-14MAR90



## USE HANDHOLDS AND STEPS

Falling is one of the major causes of personal injury.

When you get on and off the machine, always maintain a three point contact with the steps and handrails, and face the machine. Do not use the steering wheel or any controls as handholds.

Never jump on or off the machine. Never mount or dismount a moving machine.

Be careful of slippery conditions on platforms, steps, and handrails when leaving the machine.



T6981AN -JUN-15JUN89


TX,05,DH553 -19-18MAR91

## PREVENT MACHINE RUNAWAY

Prevent possible injury or death from a runaway machine.

DO NOT start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

Never start engine while standing on ground. Start engine only from operator's seat with direction selector lever (F-N-R) locked in neutral and park brake engaged.

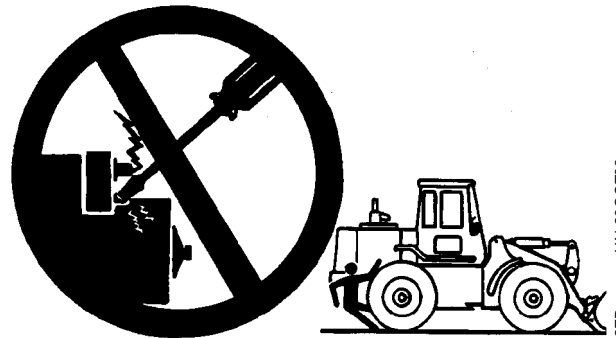


T6642EB -JUN-20OCT88

TX,05,DH2570 -19-20OCT92

## USE SEAT BELT PROPERLY

Use a seat belt when you operate with a roll-over protective structure (ROPS) or cab to minimize chance of injury from an accident such as an overturn.

Do not use a seat belt if operating without a ROPS or cab.

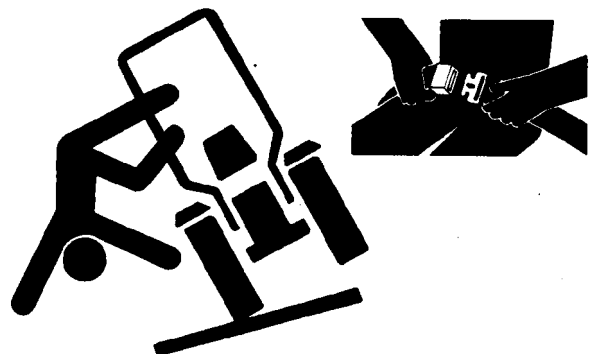

T5205 -JUN-23AUG88

DX,ROPS1 -19-03MAR93



## MAINTAIN SEAT BELT

It is important to use the seat belt on ROPS equipped machines to minimize the chance of injury from an accident such as an overturn. Keep the seat belt in good condition.

Carefully examine buckle, webbing, and attaching hardware.

Be sure that the retractor, if equipped, locks to prevent belt extension after latching buckle.

Be sure that attaching hardware is in place. Tighten, if necessary.

**Replace the seat belt if it does not operate properly, or if it is damaged, worn, or deteriorated.**


TX.05.DH1741 -19-03JAN92

## TRAVEL SAFELY

Know the location of bystanders before moving the machine.

Always keep the reverse warning alarm in working condition. It warns people when the machine starts to move in reverse.

Use a signal person when moving the machine in congested areas. Coordinate hand signals before starting the machine.

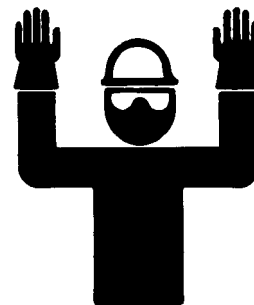

T6964AD -UN-20DEC88

TX.05.DH496 -19-02AUG89



## DRIVE MACHINE SAFELY


Walk around machine to clear all persons from area of operation and machine movement.

Always check area to rear before shifting to reverse.

Drive carefully in congested areas, over rough ground, near ditches for excavations, and on slopes or curves.

Keep machine in gear when going down hills.

Use accessory lights and devices to warn operators of other vehicles.

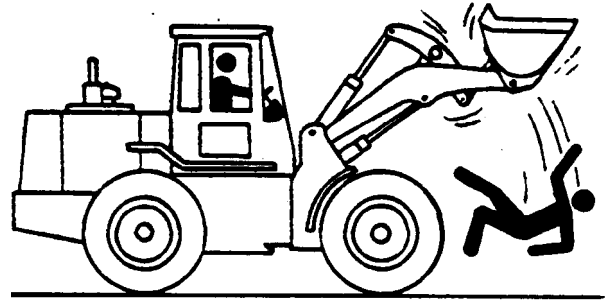

T6682AS -UN-25OCT88

TX,05,DH1931 -19-21JUN91


## OPERATE MACHINE WITH CAUTION

Check location of cables, gas lines, and water mains before digging.

Keep loading area smooth.

Never lower a loaded bucket with the boom and bucket control lever in the float position.

Increase the power gradually when pulling a heavy load or when driving out of a ditch or excavation.

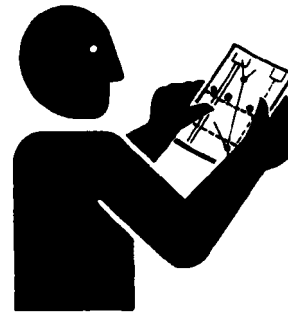

T6642EF -UN-18OCT88

TX,05,DH1932 -19-06JUN91




## OPERATING ON SLOPES

Avoid sideslope travel whenever possible. Drive up slope in forward and down in reverse. The danger of tipping is always present.

In steep slope operation, do not allow engine to overspeed. Select low gear speed before starting down slope.

The grade of the slope you should attempt will be limited by such factors as ground condition, and load being handled.

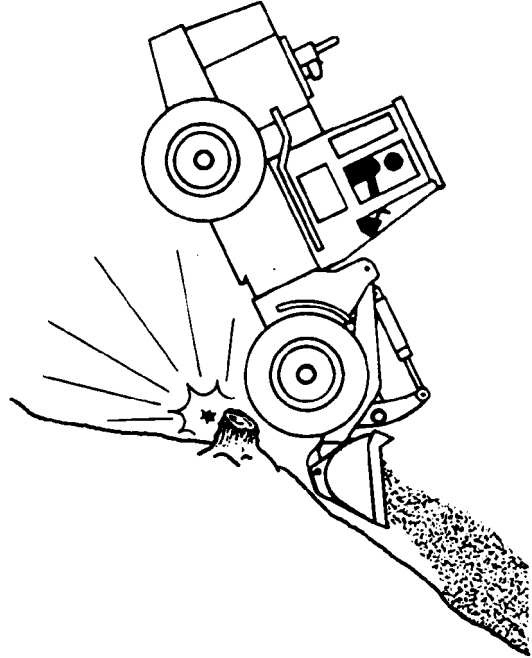

TX,05,RR,171 -19-27APR89

T7050AB -UN-03AUG89


## CARRYING LOADS

Carry loader bucket as low as possible for better stability and visibility.

Handle only those loads which are properly arranged. Do not overload.

Do not start, stop, or turn quickly when transporting a load.

Do not change forward or reverse directions quickly when carrying a load.

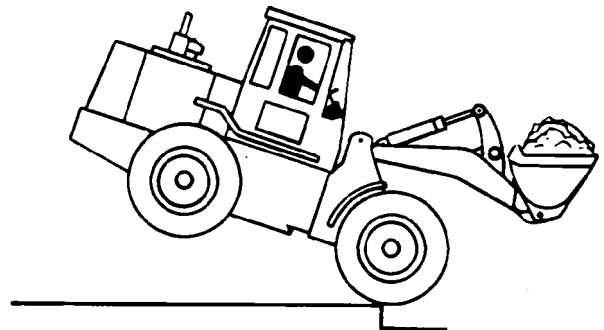

TX,05,RR,172 -19-03JUN92


T7050AA -UN-03AUG89



## AVOID POWER LINES

Serious injury or death can result from contact with electric lines.

Never move any part of the machine or load closer to electric line than 3 m (10 ft) plus twice the line insulator length.

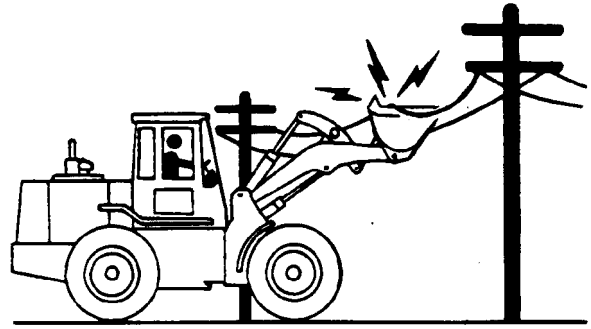


02T,05,J18 -19-06JUN91

T6642EG -UN-20JUN89

## BEWARE OF EXHAUST FUMES

Prevent asphyxiation. Engine exhaust fumes can cause sickness or death.

If you must operate in a building, be sure there is adequate ventilation. Either use an exhaust pipe extension to remove the exhaust fumes or open doors and windows to bring enough outside air into the area.

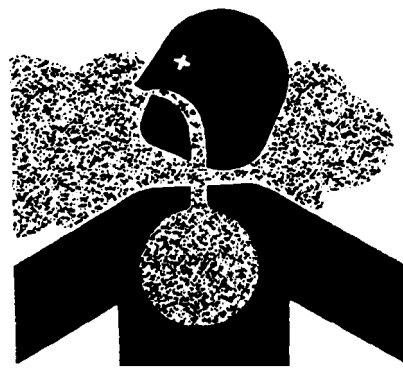


TX,DH.2 -19-09FEB89

T6458AO -UN-18OCT88

## KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

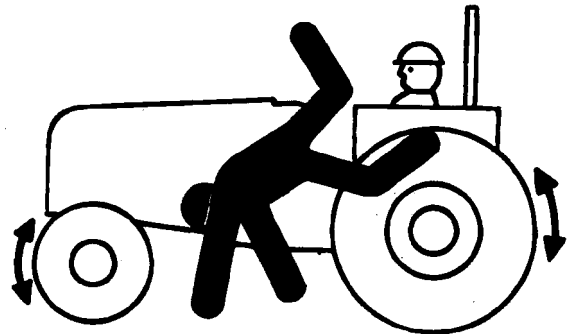

DX,RIDER -19-03MAR93

TS290 -UN-23AUG88

## HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.



DX,FIRE1 -19-03MAR93

TS202 -UN-23AUG88




## PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

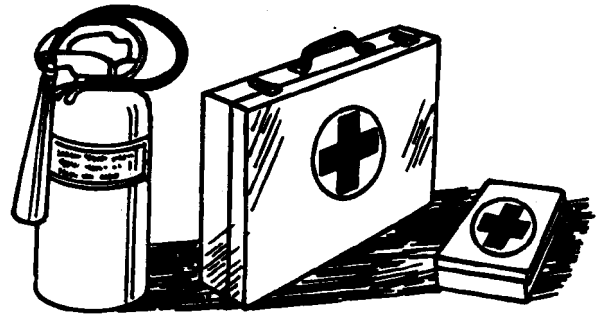

DX.FIRE2 -19-03MAR93

TS291 -UN-23AUG68

## HANDLE STARTING FLUID SAFELY


Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

Remove container from machine if engine does not need starting fluid.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.

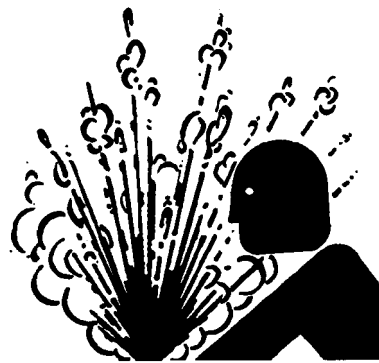

TX.05,FF2281 -19-22FEB91

T6464AV -UN-18OCT88

## CLEAN TRASH FROM MACHINE

Keep engine compartment, radiator, batteries, hydraulic lines, fuel tank, and operator's station clean.

Temperature in engine compartment may go up immediately after engine is stopped. **BE ON GUARD FOR FIRES DURING THIS PERIOD.**

Open access door(s) to cool the engine faster, and clean engine compartment.




02T.05,J33 -19-14MAR90

T6669AG -UN-18OCT88



## PROTECT AGAINST FLYING DEBRIS

When you drive connecting pins in or out, guard against injury from flying pieces of metal or debris; wear goggles or safety glasses.

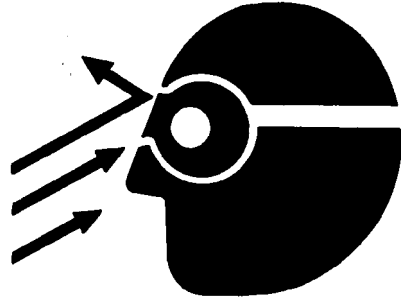


02T,05,J45 -19-30MAY90

T6642DK -UN-18OCT88

## WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

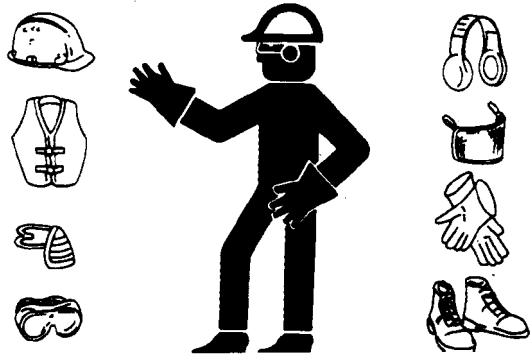

DX,WEAR2 -19-03MAR93

TS206 -UN-23AUG88

## PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.



DX,NOISE -19-03MAR93

TS207 -UN-23AUG88



## HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with your machine include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

See your authorized dealer for MSDS's on chemical products used with your machine.



TX,05,DH2500 -19-02OCT92


TS1132 -UN-26NOV90

## USE SAFETY LIGHTS AND DEVICES

Operators of machines that travel below normal highway speeds should take special precautions to avoid collision with other vehicles.

Before driving on public roads, check state and local laws that may apply to tractors, self-propelled machines, and towed equipment. Additional lights, mirrors, SMV emblems, or reflectors may be required.

Install and use all safety lights and devices necessary to assure safe operation and local compliance. Keep these safety items in good condition. Replace missing or damaged parts immediately.

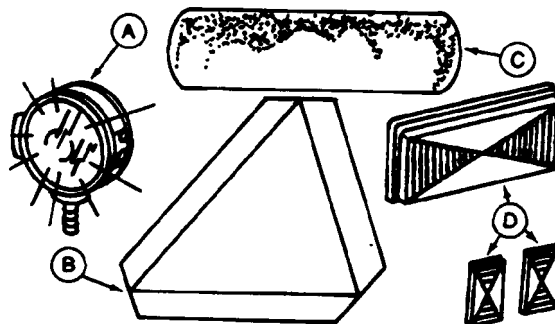

- A—Lights
- B—Slow Moving Vehicle Emblem
- C—Reflector Tape
- D—Reflectors

TX,05,DH1729 -19-26JAN91

N 36564 -UN-10FEB89



## KEEP ROPS INSTALLED PROPERLY

A damaged roll-over protective structure (ROPS) should be replaced, not reused.

The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting.

If ROPS was loosened or removed for any reason, inspect it carefully before operating the machine again.

To maintain the ROPS:

- Replace missing hardware using correct grade hardware.

- Check hardware torque.

- Check isolation mounts for damage, looseness or wear; replace them if necessary.


- Check ROPS for cracks or physical damage.

TX,05,DH1846 -19-14MAY91

## WARN OTHERS OF SERVICE WORK

Unexpected machine movement can cause serious injury.

Before performing any work on the machine, attach a "DO NOT OPERATE" tag to the steering wheel.

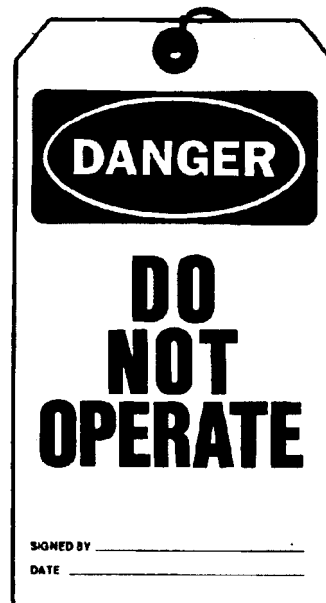

T7447AO -19-22APR91

TX,05,DH1820 -19-14MAY91



**Suggest:**

**If the above button click is invalid.**

**Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**



## PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate or service machine while it is moving. Keep hands, feet and clothing from power-driven parts.

Before servicing machine:

- Park the machine on a level surface.
  - Lower bucket to ground.
  - Move direction selector lever (F-N-R) to neutral.
- Engage neutral lock.
- Engage park brake.
  - Install the frame locking bar before working in the frame hinge pivot area.
  - Turn key switch OFF.
  - Turn battery disconnect switch OFF, if equipped.
  - Allow engine to cool.

If maintenance procedure must be performed with engine running, do not leave machine unattended.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect each battery ground cable (-) before making adjustments on electrical systems or welding on machine.



TS218 -UN-23AUG88

TX,05,DH2476 -19-20JUL92

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**