


755A Crawler Loader

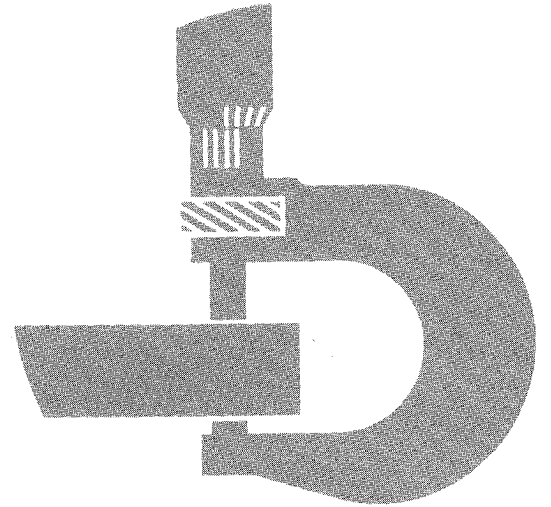

TECHNICAL MANUAL

TM-1231

LITHO IN U.S.A.

**755A CRAWLER LOADER
Technical Manual
TM-1231 (Mar-84)**

SECTION AND GROUP CONTENTS OF THIS MANUAL

SECTION I - GENERAL INFORMATION

- Group I - Contents and Index
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Fuels and Lubricants

SECTION 1 - TRACKS

- Group 0130 - Track Systems
- Group 0199 - Specifications and Special Tools

**SECTION 2 - AXLES AND SUSPENSION
SYSTEMS**

- Group 0201 - Drive Axle Housing
- Group 0250 - Axle Shaft, Bearings and Reduction Gears
- Group 0299 - Specifications and Special Tools

SECTION 3 - TRANSMISSION

- Group 0315 - Controls
- Group 0325 - Input Drive Shafts and U-Joints
- Group 0360 - Hydraulic System
- Group 0370 - Clutch Disconnect and Controls
- Group 0399 - Specifications and Special Tools

SECTION 4 - ENGINE

- Group 0400 - Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshaft and Valve Actuating Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block
- Group 0407 - Oiling System
- Group 0408 - Ventilating System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housings, and Water Piping
- Group 0419 - Oil Cooler
- Group 0420 - Fuel Filter
- Group 0421 - Fuel Transfer Pump
- Group 0422 - Starting Motor and Fastenings
- Group 0429 - Fan Drive
- Group 0433 - Flywheel, Housing and Fastenings
- Group 0499 - Specifications and Special Tools

SECTION 5 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Cooling System
- Group 0515 - Speed Controls
- Group 0520 - Intake System
- Group 0530 - External Exhaust System
- Group 0540 - Mounting Frame
- Group 0560 - External Fuel Supply System
- Group 0599 - Specifications and Special Tools

SECTION 8 - TRANSFER DRIVE

- Group 0841 - Housing and Covers
- Group 0851 - Gears, Shafts, Bearings
- Group 0899 - Specifications and Special Tools

SECTION 11 - PARKING EMERGENCY BRAKE

- Group 1111 - Active Elements
- Group 1115 - Controls Linkage
- Group 1160 - Hydraulic System
- Group 1199 - Specifications and Special Tools

SECTION 15 - EQUIPMENT ATTACHING

- Group 1511 - Drawbar
- Group 1512 - Towbar

SECTION 16 - ELECTRICAL SYSTEMS

- Group 1671 - Batteries, Supports and Cables
- Group 1672 - Alternator, Regulator and Charging System Wiring
- Group 1673 - Lighting System
- Group 1674 - Wiring Harness and Switches
- Group 1675 - System Controls
- Group 1676 - Instruments and Indicators
- Group 1699 - Specifications and Special Tools

**SECTION 17 - FRAME, CHASSIS OR SUPPORT-
ING STRUCTURE**

- Group 1740 - Frame Installation
- Group 1746 - Frame Bottom Guards
- Group 1749 - Chassis Weights

SECTION 18 - OPERATOR'S STATION

- Group 1810 - Operator Enclosure
- Group 1821 - Seat and Seat Belt
- Group 1830 - Heating and Air Conditioning
- Group 1899 - Specifications and Special Tools

Copyright © 1984
DEERE & COMPANY
Moline, Illinois
All Rights Reserved
Previous Edition

Copyright © 1981 DEERE & COMPANY

SECTION AND GROUP CONTENTS OF THIS MANUAL—Continued

SECTION 19 - SHEET METAL AND STYLING

- Group 1910 - Hood or Engine Enclosures
- Group 1921 - Grille and Grille Housing

SECTION 20 - SAFETY, CONVENIENCE AND MISCELLANEOUS

- Group 2003 - Fire Extinguisher
- Group 2004 - Horn and Warning Devices
- Group 2006 - Cigar Lighter

SECTION 31 - LOADER

- Group 3102 - Buckets
- Group 3115 - Controls Linkage
- Group 3140 - Frames
- Group 3160 - Hydraulic System
- Group 3199 - Specifications and Special Tools

SECTION 42 - GROUND CONDITIONING TOOL

- Group 4201 - Blades, Teeth, Shanks
- Group 4215 - Controls Linkage
- Group 4260 - Hydraulic System

SECTION 90 - SYSTEM TESTING

- Group 9005 - General Information - Seven Basic Steps of Diagnosis and Testing and Operational Checkout Procedure
- Group 9010 - Engine
- Group 9015 - Electrical System
- Group 9020 - Power Train
- Group 9025 - Hydraulic System (Flow Meter)
- Group 9025A - Hydraulic System (Analyzer)
- Group 9026 - Hydrostatic System
- Group 9030 - Miscellaneous Components
- Group 9031 - Heating and Air Conditioning
- Group 9035 - Specifications and Special Tools

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice. Wherever applicable, specifications and design information are in accordance with SAE and ICED standards.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

ALPHABETICAL INDEX

A	
Adjustment, hydrostatic system	9026-90
Air circulation blower motor	1830-30
Air conditioning operational test	9031-17
Air conditioning relay	1674-4
Air conditioning system	1830-5
Air conditioning system	9031-2
Diagnosis and testing	9031-5
Air conditioning system service	9031-9
Adding refrigerant-12 to system	9031-15
Charging the system	9031-13
Component location	9031-19
Discharging the system	9031-10
Electrical system	9031-9
Evacuating the system	9031-11
Flushing the system	9031-10
Inspecting refrigerant hoses and tubing	9031-16
Installing manifold gauge set	9031-9
Leak testing	9031-16
Manifold gauge set	9031-9
Purging the system	9031-11
Alternator	1672-1
Alternator and regulator, 16 amp	1672-13
Alternator, regulator, 42 amp	1672-1
Automatic control valve shutoff,	
transmission	0315-13
Valve control	0315-13
Return-to-neutral linkage	0315-14
Automatic control valve variable,	
transmission	0315-10
Automatic system control	1675-1
Axle housing	0201-3
Axle shaft, bearings and	
reduction gears	0250-1

B	
Batteries	1671-3
Battery cables	1671-3
Battery disconnect	1674-2
Battery supports	1671-3
Blades, shanks, teeth, ground	
conditioning tool	4201-3
Bottom guards, frame	1746-1
Buckets, loader	3102-3

C	
Cab	1810-3
Camshaft	0402-1
Carrier rollers	0130-4
Charging system wiring	1672-1
Cigar lighter	2006-1
Circuit protectors	1674-3
Clutch coil and housing	1830-15
Cold weather starting aids	0505-3

Compressor	1830-5
Compressor hub and drive plate assembly	1830-8
Compressor pulley and bearing	1830-14
Compressor relief valve	1830-27
Compressor shaft seal	1830-10
Condenser	1830-21
Connecting rods	0403-1
Control valve, loader	3160-12
Controls linkage, ground	
conditioning tool	4215-1
Controls linkage, loader	3115-1
Counterweight	1749-1
Cowl	1910-4
Crankshaft	0401-1
Cylinder block	0404-1
Cylinder head and valves	0409-1
Cylinders, loader	3160-16

D	
Diagnosing malfunctions,	
hydrostatic system	9026-31
Diagnosing malfunctions,	
miscellaneous components	9031-1
Double selector valve	4260-1
Double selector valve control linkage	4215-1
Drawbar	1511-3

E	
Electric wiring harness	1674-1
Electrical systems	1671-1
Engine system testing	9010-1
Component location	9010-15
Diagnosing malfunction	9010-2
General information	9010-1
Testing and adjustments	9010-7
Air intake system	9010-12
Alternator and fan belts adjustments	9010-9
Basic engine	9010-7
Engine cooling system	9010-8
Engine lubrication system	9010-7
Engine output check	9010-8
Engine output check turbocharger	
pressure test	9010-12
Fuel system	9010-9
Speed control linkage	9010-11
Visual inspection	9010-5
Electrical system testing	9015-1
Complete electrical schematic	9015-27
Complete electrical wiring diagram	9015-28
Component location	9015-31

Electrical system testing —Continued

Diagnosing malfunctions	9015-3
Precautions	9015-6
Testing and adjustments	9015-8
Accessory circuits	9015-21
Air conditioning circuit	9015-25
Instruments and indicators	9015-21
Lighting circuit	9015-20
Miscellaneous accessories	9015-23
Return-to-dig circuit	9015-24
Charging circuit	9015-16
Starting circuit	9015-9
Engine	0400-3
Engine coolant heater	0505-5
Engine cooling system	0510-1
Engine oil cooler	9419-1
Engine side shields	1910-5
Evaporator	1830-24
Exhaust manifold	0410-1
Expansion valve, regulatory controls	1830-25
External exhaust system	0530-1
External fuel supply system	0560-1

F

Fan drive	0429-1
Filters, loader	3160-6
Final drive housing cover with gears and shaft	0250-5
Fire extinguisher	2003-3
Flywheel, housing and fasteners	0433-1
Forward and reverse speed control, transmission	0315-7
Control head	0315-8
Control linkage	0315-10
Frame bottom guards	1746-1
Frames, loader	3140-1
Front idler	0130-42
Fuel filter	0420-1
Fuel injection nozzles	0413-4
Fuel injection pump	0413-1
Fuel injection system	0413-1
Fuel transfer pump	0421-1

G

General specifications	I-III-1
Grille	1921-1
Grille housing	1921-1

H

Heater blowers	1830-3
Heater core	1830-2
Heater hoses	1830-3
Heating and air conditioning	9031-1
Heater valve	1830-1

Heating system	1830-1
Heating system testing	9031-1
High temperature switch	1830-29
Hood	1910-3
Hood or engine enclosures	1910-1
Horn	2004-1
Hydraulics, loader	3160-2
Hydraulic system testing (analyzer)	9025A-1
Hydraulic system testing (flow meter)	9025-1
Component location	9025-25
Diagnosing malfunction	9025-14
General information	9025-2
Operation	9025-4
Schematic and block diagrams	9025-5
Testing and adjustments	9025-17
Auxiliary control valve lift check test	9025-18
Boom control valve lift check test	9025-18
Bucket control valve lift check test	9025-18
Checking hydraulic pump flow	9025-19
Checking hydraulic sump	9025-17
Checking loader circuits for leaks	9025-18
Checking oil lines and hoses	9025-17
Circuit relief valves	9025-21
Hydraulic cylinder leakage test	9025-17
Visual inspection	9025-13
Hydraulic system, ground conditioning tool	4260-1
Hydrostatic system adjustments	9026-90
Hydrostatic system brake valve	9026-28
Hydrostatic system component location drawings	9026-135
Hydrostatic system control circuit diagrams	9026-131
Hydrostatic system diagnosing malfunctions	9026-31
Hydrostatic system oil cooler bypass valve	9026-29
Hydrostatic system testing	9026-1
Hydrostatic transmission	0360-1
Hydrostatic transmissions testing	9026-3
Charge pump	9026-6
Manifold valve assembly	9026-11
Motor displacement control valve	9026-11
Pump displacement control valve operation	9026-7
Transmission bypass valve operation	9026-12
Transmission operating pressure valve	9026-13

I

Input drive shafts and U-joints, transmission	0325-1
Instrument and indicators	1676-1

Instruments and indicators, electrical 1676-4
 Instruments and indicators, mechanical 1676-1
 Intake system, engine 0520-1
 Introduction I-II-1

L

Leakage test, tracks 0130-67
 Lights 1673-1
 Light switch 1673-2
 Lighting system 1673-1
 Loader buckets 3102-3
 Loader controls linkage 3115-1
 Loader control valve 3160-12
 Loader cylinders 3160-16
 Loader frames 3140-1
 Loader hydraulics 3160-2
 Loader reservoir 3160-6
 Loader reservoir and filters 3160-6
 Lubrication I-IV-1

M

Main bearings 0401-1
 Main frame 1741-3
 Mounting frame 0540-1

O

Oil cooler, engine 0419-1
 Oil filters and housing 0407-3
 Oil pressure regulating valve 0407-2
 Oiling system 0407-1
 Oil pump 0407-1
 Operator enclosure 1810-3
 Orifice linkage, transmission 0315-10

P

Parking emergency brake active elements .. 1111-3
 Parking emergency brake control linkage ... 1115-1
 Parking brake hydraulics 1160-1
 Pistons 0403-1
 Planet housings with pinions
 and shafts 0250-2
 Power train system testing
 Component location 9020-7
 Diagnosing malfunctions 9020-3
 General information 9020-1
 Power train block diagram 9020-2
 Testing and adjustments 9020-5
 Engine disconnect clutch 9020-5
 Visual inspection 9020-4

R

Receiver-dryer 1830-23
 Recoil spring 0130-59

Regulator 1672-1
 Relay, air conditioning 1674-4
 Relay, starting circuit 1674-4
 Reservoir, loader 3160-6
 Reverse warning alarm 2004-2
 Ripper 4201-3
 Rock guards 0130-3
 ROPS (w/windshield) 1810-6
 ROPS (without cab) 1810-7

S

Seat 1821-1
 Sheet metal and styling 1910-1
 Solenoid, starting aid 0505-3
 Special tools
 Air conditioning system 1899-3
 Alternator, regulator and
 charging system wiring 1699-7
 Batteries, supports and cables 1699-6
 Camshaft and valve actuating means ... 0499-25
 Clutch disconnect and controls 0399-20
 Connecting rods and pistons 0499-26
 Crankshaft and main bearing 0499-24
 Cylinder block 0499-28
 Cylinder head and valves 0499-31
 Drive axle housing 0299-3
 Engine removal and installation 0499-23
 Fuel injection system 0499-33
 Hydraulic system 0399-12
 Loader frames 3199-6
 Loader hydraulics 3199-6
 Starting system 0499-39
 System testing 9035-1
 Track systems 0199-1
 Turbocharger 0499-36
 Water pump 0499-38

Specification

Active elements, parking brake 1199-1
 Air conditioning system 1899-1
 Alternator, regulator and
 charging system wiring 1699-1
 Axle shafts, bearings and
 reduction gears 0299-2
 Batteries, supports and cables 1699-1
 Buckets, loader 3199-1
 Camshaft and valve actuating means ... 0499-3
 Clutch disconnect and controls 0399-11
 Cold weather starting aid 0599-1
 Connecting rods and pistons 0499-8
 Crankshaft and main bearings 0499-2
 Cylinder block 0499-9
 Cylinder head and valves 0499-13
 Drive axle housing 0299-1

Specifications—Continued

Engine break-in	0499-1
Engine cooling system	0599-1
Engine oil cooler	0499-18
External fuel supply system	0599-2
Fan drive	0499-22
Flywheel, housing and fasteners	0499-22
Fuel injection system	0499-15
Hydraulic system, parking brake	1199-2
Hydraulics systems	0399-2
Input drive shafts and U-joints	0399-1
Instruments and indicators	1699-5
Loader hydraulics	3199-1
Mounting frame	0599-2
Oiling system	0499-10
Speed controls	0599-1
Starting system	0499-19
System testing	9035-1
Thermostats, housings and piping	0499-17
Track systems	0199-1
Transfer drive gears, shafts, bearings	0899-1
Turbocharger	0499-16
Vehicle lighting system	1699-4
Water pump	0499-17
Wiring harness and switches	1699-4
Speed control support, transmission	0315-12
Speed controls, engine	0515-1
Sprocket	0130-65
Starting aid adapter	0505-4
Starting aid line	0505-4
Starting aid nozzle	0505-4
Starting aid solenoid	0505-3
Starting aid switch	0505-3
Starting circuit relay	1674-4
Starting motor and fastenings	0422-1
Steering linkage, transmission	0315-3
Switch, light	1673-2
Switch, neutral start	1674-4
Switch, starting aid	0505-3
Switch, thermostatic temperature control	1830-26

T

Testing and adjustments	
Miscellaneous components	9030-2
Carrier roller alignment	9030-3
Front idler guides	9030-3
Inner guide adjustment (vertical)	9030-3
Outer guide adjustment (horizontal)	9030-3
Track tension	9030-2
Windshield wiper	9030-4
Thermal fuse and superheat shut-off switch	1830-28
Thermostats, housings and piping	0418-1

Thermostatic temperature control switch	1830-26
Towbar	1512-1
Track adjuster cylinder	0130-57
Track chain assembly	0130-30
Track frame	0130-61
Track frame wear strips	0130-63
Track guides	0130-3
Track roller and idler leakage test	0130-67
Track rollers	0130-15
Track shoes	0130-29
Track systems	0130-1
Transfer drive gears, shafts, bearings	0851-1
Transfer drive housing and covers	0841-3
Transmission	0315-1
Transmission bypass valve	0360-50
Transmission charge pump	0360-48
Transmission clutch disconnect and controls	0370-1
Transmission control valve	0360-95
Transmission control valve system testing	9026-14
Transmission controls	0315-3
Transmission displacement control valve	0360-80
Transmission filter	0360-132
Transmission forward and reverse speed control	0315-7
Control head	0315-8
Control linkage	0315-10
Transmission input drive shafts and U-joints	0325-1
Transmission manifold valve assembly	0360-92
Transmission motor	0360-52
Transmission oil cooler	0360-12E
Transmission oil cooler bypass valve	0360-127
Transmission operating pressure valve	0360-12E
Transmission orifice linkage	0315-1C
Transmission pump displacement control valve	0360-3E
Transmission reservoir	0360-131
Transmission speed control support	0315-12
Transmission steering linkage	0315-2
Transmission vacuum relief valve	0360-133
Turbocharger	0416-1

V


Valve, actuating means	0402-1
Valve, double selector	4260-1
Valve, loader control	3160-12
Valve, oil pressure regulating	0407-2
Ventilating system	0408-1

W


Water pump	0417-1
Windshield washer	1910-1
Windshield wiper, front	1810-1
Windshield wiper, rear	1810-1

Group II INTRODUCTION AND SAFETY INFORMATION

INTRODUCTION

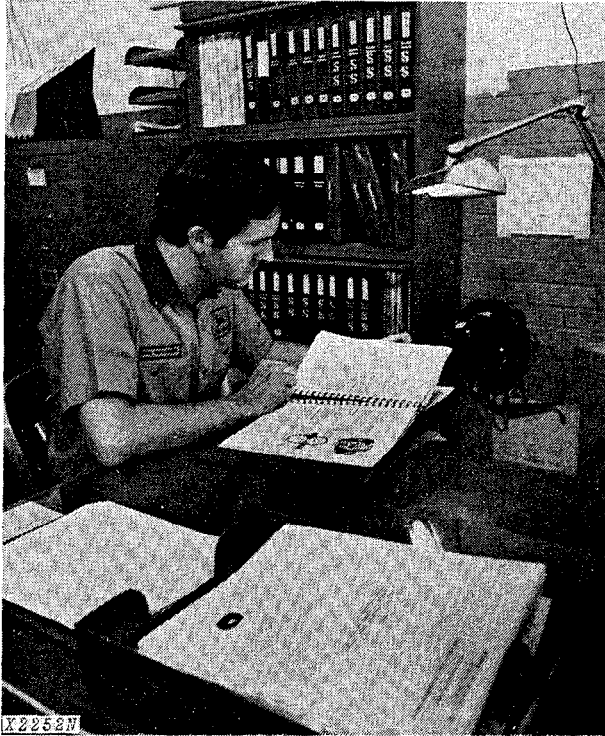

Use FOS Manuals for Reference

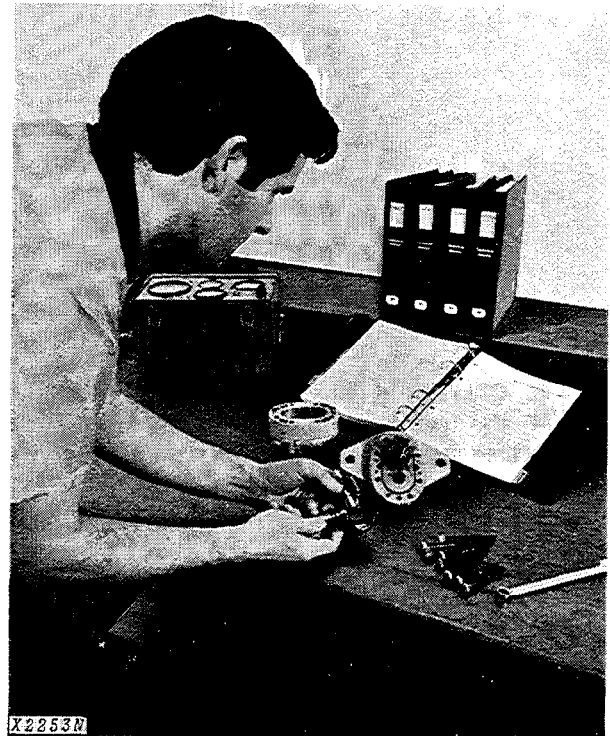

Use Technical Manuals for Actual Service

This technical manual is part of a twin concept of service:

The two kinds of manuals work as a team to give you both the general background and technical details of shop service.

•FOS Manuals—for reference

Fundamentals of Service (FOS) Manuals cover basic theory of operation, *fundamentals* of trouble shooting, *general* maintenance, and *basic* types of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced service technicians.



When a service technician should refer to a FOS Manual for more information, a FOS symbol like the one at the left is used in the TM to identify the reference.

•Technical Manuals—for actual service

Technical Manuals are concise service guides for a specific machine. Technical manuals are on-the-job guides containing only the vital information needed by an experienced service technician.

This technical manual was planned and written for you—an experienced service technician. Keep it in a permanent binder in the shop where it is handy. Refer to it whenever in doubt about correct service procedures or specifications.

Some features of this manual:

- Inside front cover - "Table of Contents"
- Section I - Contents, Introduction and Safety Information, General Specifications, and Fuels and Lubricants.
- Sections 1 through 42 - Removal, repair, testing (components removed), installation, and adjustment.
- Section 90 - Detailed explanation of system operation, diagnosis, visual inspection, testing, and adjustments.
- Specifications grouped and illustrated at the end of each section.


MAINTENANCE WITHOUT ACCIDENT

SAFETY AND YOU



T27999N

CAUTION: This safety symbol followed by the word "caution" identifies important safety messages in this manual and on the crawler loader. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

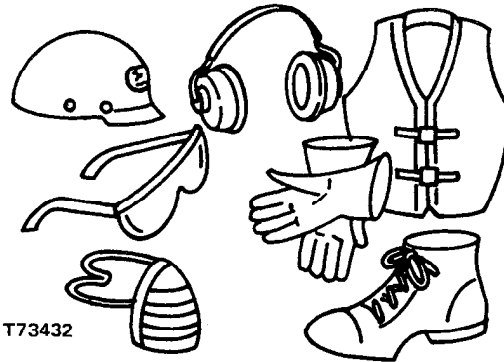

T73432

Wear safety equipment.



T45672

Wear fairly tight clothing.



T73433

T73433

Be prepared if an accident or fire should occur. Know where the first aid kit and the fire extinguishers are located - know how to use them.



X981

Escaping fluid under pressure can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure. Keep hands and body away from pinholes and nozzles which eject fluids under high pressure. Use a piece of cardboard or paper to search for leaks. Do not use your hand.

IF ANY fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type injury or gangrene may result.

MAINTENANCE WITHOUT ACCIDENT

KEEP SHOP AND STORAGE AREA CLEAN



Maintenance area should be adequately vented.


Keep maintenance area clean and dry.

Store flammable materials in a cool and well-vented area out of reach of unauthorized personnel.

FOLLOW SAFE WORKING CONDITIONS

Perform work on equipment only if authorized to do so.

Follow recommended procedures.

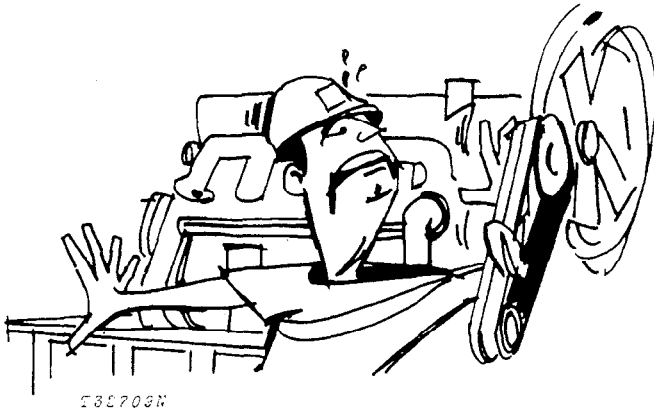

Do not service equipment while it is being operated or engine is running.


Keep hands away from moving parts.

Do not use open flame around machine.

If machine is on an incline, block it securely.


Use hoisting equipment for lifting heavy parts.

Litho in U.S.A.

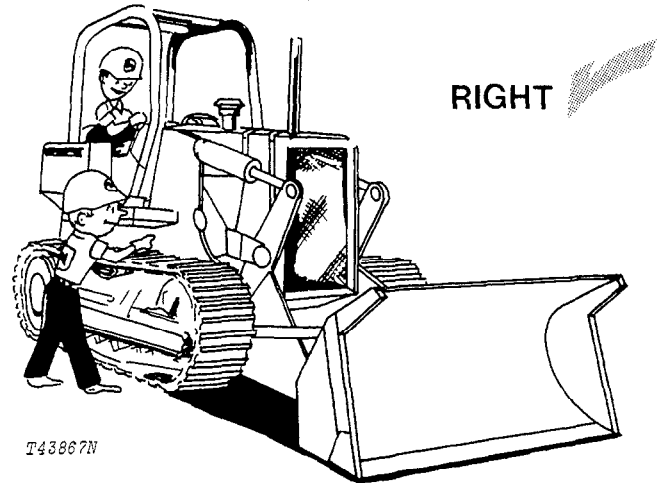

RIGHT


Always use two service technicians - one, the operator at the controls, the other checking within sight of the operator.

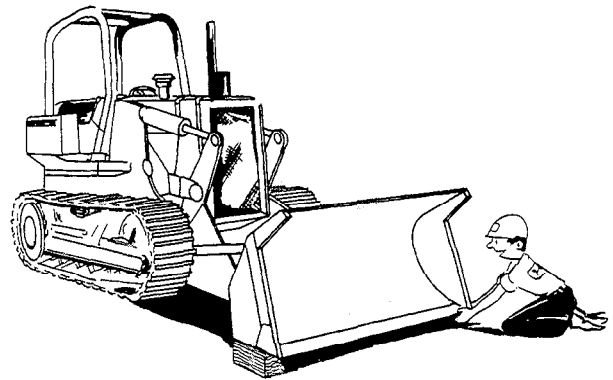

Support all raised equipment.

Do not work under raised bucket.


Always lower bucket before working on it.

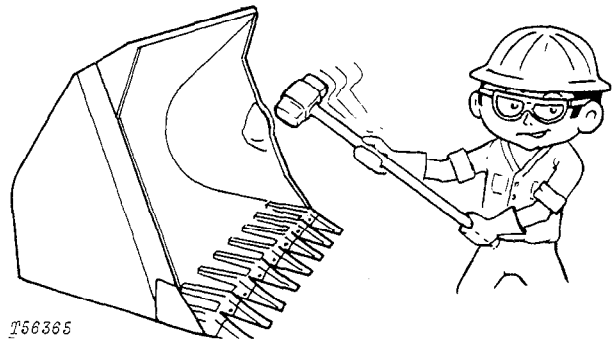


Wear safety glasses when drilling, grinding or hammering metal.

MAINTENANCE WITHOUT ACCIDENT

OBSERVE SERVICE PRECAUTIONS

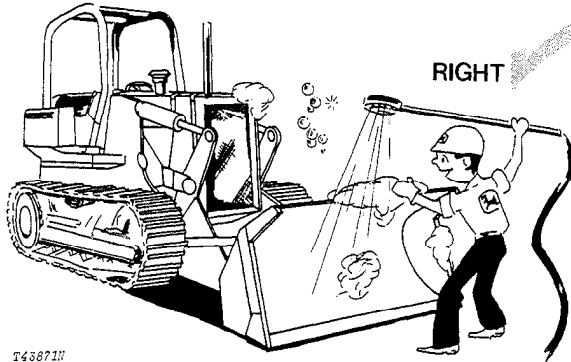

Keep all equipment free of dirt and oil.

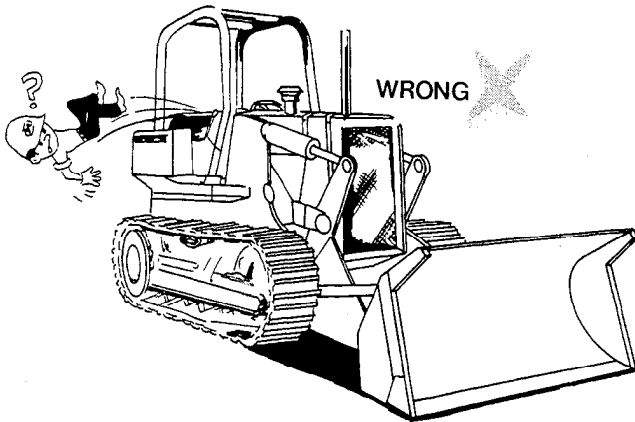

Remove oil, grease, mud, ice, or snow from floor of operator's compartment or steps.

Do not remove radiator filler cap unless engine is cool. Then loosen cap slowly to the stop. Release pressure before you remove cap.


Check exhaust system periodically for excessive leakage.

Relieve hydraulic pressure before working on hydraulic system.

Use the correct test group when checking hydraulic pressure.

Discharge accumulators completely before recharging or servicing.

OBSERVE REPAIR PRECAUTIONS

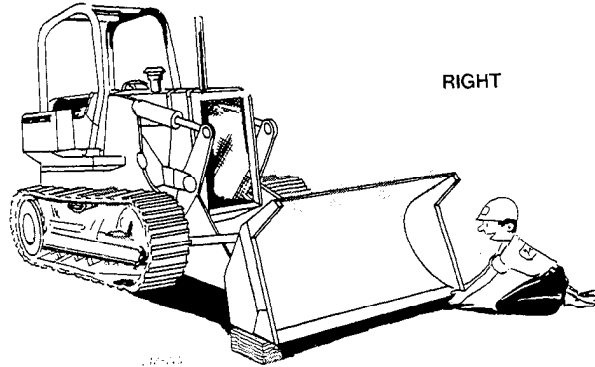

Securely block bucket before changing cutting edges. Wear gloves when working with sharp edges.

Relieve hydraulic pressure before working on hydraulic system.

Turn off battery disconnect switch before repairing the electrical system or performing a major overhaul.

Install lift arm locking pin before working in engine area.


CHECK SAFETY EQUIPMENT ON MACHINE

Check that all protective devices (guards, canopies, shields, ROPS, seat belts, etc.) are installed and secured on machine.

Inspect machine carefully for leakage from lines, hoses, and fittings.

MAINTENANCE WITHOUT ACCIDENT

AVOID EXPLOSIONS OR FIRE

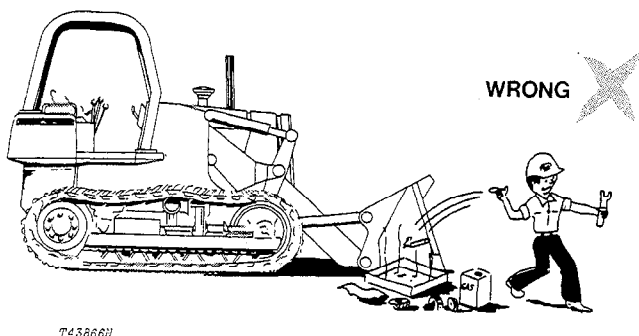

T4386611

Do not smoke while refueling.

Do not smoke while handling highly flammable materials.

Shut off engine when refueling.


Use care in refueling if engine is hot.

Use good commercial, nonflammable solvents for cleaning parts.

Although it is impractical to try to cover every possible maintenance situation, the safety precautions recommended here should serve to develop and promote safe maintenance procedures.

The information contained in this manual is not intended to replace safety codes, insurance requirements, federal, state, and local laws, rules and regulations. In particular, your service area or jobsite activities may be subject to state safety rules and/or federal regulation under the Occupational Safety and Health Act (OSHA). Familiarize yourself with all regulations applicable to your situation in order to avoid possible safety violations.

OBSERVE BATTERY PRECAUTIONS

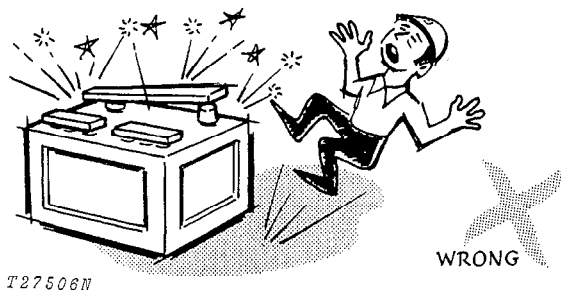

T27506N

Do not place metal objects across posts to check charge.

Do not smoke near battery.

Do not allow sparks or open flame near battery.


Provide adequate ventilation when charging batteries.

TEST COOLANT HEATER IN LIQUID ONLY

Use a heavy-duty grounded cord to connect coolant heater to electrical power.

Do not plug into electrical power unless heating element is immersed in coolant. Sheath could burst and result in personal injury.

PROTECT AGAINST NOISE

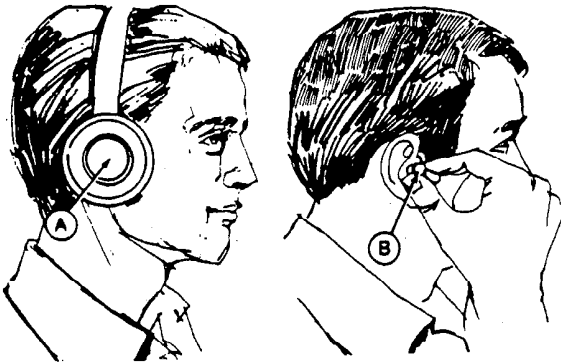

X7662

Prolonged exposure to loud noise can cause impairment or loss of hearing. Wear a suitable hearing protective device such as earmuffs (A) or earplugs (B) to protect against objectionable or uncomfortable loud noise.

UNDERSTAND CORRECT SERVICE

Be sure you understand a service procedure before you work on the machine.

Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

PREPARE MACHINE FOR REPAIR

Lower all equipment to the ground.

Put forward and reverse speed control lever in neutral position. Move neutral lock lever to locked position.

Stop the engine.

Operate all hydraulic control levers to release hydraulic pressure in the system.

Disconnect negative (-) battery cable.

KEEP ROPS INSTALLED PROPERLY

If ROLL-GARD® protective frame or ROLL-OVER protective equipment is loosened or removed for any reason, make certain all parts are reinstalled correctly. Tighten mounting bolts to proper torque. The protection offered by ROPS will be impaired if the ROPS is subject to structural damage, has been involved in an overturn incident or is in anyway altered. Damaged ROPS should be replaced, not reused.

START ENGINE FROM OPERATOR'S SEAT ONLY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear and will move if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral, and park brake applied.


SAE Operating Weight with ROPS 35,000 lb.
(15 900 k)

Capacities:	U.S.	Liters
Cooling system	7 gal.	26.5
Fuel tank	73 gal.	276.3
Crankcase	18 qt.	17.0
Crankcase, including filter	20 qt.	18.9
Splitter drive	1.5 gal.	5.7
Final drive each:		
1st reduction	6.25 gal.	23.6
2nd reduction	3.5 gal.	13.2
Loader hydraulic system	37 gal.	140.1
Hydrostatic drives	33 gal.	124.9

SAE Operating Weight with ROPS 35,000 lb.
(15 900 kg)

SAE Operating Weight with ROPS
Cab 35,400 lb.
(16 060 kg)

LOADER DIMENSIONS

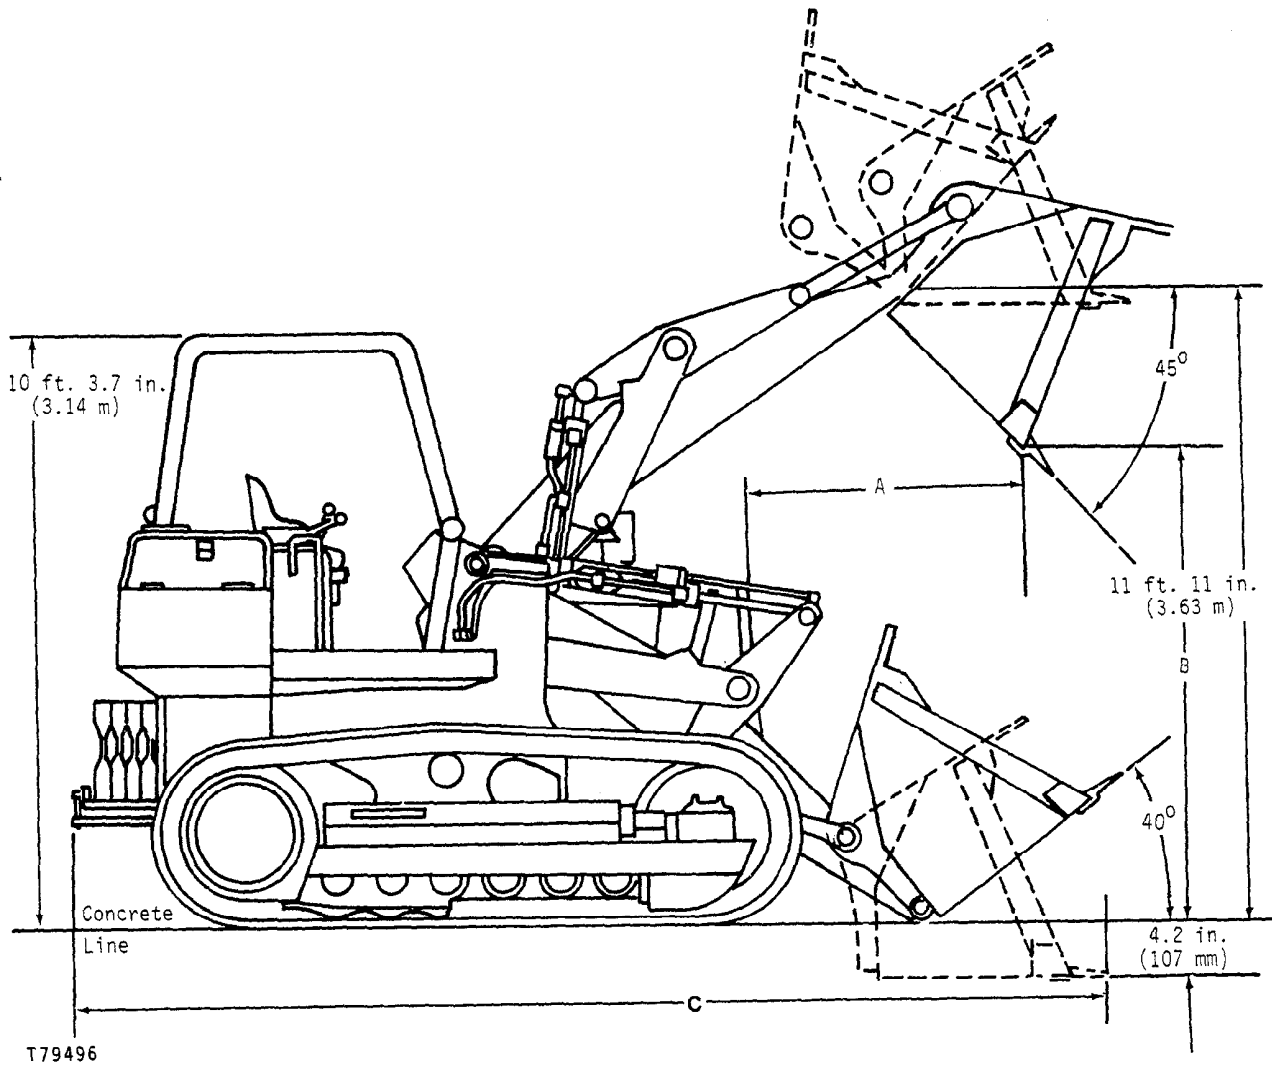

BUCKET CAPACITIES	DIMENSIONS		
	A	B	C
2.25 cu. yd. (1.72 m ³) bucket	47 in. (1194 mm)	9 ft. 4 in. (2.84 m)	18 ft. 3 in. (5.56 m)
2 cu. yd. (1.53 m ³) multipurpose	47.4 in. (1.20 m)	9 ft. 3.6 in. (2.83 m)	18 ft. 3.5 in. (5.58 m)

LOADER OPERATING DIMENSIONS

OPERATING INFORMATION	BUCKET	
	General Purpose	Multipurpose
Capacity, heaped, SAE	2.25 cu. yd. (1.72 M ³)	2.0 cu. yd. (1.53 M ³)
Capacity, struck, SAE	1.90 cu. yd. (1.45 m ³)	1.60 cu. yd. (1.22 m ³)
Bucket width	87.15 in. (2.21 m)	88.2 in. (2.24 m)
Bucket weight, without teeth	1790 lb. (812 kg)	2770 lb. (1256 kg)
SAE breakout force	27,500 lb. (122 kN) (12 474 kg)	27,000 lb. (120 kN) (12 247 kg)
SAE tipping load (w/drawbar and four counterweights)	25,300 lb. (11 476 kg)	24,320 lb. (11 030 kg)
Raising time	5.86 sec.	5.86 sec.
Dumping time	1.27 sec.	1.27 sec.
Lowering time	3.23 sec.	3.23 sec.
SAE operating weight w/ROPS canopy	35,000 lb. (15 900 kg)	35,980 lb. (16 320 kg)

Adjustments to operating weights and tipping loads:		
Add (+) or deduct (-) lb. (kg) as indicated for loader equipped with:	Loader Operating Weight	Tipping Load
Cab	+400 lb. (181 kg)	+440 lb. (200 kg)
Bucket teeth, bolt on	-165 lb. (75 kg)	+215 lb. (98 kg)
Air conditioning	+109 lb. (49 kg)	+30 lb. (14 kg)
Ripper (w/o drawbar and four counterweights)	-106 lb. (48 kg)	+200 lb. (91 kg)
Counterweight (each)	+or -500 lb. (227 kg)	+or -865 lb. (392 kg)

CUSTOMARY HARDWARE TORQUE




HARDWARE TORQUE SPECIFICATIONS

Check all cap screws and nuts, which can be easily reached, to be sure they are tight. If hardware is loose, tighten it to torque shown on chart below unless a special torque is specified.

NOTE: Torques shown are for dry (no lubrication on threads) hardware.

NOTE: Torque wrench tolerance is ± 10 percent of specified torque.

Customary Hardware

Cap Screw Size-Inches	 Grade B		 Grade D		 Grade F	
	lb-ft.	(N-m)	lb-ft.	(N-m)	lb-ft.	(N-m)
1/4	----	----	10	(14)	14	(19)
5/16	----	----	20	(27)	30	(41)
3/8	----	----	35	(47)	50	(68)
7/16	35	(47)	55	(75)	80	(108)
1/2	55	(75)	85	(115)	120	(163)
9/16	75	(102)	130	(176)	175	(237)
5/8	105	(142)	170	(230)	240	(325)
3/4	185	(251)	300	(407)	425	(576)
7/8	160	(217)	445	(603)	685	(929)
1	250	(339)	670	(908)	1030	(1396)
1-1/8	330	(447)	910	(1234)	1460	(1979)
1-1/4	480	(651)	1250	(1695)	2060	(2793)

T68884

METRIC HARDWARE TORQUE

NOTE: Torques shown are for hardware with SAE 30W oil on threads.

NOTE: Torque wrench tolerance is ± 10 percent of specified torque.

Metric Standard Thread

Thread	8.8		10.9		12.9	
	N·m	(lb-ft)	N·m	(lb-ft)	N·m	(lb-ft)
M5	5.9	(4.4)	7.9	(5.8)	9.8	(7.2)
M6	9.8	(7.2)	13.8	(10.2)	16.7	(12.3)
M8	24.6	(18.1)	34.4	(25.4)	40.2	(29.6)
M10	48.1	(35.5)	67.8	(50.0)	81.5	(60.1)
M12	84.4	(62.2)	118.0	(87.0)	142.0	(105.0)
M14	133.0	(98.0)	187.0	(138.0)	226.0	(167.0)
M16	206.0	(152.0)	290.0	(214.0)	348.0	(257.0)
M18	285.0	(210.0)	398.0	(294.0)	476.0	(351.0)
M20	402.0	(296.0)	570.0	(420.0)	677.0	(499.0)
M22	540.0	(398.0)	765.0	(564.0)	914.0	(674.0)
M24	697.0	(514.0)	980.0	(723.0)	1180.0	(870.0)

Metric Fine Thread

Thread	8.8		10.9		12.9	
	N·m	(lb-ft)	N·m	(lb-ft)	N·m	(lb-ft)
M8 x 1	26.5	(19.5)	37.3	(27.5)	44.2	(32.6)
M10 x 1	47.1	(34.7)	68.8	(50.7)	81.5	(60.1)
M12 x 1.5	88.4	(65.2)	123.0	(91.0)	147.0	(108.0)
M14 x 1.5	147.0	(108.0)	206.0	(152.0)	246.0	(181.0)
M16 x 1.5	221.0	(163.0)	309.0	(228.0)	373.0	(275.0)
M18 x 1.5	319.0	(235.0)	451.0	(333.0)	540.0	(398.0)
M20 x 1.5	451.0	(333.0)	628.0	(463.0)	755.0	(557.0)
M22 x 1.5	559.0	(442.0)	845.0	(623.0)	1030.0	(760.0)
M24 x 2	765.0	(564.0)	1080.0	(796.0)	1275.0	(940.0)
M26 x 2	1130.0	(833.0)	1570.0	(1158.0)	1915.0	(1412.0)

O-RING BOSS FITTING SERVICE RECOMMENDATIONS

1. Inspect boss O-ring seat. It must be free of dirt and defects. If repeated leaks occur, inspect for defects with a magnifying glass. Some raised defects can be removed with a slip stone.

Occasionally a lower durometer O-ring will seal against a rough seat. If neither of these solutions work, the component must be replaced.

2. Put hydraulic oil, petroleum jelly or soap on the O-ring. Put a thimble over the threads to protect O-ring from nicks. Slide O-ring over the thimble and into the turned down section of fitting.

For angle fittings, loosen special nut and push special washer against threads so O-ring can be installed into the turned down section of fitting.

3. Turn fitting into the boss by hand until special washer or washer face (straight fitting) contacts boss face and O-ring is squeezed into its seat.

4. To position angle fittings, turn the fitting counter-clockwise a maximum of one turn.

5. Tighten straight fittings to the torque value shown in chart. For angle fittings, tighten the special nut to value shown in the chart while holding body of fitting with a wrench.

STRAIGHT FITTING OR SPECIAL NUT TORQUE

Thread Size	Torque ¹		Number Of Flats ²
	N·m	(lb-ft)	
3/8-24 UNF	8	(6)	2
7/16-20 UNF	12	(9)	2
1/2-20 UNF	16	(12)	2
9/16-18 UNF	24	(18)	2
3/4-16 UNF	46	(34)	2
7/8-14 UNF	62	(46)	1-1/2
1-1/16-12 UNF	102	(75)	1
1-3/16-12 UNF	122	(90)	1
1-5/16-12 UNF	142	(105)	3/4
1-5/8-12 UNF	190	(140)	3/4
1-7/8-12 UNF	217	(160)	1/2

1. Tolerance \pm 10%.

2. To be used if a torque wrench cannot be used. After tightening fitting by hand, put a mark on nut and boss; then tighten special nut or straight fitting the number of flats shown.

TUBE AND HOSE FITTING, 37° FLARE AND 30° CONE SEAT CONNECTOR SERVICE RECOMMENDATIONS

1. Inspect the flare and the flare seat. They must be free of dirt and defects. If repeated leaks occur, inspect for defects with a magnifying glass. If burrs and raised nicks on the connector body cannot be removed with a slip stone, replace the connector.

2. Defects in the tube flare cannot be repaired. Replace the tube. Overtightening a defective flared fitting will not stop leaks.

3. As a field repair, a ductile truncated cone shaped washer can be used between the tube flare and connector body. These washers are soft enough to fill defects in the seat and flare. They will also seal the connection. Ductile washers are available from industrial supply houses.

4. Align the tube with the fitting before attempting to start the nut. Failure to do so can cause a deformed flare and subsequent leaks. Install hoses without twists. A twisted hose attempts to straighten out when pressure is applied. This exerts a torque on the connection, eventually causing failure.

5. Lubricate the connection with hydraulic fluid, petroleum jelly or soap. Tighten the swivel nut by hand until it is snug.

6. Mark a line across the nut and connector body. This line will serve as a visual indicator as to whether the nut has been tightened and by how much.

7. Using two wrenches, one on the connector body and a torque wrench on the nut, tighten the nut to the torque value as shown in the chart. In the case of a hose, it may be necessary to use three wrenches to prevent twisting.

TUBE AND HOSE FITTING, 37° FLARE AND 30° CONE SEAT CONNECTOR TORQUE

Thread Size	Torque ¹		New ² Number of Flats	Used ³ Number of Flats
	N·m	(lb-ft)		
3/8-24 UNF	8	(6)	2-1/2	1
7/16-20 UNF	12	(9)	2-1/2	1
1/2-20 UNF	16	(12)	2-1/2	1
9/16-18 UNF	24	(18)	2	1
3/4-16 UNF	46	(34)	2	1
7/8-14 UNF	62	(46)	1-1/2	1
1-1/16-12 UN	102	(75)	1	3/4
1-3/16-12 UN	122	(90)	1	3/4
1-5/16-12 UN	142	(105)	3/4	3/4
1-5/8-12 UN	190	(140)	3/4	3/4
1-7/8-12 UN	217	(160)	1/2	1/2

1. Tolerance of ± 10%.

2. To be used if a torque wrench cannot be used. After tightening fitting by hand, put a mark across the fittings, then tighten fitting the number of flats shown.

3. Flare connection seal by deforming or squeezing the tube between the nut and the connector. More deformation is possible with new parts than with old. Therefore, if a torque wrench is not used for re-assembly, the values in this column must be used to prevent damage.

SAE FOUR BOLT FLANGE FITTING SERVICE RECOMMENDATIONS

1. Inspect the sealing surfaces for nicks or scratches, roughness or out-of-flat condition. Scratches cause leaks. Roughness causes seal wear. Out-of-flat causes seal extrusion. If these defects cannot be polished out, replace the component.

2. Install the correct O-ring (and backup washer if required) into the groove using petroleum jelly to hold it in place.

3. For split flange; loosely assemble split flange halves, being sure that the split is centrally located and perpendicular to the port. Hand tighten cap screws to hold parts in place. Do not pinch O-ring.

4. For single piece flange; put hydraulic line in the center of the flange and install four cap screws. With the flange centrally located on the port, hand tighten cap screws to hold it in place. Do not pinch O-ring.

5. For both single piece flange and split flange, be sure the components are properly positioned and cap screws are hand tight. Tighten one cap screw, then tighten the diagonally opposite cap screw. Tighten the two remaining cap screws. Tighten all cap screws within the specified limits shown in the chart.

DO NOT use air wrenches. DO NOT tighten one cap screw fully before tightening the others. DO NOT over-tighten.

SAE FOUR BOLT FLANGE FITTING TORQUE

Nominal Flange Size	Cap Screw Size ¹	Torque ²			
		N·m		(lb·ft)	
		Min.	Max.	Min.	Max.
1/2	5/16 - 18 UNC	20	31	(15)	(23)
3/4	3/8 - 16 UNC	28	54	(21)	(40)
1	3/8 - 16 UNC	37	54	(27)	(40)
1-1/4	7/16 - 14 UNC	47	85	(35)	(63)
1-1/2	1/2 - 13 UNC	62	131	(46)	(97)
2	1/2 - 13 UNC	73	131	(54)	(97)
2-1/2	1/2 - 13 UNC	107	131	(79)	(97)
3	5/8 - 11 UNC	158	264	(117)	(195)
3-1/2	5/8 - 11 UNC	158	264	(117)	(195)
4	5/8 - 11 UNC	158	264	(117)	(195)
5	5/8 - 11 UNC	158	264	(117)	(195)

1. SAE Grade 5 or better cap screws with plated hardware.

2. Tolerance $\pm 10\%$. The torques given are enough for the given size connection with the recommended working pressure. Torques can be increased to the maximum shown for each cap screw size if desired. Increasing cap screw torque beyond this maximum will result in flange and cap screw bending and connection failures.



Suggest:

If the above button click is invalid.

Please download this document

first, and then click the above link

to download the complete manual.

Thank you so much for reading

O-RING FACE SEAL FITTING SERVICE RECOMMENDATIONS

1. Inspect the sealing surfaces for nicks or scratches, roughness, or out-of-flat condition. Scratches cause leaks. Roughness causes seal wear. Out-of-flat causes seal extrusion. If these defects cannot be polished out, replace the component.

2. Lubricate O-rings and male threads using petroleum jelly.

For O-ring face seal fittings, push O-ring into groove.

For O-ring boss fittings, put a thimble over the threads to protect O-ring from nicks. Slide O-ring over the thimble and into the turned down section of fitting.

For angle fittings, loosen special nut and push special washer against threads so O-ring can be installed into the turned down section of fitting.

3. Install fitting and hand tighten until snug. To position angle fittings, turn fitting counterclockwise a maximum of one turn.

4. Tighten fitting or nut to torque value shown in chart per dash size stamped on fitting.

Use one wrench to hold connector body and another wrench to tighten nut. When tightening a fitting on a hose, it may be necessary to use three wrenches to prevent twisting hose; one on the connector body, one on the nut, and one on the body of hose fitting.

O-RING FACE SEAL FITTING TORQUE (1)

Nominal		Dash Size	Thread Size in.	O-Ring Face Seal End				O-Ring Boss End			
Tube mm	O.D. in.			Swivel Nut Torque		Bulkhead Nut Torque		Thread Size in.	Straight Fitting or Jam Nut Torque		
			N·m	lb-ft	N·m	lb-ft		N·m	lb-ft		
4.76	0.188	-3	—	—	—	—	3/8-24	8	6		
6.35	0.250	-4	16	12	5.0	3.5	7/16-20	12	9		
7.94	0.312	-5	—	—	—	—	1/2-20	16	12		
9.52	0.375	-6	24	18	9.0	6.5	9/16-18	24	18		
12.70	0.500	-8	50	37	17.0	12.5	3/4-16	46	34		
15.88	0.625	-10	69	51	17.0	12.5	7/8-14	62	46		
19.05	0.750	-12	102	75	17.0	12.5	1-1/16-12	102	75		
22.22	0.875	-14	102	75	17.0	12.5	1-3/16-12	122	90		
25.40	1.000	-16	142	105	17.0	12.5	1-5/16-12	142	105		
31.75	1.250	-20	190	140	17.0	12.5	1-5/8-12	190	140		
38.10	1.500	-24	217	160	17.0	12.5	1-7/8-12	217	160		

1. Tolerance: +15-20%.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>