

# **3430 and 3830 Self Propelled Windrower**

**John Deere Ottumwa Works  
TM1314 (08APR02)**

LITHO IN U.S.A.  
ENGLISH

# Introductory Information

## FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and diagnostics. Repair sections tell how to repair the components. Diagnostic sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Binders, binder labels, and tab sets can be ordered by John Deere dealers direct from the John Deere Distribution Service Center.

This manual is part of a total product support program.

## FOS MANUALS—REFERENCE

### TECHNICAL MANUALS—MACHINE SERVICE

### COMPONENT MANUALS—COMPONENT SERVICE

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced technicians.

Technical Manuals are concise guides for specific machines. Technical manuals are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Component Technical Manuals are concise service guides for specific components. Component technical manuals are written as stand-alone manuals covering multiple machine applications.



E24893  
-JUN-28AUG89

EX,TM1314,IFC -19-07JUL93

# Dealer Presentation Letter

## JOHN DEERE DEALERS

**IMPORTANT: Please remove this page and route through your service department.**

*NOTE: If you have a loose leaf binder, replace these sections.*

*If you have a hard bound manual, place these pages with your manual and note outdated pages bound in the manual.*

This is a partial revision of TM1314, 3430 / 3830 Self Propelled Windrower.

Listed below is a brief explanation of what was changed.

### **Sections 40 / 240 Electrical**

New starter and alternator used on 3430 and 3830.

Corrected diagnostics, wiring diagrams, and repair procedures.

All serial number breaks are noted.

### **Sections 50 / 250 Power Train**

New power wheel used on 3830.

Corrected diagnostics, and repair procedures.

All serial number breaks are noted.

### **Sections 70 / 270 Hydraulics**

Corrected diagnostics, JIC diagrams, and repair procedures.

All the hydraulic valves are discussed and demonstrated.

Internal pressure and flow changes have been corrected.

Changes in the hydraulic line routings are shown.

All serial number breaks are noted..

EX, TM1314, DLR -19-07JUL93

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

# Contents

## SECTION 00—Safety

Group 35—Final Drive Motor Repair  
Group 40—Platform Drive Shaft

## SECTION 10—GENERAL

Group 00—Specifications, Torques, and Special Tools  
Group 05—After-Sales Services  
Group 10—Tune-Up  
Group 15—Diagnosing and Testing Procedures  
Group 20—Engine Removal

## SECTION 60—STEERING AND BRAKES REPAIR

Group 00—Specifications and Torques  
Group 05—Steering and Ground Speed Controls  
Group 10—High-Low Range  
Group 15—Brakes

## SECTION 20—ENGINE REPAIR

Group 05—Cylinder Head, Valves, Timing Gear Train, Camshaft, and Balancer Shaft  
Group 10—Cylinder Block, Liners, Pistons, and Rods  
Group 15—Crankshaft, Main Bearing, and Flywheel  
Group 20—Lubrication System  
Group 25—Cooling System

## SECTION 70—HYDRAULIC REPAIR

Group 05—Lift Cylinders  
Group 10—Platform Lift Valves

## SECTION 30—FUEL AND AIR REPAIR

Group 05—Air Intake System  
Group 10—Fuel System

## SECTION 80—MISCELLANEOUS

Group 05—Diagnosing Malfunctions  
Group 10—Rotary Air Screen (3830)  
Group 15—Rear Axle

## SECTION 40—ELECTRICAL REPAIR

Group 00—Specifications, Torques and Essential Tools  
Group 05—Battery Repair  
Group 10—Charging System Repair  
Group 15—Starting System Repair  
Group 20—Lights, Instruments and Wiring Diagrams  
Group 25—Rotary Screen Motor Repair (3830)

## SECTION 90—OPERATOR'S STATION REPAIR

Group 00—Specifications, Torques, and Special Tools  
Group 05—Pressurizer System  
Group 10—Air Conditioning System  
Group 15—Cab Removal  
Group 20—Heating System  
Group 25—PERSONAL POSTURE™ Seat (3830)  
Group 30—Miscellaneous Components

## SECTION 50—POWER TRAIN REPAIR

Group 00—Specifications, Torques, and Special Tools  
Group 05—Flushing the Hydrostatic System  
Group 10—Power Wheel (3430)  
Group 15—Power Wheel (3830)  
Group 20—Hydrostatic Pumps  
Group 25—Charge Pump  
Group 30—Final Drive Motor Removal

## SECTION 100—PLATFORM POWER TRAIN

Group 00—Specifications, Torques, and Special Tools  
Group 05—PTO Hookup  
Group 10—Platform Gear Case  
Group 15—Right and Left-Hand Cross Shafts

## SECTION 110—PLATFORM REEL

Group 00—Specifications and Torques  
Group 05—Diagnosing Malfunctions  
Group 10—Reel

## SECTION 120—PLATFORM AUGER

Group 00—Specifications and Torques  
Group 05—Diagnosing Malfunctions

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

TM1314-19-08APR02

COPYRIGHT© 1993  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION™ Manual  
Previous Editions  
Copyright 1985 Deere & Company

Group 10—Auger

**SECTION 130—PLATFORM CUTTING COMPONENTS**

- Group 00—Specifications, Torques, and Special Tools
- Group 05—Diagnosing Malfunctions
- Group 10—Cutterbars
- Group 15—Knife Drive Case

**SECTION 140—PLATFORM CONDITIONERS**

- Group 00—Specifications and Torques
- Group 05—Diagnosing Malfunctions
- Group 10—Conditioners

**SECTION 220—ENGINE OPERATION AND TESTS**

- Group 00—Specifications, Torques, and Special Tools
- Group 05—System Operation
- Group 10—System Diagnosis and Tests

**SECTION 230—FUEL/AIR OPERATION AND TESTS**

- Group 00—Specification and Special Tools
- Group 05—Air Intake System
- Group 10—Diesel Fuel System

**SECTION 240—ELECTRICAL OPERATION AND TESTS**

- Group 00—Specifications, Torques, and Essential Tools
- Group 05—Battery Testing
- Group 10—Charging Circuit Diagnosis
- Group 15—Starting Circuit Diagnosis
- Group 20—Lights, Instruments, and Diagrams
- Group 25—Rotary Air Screen (3830)

**SECTION 250—POWER TRAIN OPERATION AND TESTS**

- Group 00—Specifications and Special Tools
- Group 05—Diagnosing Malfunctions
- Group 10—Testing Hydrostatic System

**SECTION 260—STEERING/BRAKES OPERATION**

- Group 05—Diagnosing Malfunctions
- Group 10—Steering and Ground Speed Controls
- Group 15—Brakes

**SECTION 270—HYDRAULIC OPERATION AND TESTS**

- Group 00—Specifications and Special Tools
- Group 05—Diagnosing Malfunctions
- Group 10—Testing Hydraulic System

**SECTION 290—OPERATOR STATION OPERATION AND TESTS**

- Group 00—Specifications, Torques and Special Tools
- Group 05—Pressurizer System
- Group 10—Air Conditioning System Operation
- Group 15—Air Conditioning System Tests and Diagnosis
- Group 20—Heating and System Operation and Tests

# Section 10 GENERAL

## Contents

Page

Group 00—Specifications, Torques, and Special  
Tools

Group 05—After-Sales Services

Group 10—Tune-Up

Group 15—Diagnosing and Testing Procedures

Group 20—Engine Removal

10

# Section 20 ENGINE REPAIR

## Contents

Page

Group 05—Cylinder Head, Valves, Timing Gear  
Train, Camshaft, and Balancer Shaft

Group 10—Cylinder Block, Liners, Pistons, and  
Rods

Group 15—Crankshaft, Main Bearing, and  
Flywheel

Group 20—Lubrication System

Group 25—Cooling System

20

**Section 30**  
**FUEL AND AIR REPAIR**

**Contents**

Page

**Group 05—Air Intake System**

**Group 10—Fuel System**

30

# Section 40

# ELECTRICAL REPAIR

## Contents

	Page	Page
<b>Group 00—Specifications, Torques and Essential Tools</b>		
Battery/Circuit Breakers . . . . .	40-00-1	
Lighting Circuits . . . . .	40-00-1	
Instrument Circuits . . . . .	40-00-2	
Accessory Circuits . . . . .	40-00-2	
Charging Circuit ( —880000) . . . . .	40-00-3	
Charging Circuit (880001— ) . . . . .	40-00-4	
Starting Circuit ( —915000) . . . . .	40-00-5	
Starting Circuit (915001— ) . . . . .	40-00-5	
Essential Tools . . . . .	40-00-5	
<b>Group 05—Battery Repair</b>		
General Information . . . . .	40-05-1	
Precautions . . . . .	40-05-2	
Cold Weather Battery Service . . . . .	40-05-2	
Remove Battery . . . . .	40-05-3	
Clean The Battery . . . . .	40-05-3	
Install Battery . . . . .	40-05-4	
<b>Group 10—Charging System Repair</b>		
Motorola Alternator ( —880000)		
Remove Alternator . . . . .	40-10-1	
Disassemble Alternator . . . . .	40-10-1	
Replace Slip Ring End Bearings . . . . .	40-10-2	
Replace Drive End Bearings . . . . .	40-10-3	
Replace Rotor . . . . .	40-10-4	
Replace Brushes . . . . .	40-10-5	
Replace Diodes . . . . .	40-10-5	
Test Stator . . . . .	40-10-6	
Assemble Stator and Slip Ring End Frame . . . . .	40-10-7	
Install Regulator . . . . .	40-10-7	
Tests After Assembly . . . . .	40-10-8	
Install Alternator . . . . .	40-10-9	
Adjust Alternator Belt . . . . .	40-10-9	
Bosch Alternator (880001— )		
General Information . . . . .	40-10-11	
Replace Suppression Capacitor . . . . .	40-10-11	
Replace Regulator / Brush Assembly . . . . .	40-10-12	
Replace Harness . . . . .	40-10-12	
Replace Alternator . . . . .	40-10-13	
<b>Group 15—Starting System Repair</b>		
Delco Remy 27-MT ( —915000)		
Remove Starting Motor . . . . .	40-15-1	
Check Operation of Motor Drive . . . . .	40-15-2	
Repair Starting Motor . . . . .	40-15-3	
Install Starting Motor . . . . .	40-15-4	
Delco Remy 28-MT (915001— )		
Remove Starting Motor . . . . .	40-15-5	
Check Operation of Motor Drive . . . . .	40-15-6	
Repair Starting Motor . . . . .	40-15-7	
Install Starting Motor . . . . .	40-15-8	
<b>Group 20—Lights, Instruments and Wiring Diagrams</b>		
Safety Precautions . . . . .	40-20-1	
Replace Headlamps (Hobbs) . . . . .	40-20-2	
Replace Headlamps (Grote) . . . . .	40-20-3	
Replace Left-Hand Tail Lamp . . . . .	40-20-4	
Replace Right-Hand Rear Lamp (optional). . . . .	40-20-4	
Replace Auxiliary Field Lamps . . . . .	40-20-5	
Replace 'Guide' Warning and Turn Signal Lamp . . . . .	40-20-6	
Replace 'Hobbs' Warning and Turn Signal Lamp . . . . .	40-20-6	
Dome and Console Lamp . . . . .	40-20-7	
Adjust Head Lamps . . . . .	40-20-7	
Instrument Cluster . . . . .	40-20-8	
Coolant Temperature Gauge . . . . .	40-20-8	
Alternator Indicator Lamp . . . . .	40-20-9	
Engine Oil Pressure Lamp . . . . .	40-20-9	
Hydrostatic Drive Oil Pressure Lamp . . . . .	40-20-10	
High Temperature Lamp . . . . .	40-20-10	
Caution Lamp . . . . .	40-20-11	
Hour Meter . . . . .	40-20-11	
Tachometer . . . . .	40-20-12	
Hydrostatic Filter Restriction Indicator . . . . .	40-20-12	
Engine Air Cleaner Indicator . . . . .	40-20-13	
Fuel Gauge . . . . .	40-20-13	
Replace Turn Signal Controller . . . . .	40-20-14	
Repair Instrument Cluster . . . . .	40-20-15	
Install Instrument Cluster . . . . .	40-20-17	
Replace Bulbs . . . . .	40-20-17	

Continued on next page

Page

Replace Digital Tachometer . . . . . 40-20-18  
Calibrate Tachometer . . . . . 40-20-18  
Check Tachometer Display . . . . . 40-20-19  
Adjust Shaft Speed Sensor . . . . . 40-20-20  
Adjust Ground Speed Sensor . . . . . 40-20-20  
Replace Engine RPM Sensor . . . . . 40-20-21  
Harness Replacement . . . . . 40-20-22  
Removing Connector Body From  
    Terminals . . . . . 40-20-24  
Harness Repair . . . . . 40-20-25  
Special Tools and Materials . . . . . 40-20-26  
Replace Connectors . . . . . 40-20-26  
Remove Wiper Motor . . . . . 40-20-31  
Repair Wiper Motor . . . . . 40-20-32  
Adjust Wiper . . . . . 40-20-33  
Blower Motor . . . . . 40-20-34

**Group 25—Rotary Screen Motor Repair (3830)**  
Replace Brushes . . . . . 40-25-1

**BATTERY AND CIRCUIT BREAKERS**

**BATTERY**

Battery ground	.....	Negative
John Deere part no.	.....	TY21751
Battery volts (engine shut off)	.....	11.7 to 12.8
Cold cranking amps at -18°C (0°F)	.....	700
Reserve capacity (minutes at 25 amps)	.....	110
Group	.....	31

**MAIN CIRCUIT BREAKERS**

Lights	.....	30 amp
Ignition switch	.....	30 amp
Cab radio, wiper, and blower	.....	20 amp
Instrument cluster	.....	10 amp
Rotary screen	.....	10 amp
Breaker trip time for 30 amp current	.....	Within 60 seconds

E05,4000,AN -19-23JUN93

**LIGHTING CIRCUITS**

**BULBS (12-16 Volts)**

**TRADE NUMBER**

Single-beam head lamp (halogen, sealed beam)	.....	H7607
Work lamp (halogen, sealed beam)	.....	H7607
Tail lamp (clear, double contact)	.....	1003
Warning lamp (clear, single contact)	.....	
Tachometer, fuel and water lamp (clear, miniature bayonet base)	.....	
Console lamp (overhead) (clear)	.....	168
Dome lamp (clear)	.....	105
Turn signal (green)	.....	1895G

**FLASHER RATE PER MINUTE**

Warning Light	.....	60 to 85
Turn signal	.....	maximum 105
		Opposite side - 60 to 85

E05,4000,AO -19-23JUN93

## INSTRUMENT CIRCUITS

### WATER TEMPERATURE GAUGE SENDER (9 volts, minimum resistance applied between ground and sender terminals):

40°C (104°F) . . . . .	287 ohms
107°C (224°F) . . . . .	32.1 ohms
120°C (248°F) . . . . .	22.7 ohms

### Fuel gauge sender resistance:

Empty . . . . .	6.5-9.2 ohms
1/2 Full . . . . .	88-92 ohms
Full . . . . .	177-188 ohms

Air filter restriction switch . . . . . closes 5 to 7.5 kPa (0.05 to 0.75 bar) (0.73 to 1.09 psi)

Engine high temperature switch . . . . . closes at 105°C (220°F)

Engine oil pressure switch . . . . . opens 48-72 kPa (0.04 to 0.7 bar) (5.5—10.5 psi)

### Hydrostatic transmission oil pressure switch:

Opens . . . . .	379 kPa (4 bar) (55 psi)
Closes . . . . .	241 kPa (2 bar) (35 psi)

Hydrostatic transmission oil filter switch . . . . . closes 138-179 kPa (1.2-1.8 bar) (20-26 psi)

E05,4000,AP -19-23JUN93

## ACCESSORY CIRCUITS

Radio and tape player fuses . . . . . 5 amps

### Tape player relay:

Current draw at 12.0 volts . . . . .	0.07 amps
Winding resistance . . . . .	180 ohms

### Wiper motor current draw:

Low speed . . . . .	2 to 3 amps
High speed . . . . .	3 to 4 amps

E05,4000,AB -19-23JUN93

**CHARGING CIRCUIT—MOTOROLA  
( —880000)**

**ALTERNATOR**

Item	Measurement	Specification
RA Series Alternator . . . . .	Nominal Rating . . . . .	12 volt, 55 amp
Stator . . . . .	Winding connection . . . . .	Delta
Brush . . . . .	Minimum exposed length . . . . .	6.4 mm (1/4-in.)
Field . . . . .	Resistance . . . . .	5.5 ohms
Field . . . . .	Current draw 23.9°C (75°F) . . . . .	1.95 to 2.25 amps at 10 volts
Speed Ratio . . . . .	Alternator to Engine . . . . .	1.7:1

**WIRING VOLTAGE DROP TEST**

Grounded battery post to alternator ground terminal . . . . .	0.3 volt
Positive battery post to alternator output terminal . . . . .	0.3 volt
Positive battery post to alternator regulator terminal . . . . .	1.3 volt

**ALTERNATOR AND REGULATOR TEST WITH VOLTMETER**

(1) Switch off . . . . .	Less than 0.1 volt
(2) Switch on, engine stopped . . . . .	1.5 to 3 volts
(3) Engine at approx. 1400 rpm . . . . .	Regulator terminal - more than 15 volts Output terminal - 1 volt less

**ALTERNATOR TEST ON ENGINE**

Alternator field test . . . . .	1.9 to 2.6 amps at 12.4 volts
Alternator test with voltmeter . . . . .	15 volts at 800 engine rpm
Alternator with regulator test on engine (23.8°C [75°F]):	
Output at 1212 rpm (2100 alternator rpm) . . . . .	*30 amps at 13 to 15 volts
Output at 1731 rpm (3000 alternator rpm) . . . . .	*40 amps at 13 to 15 volts
*With JDST-23 Ammeter or with battery post adapter, allow for current used when running the engine.	

**REGULATOR VOLTAGE TEST (After 15 minutes operation and at 1500 rpm):**

Temperature*	Voltage
4.4°C 40°F	14.4 - 14.9 volts
15.6°C 60°F	14.3 - 14.7 volts
26.7°C 80°F	14.2 - 14.6 volts
37.8°C 100°F	14.0 - 14.4 volts
48.9°C 120°F	13.8 - 14.3 volts
60.0°C 140°F	13.6 - 14.1 volts

\*Measured 25.4 mm (1-in.) from regulator

**TORQUE VALUES**

Sheave nut . . . . .	54 to 68 N·m (40 to 50 lb-ft)
Thru bolts . . . . .	5.7 to 6.8 N·m (50 to 60 lb-in.)
Brush mounting screws . . . . .	1.81 to 2.26 N·m (16 to 20 lb-in.)
Diode assembly nuts . . . . .	3.73 to 4.52 N·m (33 to 40 lb-in.)
Isolation diode nuts . . . . .	2.26 to 3.39 N·m (20 to 30 lb-in.)

**CHARGING CIRCUIT—BOSCH (880001— )**

**ALTERNATOR**

Item	Measurement	Specification
RA Series Alternator . . . . .	Nominal Rating . . . . .	12 volt, 95 amp
Stator . . . . .	Winding connection . . . . .	Delta
Brush . . . . .	Minimum exposed length . . . . .	6 mm (15/64-in.)
Field . . . . .	Resistance . . . . .	5.5 ohms
Field . . . . .	Current draw 23.9°C (75°F) . . . . .	1.95 to 2.25 amps at 10 volts
Speed Ratio . . . . .	Alternator to Engine . . . . .	2.3:1

**WIRING VOLTAGE DROP TEST**

Grounded battery post to alternator ground terminal . . . . .	0.3 volt
Positive battery post to alternator output terminal . . . . .	0.3 volt

**ALTERNATOR TEST ON ENGINE**

Alternator field test . . . . .	1.9 to 2.6 amps at 12.4 volts
Alternator test with voltmeter . . . . .	15 volts at 800 engine rpm
Alternator with regulator test on engine (23.8°C [75°F]):	
Output at 652 rpm (1500 alternator rpm) . . . . .	20 amps at 13 to 15 volts
Output at 1304 rpm (3000 alternator rpm) . . . . .	45 amps at 13 to 15 volts
Output at 2608 rpm (6000 alternator rpm) . . . . .	95 amps at 13 to 15 volts

**TORQUE VALUES**

Sheave nut . . . . .	54 to 68 N·m (40 to 50 lb-ft)
----------------------	-------------------------------

E05,4000,AD -19-23JUN93

40  
00  
4

**STARTING CIRCUIT ( —915000)  
DELCO REMY 27MT MODEL 1198367**

Solenoid pull-in winding current draw at 8.0 volts	52 to 60 amps
Solenoid hold-in winding current draw at 8.0 volts	10 to 13 amps
Starting motor no-load test:	
Current draw at 9.0 volts	20 to 120 amps
Armature speed	9000 to 14000 rpms
Solenoid "R" terminal contact height	0.792 to 2.383 mm (1/16 to 3/32-in.)
Brush minimum length beyond holder	7.9 mm (5/16-in.)
Brush spring minimum tension	990 g (35 oz)
Drive housing bushing I.D.	11.709 to 11.811 mm (0.4610 to 0.4650-in.)
Maximum I.D.	12.065 mm (0.4750-in.)
Oil clearance	0.050 to 0.127 mm (0.0020 to 0.0050-in.)
Maximum clearance	0.431 mm (0.0170-in.)
Motor Drive I.D.	14.274 to 14.300 mm (0.5620 to 0.5630-in.)
Maximum I.D.	14.579 mm (0.5740-in.)
Center bearing plate bushing I.D.	19.304 to 19.354 mm (0.7600 to 0.7620-in.)
Maximum I.D.	9.608 mm (0.7720-in.)
Oil clearance	0.254 to 0.381 mm (0.0100 to 0.0150-in.)
Maximum clearance	0.635 mm (0.0250-in.)
Commutator end frame bushing I.D.	14.413 to 14.338 mm (0.5635 to 0.5645-in.)
Maximum I.D.	14.554 mm (0.5730-in.)
Oil clearance	0.050 to 0.127 mm (0.0020 to 0.0050-in.)
Maximum clearance	0.406 mm (0.0160-in.)
Pinion clearance	0.25 to 3.56 mm (0.010 to 0.140-in.)

E05,4000,AE -19-23JUN93

**STARTING CIRCUIT (915001— )  
DELCO REMY 28MT MODEL 1113271**

Gear reduction ratio	3.875 to 1
Solenoid pull-in winding current draw at 10 volts	52 to 59 amps
Solenoid hold-in winding current draw at 10 volts	12 to 14 amps
Starting motor no-load test:	
Current draw at 10 volts	125 to 190 amps
Pinion speed	3000 to 5600 rpms
Armature speed	11625 to 21700 rpms
Commutator minimum OD	35 mm (1.378-in.)
Brush minimum length	12 mm (0.472-in.)
Brush spring minimum tension	990 g (35 oz)
Pinion clearance	1.85 to 2.05 mm (0.073 to 0.079-in.)

E,1314,4000,AF -19-23JUN93

**SPECIAL OR ESSENTIAL TOOLS**

*NOTE: Order tools according to information given in the  
U.S. SERVICE-GARD™ Catalog or in the  
European Microfiche Tool Catalog (MTC).*

DX,TOOLS -19-05JUN91

Specifications, Torques and Essential Tools/Essential Tools

Voltage Detector . . . . . D05136ST

Check wiring circuits

D05136ST -19-27SEP91

40  
00  
6

Analog/Digital Multimeter . . . JT05682

Check electrical components/circuits for voltage, resistance and current flow.



JT05682 -19-27AUG90

RW11274 -JUN-12DEC88

Battery Tester . . . . . JT28001

Check battery condition.




JT28001 -19-27AUG90

RW10165 -JUN-09DEC88

To check armature for bent shaft.

- A—D-17525 CI - Adjustable Arm
- B—D-17526 CI - Dial Indicator
- C—D-17517 CI - Magnetic Base With Flexible Arm

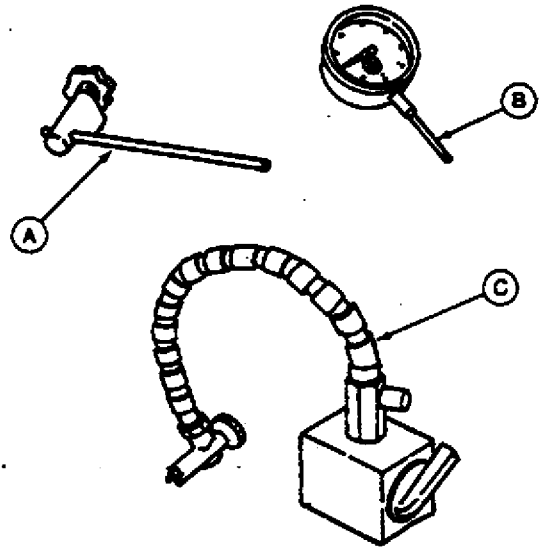


40  
00  
7

-JUN-08MAY89

E22368

E05,4000,AQ -19-23JUN93

The JD-306A Alternator Pulley Nut Remover is used to remove and install the alternator retaining nut.

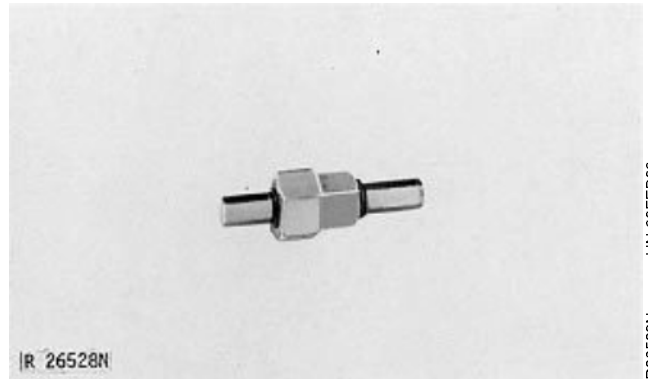

-JUN-09FEB90

R26528N

E05,4000,AL -19-23JUN93

The JDST-27 Inch-Pound Torque Wrench is used to torque the alternator nuts.



-JUN-23JAN89

R37313

E05,4000,AM -19-23JUN93

Specifications, Torques and Essential Tools/Essential Tools


40  
00  
8

**Number**

**Use**

JDE-80 Starter Wrench

Remove and install mounting bolt behind starting motor.

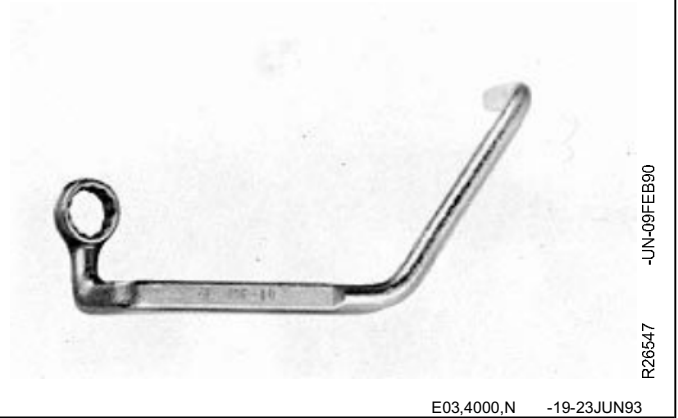

E03,4000,N -19-23JUN93


R26647  
-JUN-09FEB90

**Number**

**Use**

JDG-440 Extractor Tool

To remove wire from connector.

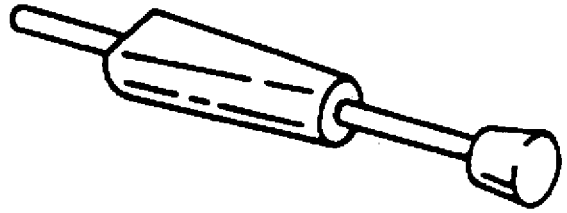

E03,4000,T -19-23JUN93


E22428  
-JUN-24APR89

**Number**

**Use**

R32011 Wire Strippers

To strip insulation from wiring.

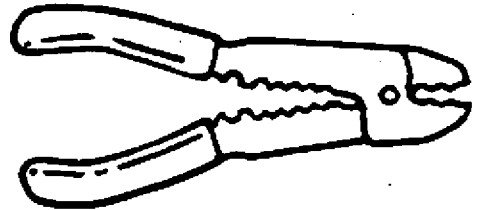

E03,4000,U -19-23JUN93


E22429  
-JUN-24APR89

**Number**

**Use**

R65594 Crimping Tool

To "B" crimp terminals to wires.

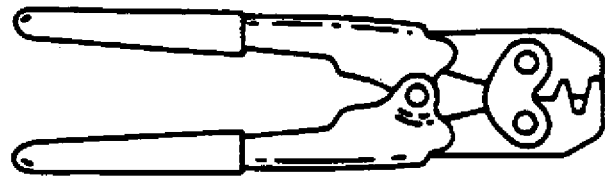

E03,4000,V -19-23JUN93


E22430  
-JUN-24APR89

## GENERAL INFORMATION

When replacing a battery, use the John Deere battery or its equivalent shown in "Specifications, Torques and Special Tools".

There are two important things that must be done periodically in order to obtain long life from a battery.

1. The electrolyte must at all times be kept above the plates and separators. The electrolyte level should be checked once a week, or after fifty hours of operation. See "Checking Electrolyte Level", Section 240, Group 05.
2. Be sure the battery is kept nearly charged at all times. The state of charge should be checked at frequent intervals by making specific gravity readings with a battery hydrometer. See Check Specific Gravity, Section 240, Group 05.

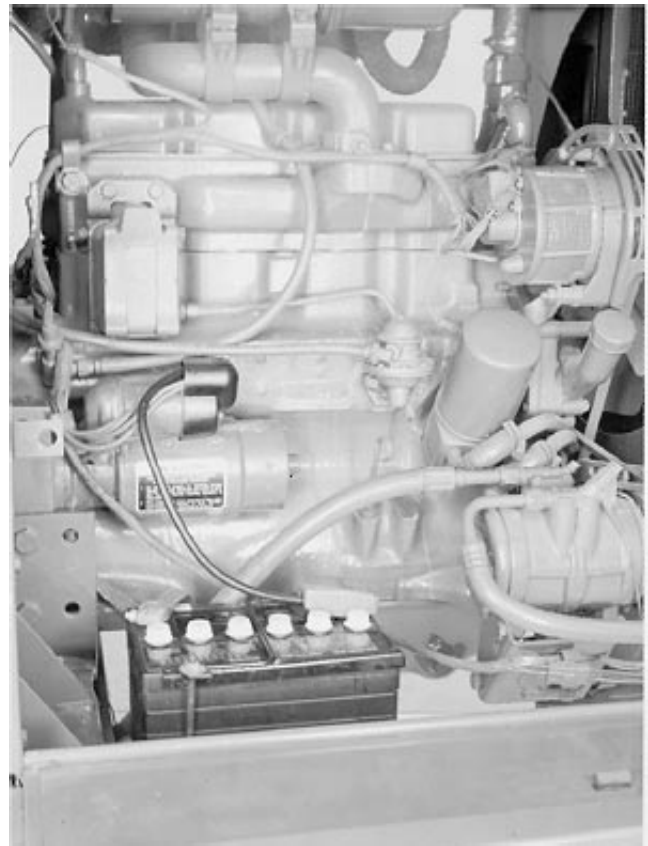

E05,4005,1 -19-23JUN93

40  
05  
1  
-JUN-02OCT89  
E25562

**CAUTION:** Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 10—15 minutes. Get medical attention immediately.

If acid is swallowed:

1. Drink large amounts of water or milk.
2. Then drink milk of magnesia, beaten eggs, or vegetable oil.
3. Get medical attention immediately.

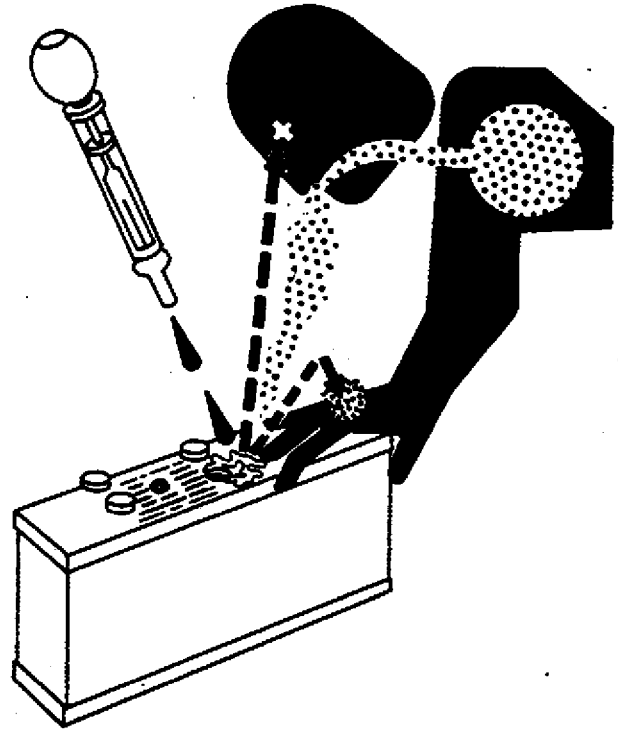

TS203 -UN-23AUG88

E05,4005,J -19-23JUN93


## COLD WEATHER BATTERY SERVICE

During cold weather, it is particularly important to keep the electrolyte in the battery at the proper level, and to keep the battery fully charged.

E05,4005,K -19-23JUN93

## REMOVE BATTERY

1. Note carefully the location of the positive (+) terminal so the battery is installed in the same way.
2. Disconnect the ground cable(-) first. Use only a box end wrench to loosen the clamp on the terminal. Remove clamp using a screw-type puller. DO NOT HAMMER on the battery post.
3. Remove the positive cable.
4. Remove the battery clamps and battery.
5. Check cable for worn or frayed insulation. Replace cable clamps on bolts, if corroded.

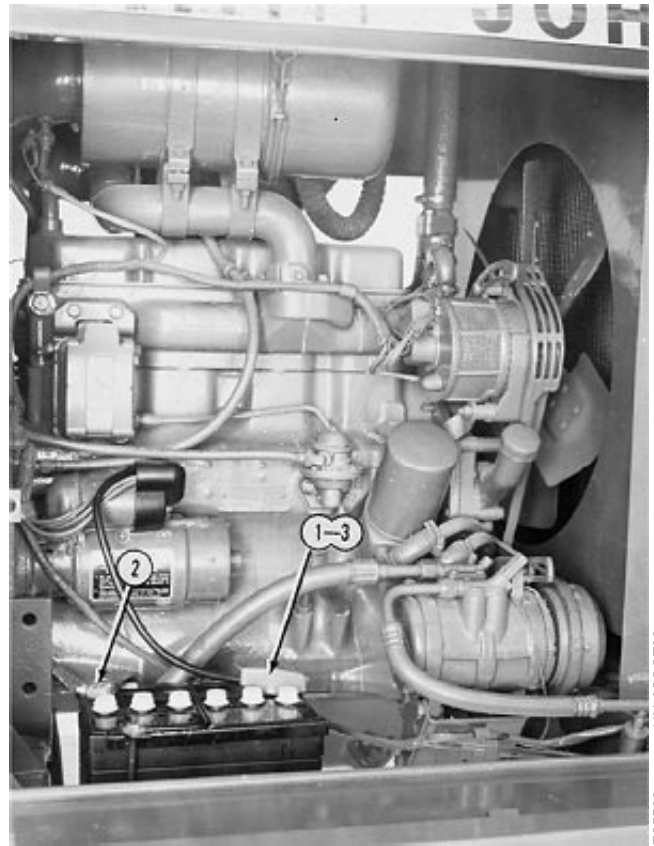

E05,4005,L -19-23JUN93

40  
05  
3  
-JUN-02OCT89  
E25563

## CLEAN THE BATTERY

Wipe the battery with a damp cloth. If terminals are corroded, use a stiff brush and wash with an ammonia solution or a solution of baking soda, 0.11 kg (1/4 lb) added to 0.95 L (1 qt) of water. Keep vent plugs tight while washing. After washing, flush battery and compartment with clear water. Then coat terminals with petroleum jelly to protect against corrosion. Be sure vent holes in vent plugs are open.

E05,4005,M -19-23JUN93


## INSTALL BATTERY

1. Be sure battery is fully charged.
2. Set battery in tray making sure battery is resting level.
3. Clean the battery terminals and cable clamps with a wire brush before attaching the clamps. This will assure a good contact.
4. Tighten the battery clamp nuts evenly until battery is secure. Do not overtighten as this will distort or crack the battery case.

**IMPORTANT: Reversed polarity can damage the electric circuit and components.**

- Always connect positive cable (A) to positive post (+) and negative (ground) cable (B) to negative post (-) on battery.
- Always connect negative (ground) cable (B) to negative (-) post on battery last.

5. Check for correct polarity of the battery. Connect the positive cable (A) first. Before connecting the ground cable (B), momentarily touch it against the battery post. With all switches and accessories off, no spark should occur. If spark does occur, do not connect the ground cable. Check for reversed battery polarity, improper alternator connection, defective electrical wire connection, or defective electrical equipment.
6. Tighten the clamps on the battery terminals. Use a box-end wrench carefully to avoid twisting the battery terminal posts.
7. Coat the terminals with petroleum jelly to prevent corrosion. Never paint the terminal posts.

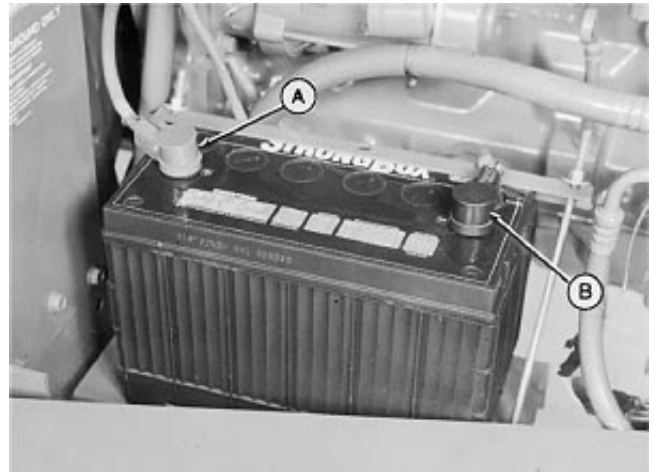

E37371 -JUN-29JUN93

E05,4005.N -19-23JUN93


## REMOVE ALTERNATOR MOTOROLA ( —880000)

*NOTE: It is not necessary to disassemble the alternator to replace brushes or voltage regulator. Such operations are usually accomplished with the alternator left intact on the engine.*

**IMPORTANT: Disconnect battery ground first to prevent damage to alternator and electrical circuit.**

1. Disconnect wires (A) at alternator.
2. Remove cap screw (B), washers and V-belt.
3. Remove nut (C), cap screw, and spacer (D).

A—Wires  
B—Cap Screw  
C—Nut  
D—Spacer

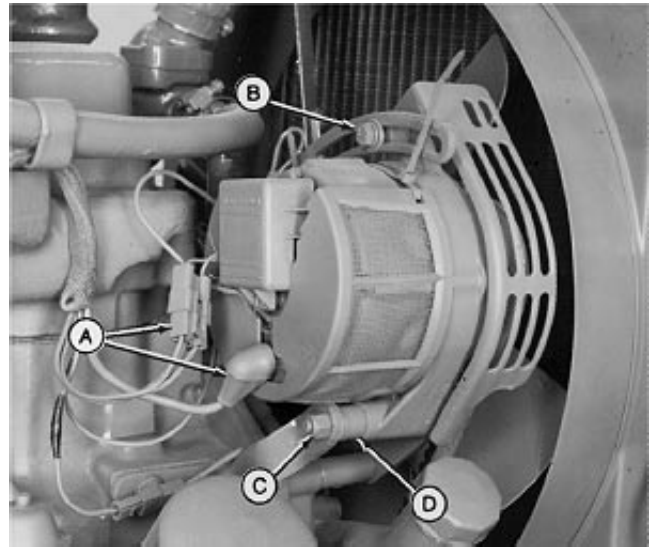

40  
10  
1  
-JUN-29JUN93  
E37369

E05,4010,R -19-23JUN93

## DISASSEMBLE ALTERNATOR

Never immerse stator, rotor, brushes, or bearings in cleaning solution.

Hammering or jarring may ruin the diodes.

Remove isolation diode, regulator and brushes. Remove thru bolts. Pry stator and slip ring end frame assembly from the rotor and drive end frame assembly. Inserting screwdriver deeper than 1.6 mm (1/16-in.) may damage windings.

Refer to following illustrations to complete disassembly of alternator.

E05,4010,S -19-23JUN93



**Suggest:**

**If the above button click is invalid.**


**Please download this document**

**first, and then click the above link**

**to download the complete manual.**

**Thank you so much for reading**

40  
10  
2

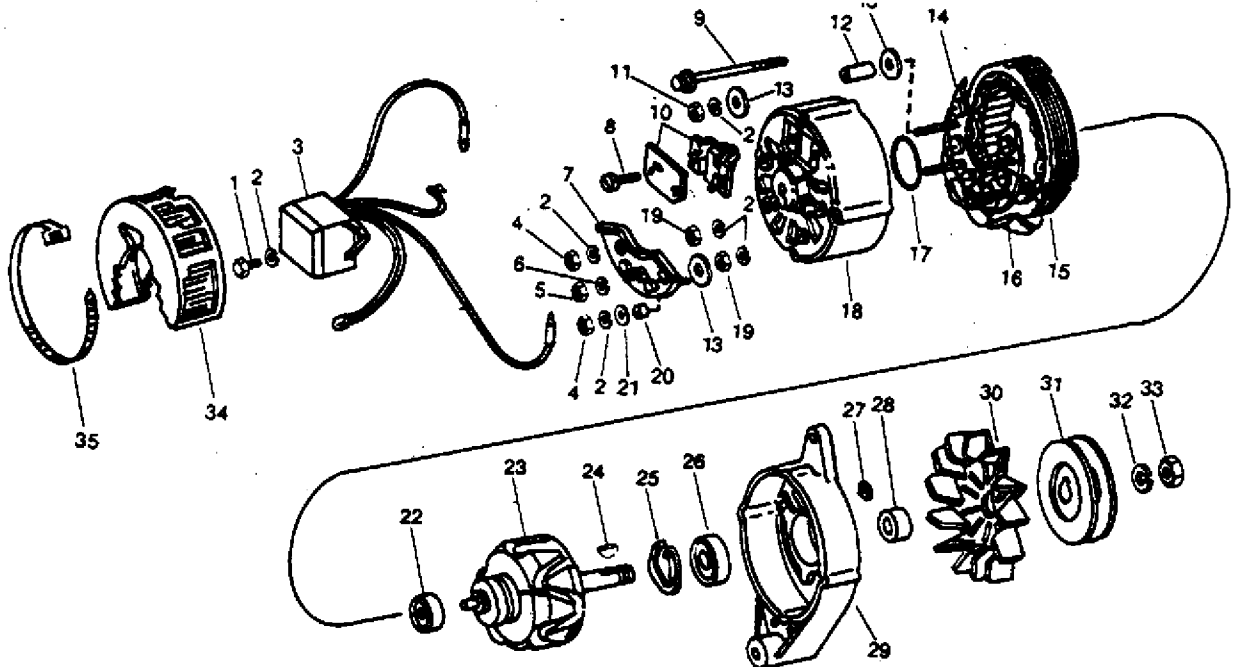

- 1—Self-Tapping Screw (3 used)
- 2—No. 10 Lock Washer (7 used)
- 3—Regulator (Motorola No. 8RF2014C)
- 4—No. 10 Nut (2 used)
- 5—Nut, 1/4-in.
- 6—Lock Washer, 1/4-in.
- 7—Dual Insulator Diode
- 8—No. 8 x 1/2-in. Drive Screw (2 used)

- 9—Thru Bolt (4 used)
- 10—Brush and Cover
- 11—No. 10 Nut (2 used)
- 12—Insulator Sleeve (2 used)
- 13—Insulator Washer (5 used)
- 14—Positive Rectifying Diode
- 15—Stator
- 16—Negative Rectifying Diode

- 17—Rear Bearing Retainer
- 18—Rear Housing
- 19—No. 10 Nut (2 used)
- 20—Insulator Sleeve
- 21—Insulator Washer
- 22—Rear Bearing
- 23—Rotor
- 24—Woodruff Key
- 25—Front Bearing Retainer
- 26—Front Ball Bearing

- 27—Square Nut (4 used)
- 28—Fan and Pulley Spacer
- 29—Front Housing
- 30—Fan
- 31—Pulley
- 32—Lock Washer
- 33—Jam Nut
- 34—Dust Cover
- 35—Tie Strap

Exploded View of Alternator


-UN-25APR88

E14679

E05,4010,T -19-23JUN93

### REPLACE SLIP RING END BEARING

1. Remove slip ring end bearing (A) using A-216 puller (B).

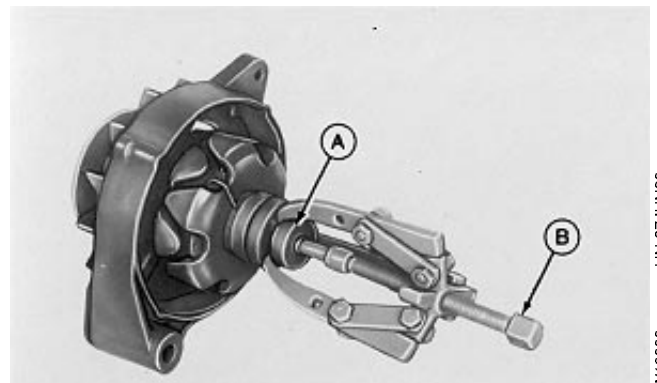

-JUN-27JUN89

W10993

E05,4010,U -19-23JUN93

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**