

**5210, 5310,
5410 and 5510
Tractors**

**John Deere Augusta
OMRE71736 Issue I7**

LITHO IN U.S.A.
ENGLISH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File

the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.

CALIFORNIA PROPOSITION 65 WARNING

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

IDENTIFICATION VIEWS



-UN-26AUG97

LV1701

John Deere 5310 Tractor—Open Station



-UN-26AUG97

LV1702

John Deere 5510 Tractor—Cab

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Contents

	Page		Page
Safety	05-1	Prestarting Checks	40-1
Safety Signs	10-1	Operating the Engine	
Controls and Instruments	15-1	Before Starting the Engine	45-1
Lights		Starting the Engine	45-2
Light Switch Positions	20-1	Check Instruments After Starting	45-3
Using Head Lamps	20-1	Oil Pressure Indicator	45-3
High Beam Indicator	20-2	Charging System Indicator	45-3
Tail Lamp(s)	20-2	Air Restriction Indicator	45-4
Using Fender Lamps (5410 and 5510)	20-3	Coolant Temperature Gauge	45-4
Using Rear Flood Lamp—Open Station	20-3	Watch Fuel Level	45-4
Adjusting Rear Flood Lamp—Open Station	20-4	Changing Engine Speeds	45-5
Flood Lamps—Cab	20-4	Warming Up Engine	45-5
Using Warning Lamps	20-5	Restart Stalled Engine	45-6
Using Turn Signals	20-6	Avoid Idling Engine	45-6
Seven-Terminal Outlet (If Equipped)	20-7	Observe Engine Work and Idle Speeds	45-6
Operator's Platform (Open Station)		Work With Speed/Hour Meter	45-7
Operating Foldable ROPS	25-1	Stopping the Engine	45-7
Using Seat Belt	25-2	Cold Weather Starting Procedure	45-8
Selecting Seat Position	25-2	Using Booster Battery	45-9
Adjusting Ride Comfort	25-3	Driving the Tractor	
Adjusting Steering Wheel Tilt—If Equipped	25-4	Operator Training Required	50-1
Operator's Station (Cab)		Avoid Contact With Pesticides	50-1
Using Seat Belt	30-1	Driving on Public Roads	50-2
Selecting Seat Position	30-1	Use Caution on Hillsides	50-4
Adjusting Ride Comfort	30-2	Collar Shift or SyncShuttle™	
Adjusting Steering Wheel Tilt	30-3	Transmissions	
Adjusting Blower Speed	30-3	Operating	50-5
Controlling Temperature	30-4	Shifting—Collar Shift	50-5
Operating Wiper(s)	30-4	Shifting—SyncShuttle™	50-6
Accessory Electrical Outlet	30-4	PowerReverser™ Transmission	
Radio	30-5	Operating	50-7
Dome Lamp	30-5	Shifting	50-8
Break-In Period	35-1	Selecting a Gear	50-10
		Creeper Gear Operation (Optional)	50-10
		Brakes	50-11
		Differential Lock	50-11
		Front-Wheel Drive	50-12

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMRE71736 17-19-10SEP97

COPYRIGHT© 1997
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION Manual

Contents

	Page		Page
Stopping Tractor		Selecting PTO Speeds (SyncShuttle™ Transmission)	65-4
Collar Shift or SyncShuttle™ Transmission	50-13	Operating Tractor PTO	65-4
PowerReverser™ Transmission	50-14	Adjusting PTO Clutch Operating Rod	65-6
Rockshaft and 3-Point Hitch		Ballast	
Match Tractor Power to Implement	55-1	Planning for Maximum Productivity	70-1
3-Point Hitch Components	55-1	Selecting Ballast Carefully	70-1
Rockshaft Control Levers	55-2	Matching Ballast to Load Work	70-1
Using Rockshaft Position Control	55-3	Checking for Correct Ballast	70-2
Setting Position Control Lever Stop	55-4	Measuring Wheel Slip—Manually	70-3
Using Draft Control	55-5	Ballast Limitations	70-4
Adjusting Rockshaft Speed-of-Drop	55-6	Ballasting	
Preparing Implement	55-6	Front End for Transport	70-4
Converting Hitch Category	55-7	Two-Wheel Drive Tractors	70-5
Positioning Center Link	55-8	MFWD-Equipped Tractors	70-5
Attaching Implements to 3-Point Hitch	55-9	Determining Maximum Ballast	
Adjusting Hitch Side Sway	55-11	Rear	70-6
Leveling The Hitch	55-12	Front	70-6
Adjusting Lateral Float	55-14	Using Cast Iron Weights	70-7
Adjusting Rockshaft Control Lever Friction	55-14	Installing Rear Cast Iron Weights	70-7
Warming Hydraulic System Oil	55-14	Using Liquid Weight	70-8
		Using Implement Codes	70-9
Remote Hydraulic Cylinders		Wheels, Tires and Treads	
Use Correct Hose Tips	60-1	Service Tires Safely	75-1
Control Lever and Coupler Identification	60-1	Check Implement-to-Tire Clearance	75-1
Installing Remote Outlet Oil Manifolds	60-2	Tire Inflation Pressure	
Connecting		Check	75-2
Cylinder Hoses	60-2	Chart	75-3
Hose Under Pressure	60-3	Selecting Front Tire Rolling Direction	75-4
Single-Acting Cylinder	60-4	Tighten Wheel/Axle Hardware Correctly	75-4
Correcting Reversed Cylinder Response	60-4	Tighten Hardware	
Neutral Lever Position	60-4	Adjustable Front Axle	75-5
Extending/Retracting Cylinder		MFWD Axle	75-5
#1 and #2 SCV	60-5	Rear Axle	75-6
#3 SCV	60-5	Observe Rear Wheel Tread Width	
Using Implement Float (#1 SCV Only)	60-6	Limitations	75-6
Adjusting Cylinder Stop	60-6	Tread Settings	
Power Beyond Connections	60-7	Two-Position Steel Wheels	75-7
Loader Joystick Functions	60-9	Multi-Position Rear Wheels	75-8
Disconnecting Cylinder Hoses	60-10	Multi-Position MFWD Wheels	75-10
		Adjustable Front Axle	75-11
Drawbar and PTO		Adjust Front Axle Tread Width	75-12
Drawbar Load Limitations	65-1	Fender Settings (MFWD Axle)	75-13
Selecting Drawbar Position	65-1	Toe-In	
Adjusting Drawbar Length	65-1	Checking—Two-Wheel Drive Tractor	75-14
Using Swinging Drawbar	65-2	Adjusting—Two-Wheel Drive Tractor	75-14
Attaching PTO-Driven Implement	65-2	Checking—MFWD Tractor	75-15
		Adjusting—MFWD Tractor	75-15

Continued on next page

Contents

	Page		Page
Set MFWD Steering Stops Turning Radius . . .	75-16	Check for Loose Hardware	100-5
Use Correct Tire Combinations	75-17	Service—100 Hours	
Tire Compatibility Charts		Change Oil and Filter	105-1
5210 and 5310	75-18	Replace Transmission-Hydraulic Filter	105-1
5410 and 5510	75-19		
Transporting		Service—250 Hours	
Use Safety Lights and Devices	80-1	Service Air Cleaner	110-1
Use a Safety Chain	80-1	Inspect and Adjust Alternator/Fan Belt (5210 and 5310)	110-1
Driving on Roads	80-2	Inspect and Adjust A/C Compressor Belt (Cab—5210 and 5310)	110-2
Transport on Carrier	80-7	Lubricate 3-Point Hitch	110-2
Towing Tractor	80-7	Check Neutral Start System	110-3
		Clutch Pedal	
		Free Play (Collar Shift and SyncShuttle™ Transmissions)	110-4
Fuels, Lubricants, and Coolant		Adjust Linkage (PowerReverser™ Transmission)	110-5
Fuel Storage	85-2	Clean Operator Enclosure Air Filters	110-6
Cold Weather Operation	85-2		
Diesel Fuel	85-3	Service—500 Hours	
Fill Fuel Tank	85-4	Replace Fuel Filter	115-1
Alternative and Synthetic Lubricants	85-5		
Lubricant Storage	85-5	Service—600 Hours	
Diesel Engine Oil	85-6	Change Oil in MFWD Axle	120-1
Oil Filters	85-6	Clean Engine Crankcase Vent Tube	120-2
Diesel Engine Coolant	85-7	Pack Front Wheel Bearings (Adjustable Front Axle)	120-2
Liquid Coolant Conditioner	85-8	Check Hoses and Hose Clamps	120-3
Transmission/Hydraulic Oil	85-9	Lubricate Rear Axle Bearings	120-3
Hydraulic-Transmission Filter Element	85-9	Check Engine Idle Speeds	120-3
Gear Oil	85-10	Check Front Axle Pivot Pin	120-4
Grease	85-10	Adjust Engine Valve Clearance	120-4
Lubrication and Maintenance		Service—1200 Hours	
Clean Vehicle of Hazardous Pesticides	90-1	Change Transmission-Hydraulic Oil and Filter	125-1
Observe Service Intervals	90-2	Clean Transmission-Hydraulic Pickup Screen	125-2
Use Correct Lubricant	90-2		
Break-In Service	90-3	Service—Annually	
Service Intervals	90-4	Change Engine Oil and Filter	130-1
		Replace Air Cleaner Elements	130-2
Service—10 Hours			
Check Engine Oil Level	95-1	Service—2 Years/2000 Hours	
Check Coolant Level	95-2	Flush Cooling System and Replace Thermostat	135-1
Drain Water and Sediment From Fuel Tank	95-2		
Lubricate	95-3		
Service—50 Hours			
Transmission-Hydraulic System Oil Level	100-1		
Check MFWD Axle Oil Level	100-1		
Clean and Check Battery	100-2		
Inspect Tires	100-3		
Lubricate			
Front Axle Pivot Pin(s)	100-4		
Steering Spindles	100-4		

Continued on next page

Contents

	Page		Page
Service—As Required			
Service Air Cleaner	140-1	Servicing Air Conditioner (Cab)	145-30
Adjust Throttle Friction	140-1	Locating Fusible Link	145-31
Adjust 540E PTO Throttle Limiter (SyncShuttle™ Transmission)	140-1	Fuses	
		Locating	145-31
		Size and Function—Tractor	145-32
		Size and Function—Cab	145-33
Service		Head Lamps	
Service Tractor Safely	145-1	Aiming	145-33
Additional Information	145-2	Adjusting	145-34
Hood		Replace Bulb	145-34
Opening	145-3	Warning/Tail Lamp(s)	
Removing	145-4	Replace Bulb—Open Station	145-35
Removing Side Screens	145-4	Replace Warning Lamp Bulb—Cab	145-35
Air Intake System Components	145-5	Replace Tail Lamp Bulb—Cab	145-36
Service Air Cleaner	145-5	Flood Lamp(s)	
Air Intake System	145-6	Replace Bulb—Open Station	145-36
Primary Air Cleaner Element		Replace Bulb—Cab	145-37
Removing—5210 and 5310	145-7	Replace Fender Lamp Bulb (5410 and 5510)	145-37
Removing—5410 and 5510	145-8	Replace Dome Lamp Bulb (Cab)	145-37
Cleaning	145-8	Check Tires	145-38
Washing	145-9	Tubeless Tire Repair	145-38
Inspecting	145-9	Keep ROPS Installed Properly	145-39
Storing	145-10		
Replacing Alternator/Fan Belt		Troubleshooting	
5210 and 5310	145-10	Engine	150-1
5410 and 5510	145-11	Transmission	150-4
Replacing A/C Compressor Belt		Hydraulic System	150-5
(Cab—5210 and 5310)	145-11	Brakes	150-5
Fuel System Components	145-12	Rockshaft and Quick-Coupler 3-Point	
Replace Fuel Filter	145-13	Hitch	150-6
Bleeding Fuel System	145-14	Remote Hydraulic Cylinders	150-7
Do Not Modify Fuel System	145-15	Electrical System	150-8
Engine Cooling System		Heater and A/C System (Cab)	150-10
Components	145-16	Wiper(s), Flood Lamps, Dome Lamp and Radio (Cab)	150-13
Cleaning	145-17		
Flush Cooling System	145-17	Storage	155-1
Replacing Thermostat	145-18		
Winterize	145-20	Specifications	
Prevent Battery Explosions	145-20	Machine Specifications	160-1
Electrical Service Precautions	145-21	Machine Dimensions	160-4
Battery		Permissible Load Specifications	160-6
Access—Open Station	145-22	Ground Speed Estimates	
Access—Cab	145-22	Collar Shift and SyncShuttle™	
Removing	145-23	Transmission	160-7
Servicing	145-24	PowerReverser™ Transmission	160-8
Replacement Specifications	145-26	Bolt and Cap Screw Torque Value Charts	
Charging	145-27	Metric	160-9
Check Condition	145-28	Inch	160-10
Connecting Starter Wiring	145-29		
Connecting Alternator Wiring	145-29		

Continued on next page

Contents

	Page
Battery Warranty	160-11
Identification Numbers	
Identification Plates	165-1
Record Serial Numbers	
Tractor	165-1
Adjustable Front Axle	165-1
MFWD Axle	165-2
Engine	165-2
Transmission	165-2
Lubrication Maintenance Record Charts . .	170-1
Crime Prevention Tips	175-1
Index	

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

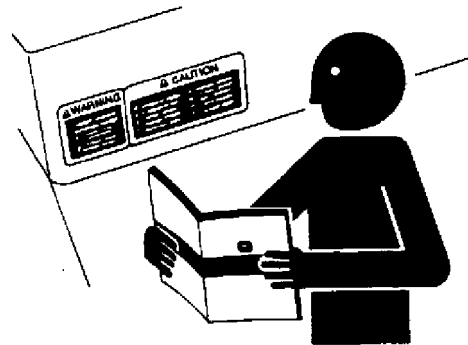

DX,READ -19-03MAR93

TS201 -UN-23AUG88

 


PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

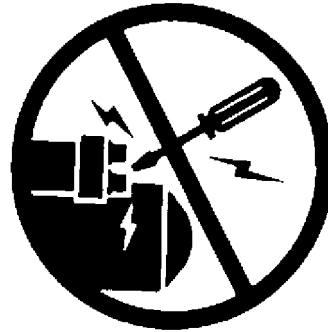

DX,BYPAS1 -19-03MAR93



TS177 -UN-11JAN89

USE SEAT BELT AND FOLDABLE ROPS PROPERLY—OPEN STATION

When the ROPS is in the "up" or extended position, ALWAYS use your seat belt to minimize chance of injury from an overturn accident.

DO NOT use seat belt when ROPS is folded down.

  This tractor is equipped with a foldable Roll-Over Protective Structure (ROPS). The ROPS (A) should be kept in the "up" or extended position (as pictured) with pins (C) retained with quick-lock pins (B), except when it is necessary to fold it for low clearance operations.

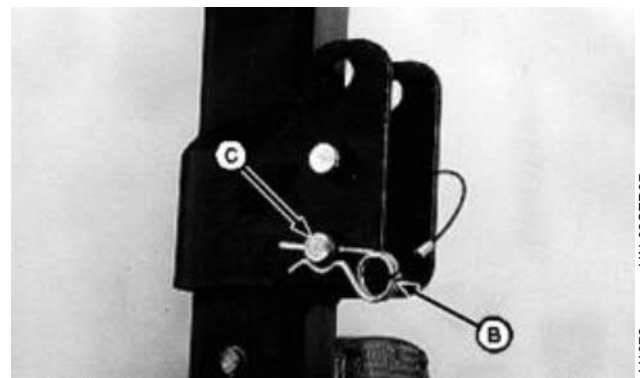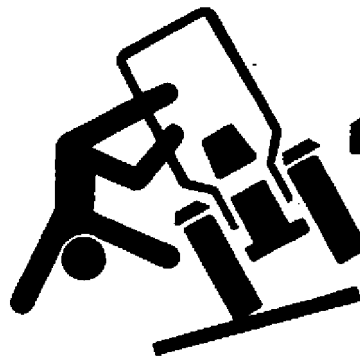

LV1972 -UN-02SEP97

TS205 -UN-23AUG88

IM7142 -UN-29JAN92

LV1972

PN=7



OPERATE TRACTOR SAFELY

Features designed into your tractor make operation safer and let it perform a wide variety of jobs. Use your tractor only for specified jobs it was designed to perform: implement carrier, load mover, remote power source, or transport unit—not a recreational vehicle.

Careless use or misuse can result in unnecessary accidents. Be alert to hazards of tractor operation. Understand causes of accidents and take every precaution to avoid them. Most common accidents are caused from:

- Tractor upsets
- Improper starting procedures
- Crushing and pinching during hitching
- Collisions with other motor vehicles
- Getting entangled in PTO shafts
- Falls from tractors

Avoid accidents by taking the following precautions:

- Put transmission in PARK before dismounting. Leaving transmission in gear with engine stopped will NOT prevent the tractor from moving.
- Be sure everyone is clear of tractor and attached equipment before starting engine.
- Never try to get on or off a moving tractor.
- When tractor is left unattended, place in PARK, lower implements to the ground, stop the engine, and remove the key.

CAUTION

- | | |
|---|--|
| 1. Read Operator's Manual before operating this tractor. | brakes or operating around hazards, on rough ground or steep slopes. |
| 2. Keep all shields in place. | |
| 3. Hitch towed loads only to drawbar to avoid rearward upset. | 8. Couple brake pedals together for road travel. |
| 4. Make certain everyone is clear of machine before starting engine or operation. | 9. Use flashing warning lights on highway unless prohibited by law. |
| 5. Keep all riders off tractor and equipment. | 10. Stop engine, lower implement to ground and shift to "PARK" or set brakes(s) securely before dismounting. |
| 6. Keep hands, feet and clothing away from power-driven parts. | 11. Wait for all movement to stop before servicing machinery. |
| 7. Reduce speed when turning or applying individual | 12. Remove key if leaving tractor unattended. |



LV.5010SA,A -19-06JUN97

-19-02JUN97

M47224A

-JUN-23AUG88

TS276



USE CAUTION ON HILLSIDES

Always wear seat belt with ROPS in upper position.

Avoid holes, ditches, and obstructions which cause the tractor to tip, especially on hillsides. Avoid sharp, uphill turns.

 
Never drive near the edge of a gully or steep embankment -- it might cave in.

Driving forward out of a ditch or mired condition or up a steep slope could cause tractor to tip over rearward. Back out of these situations if possible.

While front wheel drive greatly increases traction, it DOES NOT increase stability of the tractor. With front wheel drive engaged, the tractor can climb steeper slopes but it does not become more stable. When this option is used, extra caution is needed on slopes. Compared to a 2-wheel drive, a front-wheel drive tractor maintains traction on steeper slopes, increasing the possibility of a tip over.

Danger of overturn increases greatly with narrow tread setting, at high speed.

Hitch towed loads only to drawbar. When using a chain, take up the slack slowly.

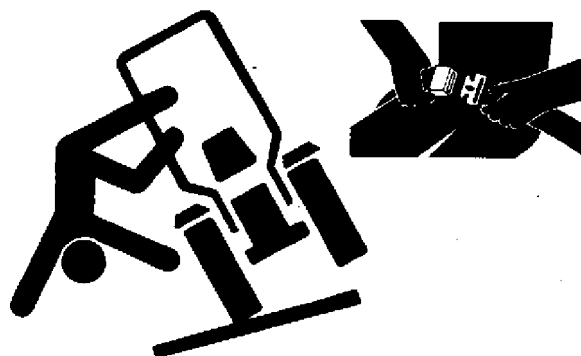

MX,SAIP,CA1 -19-29JUL94


TS205 -UN-23AUG88

SHIFT TO LOW GEAR ON HILLS

Shift to a low gear before descending a steep hill to improve your control of the tractor with little or no braking. Use engine braking to reduce speed before applying tractor brakes. Run-away tractors often tip over. Never coast downhill.

When driving on icy, wet or graveled surfaces, reduce speed and be sure tractor is properly ballasted to avoid skidding and loss of steering control. For best control, engage front wheel drive (if equipped).

 Additional ballast may be needed for transporting heavy hitch mounted implements. When implement is raised, drive slowly over rough ground, regardless of how much ballast is used.

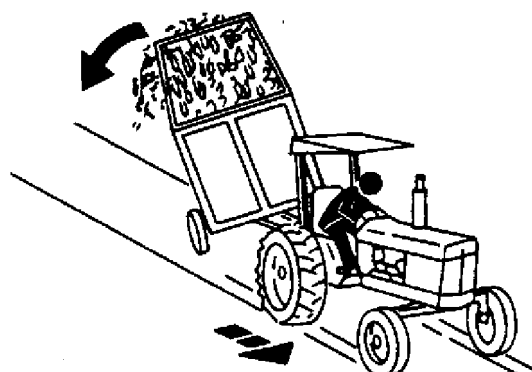

MX,SAIP,B -19-18MAR92

TS216 -UN-23AUG88



AVOID TIPPING

Always wear seat belt with ROPS in upper position.

Do not drive where machine could slip or tip.

Stay alert for holes, rocks, and roots in the terrain, and other hidden hazards. Keep away from drop-offs.

Slow down before you make a sharp turn.

Use care when pulling loads or using heavy equipment:

 
- Use only approved drawbar hitch points.
- Limit loads to those you can safely control.
- Use counterweights or wheel weights when suggested in this operator's manual.

Reduce speed and exercise extreme caution on slopes and in sharp turns to prevent tipping or loss of control. Be especially cautious when changing direction on slopes.

Do not stop or start suddenly when going uphill or downhill.

If machine stops going up hill:

- STOP the PTO.
- Back down slowly.

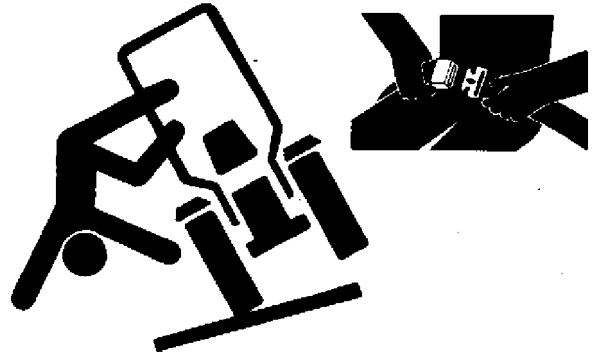

TS205
-UN-23AUG68

MX,AVOIDTIP1A1 -19-22JUL94



Suggest:

If the above button click is invalid.

Please download this document

first, and then click the above link

to download the complete manual.

Thank you so much for reading



 
FREEING A MIRED MACHINE

Attempting to free a mired machine can involve safety hazards such as the mired tractor tipping rearward, the towing tractor overturning, and the tow chain or cable failing and recoiling from its stretched condition.

Back your tractor out if it gets mired down in mud. Unhitch any towed implements. Dig mud from behind the rear wheels. Place boards behind the wheels to provide a solid base and try to back out slowly. If necessary, dig mud from the front of all wheels and drive slowly ahead.

If necessary to tow with another unit, use a long chain or cable. Inspect the chain or cable for flaws. Make sure all parts of towing devices are of adequate size and strong enough to handle the load.

Always hitch to the drawbar of the towing unit. Before moving, clear the area of people. Apply power smoothly to take up the slack: a sudden pull could snap any towing device causing it to whip or recoil dangerously.

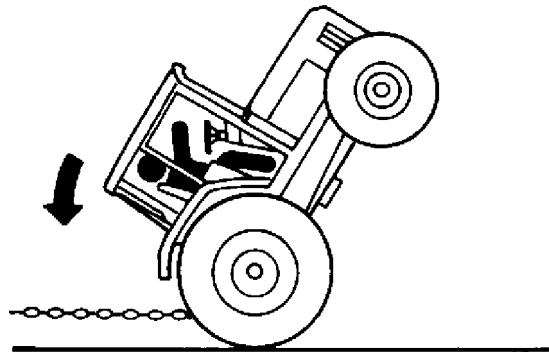

DX,MIRED -19-02OCT95

TS1645 -UN-15SEP95


TS263 -UN-23AUG88

TS220

WORK IN VENTILATED AREA

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

 If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

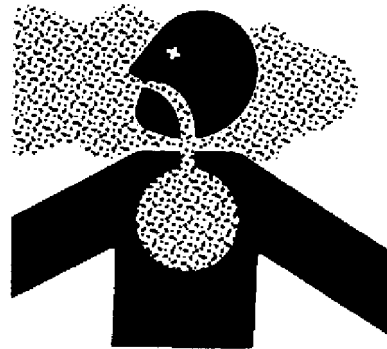

DX,AIR -19-04JUN90

TS220 -UN-23AUG88

TS220

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>