

# **6076 Engines**

**Serial Number ( —499999)**

**Deere Power Systems Group  
CTM6 (17MAR97)**

LITHO IN U.S.A.  
ENGLISH

# Introduction

## FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Use this component technical manual in conjunction with the machine technical manual. An application listing identifies product-model/component type-model relationship. See the machine technical manual for information on component removal and installation, and gaining access to the components.

This manual is divided in two parts: repair and diagnostics. Repair sections contain necessary instructions to repair the component. Diagnostic sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torques.

Binders, binder labels, and tab sets can be ordered by John Deere dealers direct from the John Deere Distribution Service Center.

This manual is part of a total product support program.

## FOS MANUALS—REFERENCE

## TECHNICAL MANUALS—MACHINE SERVICE

## COMPONENT MANUALS—COMPONENT SERVICE

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced technicians.

Technical Manuals are concise guides for specific machines. Technical manuals are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Component Technical Manuals are concise service guides for specific components. Component technical manuals are written as stand-alone manuals covering multiple machine applications.

## MANUAL ORGANIZATION

Group 00—Introduction and Safety Information

Group 01—General Information

Group 02—Fuels, Lubricants and Coolant

Group 03—Engine Mounting

Group 04—Engine Rebuild Guide

Group 05—Cylinder Head and Valves

Group 10—Cylinder Block, Liners, Pistons and Rods

Group 15—Crankshaft, Main Bearings, and Flywheel

Group 16—Camshaft and Timing Gear Train

Group 20—Lubrication System

Group 25—Cooling System

Group 30—Air Intake and Exhaust System

Group 35—Fuel System

Group 100—Tune-Up

Group 105—Engine System Operation and Test

Group 110—Air Intake System Operation and Test

Group 115—Fuel System Operation and Tests

Group 199—Dealer Fabricated Tools

# Contents

Page	Page
<b>Group 00—Introduction and Safety Information</b>	
About This Manual . . . . .	00-1
Safety . . . . .	00-1
<b>Group 01—General Information</b>	
Inch Series Torque Chart . . . . .	01-1
Metric Series Torque Chart . . . . .	01-2
Bolt Identification Chart . . . . .	01-3
Engine Model Designation . . . . .	01-4
Engine Nameplate Information . . . . .	01-6
Option Code Label . . . . .	01-8
Engine Application Chart	
Industrial Equipment . . . . .	01-8
OEM . . . . .	01-9
Agricultural Equipment . . . . .	01-9
Basic 6076 Engine Specifications . . . . .	01-10
General Engine Description . . . . .	01-11
Engine-Sectional View . . . . .	01-12
<b>Group 02—Fuels, Lubricants, and Coolant</b>	
Diesel Fuel . . . . .	02-1
Diesel Engine Oil . . . . .	02-2
General Purpose Grease . . . . .	02-3
Engine Coolant Recommendations . . . . .	02-4
Engine Coolant Requirements . . . . .	02-5
<b>Group 03—Engine Mounting</b>	
Engine Repair Stand . . . . .	03-1
Safety Precautions . . . . .	03-2
Install 400 Series Adapters on Repair Stand . . . . .	03-2
Engine Lifting Procedure . . . . .	03-3
Clean Engine . . . . .	03-4
Disconnect Turbocharger Oil Inlet Line . . . . .	03-4
Mount Engine On Repair Stand . . . . .	03-5
<b>Group 04—Engine Rebuild Guide</b>	
6076 Engine Disassembly Sequence . . . . .	04-1
Sealant Application Guidelines . . . . .	04-2
6076 Engine Assembly Sequence . . . . .	04-3
<b>Group 05—Cylinder Head and Valves</b>	
Essential Tools . . . . .	05-1
Service Equipment and Tools . . . . .	05-3
Other Materials . . . . .	05-3
Cyl. Head and Valve Specifications . . . . .	05-4
Diagnosing Malfunctions . . . . .	05-7
Check and Adjust Valve Clearance . . . . .	05-8
Check Valve Lift . . . . .	05-10
Disconnect Turbocharger Oil Inlet Line . . . . .	05-11
Remove Cylinder Head . . . . .	05-12
Disassemble and Inspect Rocker Arm Shaft Assembly . . . . .	05-14
Measure Valve Recess . . . . .	05-15
Remove Valve Assembly . . . . .	05-16
Inspect and Measure valve Springs . . . . .	05-17
Inspect Valve Rotators and Wear Caps . . . . .	05-17
Clean Valves . . . . .	05-18
Inspect and Measure Valves . . . . .	05-18
Grind Valves . . . . .	05-19
Inspect and Clean Cylinder Head . . . . .	05-19
Check Cylinder Head Flatness . . . . .	05-20
Measure Cylinder Head Thickness . . . . .	05-21
Clean Valve Guides . . . . .	05-21
Measure Valve Guides . . . . .	05-22
Knurl Guides . . . . .	05-22
Clean Valve Seats . . . . .	05-23
Measure Valve Seats . . . . .	05-23
Grind Valve Seats . . . . .	05-24
Replace Valve Inserts . . . . .	05-25
Install Valves . . . . .	05-26
Inspect and Clean Cylinder Head Nozzle Bore . . . . .	05-27
Clean and Inspect Push Rods . . . . .	05-28
Clean and Inspect Cylinder Head Cap Screws . . . . .	05-28
Inspect and Clean Ventilator Outlet Hose . . . . .	05-28
Clean and Inspect Top Deck of Cylinder Block . . . . .	05-29
Measure Cylinder Liner Standout . . . . .	05-30
Protect Cylinder Block Top Deck . . . . .	05-30

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

CTM6-19-17MAR97

COPYRIGHT© 1991  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION™ Manual  
Previous Editions  
Copyright 1989, 1988 Deere & Company

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

	Page		Page
		Install Cylinder Liner O-Rings and Packings . . . . .	10-39
00		Assemble Valve Assembly . . . . .	05-31
		Install Cylinder Head . . . . .	05-32
01		Tighten Cylinder Head Cap Screws (Grade 180 or 12.9) . . . . .	05-34
		Tighten Flanged-Head Cylinder Head Cap Screws . . . . .	05-35
02		TORQUE-TURN Flanged-Head Cap Screws . . . . .	05-36
		Install Rocker Arm Assembly . . . . .	05-37
03		Complete Final Assembly Of Injection Pump Side . . . . .	05-38
		Complete Final Assembly On Exhaust Manifold Side . . . . .	05-38
04		Perform Engine Break-In . . . . .	05-40
05		<b>Group 10—Cylinder Block, Liners, Pistons and Rods</b>	
		Essential Tools . . . . .	10-1
		Service Equipment and Tools . . . . .	10-3
10		Specifications . . . . .	10-4
		Other Materials . . . . .	10-6
		Diagnosing Malfunctions . . . . .	10-7
15		Disconnect Turbocharger Oil Inlet Line . . . . .	10-8
		Remove Pistons and Connecting Rods . . . . .	10-9
		Measure Cylinder Liner Standout . . . . .	10-12
		Remove Cylinder Liners . . . . .	10-13
16		Inspect Pistons and Liners . . . . .	10-14
		Measure Oil Control Ring Groove . . . . .	10-21
		Measure Cylinder Liners . . . . .	10-22
20		Deglazing Cylinder Liners . . . . .	10-23
		Inspect and Measure Connecting Rod Bearings . . . . .	10-24
		Inspect Rod and Cap . . . . .	10-25
25		Inspect Piston Pins and Bushings . . . . .	10-27
		Remove Piston Pin Bushing . . . . .	10-28
		Clean and Inspect Rod Pin Bushing Bore . . . . .	10-29
30		Install Rod Pin Bushing . . . . .	10-30
		Complete Disassembly of Cylinder Block (If Required) . . . . .	10-31
35		Remove and Clean Piston Cooling Orifices . . . . .	10-31
		Inspect and Clean Cylinder Block . . . . .	10-32
		Clean O-Ring Bore . . . . .	10-34
100		Measure Cylinder Block . . . . .	10-34
		Install Piston Cooling Orifices and Gallery Plugs . . . . .	10-36
		Recheck Cylinder Liner Standout . . . . .	10-37
105		Measure Liner Flange Thickness . . . . .	10-38
		Install Liner Shims—If Required . . . . .	10-38
		<b>Group 15—Crankshaft, Main Bearings and Flywheel</b>	
		Essential Tools . . . . .	15-1
		Service Equipment and Tools . . . . .	15-2
		Other Materials . . . . .	15-2
		Specifications . . . . .	15-3
		Diagnosing Malfunctions . . . . .	15-5
		General Information . . . . .	15-5
		Disconnect Turbocharger Oil Inlet Line . . . . .	15-6
		Remove Crankshaft Real Oil Seal and Wear Sleeve . . . . .	15-6
		/(Without Removing Oil Seal Housing)	
		Install Crankshaft Rear Oil Seal and Wear Sleeve . . . . .	15-8
		/(Without Engine Disassembly)	
		Inspect Vibration Damper . . . . .	15-9
		Remove Water Pump and Damper Pulley . . . . .	15-10
		Remove Timing Gear Cover—Non-Auxiliary Engines . . . . .	15-11
		Remove Auxiliary Drive Gear and Timing Gear Cover . . . . .	15-11
		/—Auxiliary Drive Engines	
		Remove Front Oil Seal From Timing Gear Cover . . . . .	15-13
		Install Front Oil Seal In Timing Gear Cover . . . . .	15-13
		Check Crankshaft End Play . . . . .	15-14
		Remove Front Wear Sleeve . . . . .	15-14
		Remove and Inspect Crankshaft Gear . . . . .	15-15
		Inspect, Measure and Repair Flywheel . . . . .	15-15
		Check Flywheel Housing Face Run-Out . . . . .	15-16
		Check Flywheel Face Flatness . . . . .	15-16
		Check Pilot Bearing Bore Concentricity . . . . .	15-17
		Remove Flywheel . . . . .	15-17
		Remove SAE 1 And SAE 2 Flywheel Housing . . . . .	15-18
		Remove SAE 3 Flywheel Housing . . . . .	15-18
		Replace Flywheel Ring Gear . . . . .	15-19
		Service Clutch Shaft Pilot Bushing-Quad Range Transmissions . . . . .	15-20

Continued on next page

	Page		Page
Remove Rear Oil Seal Housing And Wear Sleeve . . . . .	15-21	Remove Damper Pulley and Timing Gear Cover—Non-Auxiliary Drive Engines . . . . .	16-8
/(With Engine Disassembled)		Remove Damper Pulley, Auxiliary Drive Gear and Timing Gear Cover . . . . .	16-10
Remove Crankshaft Main Bearings . . . . .	15-22	/—Auxiliary Drive Engines	
Check Main Bearing Clearance . . . . .	15-23	Remove Front Oil Seal From Timing Gear Cover . . . . .	16-12
Remove Crankshaft . . . . .	15-24	Install Front Oil Seal In Timing Gear Cover . . . . .	16-13
Inspect Crankshaft . . . . .	15-25	Check Camshaft End Play . . . . .	16-14
Measure Assembled ID of Bearings And OD Of Crankshaft Journals . . . . .	15-26	Measure Camshaft Drive Gear-To-Crankshaft Gear Minimum Backlash . . . . .	16-14
Main Bearing Cap Line Bore Specifications . . . . .	15-27	Remove Camshaft . . . . .	16-15
Thrust Bearing New Part Specifications . . . . .	15-27	Remove Camshaft Gear, Spacer, and Thrust Plate . . . . .	16-16
Crankshaft Grinding Guidelines . . . . .	15-28	Measure Thrust Plate and Spacer . . . . .	16-17
Crankshaft Grinding Specifications . . . . .	15-30	Inspect And Measure Camshaft Followers . . . . .	16-17
Replace Crankshaft Oil Pump Drive Gear . . . . .	15-31	Visually Inspect Camshaft . . . . .	16-17
Inspect Thrust Bearings . . . . .	15-32	Measure Camshaft Journal OD and Bushing ID . . . . .	16-18
Remove and Clean Piston Cooling Orifices . . . . .	15-32	Measure Camshaft Lobe Lift . . . . .	16-18
Install Main Bearings and Crankshaft . . . . .	15-33	Assemble Camshaft . . . . .	16-19
Install Oil Pump And Check Drive Gear-To-Crankshaft Clearance . . . . .	15-35	Service Camshaft Bushings Using JDG602 Adapter Set . . . . .	16-20
Install Rear Crankshaft Oil Seal Housing . . . . .	15-36	Service Camshaft Bushings Using JDG606 Adapter Set . . . . .	16-22
Check Oil Seal Housing Runout . . . . .	15-37	Install Camshaft . . . . .	16-23
Crankshaft Rear Oil Seal And Wear Sleeve Handling Precautions . . . . .	15-38	Replace Auxiliary Drive Gear Bearings . . . . .	16-25
Install Crankshaft Rear Oil Seal And Wear Sleeve (With Engine Disassem . . . . .	15-39	Replace Auxiliary Drive Idler Gear Bearings . . . . .	16-26
Install Crankshaft Gear . . . . .	15-40	Install Timing Gear Cover—Non Auxiliary Drive Engines . . . . .	16-27
Install Front Wear Sleeve . . . . .	15-40	Install Timing Gear Cover and Auxiliary Drive Gear . . . . .	16-28
Install SAE 3 Flywheel Housing . . . . .	15-41	/—Auxiliary Drive Engines	
Install Flywheel . . . . .	15-41	Install Rear Auxiliary Drive Gear . . . . .	16-31
Install SAE 1 And SAE 2 Flywheel Housing . . . . .	15-42	Complete Final Assembly . . . . .	16-32
Install Timing Gear Cover—Non-Auxiliary Drive Engines . . . . .	15-42		
Install Timing Gear Cover And Auxiliary Drive Idler Gear—Auxiliary Dri . . . . .	15-43		
Install Rear Auxiliary Drive Gear . . . . .	15-46		
Install Damper Pulley Assembly . . . . .	15-46		
Complete Final Assembly . . . . .	15-47		
		<b>Group 20—Lubrication System</b>	
<b>Group 16—Camshaft and Timing Gear Train</b>		Specifications . . . . .	20-1
Essential Tools . . . . .	16-1	Engine Crankcase Oil Fill Quantities . . . . .	20-2
Service Equipment and Tools . . . . .	16-2	Other Material . . . . .	20-4
Other Material . . . . .	16-3	How The Lubrication System Works . . . . .	20-5
Specifications . . . . .	16-4	Diagnosing Malfunctions . . . . .	20-6
General Information . . . . .	16-5	Disconnect Turbocharger Oil Inlet Line . . . . .	20-7
Check Valve Lift . . . . .	16-6	Drain Engine Oil and Remove Oil Pan . . . . .	20-7
Disconnect Turbocharger Oil Inlet Line . . . . .	16-7	Horizontal Oil Filter and Housing Assembly . . . . .	20-8
Prepare Engine For Camshaft Removal . . . . .	16-8		

Continued on next page

110

115

199

INDX

110

115

199

INDX

	Page		Page
Remove Horizontal Oil Filter and Housing Assembly . . . . .	20-9	Disassemble Water Pump . . . . .	25-12
Vertical Oil Filter and Housing Assembly . . . . .	20-10	Inspect Water Pump Parts . . . . .	25-14
Remove Vertical Oil Filter and Housing Assemblies . . . . .	20-11	Assemble Water Pump . . . . .	25-15
Inspect Oil Pressure Regulating Valve . . . . .	20-12	Install Water Pump . . . . .	25-17
Inspect Oil Filter Bypass Valve . . . . .	20-13	Remove and Test Thermostats . . . . .	25-17
Install Horizontal Oil Filter and Housing . . . . .	20-14	Install Thermostats . . . . .	25-18
Install Vertical Oil Filter and Housing Assemblies . . . . .	20-15	Remove Water Manifold . . . . .	25-19
Remove Engine Oil Cooler . . . . .	20-15	Inspect and Clean Water Manifold . . . . .	25-19
Clean Inspect, and Install Engine Oil Cooler . . . . .	20-17	Install Water Manifold . . . . .	25-20
Remove Oil Cooler Bypass Housing . . . . .	20-18	Remove Coolant Heater—If Equipped . . . . .	25-20
Remove and Inspect Oil Cooler Bypass Valve . . . . .	20-18	Install Coolant Heater—If Equipped . . . . .	25-21
Engine Oil Pump Assembly—Deep Sump . . . . .	20-19	Complete Final Assembly . . . . .	25-22
Engine Oil Pump Assembly—Standard Sump . . . . .	20-20	Inspect and Tension Fan and Alternator V-Belts . . . . .	25-23
Check Crankshaft Gear-To-Oil Pump Drive Gear Backlash . . . . .	20-21		
Remove Engine Oil Pump . . . . .	20-21	<b>Group 30—Air Intake And Exhaust System</b>	
Inspect and Clean Oil Pump . . . . .	20-22	Essential Tools . . . . .	30-1
Check Drive Shaft End Play . . . . .	20-22	Other Material . . . . .	30-2
Check Drive Shaft Side Movement . . . . .	20-23	Specifications . . . . .	30-2
Check Pumping Gear Backlash . . . . .	20-23	How The Air Intake and Exhaust System Works . . . . .	30-3
Remove And Inspect Oil Pump Drive Gear . . . . .	20-24	How The Turbocharger Works . . . . .	30-3
Install Oil Cooler Bypass Valve And Housing . . . . .	20-25	How The Turbocharger is Lubricated . . . . .	30-4
Adjust Set Screw . . . . .	20-26	Extending Turbocharger Life . . . . .	30-4
Install Engine Oil Pump . . . . .	20-27	Diagnosing Turbocharger Malfunctions . . . . .	30-7
Install Oil Pan . . . . .	20-29	Remove Turbocharger . . . . .	30-10
		Turbocharger Seven-Step Inspection . . . . .	30-11
<b>Group 25—Cooling System</b>		Perform Axial End Play Bearing Test (Schwitzer 3LM) . . . . .	30-17
Essential Tools . . . . .	25-1	Perform Radial Bearing Clearance Test (Schwitzer) . . . . .	30-17
Other Materials . . . . .	25-2	Perform Raidal Bearing Test—(AiResearch/Garrett T04E) . . . . .	30-18
Specifications . . . . .	25-3	Disassemble Turbocharger . . . . .	30-19
How The Cooling System Works . . . . .	25-5	Clean and Inspect Turbine and Compressor Housings . . . . .	30-21
Diagnosing Malfunctions . . . . .	25-6	Replace Center Housing and Rotating Assembly . . . . .	30-22
Medium Duty, Adjustable Fan Drive Assembly		Prelube Turbocharger . . . . .	30-23
Remove and Install . . . . .	25-6	Install Turbocharger . . . . .	30-24
Replace Bearings . . . . .	25-7	Remove and Inspect Intake Manifold (6076T and 6076H Engines) . . . . .	30-26
Heavy Duty, Adjustable Fan Drive Assembly		Install Intake Manifold (6076T and 6076H Engines) . . . . .	30-27
Remove and Install . . . . .	25-8	How The Aftercooler Works—6076A Engines . . . . .	30-28
Replace Bearings . . . . .	25-8	Single-Pass Aftercooler Assembly . . . . .	30-29
Replace Bearings In Water Manifold Mounted, Fixed Fan Drive Assembly . . . . .	25-10	Two-Pass Aftercooler Assembly . . . . .	30-30
Remove Water Pump . . . . .	25-11		

Continued on next page

Page	Page		
Remove Aftercooler and Intake Manifold (6076A Engines) . . . . .	30-31	Test Fuel Injection Nozzles . . . . .	35-38
Inspect and Repair Aftercooler (6076A Engines) . . . . .	30-32	Make Opening Pressure Test . . . . .	35-39
Inspect and Repair Intake Manifold (6076A Engines) . . . . .	30-33	Perform Leakage Test . . . . .	35-41
Install Intake Manifold and Single-Pass Aftercooler (6076A Engines) . . . . .	30-34	Make Chatter and Spray Pattern Test . . . . .	35-42
Install Intake Manifold and Two-Pass Aftercooler (6076A Engines) . . . . .	30-37	Disassemble Fuel Injection Nozzle . . . . .	35-43
Remove, Inspect, Install Exhaust Manifold Assembly . . . . .	30-39	Clean and Inspect Fuel Injection Nozzle Assembly . . . . .	35-45
<b>Group 35—Fuel System</b>		Perform Nozzle Slide Test . . . . .	35-46
Essential Tools . . . . .	35-1	Clean Spray Orifices . . . . .	35-46
Other Material . . . . .	35-3	Inspect Nozzle Holder . . . . .	35-47
Specifications . . . . .	35-4	Inspect Gland Nut . . . . .	35-49
Relieve System Pressure . . . . .	35-5	Assemble Fuel Injection Nozzle . . . . .	35-50
Replace Dual Fuel Filters . . . . .	35-5	Inspect and Clean Cylinder Head Nozzle Bore . . . . .	35-52
Replace Single Fuel Filter . . . . .	35-6	Inspect and Clean Nozzle Seating Surface . . . . .	35-53
Remove and Inspect Fuel Check Valve Assembly—Dual Fuel Filter Systems . . . . .	35-7	Install Fuel Injection Nozzles . . . . .	35-53
Inspect and Clean Dual Fuel Filter Base . . . . .	35-8	<b>Group 100—Tune-Up</b>	
Install Fuel Check Valve Assembly—Dual Filter Fuel Systems . . . . .	35-9	Preliminary Engine Testing . . . . .	100-1
Replace Fuel Check Valve Assembly—Single Filter Fuel Systems . . . . .	35-10	General Tune-Up Recommendations . . . . .	100-2
Inspect and Clean Single Fuel Filter Base . . . . .	35-11	Check Crankcase Ventilation System . . . . .	100-3
Bleed the Fuel System . . . . .	35-12	Check Air Intake System . . . . .	100-3
Diagnosing Fuel Supply Pump Malfunctions . . . . .	35-14	Check Exhaust System . . . . .	100-3
Remove Fuel Supply Pump . . . . .	35-15	Check and Service Entire Cooling System . . . . .	100-4
Test Fuel Supply Pump For Leaks . . . . .	35-16	Inspect and Adjust V-Belts . . . . .	100-5
Disassemble Fuel Supply Pump . . . . .	35-17	Check Electrical System . . . . .	100-6
Inspect and Repair Fuel Supply Pump . . . . .	35-19	<b>Group 105—Engine System Operation and Test</b>	
Assemble Fuel Supply Pump . . . . .	35-20	Essential Tools . . . . .	105-1
Install Fuel Supply Pump . . . . .	35-22	Specifications . . . . .	105-3
General Information For Aneroid—If Equipped . . . . .	35-22	Diagnose Malfunctions . . . . .	105-4
Repair Aneroid . . . . .	35-23	Dynamometer Test . . . . .	105-6
Remove Hydraulic Aneroid Activator . . . . .	35-23	Engine Break-In Instructions . . . . .	105-7
Disassemble And Clean Hydraulic Aneroid Activator Parts . . . . .	35-24	Test Engine Compression Pressure . . . . .	105-8
Assemble and Install Hydraulic Aneroid Activator . . . . .	35-24	Check and Adjust Valve Clearance . . . . .	105-9
Service Overflow Valve . . . . .	35-25	Check Valve Lift . . . . .	105-11
Remove Fuel Shutoff Solenoid . . . . .	35-26	Inspect Vibration Damper . . . . .	105-12
Install Fuel Shutoff Solenoid . . . . .	35-27	Check Crankshaft End Play . . . . .	105-13
Remove Fuel Injection Pump . . . . .	35-28	How the Lubrication System Works . . . . .	105-14
Install Fuel Injection Pump . . . . .	35-31	Check Engine Oil Pressure . . . . .	105-15
Remove Fuel Injection Nozzles . . . . .	35-35	How The Cooling System Works . . . . .	105-16
		Pressure Test Cooling System and Radiator Cap . . . . .	105-17
		Inspect Thermostat and Test Opening Temperature . . . . .	105-18
		<b>Group 110—Air Intake System Operation and Test</b>	
		Essential Tools . . . . .	110-1

Continued on next page

	Page		Page
Specifications . . . . .	110-2	<b>Group 199—Dealer Fabricated Tools</b>	
How the Air Intake and Exhaust System Works . . . . .	110-2	Fabricated Tools—Cylinder Liner Holding Fixture . . . . .	199-1
Air Cleaner Operation . . . . .	110-3	<b>Index</b>	
Diagnosing Malfunctions . . . . .	110-4		
How The Turbocharger Works . . . . .	110-5		
How The Turbocharger is Lubricated . . . . .	110-5		
Diagnosing Turbocharger Malfunctions . . . . .	110-6		
How The Aftercooler Works—6076A Engines . . . . .	110-7		
Check Intake Manifold Pressure At Aneroid . . . . .	110-8		
Check Intake Manifold Pressure At Intake Manifold . . . . .	110-9		
Air Filter Restriction Indicator Switch Test . .	110-10		
<b>Group 115—Fuel System Operation and Tests</b>			
Essential Tools . . . . .	115-1		
Specifications . . . . .	115-1		
Fuel System Operation . . . . .	115-2		
Diagnose Fuel System Malfunctions . . . . .	115-3		
Supply Pump Operation . . . . .	115-7		
Diagnose Supply Pump Malfunction . . . . .	115-9		
Check Supply Pump Operation . . . . .	115-10		
Service Supply Pump . . . . .	115-12		
Bleed the Fuel System . . . . .	115-13		
Diagnose In-Line Type Injection Pump Malfunctions . . . . .	115-15		
In-Line Type Fuel Injection Pump Operation . . . . .	115-16		
Check and Adjust Injection Pump Timing . .	115-16		
Check Engine Fast Idle Speed . . . . .	115-19		
Check and Adjust Engine Slow Idle Speed . . . . .	115-20		
How The Aneroid Works (If Equipped) . . . .	115-22		
Diagnose Aneroid Malfunctions . . . . .	115-23		
How The Hydraulic Aneroid Activator Works . . . . .	115-24		
Diagnose Malfunctions—Hydraulic Aneroid Activator . . . . .	115-25		
Fuel Injection Nozzle—General Information . . . . .	115-26		
Fuel Injection Nozzle Operation . . . . .	115-27		
Diagnose Malfunctions—Fuel Injection Nozzle . . . . .	115-28		
Test Fuel Injection Nozzles (Engine Running) . . . . .	115-29		
Fuel Drain Back Test Procedure . . . . .	115-29		

**CHECK AND ADJUST VALVE CLEARANCE**

Too little valve clearance throws valves out of time. Valves open too early and close too late. This causes the valves to overheat due to hot combustion gases rushing past valves when out of time. Overheating lengthens valve stems which prevents proper seating of valves. The valves seat so briefly or poorly that normal heat transfer into the cooling system does not have time to take place, causing burned valves and low power.


Too much valve clearance causes a lag in valve timing causing engine valve train imbalance. The fuel-air mixture enters the cylinders late during intake stroke. The exhaust valve closes early and prevents waste gases from being completely removed from cylinders. Also, the valves close with a great deal of impact, which may crack or break the valves and scuff the camshaft and followers.

**CAUTION:** To prevent accidental starting of engine while performing valve adjustments, always disconnect (-) negative battery terminal.

*NOTE:* Valve clearance can be checked with engine cold or warm.

1. Remove rocker arm cover with ventilator tube (A).
2. Remove plastic plugs (B).

**IMPORTANT:** Visually inspect contact surfaces of valve tips or wear caps and rocker arm wear pads. Check all parts for excessive wear, breakage, or cracks. Replace parts that show visible damage.

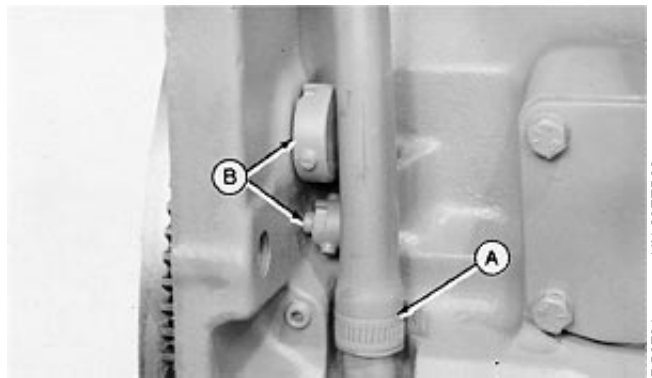


RG3794 -JUN-23FEB89

S11,2005,DO -19-23AUG91

3. Rotate engine with the JDE81-1 Flywheel Turning Tool (A) until JDE81-4 Timing Pin (B) engages timing hole in flywheel.

If the rocker arms for No. 1 cylinder are loose, the engine is at No. 1 "TDC-Compression." If the rocker arms for No. 6 cylinder are loose, the engine is at No. 6 "TDC-Compression." Rotate the engine one full revolution to No. 1 "TDC-Compression."

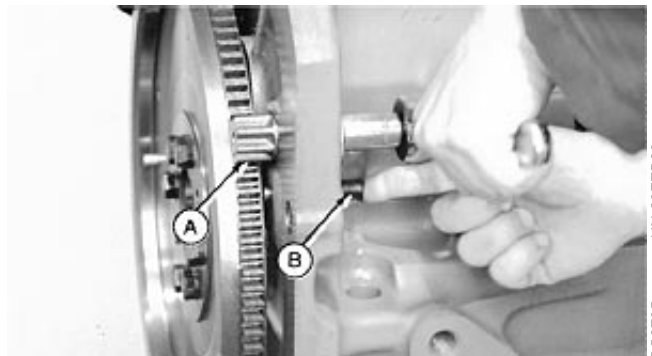

RG3795 -JUN-23FEB89

S11,2005,DP -19-07FEB85

4. With engine lock-pinned at "TDC" of No. 1 piston's compression stroke, check and adjust (as needed) valve clearance on Nos. 1, 3 and 5 exhaust valves and Nos. 1, 2 and 4 intake valves.

**VALVE CLEARANCE SPECIFICATIONS**



Intake Valves . . . . .	0.38 mm (0.015 in.)
Exhaust Valves . . . . .	0.51 mm (0.020 in.)

5. If valve clearance needs to be adjusted, loosen the locknut on rocker arm adjusting screw. Turn adjusting screw until feeler gauge slips with a slight drag. Hold the adjusting screw from turning with screwdriver and tighten locknut to 27 N·m (20 lb-ft). Recheck clearance again after tightening locknut. Readjust clearance as necessary.

6. Rotate flywheel 360° until No. 6 piston is at "TDC" of its compression stroke. Rocker arms for No. 6 piston should be loose.

7. Check and adjust (as needed) valve clearance to the same specifications on Nos. 2, 4 and 6 exhaust and Nos. 3, 5, and 6 intake valves. Tighten valve adjusting screw locknut to 27 N·m (20 lb-ft).

8. Recheck clearance on all valves again after locknut is tightened.

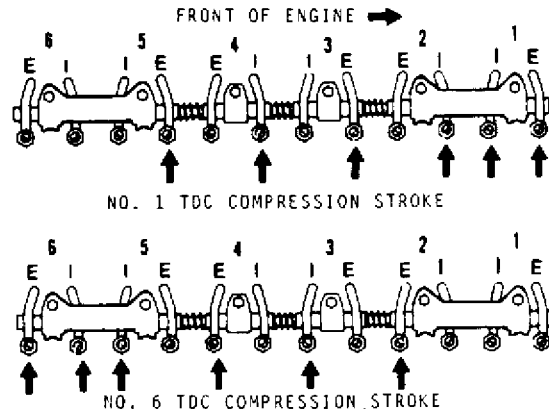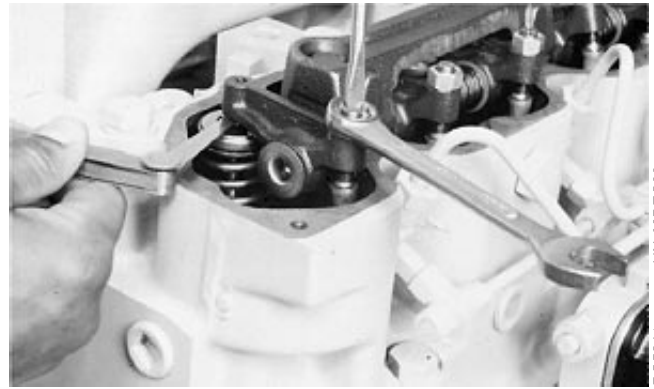

S11,2005,NB -19-22AUG91

-JUN-06DEC88  
RG6241


-19-21AUG91  
RG4295

05  
9

## CHECK VALVE LIFT

*NOTE: Measuring valve lift can give an indication of wear on camshaft lobes and cam followers or bent push rods.*

1. Remove rocker arm cover and loosen locknut on rocker arm. Set valve clearance at 0.00 mm (in.). Tighten locknut.
2. Put dial indicator tip on valve rotator. Be sure that valve is fully closed.
3. Check pre-set on dial indicator. Set dial indicator pointer at zero.
4. Manually turn engine in running direction, using the engine rotation tools previously mentioned for checking valve clearance.
5. After rocker arm contacts valve wear cap, observe dial indicator reading as valve is moved to fully open position.

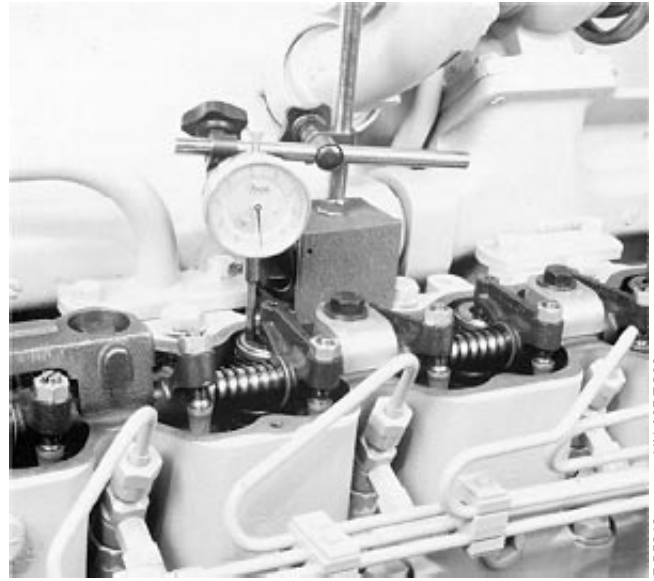

-JUN-06DEC88  
RG5242

### VALVE LIFT SPECIFICATION AT 0.00 MM (IN.) CLEARANCE

Engine Ser. No. ( —121169)

Intake . . . . .	14.05—14.48 mm (0.553—0.570 in.)
Minimum Acceptable . . . . .	13.16 mm (0.518 in.)
Exhaust . . . . .	15.88—16.31 mm (0.625—0.642 in.)
Minimum Acceptable . . . . .	14.99 mm (0.590 in.)

Engine Ser. No. (121170— ) and converted 644E Loaders

Intake . . . . .	13.39—13.84 mm (0.527—0.545 in.)
Minimum Acceptable . . . . .	12.50 mm (0.492 in.)
Exhaust . . . . .	14.38—14.84 mm (0.566—0.584 in.)
Minimum Acceptable . . . . .	13.49 mm (0.531 in.)

6. Adjust valve clearance to specification as outlined earlier in this group after measuring lift. (See CHECK AND ADJUST VALVE CLEARANCE.)

S11,2005,MN -19-18SEP91

05  
10

## DISCONNECT TURBOCHARGER OIL INLET LINE

1. Drain all engine oil and coolant, if not previously done.

**IMPORTANT:** When servicing 6076 Engines on a rollover stand, disconnect turbocharger oil inlet line (A) from oil filter housing or turbocharger before rolling engine over. Failure to do so may cause a hydraulic lock upon starting engine. Hydraulic lock may cause possible engine failure.

Hydraulic lock occurs when trapped oil in the oil filter housing drains through the turbocharger, the exhaust and intake manifolds, and then into the cylinder head.

After starting the engine, the trapped oil in the manifold and head is released into the cylinder(s) filling them with oil causing hydraulic lock and possible engine failure.

2. Disconnect turbocharger oil inlet line at oil filter housing or turbocharger.



RG5323 -JUN-06DEC88

05  
11

RG,CTM6,G03,1 -19-22AUG91


## REMOVE CYLINDER HEAD

It is not necessary to remove engine from machine to service cylinder head on all applications. Refer to your Machine Technical Manual for engine removal procedure, if required.

**CAUTION:** After operating engine, allow exhaust system to cool before removal.

**DO NOT drain coolant until the coolant temperature is below operating temperature. Always loosen drain valve slowly to relieve any excess pressure.**

1. Drain engine coolant.
2. Remove water manifold (A) and all coolant piping. (See Cooling System, Group 25.)
3. Remove turbocharger (B) and exhaust elbow. (See Air Intake and Exhaust System, Group 30.)
4. On 6076A Engines, remove aftercooler assembly (D). (Group 30.)
5. Remove air intake manifold (C). (Group 30.)
6. Remove exhaust manifold (E). (Group 30.)

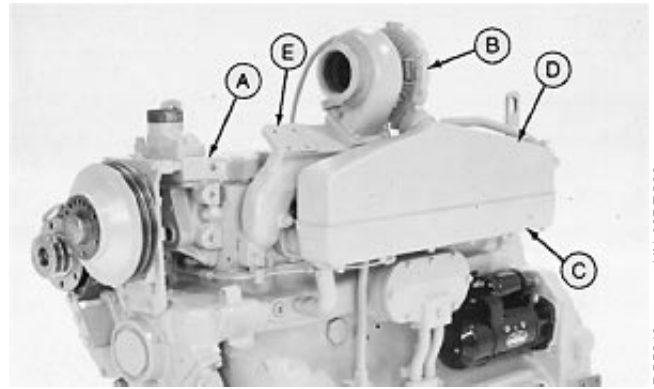


A—Water Manifold  
B—Turbocharger  
C—Intake Manifold  
D—Aftercooler Assembly  
E—Exhaust Manifold

-JUN-06DEC88  
RG5243

S11,2005,MP -19-25MAR91

7. Remove fuel injection lines (A) and nozzles (B). (See Fuel System, Group 35.)

8. Remove rocker arm cover (C) and ventilator outlet hose assembly.

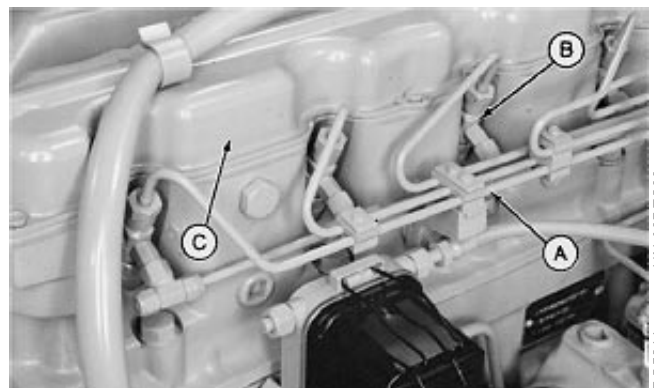


S11,2005,MQ -19-09NOV87

-JUN-06DEC88  
RG5244

05  
12

9. Remove six cap screws (A) and remove all four clamps (B). Lift rocker arm assembly up and remove.

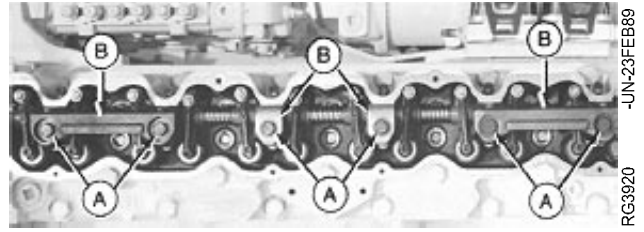

S11,2005,MR -19-09NOV87

10. Remove all 12 push rods and identify for reassembly.

*NOTE: Clean and inspect push rods as explained later in this group.*



S11,2005,MS -19-09NOV87

11. Remove all 26 cylinder head cap screws.


*NOTE: If desired, check and record each cylinder head cap screw torque before removing.*

**IMPORTANT: DO NOT use screwdrivers or pry bars between cylinder block and cylinder head to loosen head-to-block gasket seal.**

**Lift cylinder head from block. If cylinder head sticks, use a soft hammer to tap the cylinder head.**

12. Remove cylinder head gasket. Inspect possible oil, coolant, or combustion chamber leaks. Also, check for evidence of incorrect or defective head gasket being used.

*NOTE: Do not rotate crankshaft with cylinder head removed unless all cylinder liners are secured with cap screws and large flat washers as described later in this group.*

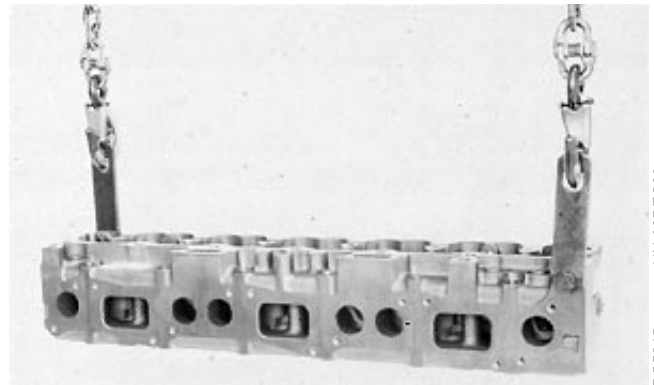

S11,2005,MT -19-15MAR88


## DISASSEMBLE AND INSPECT ROCKER ARM SHAFT ASSEMBLY

**NOTE:** Make preliminary inspection during disassembly.

Look for:

- Worn or scored rocker arms, shaft, and shaft support.
- Weak or broken springs
- Lube oil restriction

1. Remove plugs (A) and washers (B) from ends of rocker arm shaft.
2. Slide springs, rocker arms, and rocker arm supports off rocker arm shaft identifying their parts for reassembly in the same sequence they were in before disassembly.

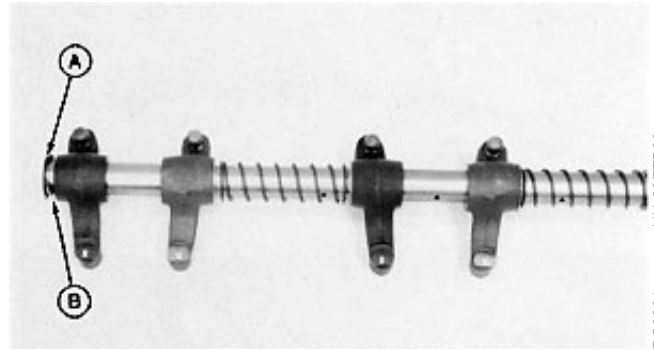

-JUN-23FEB89  
RG3801

S11,2005,HY1 -19-07AUG91

3. Inspect rocker arm shaft (A) for severe scratching, scoring, or excessive wear at points of rocker arm contact. Measure rocker arm and shaft. Compare with specifications given below.

**NOTE:** Wear could indicate weak valve springs, bent push rods, or loose rocker arm shaft clamps.

### ROCKER ARM ASSEMBLY SPECIFICATIONS


Rocker Arm I.D. . . . . . 19.07—19.10 mm (0.7507—0.7520 in.)

Rocker Arm Shaft O.D . . . . . 19.01—19.05 mm (0.7484—0.7500 in.)

4. Check rocker arm adjusting nut (C) and screw (B) for damage. Visually inspect rocker arm for hairline cracks. Replace if necessary.

**NOTE:** Be sure all oil holes in rocker arm shaft are clean and open.

5. Clean all rocker arm parts with clean solvent. Dry with compressed air.

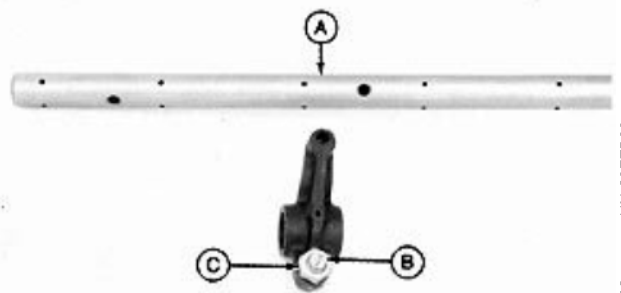

-JUN-23FEB89  
RG3802


S11,2005,MB -19-22AUG91

05  
14

6. Check for cups or concave wear (A) on ends of rocker arms where they contact wear caps.
7. Examine spacer springs on shaft between rocker arms. Be sure they are strong enough to exert a positive pressure on rocker arms.

*NOTE: If the rocker arm has been damaged by a valve failure, replace it and the push rods when replacing valves.*

8. Roll rocker arm shaft and push rods on a flat surface to check for bends or distortion. Replace parts as necessary.

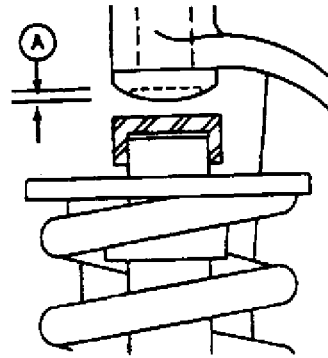


R26131 -UN-09DEC88

S11,0401,N -19-05FEB85

9. Assemble parts on rocker arm shaft opposite removal procedure.

Make sure rocker arm shaft end plugs (A) are firmly seated against end of shaft, and washers (B) are installed on shaft.

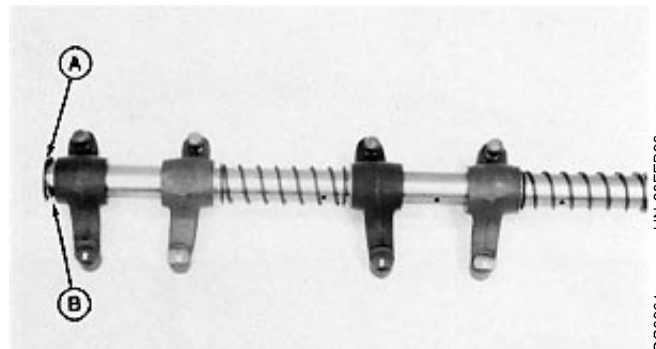

RG3801 -UN-23FEB89

S11,0401,O -19-23APR82

## MEASURE VALVE RECESS


1. Measure and record valve recess dimensions for all valves using a magnetic base dial indicator.

### VALVE RECESS SPECIFICATIONS

Valve Recess Below Cylinder Head:

Exhaust . . . . .	1.19—1.70 mm (0.047—0.067 in.)
—Maximum Recess . . . . .	2.46 mm (0.097 in.)
Intake . . . . .	3.35—3.86 mm (0.132—0.152 in.)
—Maximum Recess . . . . .	4.62 mm (0.182 in.)

*NOTE: If measurement does not meet specifications, install either new valves or inserts, or both to obtain proper valve height. (See REPLACE VALVE SEAT INSERTS, later in this group.)*

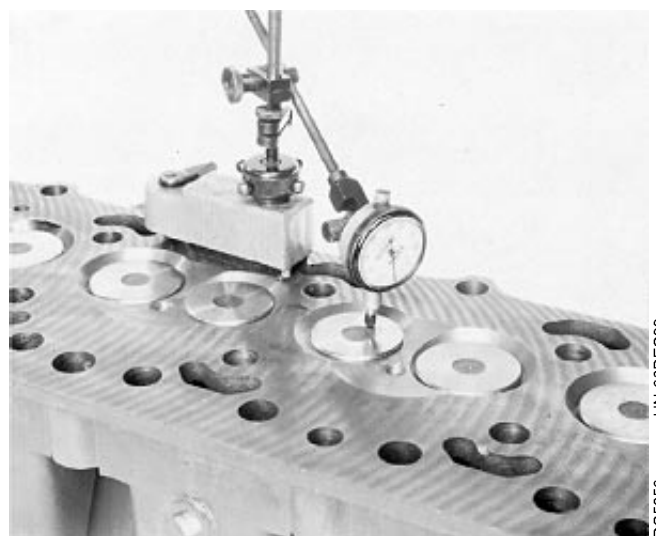


RG5250 -UN-06DEC88

S11,2005,MC -19-25JUL91

## REMOVE VALVE ASSEMBLY

*NOTE: Refer to DIAGNOSING MALFUNCTIONS, earlier in this group.*

1. Compress valve spring compressor (A) over valve.
2. Remove retaining locks (B).
3. Remove valve spring compressor.

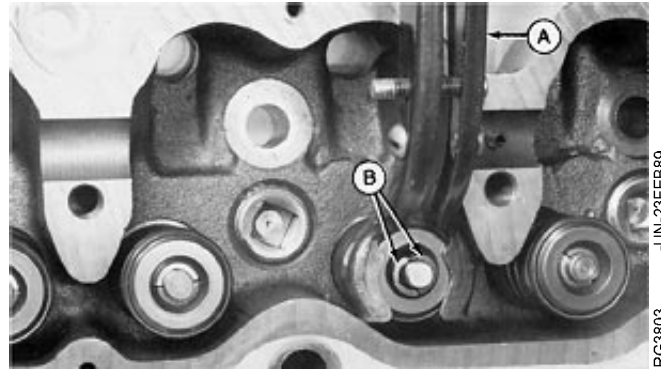


S11,0401,Q -19-07AUG91

**IMPORTANT:** Permanently mark top or bottom of valve springs to assure correct reassembly. Early valve springs have a top and bottom, and must be installed in correct manner. Valve springs after Engine Serial No. (129679— ) may be installed either way. Do not mix valve spring within a given engine.

4. Remove valve rotators (A) and valve springs (B).
5. Remove exhaust valve stem shields, if equipped.
6. Remove valves (C) from cylinder head.

*NOTE: Identify all parts for correct reassembly.*

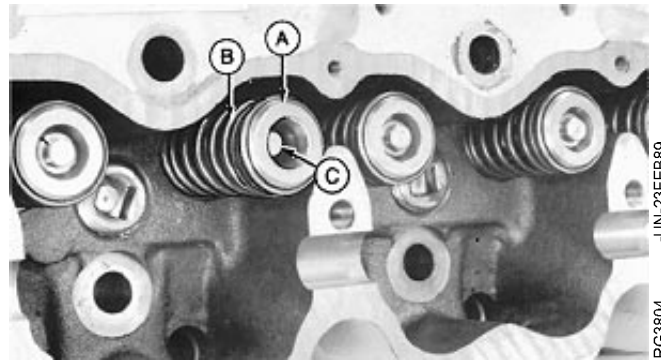

S11,2005,NR -19-23AUG91

## INSPECT AND MEASURE VALVE SPRINGS

1. Inspect valve springs for alignment, wear and damage.
2. Put springs on a flat surface to see that they are square and parallel.
3. Check valve spring tension using D01168AA Spring Compression Tester.

**NOTE:** Free spring length of 65 mm (2.56 in.) springs differ slightly, but compressed height must be within specification.

### VALVE SPRING SPECIFICATIONS

Compression	Height
Engine Serial No. ( —129678)	
Intake:	
Open: 719—789 N (162—177 lb-force) . . . . .	38.1 mm (1.50 in.)
Closed: 353—407 N (79—91 lb-force) . . . . .	52.5 mm (2.07 in.)
Exhaust:	
Open: 709—779 N (159—175 lb-force) . . . . .	38.5 mm (1.52 in.)
Closed: 301—355 N (68—80 lb-force) . . . . .	54.5 mm (2.15 in.)
Engine Serial No. (129679— )	
Intake:	
Open: 815—880 N (183—198 lb-force) . . . . .	38.1 mm (1.50 in.)
Closed: 345—399 N (78—90 lb-force) . . . . .	52.5 mm (2.07 in.)
Exhaust:	
Open: 797—867 N (179—195 lb-force) . . . . .	38.5 mm (1.52 in.)
Closed: 284—338 N (64—76 lb-force) . . . . .	54.5 mm (2.15 in.)

**IMPORTANT:** Do not mix early production springs with current production springs within a given engine.



-UN-23FEB89

RG2732

-UN-08NOV88


T82054

05  
17

S11,2005,MD -19-23AUG91

## INSPECT VALVE ROTATORS AND WEAR CAPS

1. Insure that valve rotators (A), if equipped, will turn freely. Replace if defective.
2. Replace valve wear caps (B) if pitted or worn.

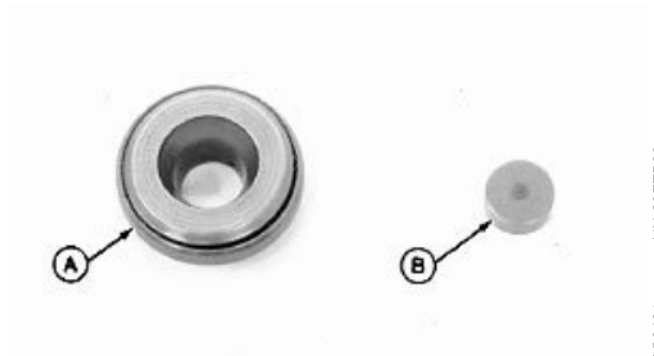

-UN-23FEB89

RG3491

S11,0401,T -19-25SEP91

## CLEAN VALVES

1. Hold each valve firmly against a soft wire wheel on a bench grinder.
2. Make sure all carbon is removed from valve head, face and unplated portion of stem.

**IMPORTANT: Any carbon left on the stem will affect alignment in valve refacer if valves need to be refaced. Do not use wire wheel on plated portion of valve stem.**

S11,0401,U -19-07AUG91

05  
18

## INSPECT AND MEASURE VALVES


1. Thoroughly clean and inspect valves to help determine if they can be restored to a serviceable condition. Replace valves that are burned, cracked, eroded, or chipped.

*NOTE: Early intake valve shown. All exhaust valves and intake valves after Engine Serial No. (106215— ) have only one retainer lock groove (C).*

2. Inspect valve retainer lock grooves on valve stem for damage. Also inspect stems for signs of scuffing, which may indicate insufficient valve guide-to-valve stem clearance. Replace if defects are evident.
3. Measure valve head OD (A). Compare valve stem OD (B) with guide ID to determine clearance as outlined later in this group.

A—Valve Head OD:  
 Exhaust . . . . . 46.87—47.13 mm (1.845—1.856 in.)  
 Intake . . . . . 50.87—51.13 mm (2.003—2.013 in.)

B—Valve Stem OD:  
 Exhaust . . . . . 9.44—9.46 mm (0.3717—0.3724 in.)  
 Intake . . . . . 9.46—9.49 mm (0.3724—0.3736 in.)

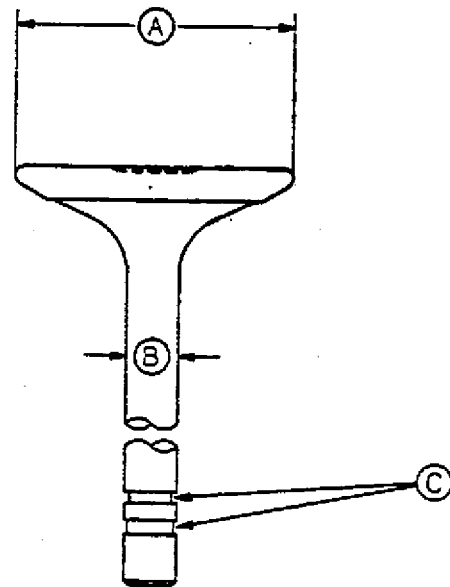

RG5246 -UN-06DEC88

S11,2005,MF -19-23AUG91



**Suggest:**

**If the above button click is invalid.**

**Please download this document**


**first, and then click the above link**

**to download the complete manual.**

**Thank you so much for reading**

4. Use D05058ST Valve Inspection Center to determine if valve stem or face are out-of-round, bent, or warped.

Maximum permissible runout of  
valve face . . . . . 0.05 mm (0.002 in.)

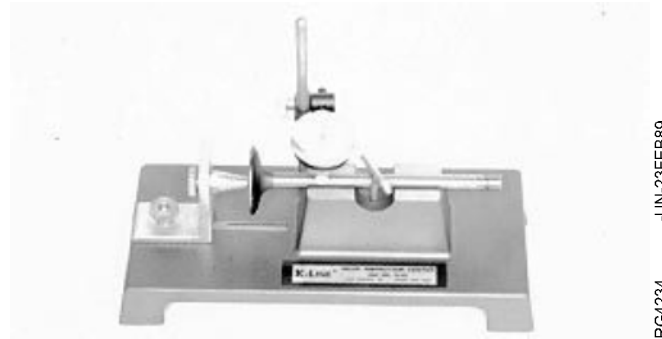

RG4234 -JUN-23FEB89


S11,2005.IZ -19-25MAR91

### GRIND VALVES

If necessary to resurface, grind valve face to a  $29.25^\circ \pm 0.25^\circ$  angle (A).

**IMPORTANT: When valve faces are ground, it is important not to nick valve head-to-stem radius with facing stone. A nick could cause the valve to break.**

Break all sharp edges after grinding.

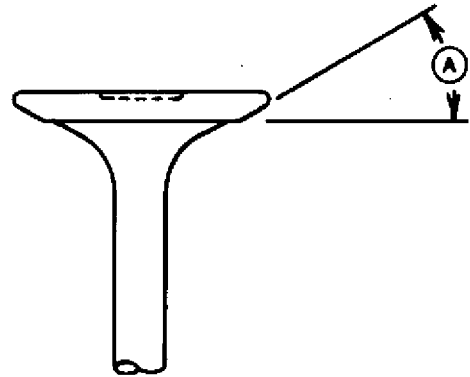

RG5247 -JUN-12AUG91

S11,2005.MG -19-23AUG91

05  
19

### INSPECT AND CLEAN CYLINDER HEAD

Inspect all cylinder head passages for restrictions. Heads with restricted or clogged passages can be cleaned by soaking them in a tank of hot caustic solution.

Scrape all old gasket material from head. Use a powered wire brush to clean sealing surfaces.

If cylinder head is not put in a chemical hot tank for cleaning, clean with solvent and a brush. Dry with compressed air and be sure to blow out all passages.

S11,2005.KW -19-07AUG91

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**