

7610, 7710, and 7810 Tractors

John Deere Waterloo Works
OMAR162175 Issue F9
(This manual replaces OMAR162175 B9)
European Edition
LITHO IN U.S.A.
ENGLISH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

SETTING FUEL DELIVERY BEYOND PUBLISHED factory specifications or otherwise overpowering will result in loss of warranty protection for this machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for the first 100 hours, schedule an after-sale inspection with your dealer to ensure best performance.

THIS TRACTOR IS DESIGNED SOLELY for use in customary agricultural or similar operations. ("Intended Use") Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS TRACTOR SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention). The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times. Any arbitrary modifications carried out on this tractor will relieve the manufacturer of all liability for any resulting damage or injury.



RW56528
-UN-04APR98

RX7010E, IFC -19-02APR98



John Deere Waterloo Works

Deere Customer:

Congratulations on the purchase of your John Deere tractor and, if you are a new customer, welcome to the John Deere family. We believe you will find your new tractor meets your expectations.

Of course, the tractor is just one aspect of the John Deere ownership experience. A great deal of your satisfaction also depends on the performance of the people who represent the care and service of John Deere products. From your dealer sales representative, to the service department, to the parts department, the people of John Deere will strive to make your ownership experience truly exceptional.

This operator's manual provides information for the safe operation of your tractor. Recommendations for service and maintenance are also included.

The Technical Publications Group, and the entire team at John Deere Waterloo Works, would like to confirm our commitment to your satisfaction. Our goal is to assure your John Deere tractor brings you many years of satisfactory service.

Technical Publications
John Deere Waterloo Works

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Introduction

Contents

	Page		Page
Safety	05-1	Engine	
Safety Signs	10-1	Starting	30-2
Controls and Instruments		Restarting	30-3
Command Console	15-1	Stopping	30-4
Function Indicators	15-1	Auxiliary Heaters	30-4
Single Lever Control	15-2	Cold Weather Starting	30-5
Control Console	15-3	Starting Fluid	30-7
Instrument Panels		Booster Battery	30-7
Analog	15-4	Operating the Tractor	
Digital	15-6	Avoid Pesticides	35-1
Display Functions	15-8	Transmission	35-2
Calibrating Tire Size-with Radar	15-9	Creeper	35-5
Calibrating Radar	15-10	Headland Management System	35-6
Performance Monitor	15-11	Reverser	35-7
Lights		Mechanical Front-Wheel Drive	35-8
Operating Lights		Triple Link Suspension	35-9
Road	20-1	Differential Lock	35-10
Field	20-2	Brakes	35-10
Hazard	20-3	Trailer Brakes	
Turn Signals, Horn, Head Lights	20-4	Hydraulic	35-11
Seven-terminal Outlet	20-5	Air	35-12
Operator Station		Chock Blocks	35-13
Seat	25-1	Hitch	
Steering Wheel	25-2	Components and Controls	40-1
Park Brake	25-2	Operation	40-1
Heater/Air Conditioner	25-3	Dampening	40-5
Windshield Wiper	25-4	External Raise/Lower Switches	40-5
Clock	25-4	Attaching and Detaching Implements	40-6
Accessory Electrical Outlet	25-4	Sway Blocks	40-10
Power Strip	25-5	Stabilizing System	40-10
Passenger Seat	25-6	Wagon Hitch	40-11
Mobile Radio	25-7	Pickup Hitch	40-11
Steps	25-8	Remote Hydraulic Cylinders	
Operating the Engine		Cylinder Hoses	45-1
Emissions	30-1	Adjusting Metering Valve	45-2
Pre-starting Checks	30-1	Hydraulic Valve Features	45-3
		SCV Operation	45-4

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMAR162175 F9-19-08JUN99

COPYRIGHT© 1999
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION® Manual

Contents

	Page		Page
Detent Relief Setting	45-7	Transmission-Hydraulic Oil	70-5
Relief Valve Manual Lowering	45-7	MFWD Axle Housing Oil	70-6
Low-Pressure Return Circuit	45-8	MFWD Wheel Hub Oil	70-6
Hydraulic Motor Return	45-9	Grease	70-7
Power-Beyond Valve	45-10		
Remote Cylinders	45-12	Break-in Period	
Drawbar and PTO		First 100 Hours	75-1
Drawbar	50-1	After First 100 Hours	75-2
PTO	50-3	Wheel Bolts	75-3
Optimum Performance/Ballast		Service	
Guidelines	55-1	Service Chart Reference	80-1
Power Hop	55-3	Side Shields	80-1
Measuring Wheel Slip	55-5	Hood	80-2
Determining Ballast	55-6	Charging Batteries	80-3
Liquid Weight	55-8	High-Pressure Washers	80-3
Rear Cast Iron Weights	55-10	Compressed Air	80-3
Loader Ballast	55-11	Service Interval Charts	80-4
Quik-Tatch Weights	55-11		
Wheels, Tires, and Treads		Service/Daily or Every 10 Hours	
Guidelines	60-1	Engine Oil	85-1
Inflation Pressures		Coolant	85-1
Guidelines	60-2	Water Separator	85-2
Front Tires	60-3	Transmission-Hydraulic Oil	85-2
Rear Tires	60-5	Rear Axle Bearings	85-3
Tire Combinations	60-6	MFWD Axle	85-3
Front Wheels		Triple Link Suspension	85-4
Tread Setting	60-7	Front PTO Shaft	85-5
Toe-In	60-9	Trailer Air Brake Accumulator	85-5
Steering Stop Positions	60-10	Hitch and Lift Links	85-5
Fenders	60-13	Tires	85-6
Tightening Wheel Bolts	60-16		
Rear Wheels		Service/250 Hours	
Tread Setting	60-17	Engine Oil and Filter	90-1
Cast	60-18	Fuel Tank Sump	90-1
Steel	60-19	Batteries	90-2
Transport		Neutral Start System	90-4
Driving	65-1	Cab Air Filters	90-5
Towing Loads	65-2	Wheel Bolts	90-6
Towing Tractor	65-4	Pickup Hitch	90-6
Transporting	65-5	Wagon Hitch	90-6
Mired Machine	65-6	MFWD Axle	90-7
		Triple Link Suspension	90-7
		MFWD Hub and Axle Housing Oil	90-8
		Triple Link Suspension Hub and Axle Housing Oil	90-9
Fuel, Lubricants, and Coolant		Front PTO	90-9
Fuel	70-1	Manual Brakes	90-10
Engine Oil	70-3		
Engine Coolant	70-4		

Continued on next page

Contents

	Page		Page
Service/750 Hours		Alternator Replacement 120-17	
Transmission Filter	95-1	Troubleshooting	
Hydraulic Filter	95-1	Engine	125-1
Rear Axle Bearings	95-2	Transmission	125-4
Air Intake	95-2	Hydraulic System	125-5
Engine Idle Speeds	95-2	Brakes	125-5
Coolant Conditioner	95-3	Hitch	125-6
Fuel Tank Vent Filter	95-3	Selective Control Valves	125-8
Service/1500 Hours		Electrical System	125-9
Transmission-Hydraulic Oil	100-1	Operator Enclosure	125-11
Hydraulic Oil Suction Screen	100-1	Tractor Operation	125-12
MFWD Hub and Axle Housing Oil	100-2	Storage	130-1
Triple Link Suspension Hub and Axle Housing Oil	100-3	Specifications	
Front PTO Housing Oil	100-3	Specifications	135-1
Draft Link Support Shaft Bushing	100-4	Ground Speeds	135-4
Belt Tensioner	100-4	Certificate of Conformity	135-9
Service/2000 Hours		Identification Numbers	140-1
Engine Valve Clearance	105-1	Lubrication and Maintenance Charts	145-1
Service/Annual		Glossary	150-1
Air Cleaner	110-1	Index	
Cab Air Filters	110-1		
PTO Shaft	110-2		
Service/Two Years			
Flush Cooling System-Check Thermostats . . .	115-1		
Service/As Required			
Transmission Filter	120-1		
Hydraulic Filter	120-1		
Fuel Prefilter	120-2		
Fuel Filter-7610	120-2		
Bleed Fuel System	120-3		
Water Separator	120-4		
Fuel Filter-7710 and 7810	120-4		
Bleed Fuel System	120-5		
Bleed Brakes	120-6		
Engine Compartment	120-6		
Grille Screens, Radiator, and Condenser . . .	120-7		
Pre-Cleaner	120-7		
Air Cleaner	120-7		
Fan Belt	120-9		
Front Lights	120-10		
Head Lights	120-11		
Light Bulb Replacement	120-12		
Fuses and Relays	120-14		
Air Conditioner	120-16		

 
Contents

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

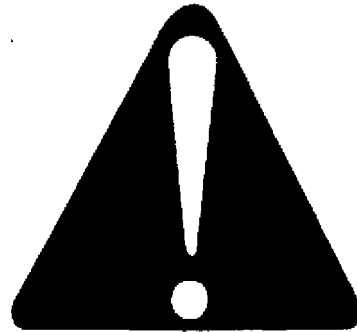

DX,ALERT -19-29SEP98

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

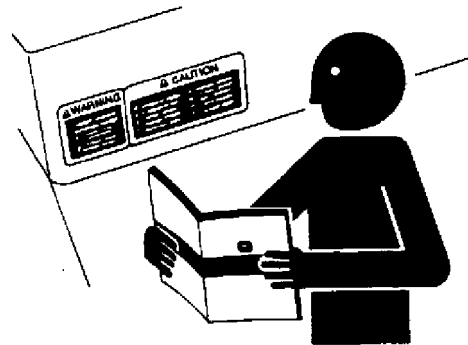

DX,READ -19-03MAR93


TS201 -UN-23AUG88



OPERATING THE TRACTOR SAFELY



TS213 -JUN-23AUG88

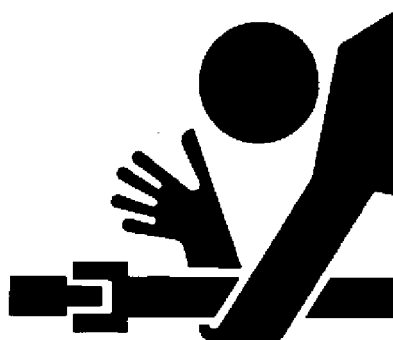

TS276 -JUN-23AUG88

Careless use of the tractor can result in unnecessary accidents. Be alert to hazards of tractor operation. Understand causes of accidents and take every precaution to avoid them. Most common accidents are caused from:

- Tractor roll-over
- Improper starting procedures
- Crushing and pinching during hitching
- Collisions with other motor vehicles
- Entanglement in PTO shafts
- Falling from tractor

Avoid accidents by taking the following precautions:

- Put transmission in PARK before dismounting. Leaving transmission in gear with engine stopped will NOT prevent the tractor from moving.
- Be sure everyone is clear of tractor and attached equipment before starting engine.
- Never try to get on or off a moving tractor.
- When tractor is left unattended, place in PARK, lower implements to the ground, stop the engine, and remove the key.
- Never go near an operating PTO or an operating implement.
- Always fasten your seat belt in a ROPS equipped tractor.

RX,HAZARD,S -19-20DEC95

 


PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

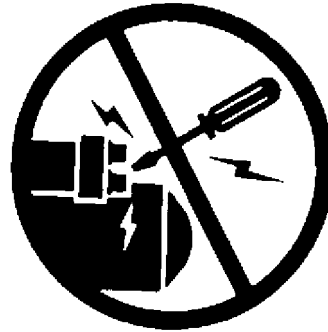

DX,BYPAS1 -19-29SEP98


TS177 -UN-11JAN89

STOPPING AND PARKING TRACTOR

Tractor roll-over, collisions, runaway tractors, and people being crushed under machines and implements can happen when operators ignore safety.

To avoid these accidents, take some precautions:

 - Signal before stopping, turning, or slowing down on public roads
- Pull over to side of road before stopping
- Slow down before braking
- Pump brakes when stopping on slippery surfaces
- Be careful when towing and stopping heavy loads
- Shift to park or apply parking brake
- Lower all equipment when leaving tractor
- Remove key

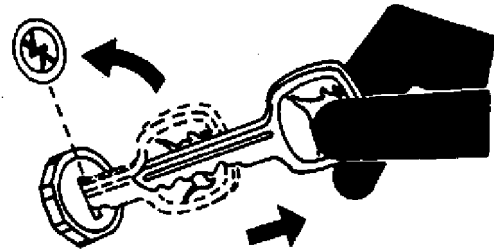

RX,STOP,PARK -19-21SEP92

TS230 -UN-24MAY89

USE SEAT BELT

Use a seat belt to minimize chance of injury from an accident such as a roll-over.



RX,ROPS1 -19-22SEP92


RW16064 -UN-05JAN89



KEEP ROPS INSTALLED PROPERLY

Make certain all parts are reinstalled correctly if the roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to proper torque.

 The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged ROPS should be replaced, not reused.

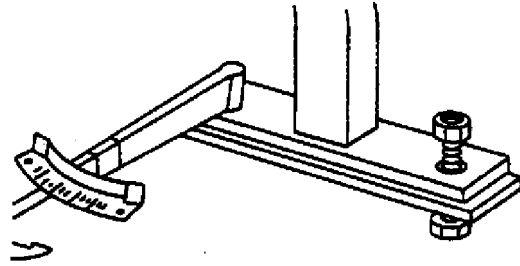

DX,ROPS3 -19-03MAR93

 
-UN-23AUG88
TS212

USE CAUTION ON HILLSIDES

Avoid holes, ditches, and obstructions which may cause tractor roll-over, especially on hillsides. Avoid sharp turns on hills.

Never drive near the edge of a gully or steep embankment.

Driving out of a ditch, mired condition, or up a steep slope could cause tractor to tip over rearward. Back out of these situations if possible.

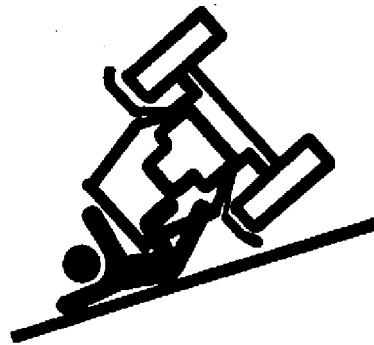


RX,HILL,SIDE1 -19-22SEP92

-UN-07DEC88
RW13093

KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

 Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

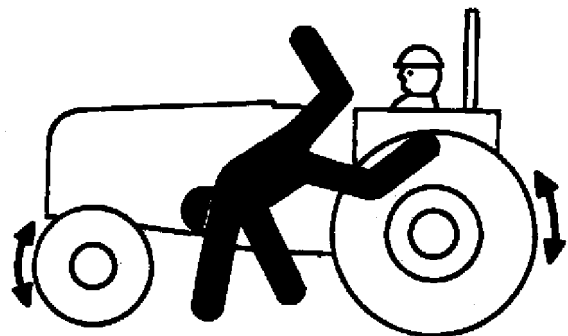


DX,RIDER -19-03MAR93

-UN-23AUG88
TS290



AVOID EYE CONTACT WITH RADAR

 Radar ground speed sensor emits a very low intensity microwave signal. It will not cause any ill effects during normal use. Although intensity is low, DO NOT look directly into face of sensor while in operation, to avoid any possible eye damage.

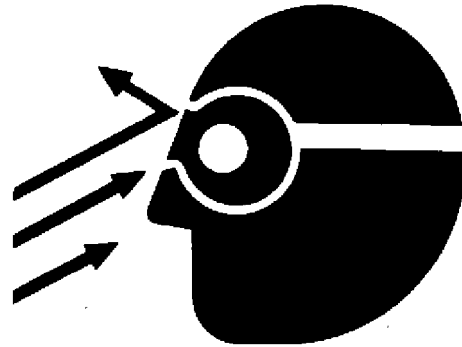


RX,SAFTY,RADAR1-19-21SEP92

TS266
-UN-23AUG88

WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

 Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

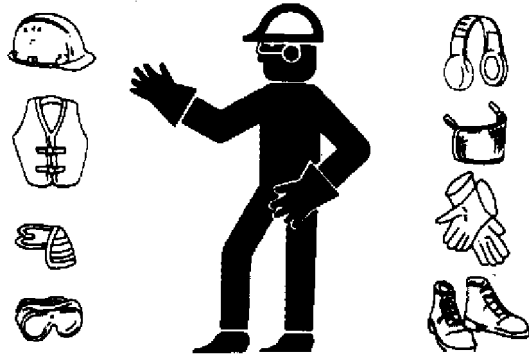

DX,WEAR2 -19-03MAR93

TS206
-UN-23AUG88

HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.



DX,FIRE1 -19-03MAR93


TS202
-UN-23AUG88

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

 Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

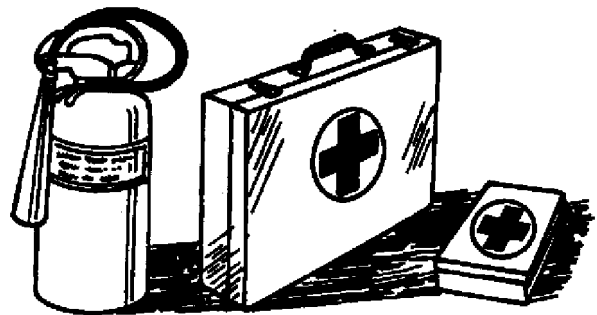

DX,FIRE2 -19-03MAR93

TS291
-UN-23AUG88



HANDLE STARTING FLUID SAFELY

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.



DX,FIRE3 -19-16APR92


TS1356 -UN-18MAR92

AVOID CONTACT WITH PESTICIDES

This enclosed cab does not protect against inhaling harmful pesticides. If pesticide use instructions require respiratory protection, wear an appropriate respirator inside the cab.

Before leaving the cab, wear personal protective equipment as required by the pesticide use instructions. When re-entering the cab, remove protective equipment and store either outside the cab in a closed box or some other type of sealable container or inside the cab in a pesticide resistant container, such as a plastic bag.

 Clean your shoes or boots to remove soil or other contaminated particles prior to entering the cab.

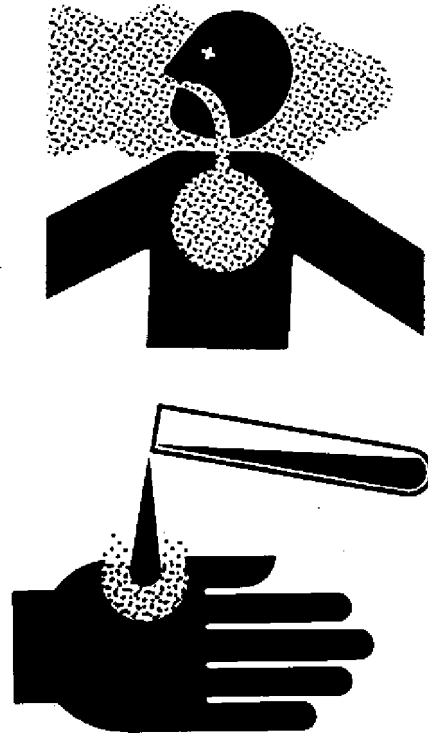

DX,CABS -19-03MAR93

TS220 -UN-23AUG88

TS272

-UN-23AUG88

TS272



STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.




DX,PTO -19-12SEP95

TS1644 -UN-22AUG95

USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use hand signals or turn signal lights.

 Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that has been damaged or lost.

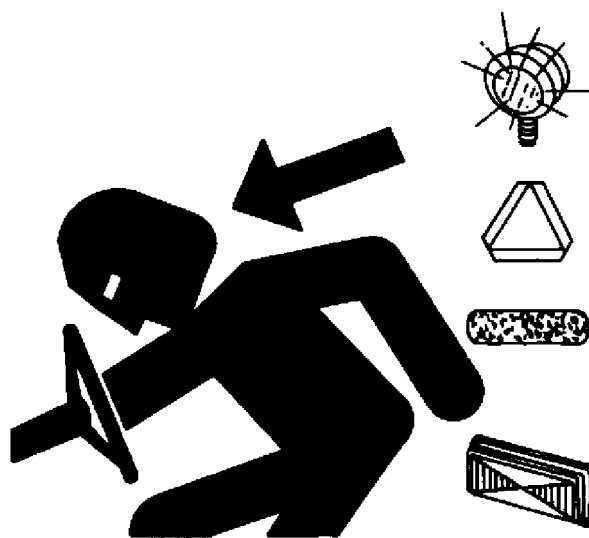

DX,FLASH -19-04FEB99


TS951 -UN-12APR90

USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

 See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

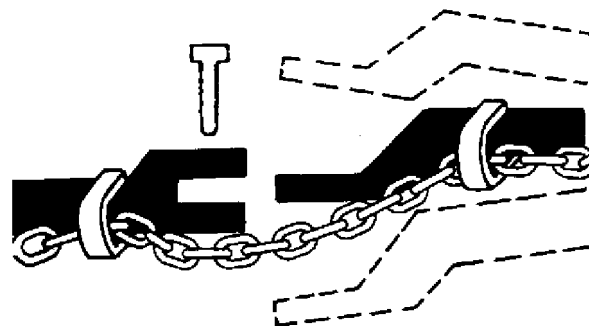

DX,CHAIN -19-03MAR93


TS217 -UN-23AUG88



TRANSPORT TRACTOR SAFELY

Transport a disabled tractor on a flatbed carrier. Securely chain tractor to carrier.

 If towing a tractor, never tow faster than 16 km/h (10 mph) with front or rear wheels raised or faster than 8 km/h (5 mph) with all wheels on the ground. Have an operator steer and brake tractor.

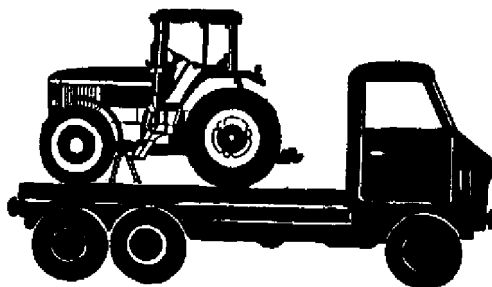

RW22056 -UN-04DEC92

RX,HAUL,IT1 -19-15FEB99

 
TOW LOADS SAFELY

Stopping distance increases with speed and weight of towed loads, and on slopes. Towed loads with or without brakes that are too heavy for the tractor or are towed too fast can cause loss of control. Consider the total weight of the equipment and its load.

Observe these recommended maximum road speeds, or local speed limits which may be lower:

- If towed equipment does not have brakes, do not travel more than 32 km/h (20 mph) and do not tow loads more than 1.5 times the tractor weight.
- If towed equipment has brakes, do not travel more than 40 km/h (25 mph) and do not tow loads more than 4.5 times the tractor weight.

Ensure the load does not exceed the recommended weight ratio. Add ballast to recommended maximum for tractor, lighten the load, or get a heavier towing unit. The tractor must be heavy and powerful enough with adequate braking power for the towed load. Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

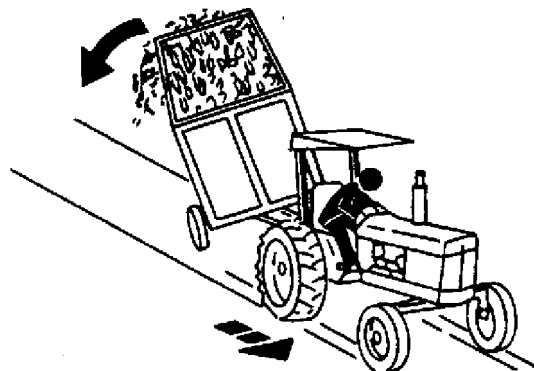

TSS216 -UN-23AUG88

DX,TOW -19-02OCT95



 
FREEING A MIRED MACHINE

Attempting to free a mired machine can involve safety hazards such as the mired tractor tipping rearward, the towing tractor overturning, and the tow chain or cable failing and recoiling from its stretched condition.

Back your tractor out if it gets mired down in mud. Unhitch any towed implements. Dig mud from behind the rear wheels. Place boards behind the wheels to provide a solid base and try to back out slowly. If necessary, dig mud from the front of all wheels and drive slowly ahead.

If necessary to tow with another unit, use a long chain or cable. Inspect the chain or cable for flaws. Make sure all parts of towing devices are of adequate size and strong enough to handle the load.

Always hitch to the drawbar of the towing unit. Before moving, clear the area of people. Apply power smoothly to take up the slack: a sudden pull could snap any towing device causing it to whip or recoil dangerously.

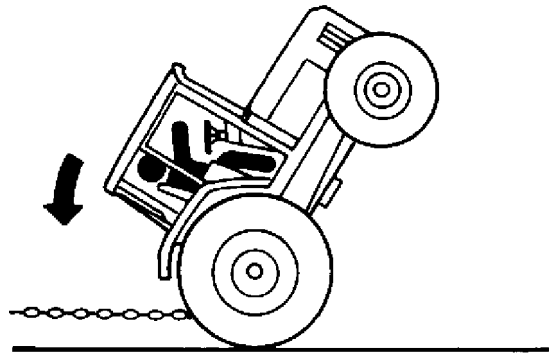

TS1645 -UN-15SEP95

TS263 -UN-23AUG88

TS263

DX,MIRED -19-02OCT95



PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

On self-propelled equipment, disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.

On towed implements, disconnect wiring harnesses from tractor before servicing electrical system components or welding on machine.



DX,SERV -19-04FEB99

-UN-23AUG88

TSS218



REMOVE PAINT BEFORE WELDING OR HEATING

 
Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

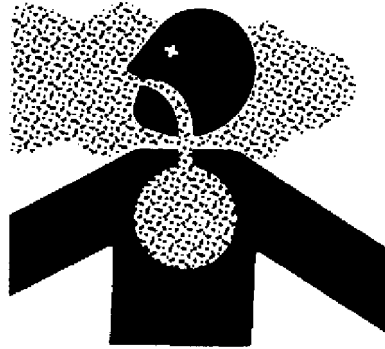

DX,PAINT -19-03MAR93

TS220 -UN-23AUG68

AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



DX,TORCH -19-03MAR93

TS953 -UN-15MAY90



 
AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

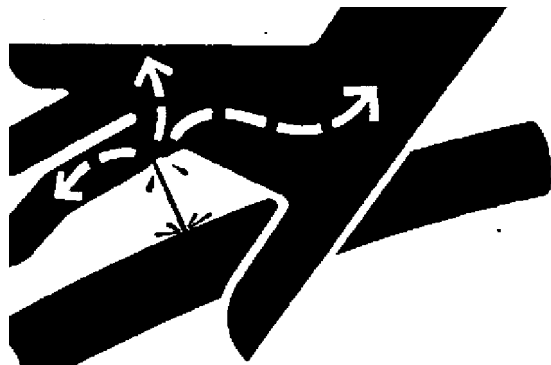

X9811 -UN-23AUG88

DX,FLUID -19-03MAR93

PROTECT AGAINST HIGH PRESSURE SPRAY

Spray from high pressure nozzles can penetrate the skin and cause serious injury. Keep spray from contacting hands or body.

If an accident occurs, see a doctor immediately. Any high pressure spray injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.



TS1343 -UN-18MAR92

DX,SPRAY -19-16APR92



SERVICE COOLING SYSTEM SAFELY

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.




DX,RCAP -19-04JUN90

TS281 -UN-23AUG88

STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

 Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.

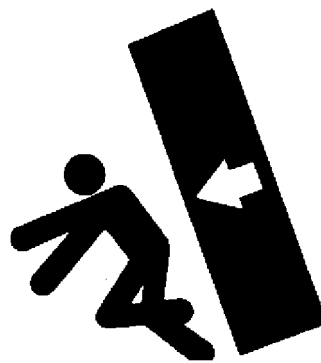

DX,STORE -19-03MAR93

TS219 -UN-23AUG88

DISPOSE OF WASTE PROPERLY

 
Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

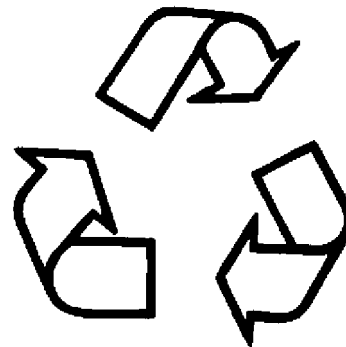

DX,DRAIN -19-03MAR93

TS1133 -UN-26NOV90

Safety Signs

PICTORIAL SAFETY SIGNS

IMPORTANT: Install new safety signs if old signs are damaged, lost or can not be read. Install a new safety sign when replacing any new part that previously had a safety sign.

At several important places of this machine safety signs are affixed intended to signify potential danger. The hazard is identified by a pictorial in a warning triangle. An adjacent pictorial provides information how to avoid personal injury. These safety signs, their placement on the machine and a brief explanatory text are shown below.

Keep safety signs clean and in good condition. Replacement signs are available. See your John Deere Dealer.




RX8000E,10,1 -19-25NOV95

TS231 -19-07OCT88

OPERATOR'S MANUAL

 This operator's manual contains important information necessary for safe machine operation. Carefully observe all safety rules to avoid accidents.

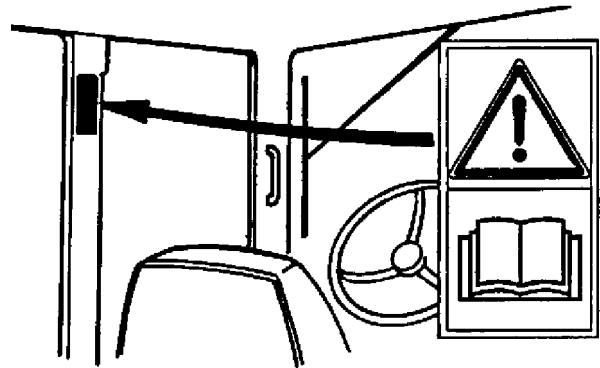


RX,OM -19-12APR95

RW55681 -UN-01MAY95

SPEED LIMIT—UNITED KINGDOM ONLY

 Follow recommended speed limit. Do Not operate tractor faster than 20 mph.

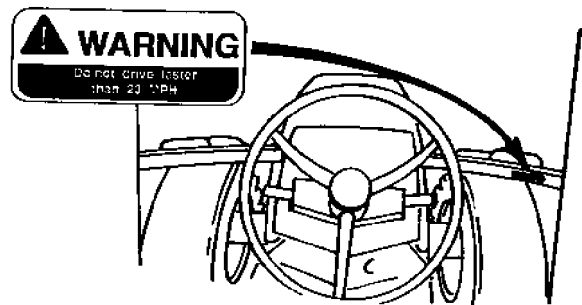


RX,SPEED -19-12APR95

RW55176 -19-28JAN94

PASSENGER SEAT—GERMANY ONLY

 Keep passengers off machine without suitable seating accommodation.

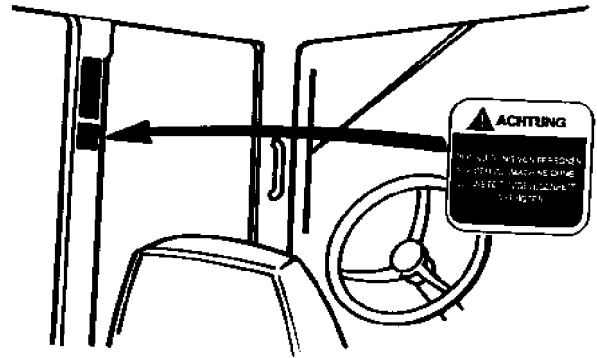


RX,PSEAT -19-12APR95

RW55173 -29-28JAN94

PICKUP HITCH

 Pickup hitch must be fully raised and locked in both horizontal and vertical positions before driving away.

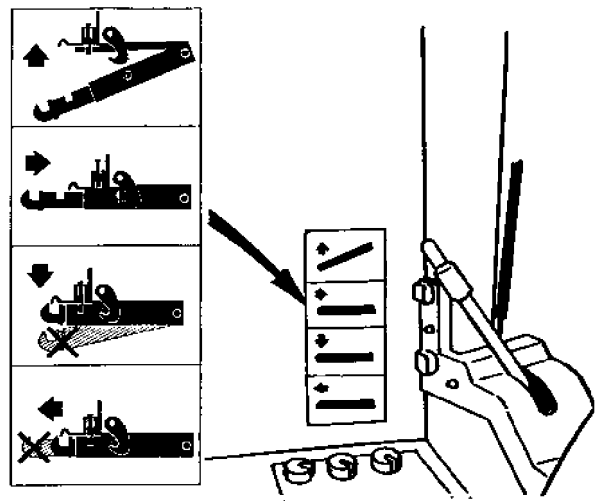


RX,PICKUP -19-24JAN94

RW55177 -JUN-28JAN94

EXTERNAL HITCH CONTROL SWITCH

 Stay clear of three-point hitch lift range when operating hitch using external control switch.

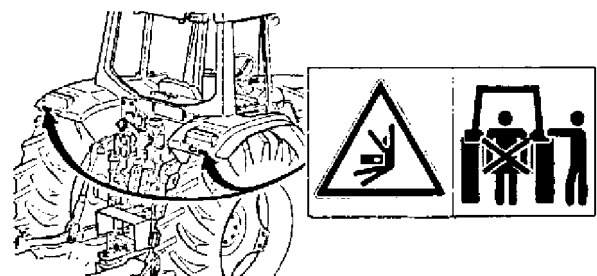


RX,REMOTE -19-29MAR93

RW22130 -JUN-24MAR93

RADAR SENSOR OPTIONAL

 To avoid possible eye damage, do not look directly into face of sensor.

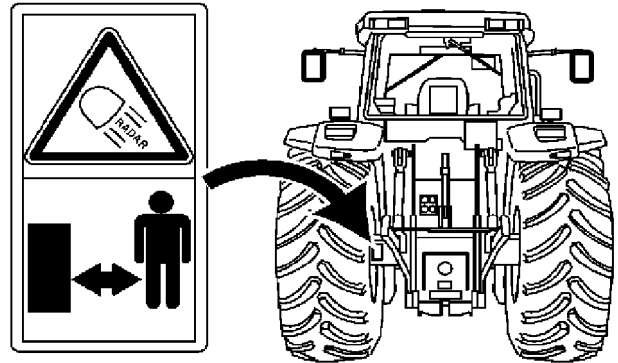


RX,ERADAR -19-20FEB99

RW55927 -JUN-19JUL96

TRAILER AIR BRAKE ACCUMULATOR OPTIONAL

 Trailer air brake accumulator is under pressure. Service should only be performed when pressure in the accumulator does not exist.

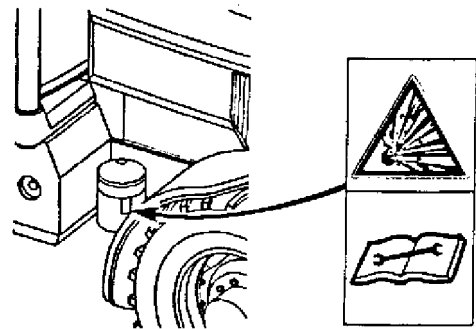


RX,BRAKE -19-20FEB99

RW22131 -JUN-24MAR93

TRIPLE LINK SUSPENSION (SUSPENDED FRONT AXLE) ACCUMULATORS OPTIONAL

 Triple Link Suspension accumulators are under pressure. Service should only be performed when pressure in the accumulator does not exist.

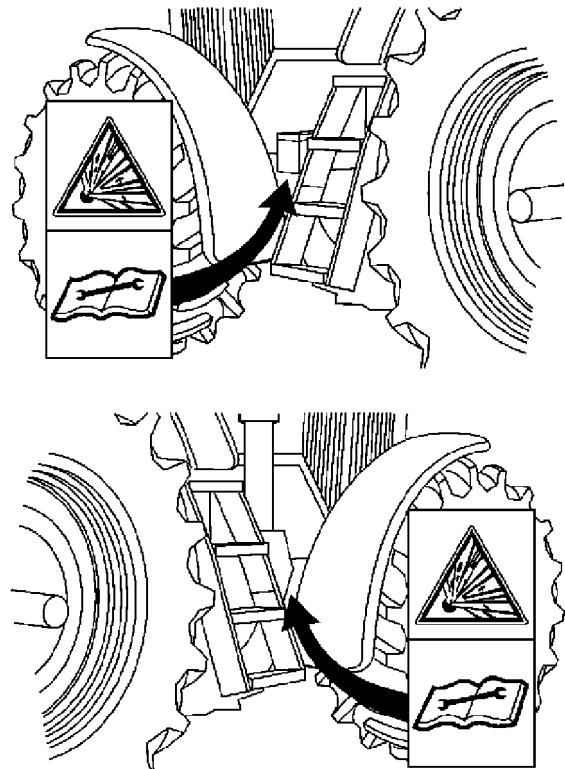

RX,SUSPEND -19-20FEB99

RW56530 -JUN-09APR98

RW56531 -JUN-09APR98



Suggest:

If the above button click is invalid.

Please download this document

first, and then click the above link

to download the complete manual.

Thank you so much for reading

Controls and Instruments

FRONT CONSOLE

- A—Turn Signal Lever, Dimmer Switch, Horn, Flash to Pass
- B—Steering Wheel Telescope Release
- C—Wiper Switch
- D—Field Light Switch
- E—Brake Pedals
- F—Foot Throttle
- G—Differential Lock Switch
- H—Clutch Pedal
- I—Key Switch
- J—Steering Wheel Tilt Release
- K—Starting Aid Switch (7710 and 7810)
- L—Hazard Light Switch
- M—Road Light Switch




RX7010E,15,1 -19-10JUL96

RW55876 -UN-01JUL96

CHECKING INSTRUMENT PANEL

IMPORTANT: See your John Deere Dealer if any system indicates malfunction.

 Check indicator lights and warning signal each time the engine is started. All indicators, except the turn signal and high-beam head light indicators, will light and the warning signal will sound momentarily when the key switch is turned to the ON position.

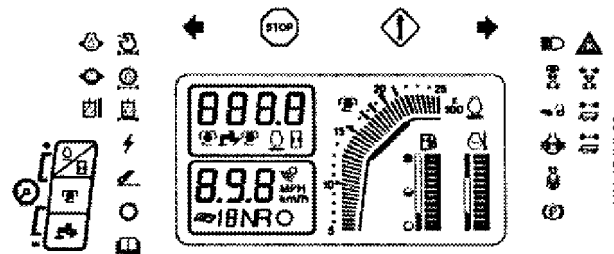


RX7010E,15,2 -19-10JUL96

RW55994 -UN-15JUL96

DIFFERENTIAL LOCK, REAR AND FRONT PTO, MFWD INDICATORS

Front PTO (A), MFWD (B), Differential Lock (C), and Rear PTO (D) indicators light when the specific function is activated.

 NOTE: PTO indicator and SERVICE ALERT will flash if operator leaves the seat with PTO engaged.

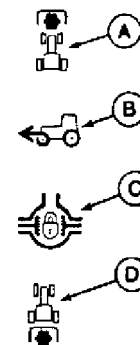

RX7010,15,4 -19-26JUN96

RW22006 -UN-21AUG92

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>