

**GT242, GT262, and GT275  
Lawn and Garden  
Tractors  
(Serial No. 010001 – )**

**OPERATOR'S  
MANUAL**

**John Deere  
Lawn & Grounds Care Division  
OMM123238 I5**

North American Version  
Litho in U.S.A  
English



## TABLE OF CONTENTS

---

---

	Page
<b>Safety Signs</b>	
Safety-Alert Symbol.....	1
Machine Safety Labels .....	1
Certification Label.....	5
<b>Controls</b>	
Dash Controls (All Models).....	6
Foot/Platform Controls (Gear - GT242 And GT262).....	7
Foot/Platform Controls (Hydrostatic - GT275) .....	8
Indicator Lights .....	9
<b>Operating</b>	
Operate Safely.....	10
Park Safely .....	10
Rotating Blades Are Dangerous - Protect Children And Prevent Accidents .....	11
Avoid Tipping.....	12
Keep Riders Off .....	12
Wear Appropriate Clothing .....	13
Transport Safely .....	13
Checking Engine Oil Level.....	14
Filling Fuel Tank .....	14
Starting Engine (GT242 And GT262) .....	14
Starting Engine (GT275).....	16
Cold Weather Starting (All Models) .....	18
Checking Indicator Lamps .....	18
Warming And Idling Engine .....	19
Stopping Engine .....	19
Using Lift Lever.....	20
Adjusting Seat.....	20
Using Park Brake.....	21
Using Tractor (Gear Transmission) (GT242 And GT262).....	22
Stopping Tractor (Gear Transmission) .....	24
Using And Stopping Tractor (Hydrostatic Transmission) (GT275).....	25

---

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

## TABLE OF CONTENTS

---

---

	Page
<b>Operating (Continued)</b>	
Pushing Tractor (Gear Transmission) (GT242 And GT262) ..	25
Daily Operating Checklist.....	26
Testing Safety Systems .....	27
Avoid Damage To Plastic And Painted Surfaces .....	31
Using Front Weights.....	31
Rear Weights .....	32
Tire Chains.....	32
Preparing Tractor For Installing Chains On Tires.....	32
Installing The Chains.....	33
<b>Operating The Mower</b>	
Check Ground Conditions .....	35
Avoid Injury From Contacting Blades.....	35
Stay Clear Of Rotating Drivelines .....	35
Using Lift Lever .....	36
Adjusting Cutting Height.....	37
Adjusting Mower Wheels (38-Inch And 44-Inch Mower) .....	38
Adjusting Mower Wheels (48-Inch) .....	39
Adjusting Mower Level Side-To-Side .....	40
Adjusting Mower Level Front-To-Rear .....	42
Engaging Mower .....	43
Disengaging Mower .....	43
Using Correct Blades (38-Inch Mower) .....	44
Mulching Panel.....	45
<b>Lawn Care</b>	
Mowing Tips .....	46
Trimming Tips .....	47
Bagging Tips .....	48
Bagging And Composting .....	48
Mulching Tips.....	49
Dismounting To Inspect Or Unplug Mower Or Optional Grass Bagger.....	50
Operating Optional Bagging Attachment.....	51

---

## TABLE OF CONTENTS

---

---

	Page
<b>Lawn Care (Continued)</b>	
Checking For Plugging While Bagging .....	52
Better Airflow For Optional Grass Bagger .....	52
Filling Grass Bags.....	53
Removing And Emptying Bags.....	53
Bagging With Standard Bolt-On Front Lip Sections (38 Inch Mower) .....	55
Mulch/Discharge With 44-Inch Rear Discharge Mower .....	57
 <b>Replacement Parts</b>	
<b>WE RECOMMEND JOHN DEERE</b> quality parts and lubricants, available at your John Deere dealer.....	
Parts For Lawn Tractor .....	58
Belts For Mowers.....	59
Blades For Mower.....	59
 <b>Service Intervals</b> .....	 60
 <b>Service Machine Safely</b>	
Practice Safe Maintenance.....	61
Wear Appropriate Clothing .....	62
Stay Clear Of Rotating Drivelines .....	62
Handling Waste Product And Chemicals.....	62
Avoid High Pressure Fluids .....	63
 <b>Service - Transmission</b>	
Anti-Chatter Transmission Oil.....	64
Checking Transaxle Oil Level (Gear Transmission) (GT242 And GT262).....	64
Checking Transaxle Oil Level (Hydrostatic Transmission) (GT275) .....	65
Changing Transmission Oil And Filter (GT275).....	66

## TABLE OF CONTENTS

	Page
<b>Service - Engine</b>	
Avoid Fumes .....	69
Checking Engine Oil Level .....	70
Changing Engine Oil .....	71
Cleaning Air Intake Screen .....	72
Checking And Cleaning Precleaner And Air Cleaner Element.....	73
Replacing Fuel Filter .....	74
Checking Spark Plug.....	75
Adjusting Carburetor .....	76
<b>Service - Steering And Brakes</b>	
Grease .....	77
Lubricating Wheel Spindles.....	78
<b>Service - Mower</b>	
Grease .....	79
Avoid Injury From Contacting Blades.....	80
Lubricating Mower Blade Spindles:	
• 38-Inch .....	80
• 48-Inch .....	81
• 44-Inch .....	81
Lubricating Mower Rear Wheels (48-Inch).....	82
Cleaning Or Replacing Mower Drive (Primary) Belt.....	82
Cleaning Or Replacing Mower Deck (Secondary Belt):	
• 38-Inch Mower .....	84
• 44-Inch Mower .....	85
• 48-Inch Mower .....	87
Checking Mower Blades .....	88
Removing And Installing Mower Blades:	
• 38 And 48-Inch Mower.....	89
• 44-Inch Mower .....	90
Sharpening Blades.....	91
Balancing Blades .....	92

## TABLE OF CONTENTS

---

---

	Page
<b>Service - Electrical</b>	
Cleaning Or Replacing Battery .....	93
Checking Battery Electrolyte Level .....	94
Charging The Battery Safely.....	96
Charging Rates.....	98
Using Booster Battery.....	99
Replacing Headlight Bulb .....	100
Cleaning Headlight Lens.....	100
<b>Service - Miscellaneous</b>	
Checking Tire Pressure .....	101
Refueling Machine.....	103
Filling Fuel Tank .....	104
Adjusting Hood Latch.....	105
Check Wheel Bolts .....	105
<b>Removing And Storing Mower</b>	
Removing Mower.....	106
Storing Mower.....	110
<b>Installing Mower.....</b>	<b>111</b>
<b>Troubleshooting</b>	
Using Troubleshooting Chart.....	114
Engine.....	114
Tractor .....	116
Electrical .....	117
Mower.....	117
<b>Storing Vehicle</b>	
Storing Safely .....	120
Storing The Tractor.....	120
Removing Tractor From Storage .....	122

---

## TABLE OF CONTENTS

---

---

	Page
<b>Assembly</b>	
Activate Battery .....	123
Break-In Electric PTO Clutch .....	125
Install Steering Wheel .....	125
Position Mower Wheels (38 And 44-Inch).....	126
Position Mower Wheels (48-Inch) .....	127
Plastic Discharge Chute (48-Inch Mower).....	128
Install Rear Deflector (44-Inch Mower) .....	128
Checking Tire Pressure.....	129
<b>Specifications</b>	
Engine .....	131
Fuel System .....	132
Drive Train.....	132
Electrical System.....	133
Tires .....	133
Capacities .....	134
Steering and Brakes.....	134
Clutch .....	134
PTO Clutch.....	134
Travel Speeds .....	135
Mower .....	135
Dimensions .....	136
General Specifications .....	136
Recommended Lubricants .....	137
<b>Warranty Information</b>	
Product Warranty .....	138
Tire Warranty .....	138
Limited Engine Warranty.....	138
Limited Battery Warranty.....	143

---

## TABLE OF CONTENTS

---

---

	Page
<b>John Deere Service Literature Available</b>	
Order Form .....	145

All information, illustrations and specifications in this manual are based on the latest information at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT© 1995  
John Deere Horicon Works  
All rights reserved  
Previous Editions  
COPYRIGHT© 1994, 1993, and 1992

# SAFETY SIGNS

---

## Safety-Alert Symbol

Read and recognize safety information. Be alert to the potential for personal injury when you see this safety-alert symbol.


On your machine safety labels, the words **DANGER**, **WARNING**, and **CAUTION** are used with this safety-alert symbol. **DANGER** identifies the most serious hazards. In this manual, the word **CAUTION** and this symbol call attention to safety messages.



## Machine Safety Labels



M38614

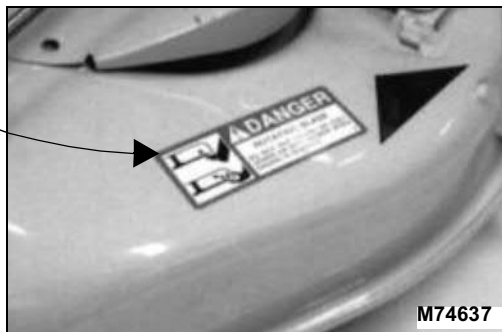

M74637



**Suggest:**

**If the above button click is invalid.**

**Please download this document**


**first, and then click the above link**

**to download the complete manual.**



**Thank you so much for reading**

# SAFETY SIGNS

## Machine Safety Labels Continued:

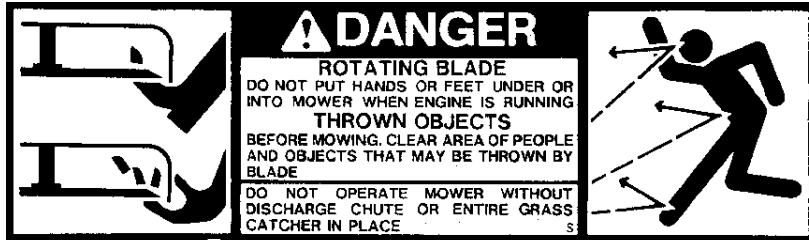

M38613

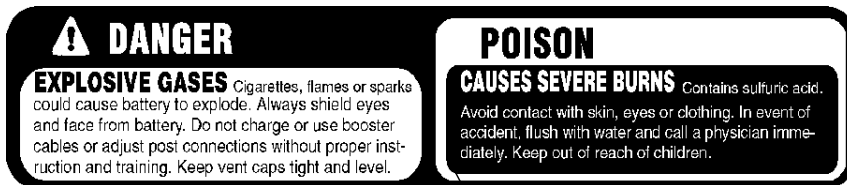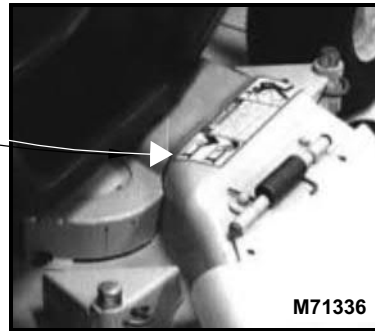

M74408



**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**