 


**JD743-A  
Tree Harvester  
JD743-A  
Feller-Buncher**

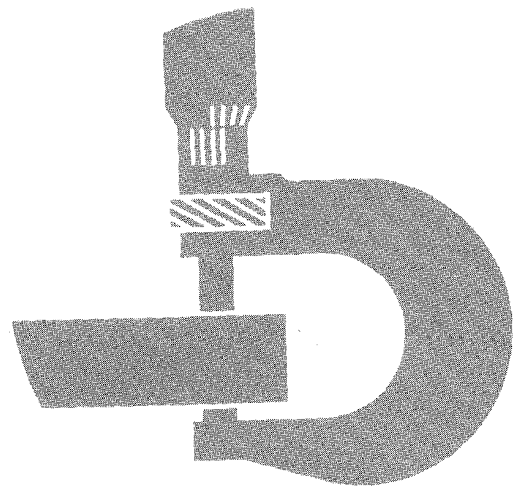

**TECHNICAL MANUAL**

**TM-1226**  
LITHO IN U.S.A.

## SECTION AND GROUP CONTENTS OF THIS MANUAL

### SECTION I - GENERAL INFORMATION

- Group I - Contents, Index and Page List
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Predelivery, Delivery and After-Sales Services
- Group V - Lubrication

### SECTION 1 - WHEELS

- Group 0110 - Powered Wheels, Tires and Fastenings
- Group 0199 - Specifications and Special Tools

### SECTION 2 - AXLES AND SUSPENSION SYSTEMS

- Group 0201 - Drive Axle Housing and Support
- Group 0210 - Differential or Bevel Drive
- Group 0225 - Input Drive Shaft and U-Joints
- Group 0243 - Axle Lock Mounting
- Group 0250 - Axle Shaft, Bearings, Reduction Gears
- Group 0260 - Hydraulic System
- Group 0299 - Specifications and Special Tools

### SECTION 3 - TRANSMISSION

- Group 0315 - Controls
- Group 0325 - Input Drive Shafts and U-Joints
- Group 0341 - Housings and Covers
- Group 0342 - Mounting Parts
- Group 0350 - Gears, Shafts, Bearings and Power Shift Clutch
- Group 0360 - Hydraulic System
- Group 0370 - Clutch Disconnect and Controls
- Group 0399 - Specifications and Special Tools

### SECTION 4 - ENGINE

- Group 0400 - Engine Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshaft and Valve Actuating Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block
- Group 0407 - Oiling System
- Group 0408 - Ventilating System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0414 - Intake Manifold
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housings and Water Piping
- Group 0419 - Oil Cooler
- Group 0420 - Fuel Filter
- Group 0422 - Starting Motor and Fastenings
- Group 0429 - Fan Drive
- Group 0433 - Flywheel, Housing and Fastenings
- Group 0499 - Specifications and Special Tools

### SECTION 5 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Cooling Systems
- Group 0515 - Engine Speed Controls
- Group 0520 - Intake Systems
- Group 0503 - External Exhaust Systems
- Group 0540 - Mounting Frame
- Group 0560 - External Fuel Supply Systems
- Group 0599 - Specifications and Special Tools

*The specifications and design information contained in this manual were correct at the time it was printed. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice. Wherever applicable, specifications and design information are in accordance with SAE and ICED standards.*

Copyright 1980  
DEERE & COMPANY  
Moline, Illinois  
All Rights Reserved

OO-A

## SECTION AND GROUP CONTENTS OF THIS MANUAL—Continued

### SECTION 9 - STEERING SYSTEM

- Group 0930 - Emergency Steering
- Group 0960 - Hydraulic System
- Group 0999 - Specifications and Special Tools

### SECTION 10 - SERVICE BRAKES

- Group 1011 - Active Elements
- Group 1015 - Controls Linkage
- Group 1060 - Hydraulic System
- Group 1099 - Specifications and Special Tools

### SECTION 11 - PARKING-EMERGENCY BRAKES

- Group 1111 - Active Elements
- Group 1115 - Controls Linkage
- Group 1199 - Specifications and Special Tools

### SECTION 16 - ELECTRICAL SYSTEM

- Group 1671 - Batteries, Support and Cables
- Group 1672 - Alternator, Regulator and Charging System Wiring
- Group 1673 - Lighting System
- Group 1674 - Wiring Harness and Switches
- Group 1675 - System Controls
- Group 1676 - Instruments and Indicators
- Group 1699 - Specifications and Special Tools

### SECTION 17 - FRAMES, CHASSIS OR SUPPORTING STRUCTURE

- Group 1740 - Frame Installation
- Group 1746 - Frame Bottom Guards
- Group 1799 - Specifications and Special Tools

### SECTION 18 - OPERATOR'S STATION

- Group 1810 - Operator Enclosure
- Group 1821 - Seat and Seat Belt
- Group 1830 - Heating and Air Conditioning
- Group 1899 - Specifications and Special Tools

### SECTION 19 - SHEET METAL AND STYLING

- Group 1910 - Hood or Engine Enclosure
- Group 1913 - Miscellaneous Shields
- Group 1921 - Grille and Grille Housing

### SECTION 20 - SAFETY, CONVENIENCE AND MISCELLANEOUS

- Group 2001 - Radio
- Group 2002 - Mirror
- Group 2003 - Fire Extinguisher
- Group 2004 - Horn
- Group 2006 - Cigar Lighter
- Group 2099 - Specifications and Special Tools

### SECTION 21 - MAIN HYDRAULIC SYSTEM

- Group 2160 - Hydraulic System
- Group 2199 - Specifications and Special Tools

### SECTION 32 - BULLDOZERS

- Group 3201 - Blades
- Group 3215 - Controls Linkage
- Group 3260 - Hydraulic System
- Group 3299 - Specifications and Special Tools

### SECTION 37 - ARCH OR BOOM, OR CRANES

- Group 3715 - Controls Linkage
- Group 3740 - Frames
- Group 3760 - Hydraulic System
- Group 3799 - Specifications and Special Tools

### SECTION 38 - GRAPPLE

- Group 3803 - Grapple Mechanism
- Group 3813 - Shielding
- Group 3860 - Hydraulic System
- Group 3899 - Specifications and Special Tools

### SECTION 39 - SHEAR

- Group 3901 - Blades and Cutting Elements
- Group 3903 - Tongue and Forks
- Group 3915 - Controls Linkage
- Group 3940 - Frame
- Group 3960 - Hydraulic System
- Group 3999 - Specifications and Special Tools

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

## SECTION AND GROUP CONTENTS OF THIS MANUAL—Continued

### SECTION 41 - MISCELLANEOUS FUNCTION MECHANICAL DRIVE

- Group 4125 - Input Drive Shafts
- Group 4141 - Housings and Covers
- Group 4151 - Gears, Shafts and Bearings
- Group 4152 - Clutch
- Group 4160 - Hydraulic System
- Group 4199 - Specifications and Special Tools

### SECTION 43 - SWING, ROTATION OR PIVOTING SYSTEM

- Group 4315 - Controls
- Group 4350 - Mechanical Drive Elements
- Group 4360 - Hydraulic System
- Group 4399 - Specifications and Special Tools

### SECTION 44 - CUTTING MECHANISMS

- Group 4401 - Blades
- Group 4440 - Frames
- Group 4460 - Hydraulic System
- Group 4499 - Specifications and Special Tools

### SECTION 90 - SYSTEM TESTING

- Group 9005 - General Information
- Group 9010 - Engine
- Group 9015 - Electrical System
- Group 9015A - Electrical System (Automatic Control)
- Group 9020 - Power Train
- Group 9025 - Hydraulic System (Flow Meter)
- Group 9030 - Miscellaneous Components
- Group 9031 - Heating and Air Conditioning
- Group 9035 - Specifications and Special Tools

## ALPHABETICAL INDEX

<b>A</b>	<b>D</b>
Accumulator, brake . . . . . 1060-4	(Delimber carriage), frames . . . . . 4440-1
Active elements, service brakes . . . . . 1011-3	Delimber knives and feed rolls cylinders . . . 4460-18
After sales inspection . . . . . I-IV-27	Delimber knives and feed roll valve 4460-1, 9025-22
Air conditioning and heating system testing . 9031-1	Delivery service . . . . . I-IV-27
Air filters . . . . . 1830-34	Diagnosing malfunctions . . . . . 9015A-11, 9025-45
Alternator, regulator and charging system	Differential housing with lock . . . . . 0210-4
wiring . . . . . 1672-1	Differential case and cover . . . . . 0210-1
Automatic control circuit schematic . . . . . 9015A-46	Differential drive shaft, front . . . . . 0225-3
Axle housing . . . . . 0250-4	Differential drive shaft, rear . . . . . 0225-1
Axle lock mounting . . . . . 0243-1	Differential, front . . . . . 0210-1
Axle shaft, bearings, reduction gears . . . . . 0250-1	Differential lock valve . . . . . 0210-32, 9025-16
Axle stabilizer cylinder . . . . . 0260-7	Differential lock valve hydraulics . . . . . 0210-34
Axle stabilizer valve . . . . . 0260-1, 9025-18	Differential or bevel drive . . . . . 0210-1
Axle stabilizer valve testing . . . . . 9015-32	Differential, rear . . . . . 0210-1
	Drive axle housing and support . . . . . 0201-3
<b>B</b>	<b>E</b>
Batteries, support and cables . . . . . 1671-3	Electrical schematic complete . . . . . 9015-43
Blade control valve, bulldozers . . . . . 3260-1	Emergency steering . . . . . 0930-3
Blades and cutting elements . . . . . 3901-3	Emergency steering accumulator . . . . . 0930-3
Blades, bulldozer . . . . . 3201-3	Emergency steering low pressure warning
Blades (delimber knives) . . . . . 4401-3	switch . . . . . 0930-6, 9025-15
Block diagram . . . . . 9015-3, 9015A-6	Engine coolant heater . . . . . 0505-5
Blower motor . . . . . 1830-32	Engine oil cooler . . . . . 0419-1
Brake accumulator . . . . . 1060-4, 9025-10	Engine oiling system . . . . . 0407-1
Brake system lines . . . . . 1060-8	Engine removal and installation . . . . . 0400-3
Brake valve . . . . . 9025-11	Engine system testing . . . . . 9010-1
	Engine ventilating system . . . . . 0408-1
<b>C</b>	Evaporator core . . . . . 1830-26
C1 - C2 accumulators . . . . . 0360-12	Exhaust manifold . . . . . 0410-1
Camshaft and valve actuating means . . . . . 0402-1	Expansion valve . . . . . 1830-28
Cigar lighter . . . . . 2006-1	External exhaust systems . . . . . 0530-1
Circuit protectors . . . . . 1674-1	External fuel supply systems . . . . . 0560-1
Clutch housings, transmission . . . . . 0350-11	
Clutch, mechanical drive . . . . . 4152-1	<b>F</b>
Clutch valve linkage . . . . . 0315-3	Fan . . . . . 0510-1
Cold weather starting aids . . . . . 0505-3	Fan belt tightener . . . . . 0429-1
Compressor . . . . . 1830-5	Fan drive . . . . . 0429-1
Compressor relief valve . . . . . 1830-30	Fan drive support . . . . . 0429-3
Condenser . . . . . 1830-21	Fire extinguisher . . . . . 2003-1
Connecting rods and pistons . . . . . 0403-1	Fire stack valve . . . . . 9025-26
Controls linkage, arch or boom . . . . . 3715-3	Fire suppression system . . . . . 9015-41
Controls linkage, bulldozer . . . . . 3215-1	Flywheel, housing and fastenings . . . . . 0433-1
Controls, swing, rotation system . . . . . 4315-3	Forks and tongue . . . . . 3903-3
Cooling system . . . . . 0510-1	Frames - arch or boom . . . . . 3740-1
Crankshaft and main bearings . . . . . 0401-1	Frames (delimber carriage) . . . . . 4440-1
Cylinder block . . . . . 0404-1	Front differential . . . . . 0210-1
Cylinder, bulldozer . . . . . 3260-5	Front differential drive shaft . . . . . 0225-3
Cylinder, delimber knives and feed rolls . . . 4460-18	Fuel filter . . . . . 0420-1
Cylinder head and valves . . . . . 0409-1	Fuel injection nozzles . . . . . 0413-9
Cylinders, steering . . . . . 0960-10	Fuel injection pump . . . . . 0413-5
	Fuel injection system . . . . . 0413-1

Fuel line .....	0560-6
Fuel supply pump .....	0560-1
Fuel tank .....	0560-4
Fuel transfer pump .....	0413-1
Frame bottom guards .....	1746-1
Frame installation .....	1740-3

**G**

Gears, shafts and bearings, mechanical drive	4151-1
General information .....	9015A-5
General specifications .....	I-III-1
Grapple hydraulic system .....	3860-1
Grapple mechanism .....	3803-3
Grapple shielding .....	3813-1
Grille and grille housing .....	1921-1

**H**

Harvesting control box wiring .....	9015A-45
Heater blowers .....	1830-4
Heater core .....	1830-2
Heater valve .....	1830-1
Heater pipes and hoses .....	1830-4
Heating and air conditioning system testing	9031-1
Hood or engine enclosure .....	1910-3
Horn .....	2004-1
Housing and covers .....	0341-1
Housing and covers, mechanical drive .....	4141-1
Hydraulic charge pump .....	2160-25
Hydraulic in-line filter .....	2160-47
Hydraulic manifold .....	2160-37
Hydraulic oil cooler and check valve .....	2160-45
Hydraulic oil filters .....	2160-39
Hydraulic pump .....	2160-6
Hydraulic pump destroke solenoid .....	9015-32
Hydraulic reservoir .....	2160-41
Hydraulic schematics .....	9025-105
Hydraulic service recommendations .....	2160-3
Hydraulic steering valve .....	0960-1
Hydraulic system .....	0260-1
Hydraulic system accumulator .....	2160-33
Hydraulic system, arch or boom .....	3760-1
Hydraulic system, cutting mechanism .....	4460-1
Hydraulic system, grapple .....	3860-1
Hydraulic system, mechanical drive .....	4160-1
Hydraulic system, steering .....	0960-1
Hydraulic system, swing and rotation system	4360-1
Hydraulic warm-up switch .....	9015-35

**I**

Indicator isolation diodes .....	1674-7
Input drive shafts and U-joints .....	0225-1, 0325-1
Input drive shafts, mechanical drive .....	4125-1
Instruments and indicators .....	1676-2
Instruments and indicators, testing .....	9015-25
Intake manifold .....	0414-1

Intake manifold pressure test .....	9010-19
Intake system .....	0520-1
Introduction .....	I-II-1

**L**

Lighting system .....	1673-1
Lighting system testing .....	9015-16
Log accumulator .....	9015-40
Log accumulator valve .....	9025-29
Lubrication .....	I-V-1

**M**

Main hydraulic pump .....	9025-3
Mechanical drive elements, swing, rotating	
▪ system .....	4350-1
Mirror .....	2002-1
Miscellaneous accessories .....	9015-28
Miscellaneous components system testing ..	9030-1
Miscellaneous shields .....	1913-1
Mounting frame .....	0540-1
Mounting parts .....	0342-1
Multi stem shear operation .....	9025-32
Multi-stem shear valve ..	3960-15, 9015-35, 9025-30

**O**

Operator enclosure .....	1810-3
Oscillating supports, differential .....	0210-20

**P**

Parking-emergency brakes active elements ..	1111-3
Parking-emergency brakes control linkage ..	1115-1
Planet pinion carrier .....	0250-4
Planetary pack .....	0350-27
Power shaft countershaft .....	0350-42
Power shift transmission assembly .....	0350-5
Power train system testing .....	9020-1
Precautions .....	9015A-10
Predelivery service .....	I-IV-1
Pressure control valve .....	2160-29, 9025-8
Pressure reducing valve ..	4460-14, 9015-40, 9025-27
Pump drive and support assembly .....	2160-33

**R**

Radiator and fan shroud .....	0510-2
Radio .....	2001-3
Rear differential .....	0210-1
Rear differential drive shaft .....	0225-1
Receiver-dryer .....	1830-24
Relays .....	1674-3, 1674-4

**S**

Seat .....	1821-1
Seat belt .....	1821-1
Service brake valve .....	1060-1
Service brakes active elements .....	1011-3
Service brakes controls linkage .....	1015-1

Shear and grapple control valve .....	3960-1
Shear cylinder .....	3960-19
Shear frame .....	3940-1
Shear grapple cylinder .....	3960-29
Shear/grapple valve .....	9015-35
Shear hydraulic system .....	3960-1
Shears controls linkage .....	3915-1
Shorted circuit test .....	9015A-10
Special procedures .....	9025-49
Special tools:	
Air conditioning system .....	1899-6
Alternator, regulator and charging system wiring .....	1699-7
Batteries, support and cables .....	1699-5
Camshaft and valve actuating means .....	0499-29
Clutch disconnect and controls, transmission .....	0399-26
Clutch, mechanical drive .....	4199-2
Connecting rods and pistons .....	0499-31
Cooling system .....	0599-4
Crankshaft and main bearings .....	0499-28
Cylinder block .....	0499-32
Cylinder head and valves .....	0499-34
Electrical system .....	9035-15
Electrical system (automatic control) .....	9035-19
Emergency steering accumulator .....	0999-6
Emergency steering valve .....	0999-7
Engine .....	9035-3
Fuel injection system .....	0499-36
Gears, shafts, bearings and power shift clutch transmission .....	0399-23
Grapple hydraulic system .....	3899-3
Housing and covers, transmission .....	0399-22
Hydraulic system .....	0299-13, 2199-11
Hydraulic system, arch or boom .....	3799-5
Hydraulic system, bulldozer .....	3299-3
Hydraulic system, cutting mechanisms .....	4499-2
Hydraulic system (flow meter) .....	9035-27
Operating enclosure .....	1899-4
Removal and installation, engine .....	0499-25
Service brakes hydraulic system .....	1099-3
Shear blades and cutting elements .....	3999-7
Shear hydraulic system .....	3999-8
Starting motor and fastenings .....	0499-40
Turbocharger .....	0499-38
Water pump .....	0499-39
Wheels and fastening .....	0199-2
Specifications:	
Air conditioning system .....	1899-2
Alternator, regulator and charging system wiring .....	1699-1
Axle lock mount .....	0299-10
Axle shafts, bearing, reduction gears .....	0299-10
Basic engine .....	9035-1
Batteries, support and cables .....	1699-1

Specifications (Continued):	
Blades, cutting mechanisms .....	4499-1
Camshaft and valve actuating means .....	0499-3
Clutch disconnect and controls, transmission .....	0399-20
Cold weather starting aids .....	0599-1
Connecting rods and pistons .....	0499-5
Cooling systems .....	0599-1
Crankshaft and main bearings .....	0499-2
Cylinder block .....	0499-8
Cylinder head and valves .....	0499-12
Differential or bevel drive .....	0299-2
Drive axle housing and support .....	0299-1
Electrical system .....	9035-5
Electrical system (automatic control) .....	9035-17
Emergency steering accumulator .....	0999-1
Emergency steering cylinder .....	0999-5
Emergency steering valve .....	0999-1
Engine break-in .....	0499-1
Engine oil cooler .....	0499-21
Engine oiling system .....	0499-10
External fuel supply system .....	0599-4
Fan drive .....	0499-24
Fire extinguisher .....	2099-1
Flywheel housing and fastenings .....	0499-24
Frame installation .....	1799-1
Frames, cutting mechanisms .....	4499-1
Fuel injection system .....	0499-15
Gears, shafts and bearings, mechanical drive .....	4199-3
Grapple hydraulic system .....	3899-1
Heating and air conditioning .....	9035-30
Housing and covers, mechanical drive .....	4199-2
Hydraulic system .....	0299-11
Hydraulic system, arch or boom .....	3799-1
Hydraulic system, bulldozers .....	3299-1
Hydraulic system, cutting mechanisms .....	4499-2
Hydraulic system (flow meter) .....	9035-22
Hydraulic system, mechanical drive .....	4199-11
Hydraulic system, swing and rotation system .....	4399-3
Hydraulic system, transmission .....	0399-3
Input drive shafts and U-joints .....	0299-9
Input drive shaft, mechanical drive .....	4199-1
Instruments and indicators .....	1699-4
Intake manifold .....	0499-17
Intake system .....	0599-3
Lighting system .....	1699-3
Miscellaneous components .....	9035-29
Mechanical drive elements, swing and rotation system .....	4399-1
Mounting frame .....	0599-4
Operator enclosure .....	1899-1

Specifications (Continued):

Parking brake active elements	1199-1
Parking-emergency brakes controls linkage	1199-1
Power train	9035-21
Service brakes hydraulic system	1099-1
Shears, blades and cutting elements	3999-1
Shear frames	3999-2
Shear hydraulic system	3999-4
Speed controls	0599-2
Starting motor and fastenings	0499-22
System controls	1699-4
Thermostats, housings and water piping	0499-20
Transmission gears, shafts, bearings and power shift clutch	0399-3
Transmission input drive shafts and U-joints	0399-1
Transmission mounting parts	0399-2
Turbocharger	0499-18
Water pump	0499-19
Wheels and fastenings	0199-1
Wiring harness and switches	1699-3
Speed controls	0515-1
Stabilizer cylinder, axle	0260-7
Stabilizer valve, axle	0260-1
Starting circuit	9015-11
Starting motor and fastenings	0422-1
Steering cylinders	0960-10
Steering system lines	0960-13
Steering valve	9025-12
Stroke control valve	2160-6
Stroke control valve assembly	9025-3
Surge relief valve	9025-8
Swing crossover relief valve	9025-25
Swing motor	9025-24
Switches	1674-4, 1674-6
System accumulator	9025-9
System controls	1675-1
System testing, engine	9010-1
System testing, heating and air conditioning	9031-1
System testing, miscellaneous components	9030-1
System testing, power train	9020-1

T

Test port locations	9025-39
Test procedures	9015A-12
Testing and adjustment	9025-54
Thermal fuse and superheat shut-off switch	1830-31
Thermostats, housings and water piping	0418-1
Thermostats temperature control switch	1830-29

Tongue and forks	3909-3
Transmission case	0350-15
Transmission clutch carrier assembly and elements	0370-1
Transmission clutch linkage	0370-7
Transmission clutch pack	0350-2
Transmission clutch valve	0360-8
Transmission clutch valve assembly	0360-4
Transmission control valve shift linkage	0315-5
Transmission hydraulic system	9025-35
Transmission oil cooler	0360-16
Transmission oil filter	0360-13
Transmission oil pressure regulating valve	0360-10
Transmission oil pump	0360-1
Transmission suction screen filter	0350-1
Turbocharger	0416-1

V

 
Valve, axle stabilizer	9025-18
Valve, brake	9025-11
Valve, delimeter knives and feed roll	4460-1
Valve, differential lock	9025-16
Valve, fire stack	9025-26
Valve, heater	1830-1
Valve, log accumulator	9025-29
Valve, multi stem shear	9025-30
Valve, pressure control	9025-8
Valve, pressure reducing	4460-14, 9015-40, 9025-27
Valve, service brake	1060-1
Valve, steering	0960-1, 9025-12
Valve, surge relief	9025-8
Valve, swing crossover relief	9025-25
Vibration damper	0401-8
Visual inspection	9015A-10, 9025-48

W

Water pump	0417-1
Wheel and fastenings	0110-3
Wire terminal location	9015A-7
Wiring diagram, complete	9015-45
Wiring harnesses and switches	1674-1

## Group II INTRODUCTION AND SAFETY INFORMATION

### INTRODUCTION

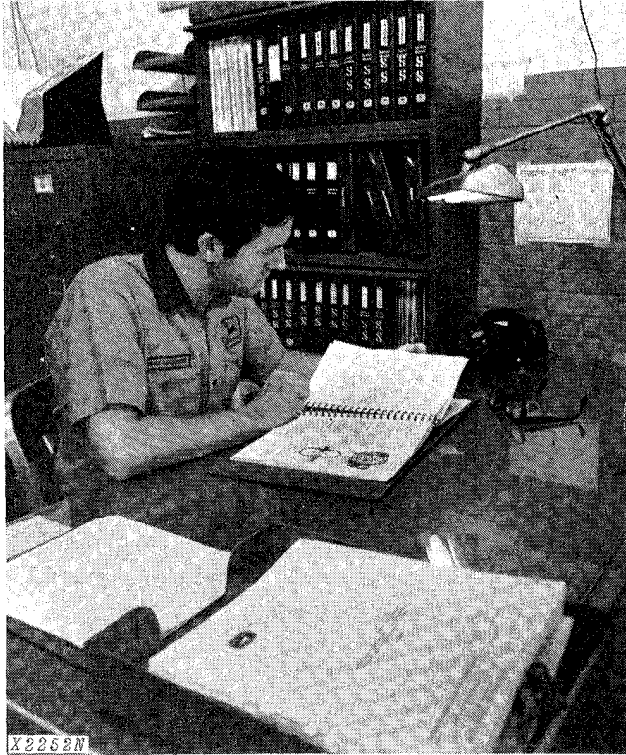

Use FOS Manuals for Reference

This technical manual is part of a twin concept of service:

The two kinds of manuals work as a team to give you both the general background and technical details of shop service.

#### ■ FOS Manuals—for reference

*Fundamentals of Service (FOS) Manuals* cover basic theory of operation, *fundamentals* of trouble shooting, *general* maintenance, and *basic* types of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced service technicians.



When a service technician should refer to a FOS Manual for more information, a FOS symbol like the one at left is used in the TM to identify reference.

#### ■ Technical Manuals—for actual service

*Technical Manuals* are concise service guides for a specific machine. Technical manuals are on-the-job guides containing only vital information needed by an experienced service technician.



Use Technical Manuals for Actual Service

This technical manual was planned and written for you—an experienced service technician. Keep it in a permanent binder in the shop where it is handy. Refer to it whenever in doubt about correct service procedures or specifications.


Some features of this manual:

- Inside front cover - "Table of Contents".
- Section I - Contents, safety information, general specifications and general services.
- Sections 1 through 44 - Removal, repair, testing (components removed), installation, and adjustment.
- Section 90 - Detailed explanation of system operation, diagnosis, visual inspection, testing, and adjustments.
- Specifications grouped and illustrated at the end of each section.

 
# MAINTENANCE WITHOUT ACCIDENT WORK SAFELY



T27999N

 This safety alert symbol is used for important safety messages. When you see this symbol, the possibility of personal injury exists if safety message is not followed.

**EVERY EMPLOYER HAS A SAFETY PROGRAM. KNOW WHAT IT IS!**

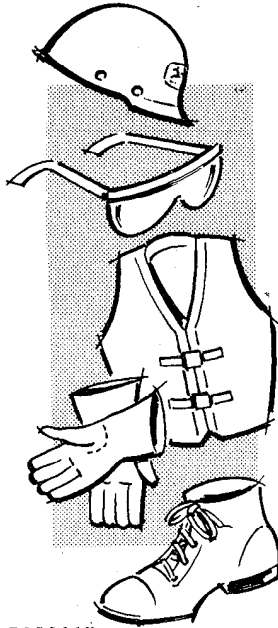

T27501N

Consult your shop supervisor for specific instructions on a job, and the safety equipment required.

 
For instance, you may need: Hard hat, safety shoes, safety goggles, heavy gloves, reflector vests, ear protectors, respirators.



WRONG

T27502N


**ALWAYS AVOID** loose clothing or any accessory—flopping cuffs, dangling neckties and scarves, or rings and wrist watches—that can catch in moving parts and put you out of work.

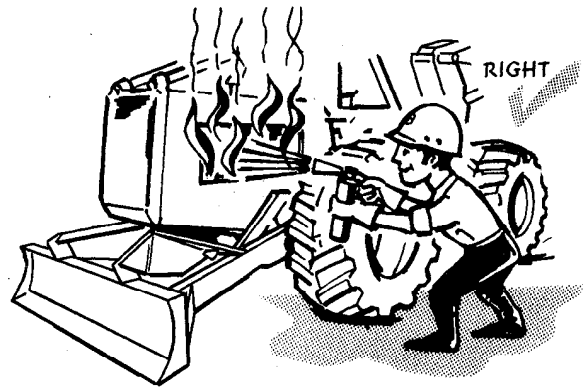

T50632N

## BE ALERT!

 Plan ahead—work safely—avoid accidental damage and injury. If a careless moment does cause an accident or fire, react quickly with the tools and skills at hand—know how to use a fire extinguisher—and where to get aid and assistance. In an emergency, split-second action is the key to safety.

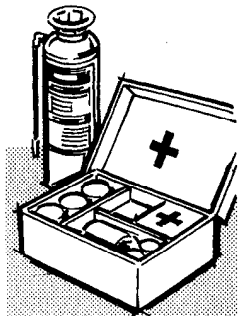

T27504N



**Suggest:**

**If the above button click is invalid.**

**Please download this document**

**first, and then click the above link**

**to download the complete manual.**

**Thank you so much for reading**

 
## MAINTENANCE WITHOUT ACCIDENT

Specific safety procedures should always be observed, whether servicing or making repairs on tree harvester or feller-buncher. Remembering these—in time!—can prevent an injury...or save your life....

### AVOID FIRE HAZARDS—

#### Fuel Is Dangerous!

- Don't smoke while refueling.
- Don't smoke while handling highly flammable material.
- Engine should be shut off when refueling.
- Use care in refueling if engine is hot.

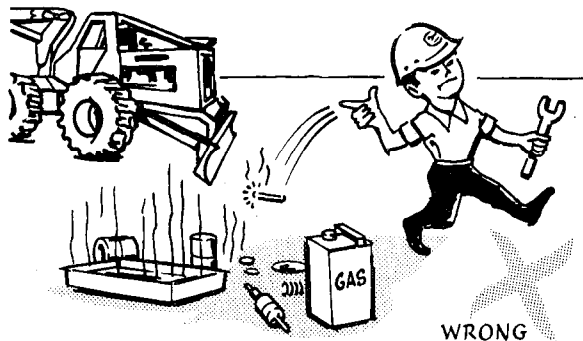

T50633N

Don't use open pans of gasoline or diesel fuel for cleaning parts. Good commercial, nonflammable solvents are preferred.

#### Battery Gas Is Highly Flammable!

Provide adequate ventilation when charging batteries.



T27506N

- Don't check battery charge by placing metal objects across the posts.
- Don't allow sparks or open flame near batteries.
- Don't smoke near battery.

#### Flame Is Not a Flashlight!

 
- Never check fuel, battery electrolyte or coolant levels with an open flame.
- Never use an open flame to look for leaks anywhere on equipment.

#### Know Where Fire Extinguishers Are Kept!

### UNDER ALL MAINTENANCE CONDITIONS—

Do not perform any work on the tree harvester or feller-buncher unless authorized to do so. Then be sure you understand the services required. Follow recommended procedures.

Never service equipment while it is being operated.

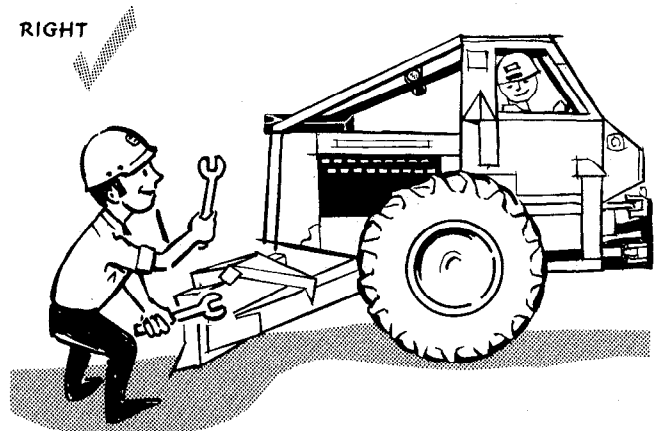

T50634N

Avoid working on equipment with the engine running. If it is necessary to make checks with the engine running, **ALWAYS USE TWO SERVICE TECHNICIANS**—one, the operator, at the controls, the other checking in view of the operator. Also, put the transmission in neutral, set the brake, and apply any safety locks provided. **KEEP HANDS AWAY FROM MOVING PARTS.**



**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**