

650 and 750 Tractors



JOHN DEERE

OPERATORS MANUAL

650 and 750
Tractors

OMRW15455 L4 English

John Deere
Lawn & Grounds Care Division
OMRW15455 L4

LITHO IN U.S.A.
ENGLISH



WARRANTY

Warranty is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual.

The warranty does not cover:

A—Products which have been altered or modified in ways not approved by John Deere, including setting fuel delivery above specifications or otherwise overpowering of products.

B—Depreciation or damage caused by normal wear, accident, lack of reasonable and necessary maintenance as specified in this manual, improper maintenance, improper protection in storage, or improper use or abuse.

C—Normal maintenance and replacement of service items such as filters, spark plugs, belts, brake linings, cutting blades and hoses unless such items are defective.

D—Transportation, mailing and service call charges for warranty service.

SAFETY



This safety alert symbol indicates important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

DIRECTIONS

"Right-hand" and "left-hand" sides of the tractor are determined by facing in the direction of tractor forward travel.

SYMBOLS

Worldwide symbols are used to assist identification and operation. In this manual, an identifying symbol is placed by the instructions like the example at the left for the symbol on the engine oil pressure gauge. The cylinder block in the symbol represents the engine, the drop signifies the oil, and the arrows indicate pressure. Regardless of the language used in a nation, the symbol means engine oil pressure without translation.

MEASUREMENTS

This tractor is of metric design.

For your convenience, most specifications are given in metric measurement with the customary U.S. measurement following.

Some specifications cannot be converted. These appear in metric only.

Most hardware is metric. Specified metric hardware must be used for replacement.



CAUTION: Use only metric tools. Other tools may not fit properly. They may slip and cause injury.

PRODUCT IDENTIFICATION NUMBERS

Record the identification number(s) in the space provided following Specifications. Accurately record all of the characters because (should the product be stolen) tracing is sometimes through a computer match of letters and numbers. Also, your dealer needs this information when ordering parts. If you carry your operator's manual on the machine for reference, be sure to also record the identification number(s) on a separate sheet of paper and file it in a secure place not on the machine so you will still have a record in case the machine is stolen.

Contents

Identification View	2
Safety	3
Controls and Instruments	8
Operator's Station	11
Engine Break-in	12
Prestarting Checks	13
Operating the Engine	15
Operating the Tractor	23
Rockshaft and 3-Point Hitch	28
Remote Hydraulic Cylinders (Optional)	37
Drawbar and PTO	42
Ballast	46
Wheels, Tires, and Treads	54
Transporting	57
Lighting and Signals	60
Fuels and Lubricants	62
Lubrication and Maintenance	66
Service	83
Storage	105
Trouble Shooting	108
Crime Prevention Tips	112A
Specifications	113
Identification Numbers	115
Index	116
Daily Maintenance	120
Lubrication and Maintenance Record	120

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Identification View



John Deere 650 Tractor

A09;RW1071 4 U01;ID 650 061284

U05;P2 071284

Safety

KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on a machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.



AB6;TS173 053;RIDER 261184

OPERATE TRACTOR SAFELY

Slow down for hillsides, rough ground, and sharp turns. Couple the brake pedals together before driving at transport speeds.

When implements or attachments are used with tractor, always follow safety precautions listed in implement operator's manual or operating instructions. When raising a heavy object with a loader, be sure the object is secure from falling. It could fall on and seriously injure a bystander or the operator.

U01;SA01 201284

AVOID TIP-OVERS

Avoid holes, ditches, etc. which may cause the tractor to tip, especially on hillsides.


Tractors with narrow tread width require extra driving caution to prevent tip-overs. Slow down before sharp turns, especially on rough ground and slopes. You can improve stability by adjusting rear wheels to maximum tread width, see page 55.

Front-wheel drive (A) greatly increases traction. When this option is used, extra caution is needed on slopes. Compared to 2-wheel drive, a front-wheel drive tractor maintains traction on steeper slopes, increasing the possibility of a tip over.

Never drive near the edge of a gully or steep embankment—it might cave in.

Driving forward out of a ditch or mired condition or up a steep slope could cause tractor to tip over rearward. Back out of these situations if possible.

Hitch towed loads only to the drawbar. When using a chain, take up the slack slowly.

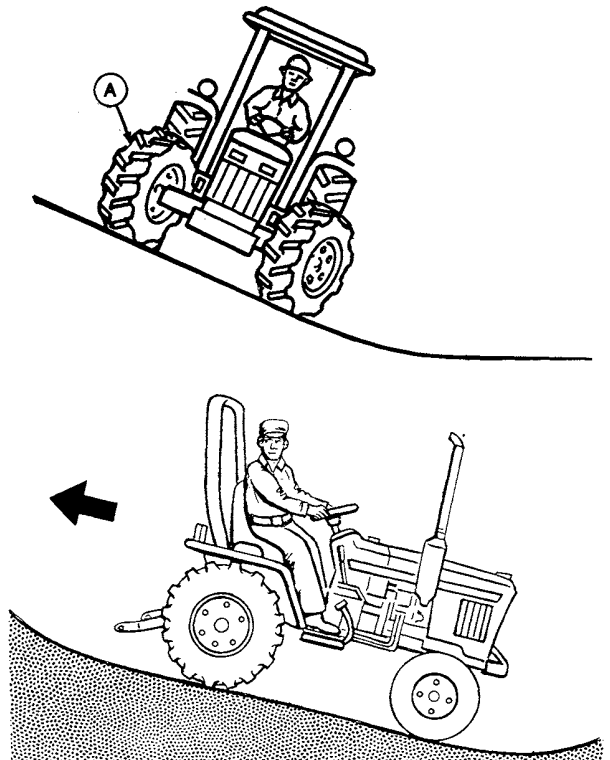


A09;RW8023L,RW207 U01;SA02 010982

U05;P3 201284

USE SEAT BELT PROPERLY

Use a seat belt when you operate with a roll-over protective structure (ROPS) to minimize chance of injury from an accident such as an overturn.

Do not use a seat belt if operating without a ROPS.

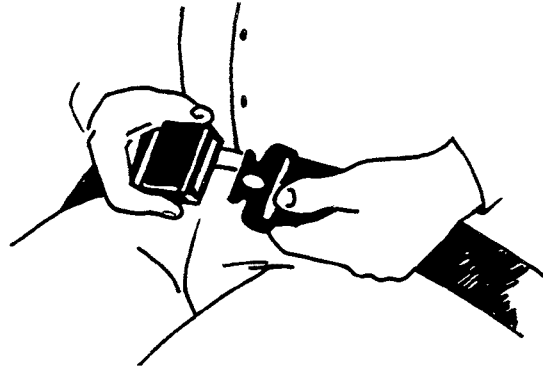


AB6;TS175 053;ROPS1 261184

KEEP ROPS INSTALLED PROPERLY

Make certain all parts are reinstalled correctly if the roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to proper torque.

The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered. A damaged ROPS should be replaced, not reused.

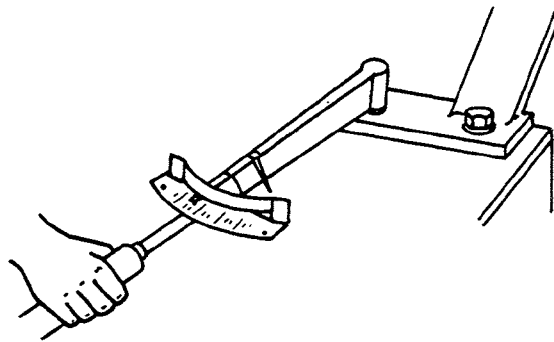

AB6;TS176 053;ROPS3 261184

TRANSPORT TRACTOR SAFELY

Before descending a steep hill, shift to a low gear to control the tractor with little or no braking. Make sure brake pedals are locked together. Never coast downhill.

When transporting on icy or graveled surfaces, be alert for skids which could result in loss of steering control. To decrease chance of skids, reduce speed and be sure tractor is properly ballasted.

Never tow tractor faster than 32 km/h (20 mph). (See Selecting Towing Speeds in Transporting section.)

U01;TRANS PORT 061284

U05;P4 201284

STAY CLEAR OF PTO

Stop the engine and be sure both the rear PTO and the front PTO (if equipped) drive line have stopped before:

- Connecting or disconnecting a PTO drive line
- Making any adjustment to PTO drive line or hitch
- Cleaning out PTO driven equipment.


PTO master shield and other drive line shields should be in place at all times except for special applications as directed in the operator's manual.

The PTO guard should be in place when the PTO is not being used.

Operate PTO at recommended speeds.

The optional front PTO and attachment should stop completely in seven seconds or less. See page 99 for adjustment instructions.

Avoid loose-fitting or dangling clothing.

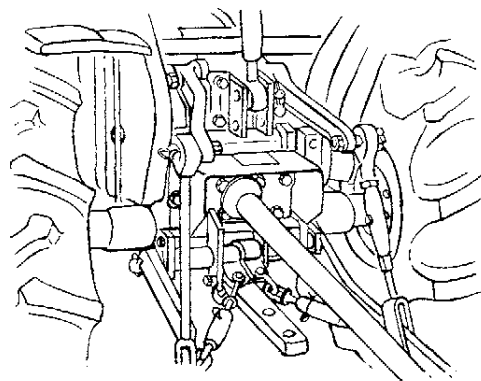

A09AKW210 U01,P10 06:284

STAY CLEAR OF MOVING TRACTOR

Never attempt to start or operate tractor except from operator's station.

Be sure everyone is clear of tractor and attached equipment before starting engine. Some movement may occur as engine starts.

Never try to get on or off a moving tractor.

Before dismounting, lock the brakes and lower implements to the ground. If tractor is to be left unattended, stop the engine and remove the key.

U01:STAY CLEAR 201284

U05:P5 071284

AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure. Keep hands and body away from pinholes and nozzles which eject fluids under high pressure. Use a piece of cardboard or paper to search for leaks.

If ANY fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type injury or gangrene may result.



 
AB6;X9811 053;FLUID 100584

AVOID EXPLOSIONS OR FIRE

Before using booster batteries, read the instructions on page 19. Before connecting or disconnecting a battery charger, turn the charger off to avoid sparks.

Be careful with any type of fuel. Do not refuel the tractor when the engine is hot or running. Never smoke while handling fuel.

A fire extinguisher can be mounted to your tractor. It is available from your John Deere dealer. Be sure to see the owners manual packaged with the extinguisher for operation and service instructions.



A09;RW5895;RW2389 301;SA10 010982

PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear and will move if normal circuitry is by passed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.



AB6;TS177 053;BYPAS1 110584

TOW EQUIPMENT PROPERLY


Use caution when towing loads at transport speeds. Reduce speed if towed load weighs more than the tractor and is not equipped with brakes. Avoid hard braking applications. (Consult implement operator's manual for recommended transport speeds.)

Use additional caution when transporting towed loads under adverse surface conditions, when turning, or on inclines.

U01;TOW 061284

USE A SAFETY CHAIN

A safety chain will help control drawn equipment (B) should it accidentally separate from the drawbar (A) while transporting. Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning. See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine.

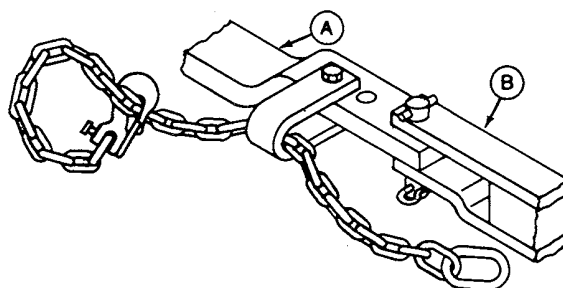


AB6;TS163 053;CHAIN 310884

MAKE TRACTOR VISIBLE ON HIGHWAY

Turn light switch to "bright head lamp" position. Never use white lights which are visible from the rear. Always dim head lamps before meeting another vehicle. Keep head lamps properly adjusted.

Add SMV emblem, reflectors, and auxiliary lighting to equipment as required for safety and by local regulations.

Before operating tractor on highway, be sure flashing warning lamps work properly.

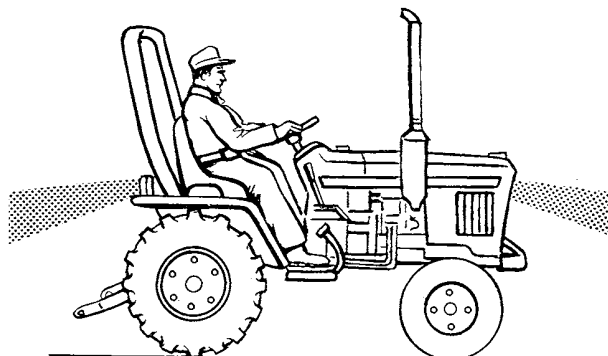


A09;RW209 U01;HIWAY 061284

AVOID EXHAUST FUMES

Never run engine in a closed building.

The exhaust system may be adjusted to a horizontal position if the vertical position is in the way. See page 102.

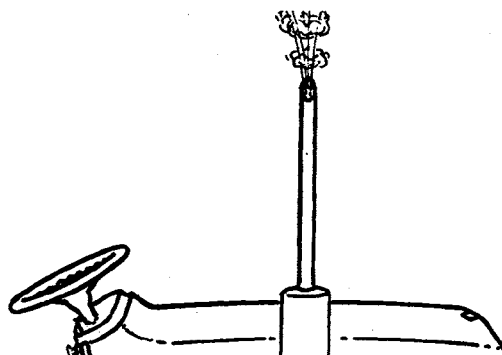

A09;RW8024L U01;SA06 031182

PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs (A) or earplugs (B) to protect against objectionable uncomfortable loud noises.




AB6;X7662 053;NOISE 150584

DO NOT MODIFY TRACTOR

Unauthorized modification to the machine may impair the function and/or safety and affect machine life.

Never modify structural members of ROLL-GARD protective frame (A) by welding, bending, drilling or cutting as this might weaken the structure. If any structural member is damaged, replace the entire structure. Do not attempt repairs.

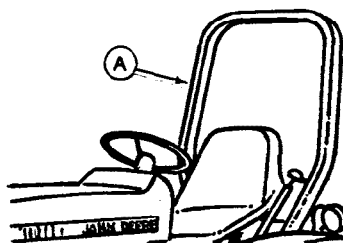


A09;RW8025L U01;MODIFY 650 061284

SERVICE TRACTOR SAFELY

Do not service the tractor while it is in motion or while the engine is running.

Disconnect the battery ground cable before working on the electrical system or working in any area where you might accidentally contact electrical components.

Reinstall all shields or protective equipment removed during service.

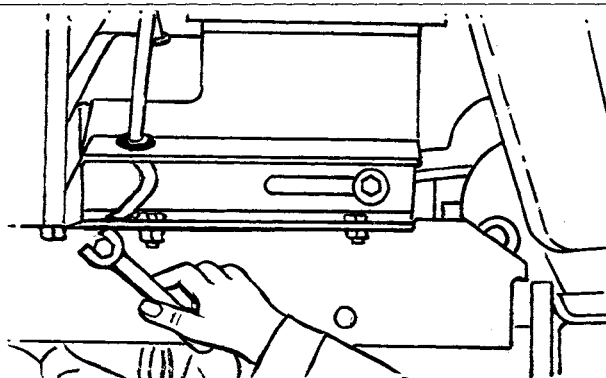


A09;RW211 U01;WRENCH 061284

SERVICE COOLING SYSTEM SAFELY

Under normal circumstances, radiator cap should not be removed. Add coolant to cooling system through coolant recovery tank (A).

Do not remove radiator cap when engine is hot. Shut the engine off and wait until it cools. When removing cap turn to the first stop to relieve pressure before removing it completely.

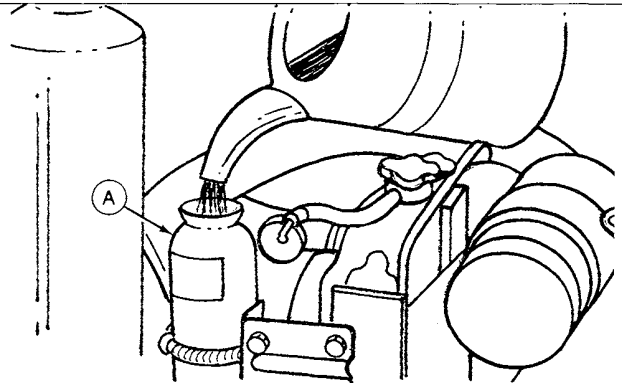




A09;RW305 U01;SA11 201282

SERVICE TIRES SAFELY

Failure to follow proper procedures when mounting a tire on a wheel or rim can produce an explosion which may result in serious injury or death. Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job. Have it done by your John Deere dealer or a qualified tire repair service.

When sealing tire beads on rims, never exceed 35 psi (241 kPa) (2.4 bar) or maximum inflation pressures specified by tire manufacturers for mounting tires. Inflation beyond this maximum pressure may break the bead, or even the rim, with dangerous explosive force. If both beads are not seated when the maximum recommended pressure is reached, deflate, reposition tire, relubricate bead and reinflate.

Detailed tire mounting instructions, including necessary safety precautions, are contained in John Deere Fundamentals of Service (FOS) Manual 55, Tires and Tracks, available through your John Deere dealer. Such information is also available from the Rubber Manufacturers Association and from tire manufacturers.

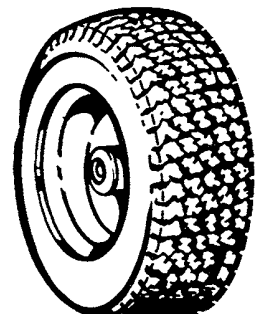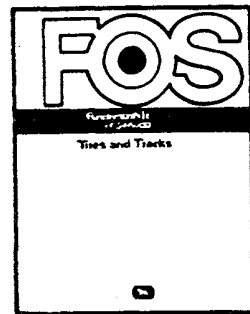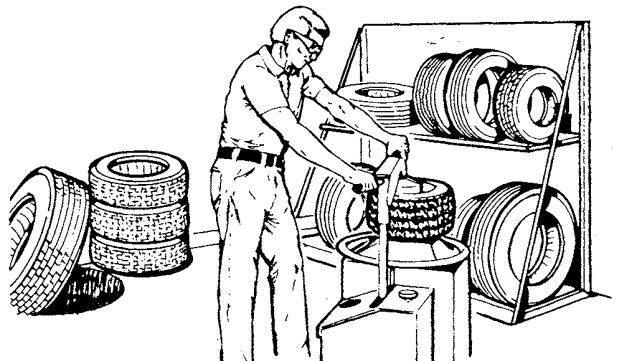

AB6;M34163, M34164 053;TIRE4 091283

HANDLE CHEMICALS PROPERLY

Follow instructions given in the implement operator's manual and those given by the chemical manufacturer when using agricultural chemicals.


U01;HANDLE 1 061284

U05;P7 071284

Controls and Instruments

LOCATING TRACTOR CONTROLS


	Page
A—Steering Wheel	8
B—Turn Signal	61
C—Light Switch	60
D—Front PTO Switch (optional)	45
E—Hand Throttle	21
F—Key Switch	16
G—Brake Pedals	23
H—Parking Brake Lever	23
I—Foot Throttle	21
J—Gear Shift Lever	24
K—Range Shift Lever	24
L—Rockshaft Control Lever	31
M—Differential Lock Pedal	26
N—Hydraulic Stop Valve	30, 32
O—Speed-of-Drop Valve	31
P—PTO Control Lever	44
Q—Front-Wheel Drive Shift Lever (optional)	27
R—Clutch Pedal	25

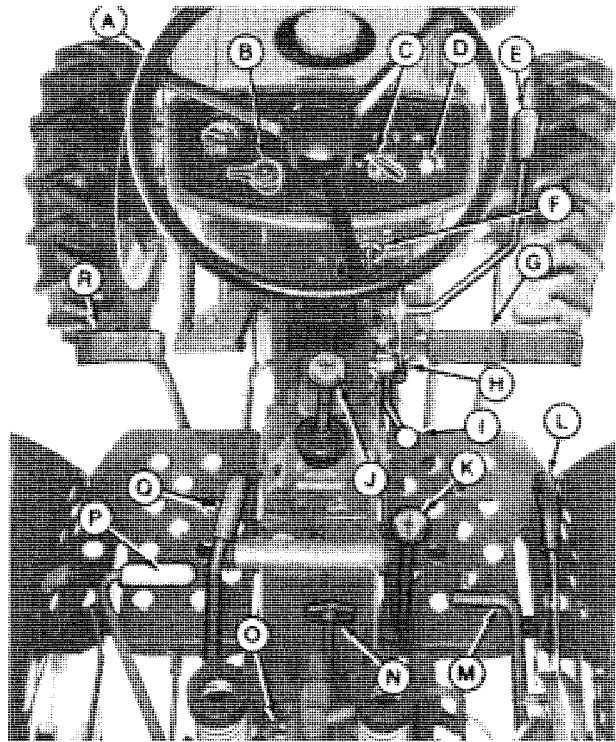

A09;RW8026 U01;C101A 061284

GAUGES AND INSTRUMENTS

	Page
A—Tach Hourmeter	9
B—Fuel Gauge	9
C—Charging System Indicator	10
D—Coolant Temperature Indicator	10
E—Oil Pressure Indicator	10

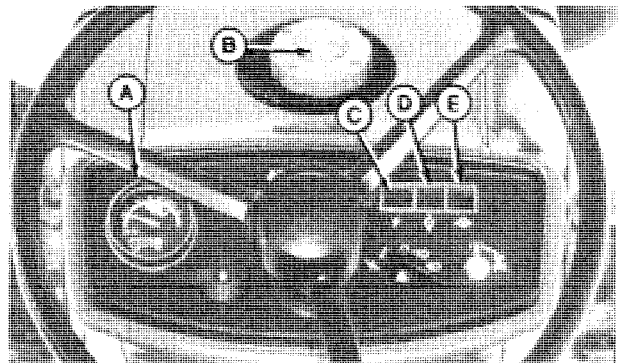

A09;RW8027 U01;C101B 031182

CHECK INSTRUMENTS OFTEN

Leave key switch on while operating tractor so instruments will function. Check indicator lamps each time engine is started to be sure they work.

U01;CI02 010982

WORKING WITH THE TACH HOURMETER


Tach hourmeter shows engine speed in rpm (A), and hours of operation in full hours and tenths (B).

Rear PTO speed is monitored with the tach hourmeter. Align needle with "PTO Rated" mark (C) for standard rear PTO speed (540 rpm). PTO rated engine speed is 2350 rpm for the 650 Tractor or 2300 rpm for the 750 Tractor.

"PTO Max" mark (D) indicates a ten percent overspeed of PTO and is maximum engine speed for use in PTO operations.

IMPORTANT: Never exceed indicated PTO max speed when PTO is engaged.

- A—Engine Speed
- B—Hour Meter
- C—PTO Rated Mark
- D—PTO Max Mark

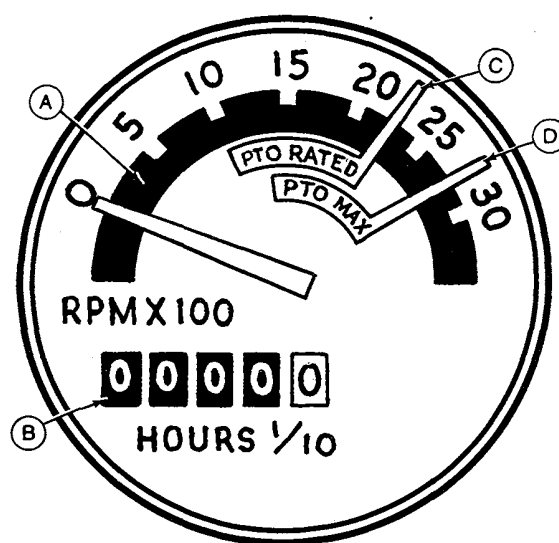


A09;RW215 U01;CI03 010982

WATCH FUEL LEVEL

IMPORTANT: Use diesel fuel only. See fuel specifications on page 62.


Stop to refuel before gauge (A) reaches empty mark. Should tractor run out of fuel, and not start in several attempts, air must be bled from fuel lines. (See Bleeding Fuel Lines in Service section).

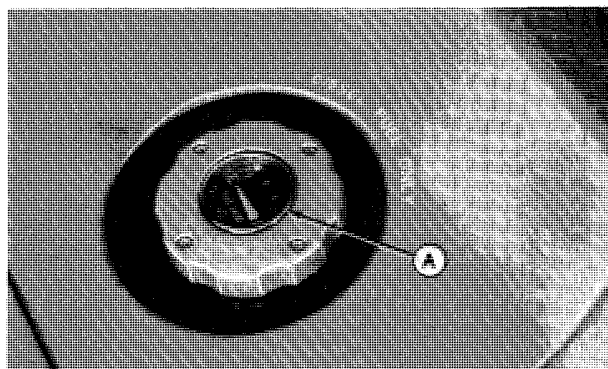

A09;RW216 U01;CI04 031182

WATCH INSTRUMENT INDICATOR LAMPS


IMPORTANT: All three indicator lamps (A) should glow when the key is turned to engage starter. If a lamp glows for more than five seconds at any other time during normal operation, stop the engine and determine the cause.

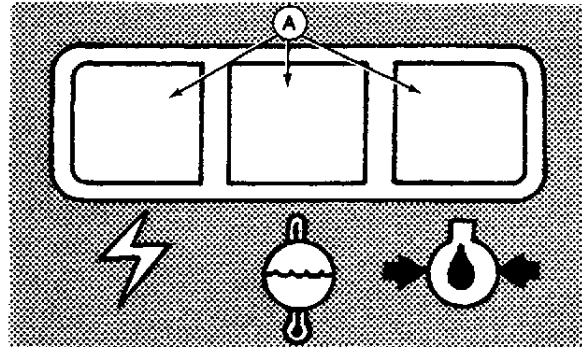

A09/RW217 U01;C105 010982

CHECK CHARGING SYSTEM INDICATOR


Charging system lamp (A) will glow when alternator output is too low. If loose fan belt (page 86) is not the cause, see your John Deere dealer.

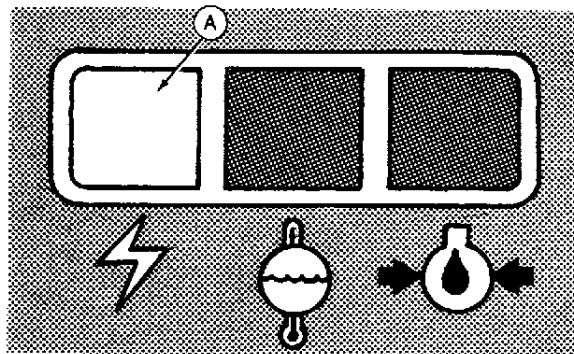

A09/RW218 U01;C106 030982

CHECK COOLANT TEMPERATURE INDICATOR

Temperature lamp (A) will glow if engine coolant temperature becomes too high. If lamp glows, check coolant level in coolant recovery tank. Also check grille, side screens and radiator for plugging. Check fan belt tension, see page 86.

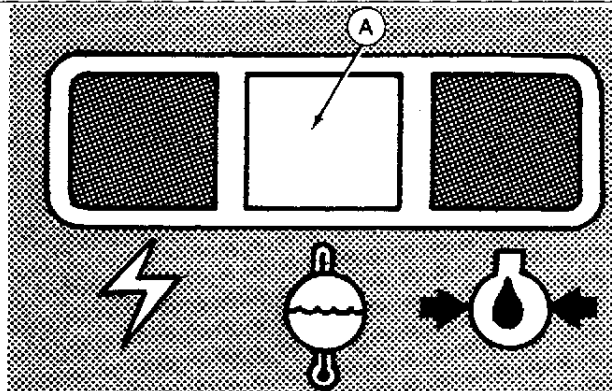


A09/RW219 U01;C107 010982

CHECK OIL PRESSURE INDICATOR

Oil pressure lamp (A) glows if engine oil pressure falls too low. If low oil level (page 68) is not the cause, see your John Deere dealer.

IMPORTANT: Never operate an engine without sufficient oil pressure.

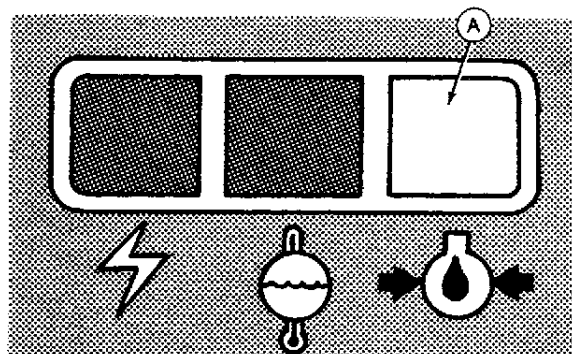


A09/RW220 U01;C108 030982


Operator's Station

ADJUST SEAT

To move seat forward or back, remove clip (A), and pin (B) and reinstall through desired adjustment holes (C).

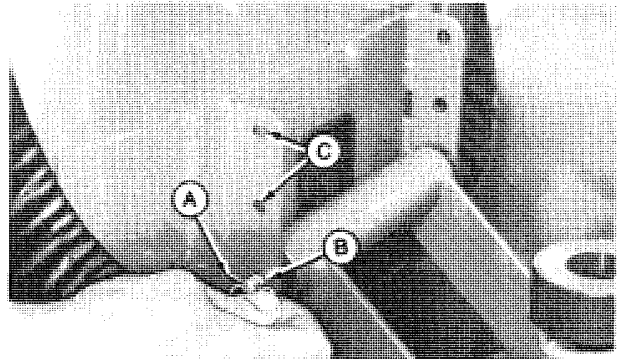

To protect seat when tractor is not in use, tilt it forward.

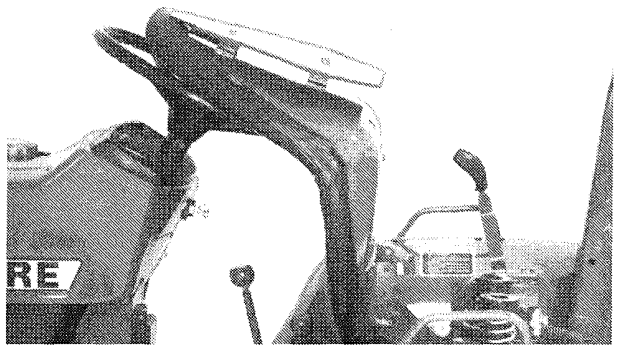

A09;RW6026,RW6029 U01;0501 010982


USE SEAT BELT



CAUTION: Use a seat belt when you operate with a roll-over protective structure (ROPS) to minimize chance of injury from an accident such as an overturn.

Do not use a seat belt if operating without a ROPS.

Use of a seat belt is not recommended for tractors without a rollover protective device.

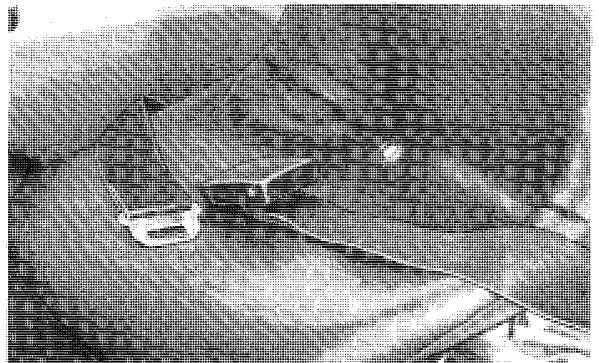


A09;RW223 U01;0502 201284

Engine Break-in

The engine is ready for normal operation. However, you should be extra cautious during the first 100 hours.


1. Avoid unnecessary engine idling. If tractor will be idle longer than five minutes, stop the engine.
2. Watch coolant temperature indicator closely. If lamp glows, shift to a lower gear or reduce load. Unless temperature quickly drops, stop the engine and determine the cause.

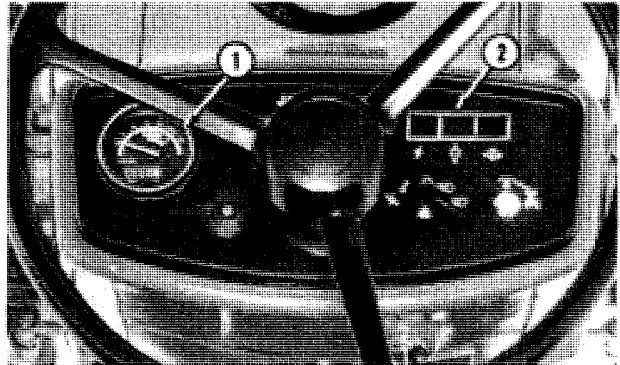

A09/RW8030 U01;EB01 010982

3. Check engine oil level and coolant level more frequently. Check engine oil level with dipstick (A). Check coolant level in coolant recovery tank (B). Watch for any sign of leaks.


If oil must be added during first 50 hours, use oil meeting specifications on page 63.

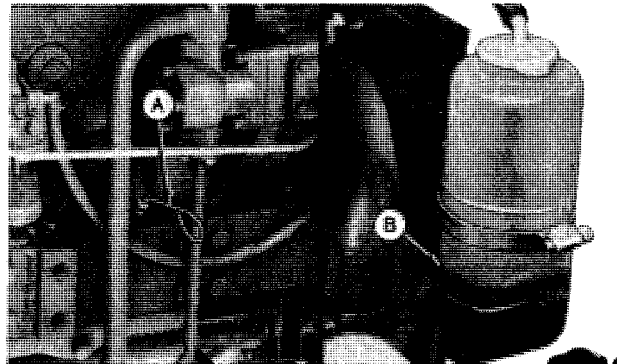

A09/RW225 U01;EB02 010982

4. Follow break-in lubrication and service instructions on page 66.

5. Until you become thoroughly familiar with the sound and feel of your new tractor, stay extra attentive and alert.

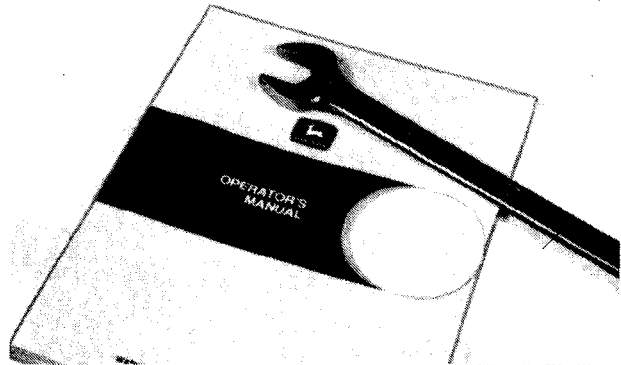


A09/RW4266 U01;EB03 031182

Prestarting Checks


Do the following before starting the engine for the first time each day.

1. Check the engine oil level. Wipe dipstick (A) off and reinsert it fully.


Safe operating range is between two marks on dipstick. Do not operate engine when oil level is below lower mark on dipstick. Add oil through filler hole in valve cover (B). See page 63 for oil specifications.

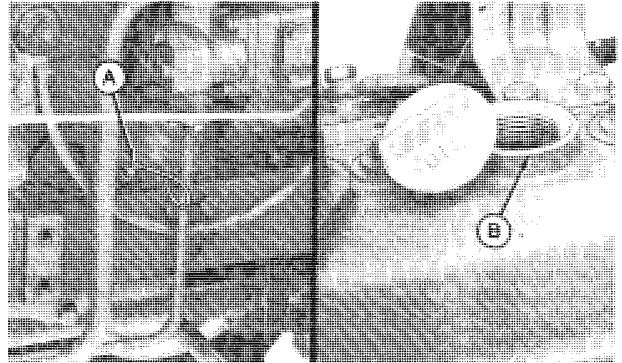


2. Check coolant level in recovery tank. If engine is cool and level is below "LOW", add coolant to recovery tank to bring level to "FULL".

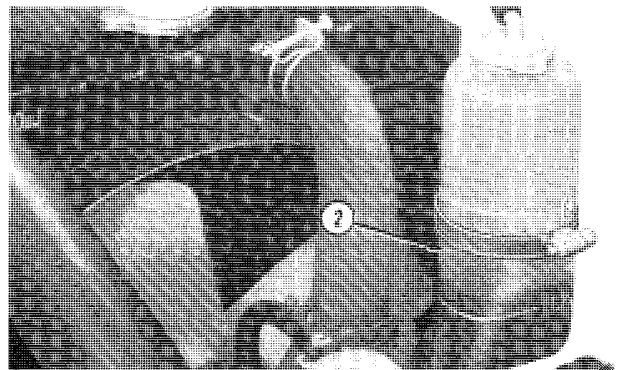

3. Check fuel filter sediment bowl. If water or sediment is present, remove it. See page 75.

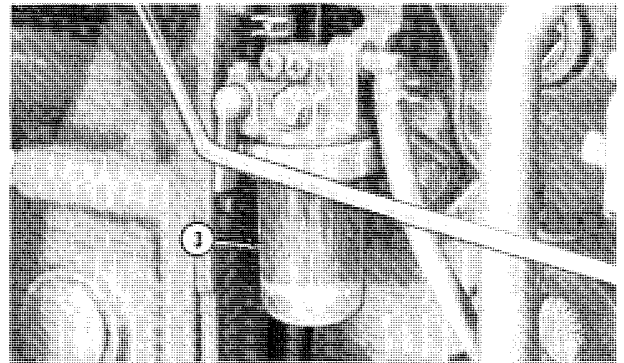


4. Lubricate front axle pivot pin on tractors without front-wheel drive with several shots of grease specified on page 64A.

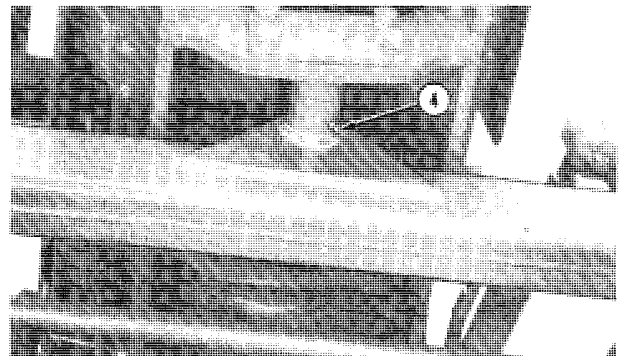


Prestarting Checks

5. Lubricate drag link ends (A) and tie rod ends (B) with several shots of grease specified on page 64A.

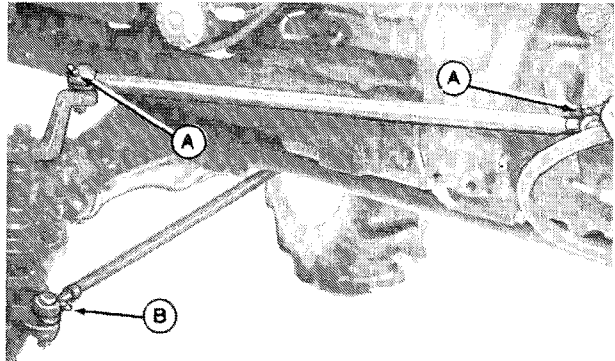

A09;RW2424 U01;PC05 061284

6. Lubricate steering spindles on tractors without front-wheel drive. Remove relief plugs (A) and apply several shots of grease to steering spindle fittings (B). Reinstall relief plugs. Use grease specified on page 64A.

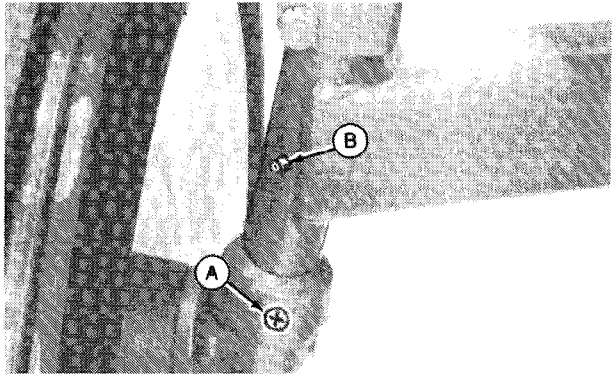

A09;RW2425 U01;PC06 061284



Suggest:

If the above button click is invalid.

Please download this document

first, and then click the above link

to download the complete manual.

Thank you so much for reading

Operating the Engine

BEFORE STARTING THE ENGINE


⚠ CAUTION: Before starting engine, be sure there is plenty of ventilation.

NOTE: If temperature is below 5°C (40°F), it may be necessary to use a Cold Weather Starting Aid. Refer to the end of this section.

U01,DC0: 010982


STARTING THE ENGINE

1. Open fuel shut-off valve.
2. Check to be sure tractor has plenty of fuel.

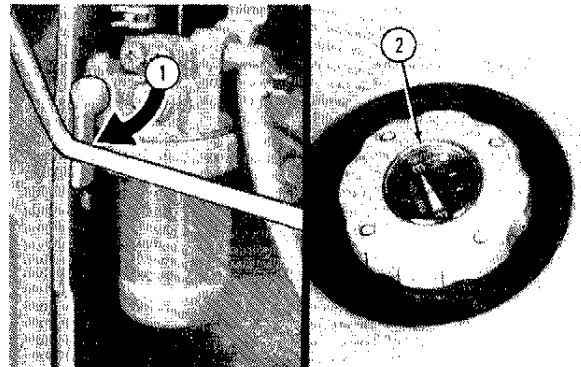


A09,RW230 U01,OF02 061284

3. Place gear shift lever (A), range shift lever (B), and PTO lever (C) in neutral positions. Starter will not operate if gear shift lever and PTO lever are not in neutral.

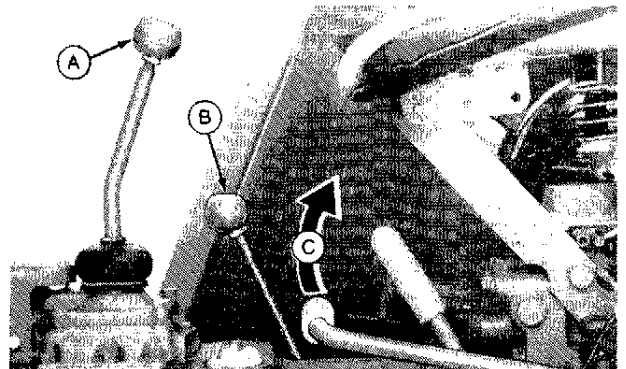

A09,RW231 U01,OE03 010982

4. On front PTO equipped tractors, be sure PTO switch is in the OFF position. Starter will not operate if switch is ON.

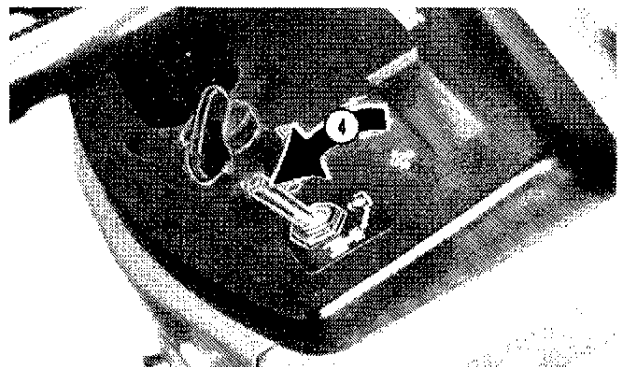

A09,RW8031 U01,OE04 010982

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>