

**2155, 2355,  
2555 AND 2755  
TRACTORS  
(UP TO SERIAL  
NO. 754 999L)**



**JOHN DEERE**

**OPERATORS MANUAL**  
2155, 2355, 2555 AND 2755  
TRACTORS (UP TO SERIAL NO. 754  
999L)

OML60034 L0 English

**JOHN DEERE WERKE MANNHEIM  
OML60034 L0**

LITHO IN THE U.S.A.  
ENGLISH



# Introduction

**READ THIS MANUAL CAREFULLY** to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

**THIS MANUAL SHOULD BE CONSIDERED** a permanent part of your machine and should remain with the machine when you sell it.

**MEASUREMENTS** in this manual are U.S. customary units and their metric equivalents.

**RIGHT-HAND AND LEFT-HAND SIDES** are determined by facing in the direction of forward travel.

**WRITE PRODUCT IDENTIFICATION NUMBERS** in the Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

**WARRANTY** is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

**THE TIRE MANUFACTURER'S** warranty supplied with your machine may not apply outside the U.S.

*All information, illustrations, and specifications contained in this operator's manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

COPYRIGHT © 1990 DEERE & COMPANY  
European Office Mannheim  
All rights reserved  
A John Deere ILLUSTRATION™ Manual  
PREVIOUS EDITIONS  
COPYRIGHT © 1987, 1989

# Contents

<b>Identification Views</b> .....	<b>00-4</b>	<b>Operator's Station</b> .....	<b>30-</b>
		– Lighting system .....	30-1
<b>Safety</b> .....	<b>05-</b>	– Seats .....	30-3
– Safety .....	05-1	– Roll guard .....	30-5
		– Seat belt .....	30-5
<b>Safety Decals</b> .....	<b>06-</b>	– Windshield wipers .....	30-6
– Safety decals .....	06-1	– Fan, air louvers, heater .....	30-6
		– Air conditioning system .....	30-7
		– Steering wheel adjustment .....	30-7
<b>Controls and Instruments</b> .....	<b>10-</b>	<b>Treads, Tires, Ballast</b> .....	<b>35-</b>
– Controls .....	10-1	Wheel treads .....	35-1
– Control lights .....	10-2	– Adjusting front wheel tread .....	35-2
– Instruments .....	10-3	– Checking front wheel toe-in .....	35-2
		– Adjusting front wheel toe-in .....	35-3
<b>Break-In Period</b> .....	<b>15-</b>	– Rear wheel tread adjustment .....	35-4
– After the first 4 and 8 hours .....	15-1	Tires .....	35-6
– After the first 50 hours .....	15-2	– Tire pressures .....	35-6
– Within the first 100 hours .....	15-2	– Servicing tires .....	35-6
– After the first 100 hours .....	15-2	– Use correct tire combinations .....	35-7
		Ballast .....	35-7
<b>Operating the Engine</b> .....	<b>20-</b>	– Measuring rear wheel slip .....	35-8
– Prestarting check .....	20-1	– Filling tires with liquid ballast .....	35-9
– Starting the engine .....	20-2	– Front weights .....	35-10
– Electric starting aid .....	20-3	<b>Rockshaft, Three-Point Hitch</b> .....	<b>40-</b>
– Starting with a booster battery .....	20-3	Rockshaft .....	40-1
– Towing the tractor to start .....	20-4	– Control lever .....	40-1
– Towing the tractor .....	20-5	– Load selector lever .....	40-3
– Parking the tractor .....	20-5	– Rate-of-implement drop .....	40-4
– Stopping the engine .....	20-6	Three-point hitch .....	40-5
		– Draft links .....	40-5
<b>Operating the Tractor</b> .....	<b>25-</b>	– Center link .....	40-6
Reduce fuel consumption .....	25-1	– Lift links .....	40-7
Ground travel speeds .....	25-3	– Attaching implements .....	40-8
– At desired engine speed .....	25-3	– Positioning sway blocks .....	40-9
– At rated engine speed .....	25-4	<b>Accessories</b> .....	<b>45-</b>
– Shifting transmission .....	25-6	Selective control valves .....	45-1
– Hi-Lo shift unit .....	25-7	– Poppet type valves .....	45-1
– Creeper transmission .....	25-7	– Spool type valves .....	45-6
– Reverser transmission .....	25-8	– Quick couplers .....	45-6
– Differential lock .....	25-8	– Maximum permissible oil withdrawal .....	45-7
– Foot brakes .....	25-8	Double acting remote hydraulic cylinder .....	45-8
		Swinging drawbar .....	45-9
		<b>Power Take-Off</b> .....	<b>50-</b>
		– PTO guard .....	50-1
		– Operation of PTO .....	50-2
		– Attaching PTO driven equipment .....	50-3

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**


## Contents

<b>Front-Wheel Drive</b> .....	<b>55-</b>	<b>Service – Cooling System</b> .....	<b>95-</b>
– Operation .....	55-1	– Checking coolant level .....	95-1
– Adjusting front wheel tread .....	55-2	– Replacing coolant .....	95-2
– Tires .....	55-3		
		<b>Service – Axles and Wheels</b> .....	<b>100-</b>
<b>Fuel, Lubricants, Coolant</b> .....	<b>60-</b>	– Lubricating front axle .....	100-1
Fuel .....	60-1	– Lubricating drive housings and shafts .....	100-2
– Fuel specifications .....	60-1	– Lubricating rear axles .....	100-2
– Fuel storage .....	60-1	– Checking front axle oil level .....	100-3
Lubricants .....	60-2	– Changing front axle oil .....	100-4
– Engine oil .....	60-2		
– Fluid for hydraulically operated clutch .....	60-2	<b>Service – Fuel System</b> .....	<b>105-</b>
– Transmission/hydraulic oil .....	60-3	– Checking fuel filter .....	105-1
– Transmission oil for MFWD front axle .....	60-4	– Replacing fuel filter .....	105-2
– Multipurpose grease .....	60-4	– Cleaning fuel transfer pump .....	105-2
– Extreme pressure grease .....	60-4	– Bleeding fuel system .....	105-3
– Engine coolant .....	60-5		
		<b>Service – Transmission/Hydraulics</b> .....	<b>110-</b>
<b>Removing Access Covers</b> .....	<b>65-</b>	– Checking oil level .....	110-1
– Hood .....	65-1	– Replacing filter element .....	110-2
– Grille screens .....	65-1	– Changing oil .....	110-3
– Battery box covers .....	65-2	– Replacing steering filter .....	110-3
<b>Lubrication and Periodic Service</b> .....	<b>70-</b>	<b>Service – Miscellaneous</b> .....	<b>115-</b>
– Service intervals .....	70-1	– Operator’s seat .....	115-1
– Time-table .....	70-2	– 3-Point hitch .....	115-1
		– SGB-air filter .....	115-2
<b>Service – Air Intake System</b> .....	<b>75-</b>		
– Primary air filter .....	75-1	<b>Service – Electrical System</b> .....	<b>120-</b>
– Secondary air filter .....	75-3	– Batteries .....	120-1
– Dust unloading valve .....	75-4	– Checking specific gravity .....	120-2
– Air intake hoses .....	75-4	– Level of electrolyte .....	120-3
		– Neutral start system .....	120-4
<b>Service – Brakes</b> .....	<b>80-</b>	– Starting motor .....	120-4
– Bleeding brakes .....	80-1	– Removing batteries .....	120-5
– Adjusting hand brake .....	80-1	– Alternator .....	120-7
		– Lamps .....	120-8
<b>Service – Clutch</b> .....	<b>85-</b>	– Fuses .....	120-10
– Adjusting clutch .....	85-1		
– Adding fluid to clutch reservoir .....	85-2	<b>Service – Heater and Air Conditioning System</b> .....	<b>125-</b>
– Lubricating clutch throw-out bearing .....	85-2	– Air conditioning system .....	125-1
		– Heater .....	125-2
<b>Service – Engine</b> .....	<b>90-</b>		
– Engine oil .....	90-1		
– Engine filter .....	90-2		
– Alternator V-belt .....	90-2		
– Engine speeds .....	90-2		

Contents

<b>Tractor Storage</b> .....	<b>130-</b>	<b>Identification Numbers</b> .....	<b>145-</b>
– Storage .....	130-1	– Identification numbers .....	145-1
– Removing tractor from storage .....	130-2		
<b>Crime Prevention</b> .....	<b>130-3</b>	<b>Lubrication and Maintenance Records</b> .....	<b>150-</b>
– Vandal Protection Equipment .....	130-3	– Lubrication and maintenance records .....	150-1
– Crime prevention tips .....	130-4		
		<b>Attachments</b> .....	<b>155-</b>
<b>Troubleshooting</b> .....	<b>135-</b>	– Attachments .....	155-1
– Hydraulic system .....	135-1		
– Engine .....	135-2	<b>Index</b> .....	<b>160-</b>
– Electrical system .....	135-3	– Index .....	160-1
<b>Specifications</b> .....	<b>140-</b>		
– Engine .....	140-1		
– Weights .....	140-3		
– Electrical system .....	140-4		
– Capacities .....	140-4		

# Identification Views

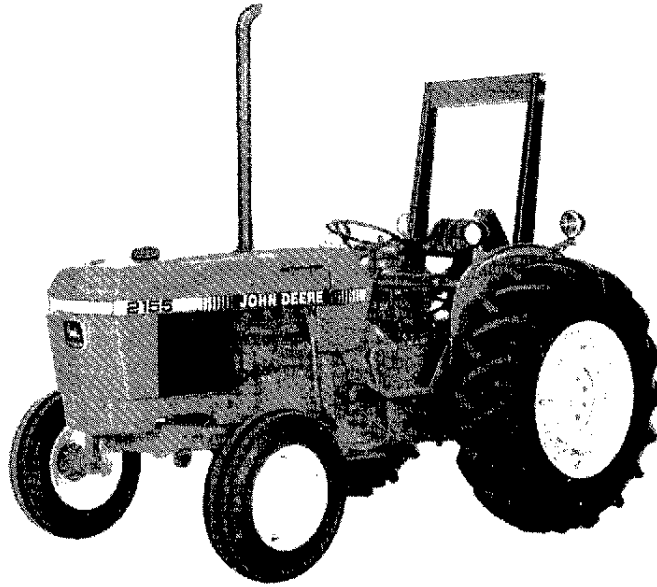

L119752



L118491

L119752,L118491-GPTALE-010189

# Safety (General)

## RECOGNIZE SAFETY INFORMATION

This is the safety alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices as well as the general safety and accident prevention regulations in order to avoid accidents.



T 81389


T81389-ESPDAE-260188

## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs.

Learn how to operate the machine and how to use the controls before starting work. During work is too late! Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

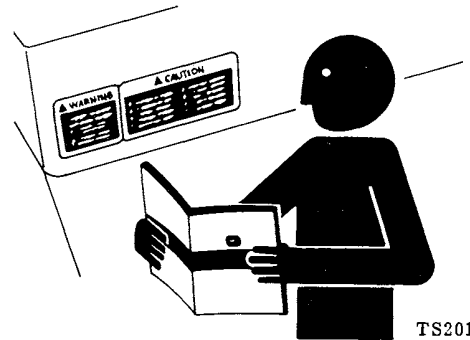

TS201

TS201-ESPDAE-260188

## UNDERSTAND SIGNAL WORDS

A signal word – DANGER, WARNING or CAUTION – is used with the safety alert symbol. DANGER identifies the most serious hazards.


Safety signs with signal words DANGER or WARNING are typically located near specific hazards.

General precautions are listed on the CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

SIGNAL-ESPDAE-140388

### OBSERVE ROAD TRAFFIC REGULATIONS

Always observe local road traffic regulations when using public roads.

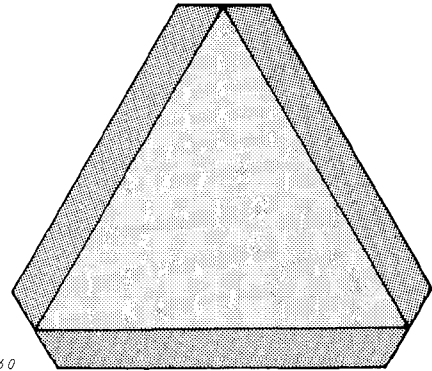

H28930

H28930-ESPDAE-160288

### PREVENT MACHINE RUNAWAY

Avoid possible injury or death from a machine runaway.

Do not start the engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with the transmission in neutral or "Park".



TS177


TS177-ESPDAE-260188

### PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital and fire department near your telephone.

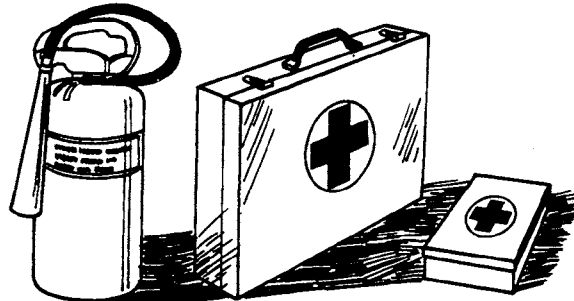

L 114 052

L114052-ESPDAE-170388

### WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as ear-muffs or earplugs to protect against objectionable or uncomfortable loud noises.



TS206

TS206-ESPDAE-230487

### HANDLE FUEL SAFELY – AVOID FIRES

Handle fuel with care: It is highly flammable. Do not refuel the machine while smoking or when near an open flame or sparks.

Always stop engine and remove key from main switch before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease and debris. Always clean up spilled fuel.




TS202

TS202-ESPDAE-260188

### HANDLE CHEMICALS PROPERLY

The operator's cab air filters are NOT designed to filter out harmful chemicals. Follow instructions given in the implement operator's manual and those given by chemical manufacturer when using agricultural chemicals.

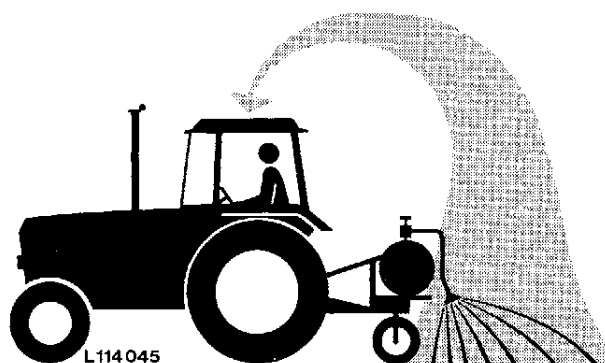

L114045

L114045-ESPDAE-14C388

### STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.



TS 219

TS219-ESPDAE-160288

# Safety (Operation)

## CHECK MACHINE SAFETY

Always check the road and general operating safety of the machine before using.

SAFETY-ESPDAE-260188

## DRIVING THE TRACTOR

Operate tractor only when all guards are fitted and in their correct position.

Before moving away, always check immediate vicinity of machine (e.g. for children). Ensure adequate visibility.


Always adapt your ground speed to meet the ground conditions. Avoid making sharp turns when driving up or down slopes or when driving across the slope. Do not attempt to turn the machine with the differential lock engaged. When driving down slopes, never depress the clutch and change gear!

Attach implements and trailers to the tractor only using the prescribed drawbars or hitches. Attach trailers and implements correctly. Always ensure that trailers and implements cannot roll away.

When making turns with towed or mounted implements, always take into consideration the width and inertia of the implement.

Reduce your ground speed when driving the tractor on slopes or over uneven ground and before making sharp turns. Before descending a steep hill, shift to a lower gear. Never coast downhill!

Avoid holes, ditches and obstructions which may cause the tractor to tip, particularly on hillsides.

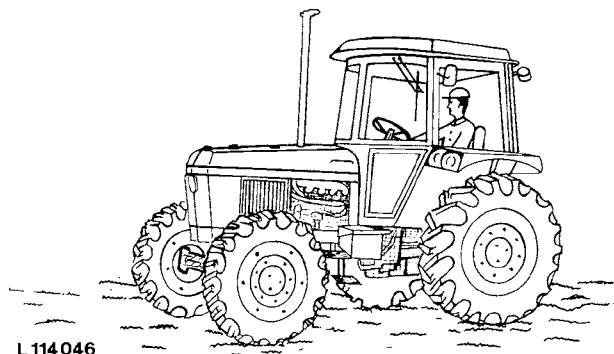

L 114 046


L114046-ESPDAE-140386

### KEEP RIDERS OFF MACHINE

Only allow the operator on the machine.  
Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

On machines equipped with a passenger seat, one rider is permitted.

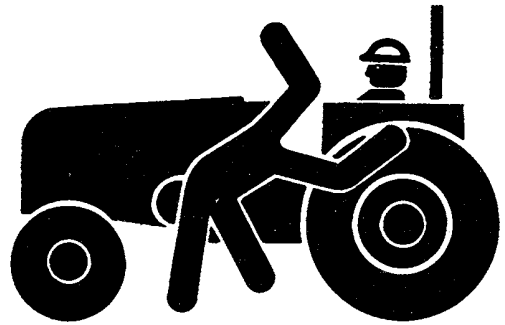


TS213

TS213-ESPDAE-140388

### USE SEAT BELT PROPERLY

Use a seat belt when operating the machine with a roll-over protective structure (ROPS) to minimize the risk of injury from an accident such as an overturn.

Do not use a seat belt if operating with ROPS down.

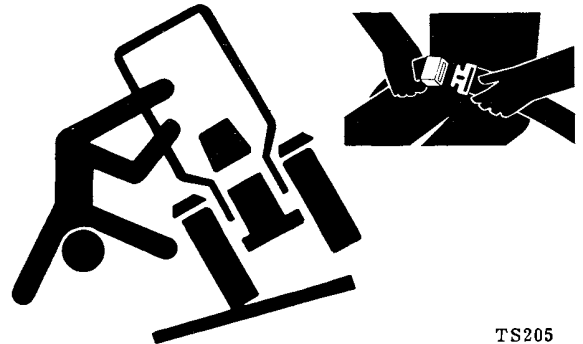

TS205

TS205-ESPDAE-011190


### USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar while transporting.

Using appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine.

Do not use the safety chain for towing!

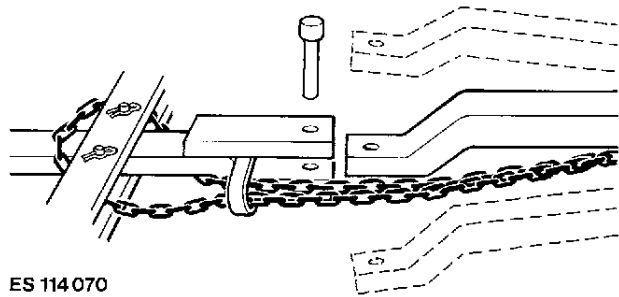

ES 114 070

ES114070-ESPDAE-080988

### STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death. When operating with the PTO, no-one must be allowed to remain in the vicinity of the rotating PTO stub shaft or drive shaft. Always ensure that the guards for PTO drive shaft, PTO stub shaft and drive shaft guards are in position and that rotating shields turn freely.

Wear close-fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections or cleaning out PTO-driven equipment.

As soon as PTO drive shaft has been removed, reinstall guard over PTO stub shaft.



TS198

TS198-ESPDAE-160288

### REDUCE SPEED WHEN TOWING LOADS

Braking to stop towed loads from transport speeds can cause the towed load to swerve and upset. Reduce speed if towed load weighs more than the tractor and is not equipped with brakes.


Follow recommended speed-weight ratio guidelines:

Maximum speed is 32 km/h (20 mph) when towing load equal to or less in weight than the tractor.

Reduce speed to 16 km/h (10 mph) when towing load up to double the tractor weight.

Do not tow loads exceeding double the tractor weight.

Use additional caution when towing loads under adverse surface conditions, when turning and on inclines.

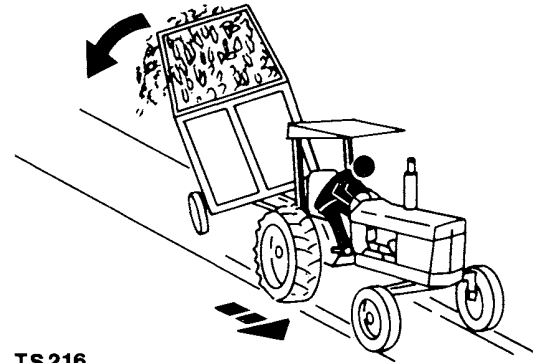

TS216

TS216-ESPDAE-120189

### FRONT-WHEEL DRIVE

Front-wheel drive greatly increases traction. This means that the tractor can be driven on steeper slopes, increasing the possibility of a tip over. Driving forward out of a ditch or up a steep slope could cause tractor to tip over to the rear. Therefore reverse out of these situations whenever possible.

Never drive near the edge of a gully or steep embankment – it might cave in!



L 114 047

L114047-ESPDAE-140388

### BALLASTING FOR SAFE GROUND CONTACT

Operating, steering and braking performance of tractor can be considerably affected by attached implements, trailers or ballast weights.

To maintain the necessary ground contact, ballast the tractor as necessary.

Observe the maximum permissible axle loads and total weights.



ES 114 061

ES114061-ESPDAE-220688

### **OPERATING THE ENGINE**

Never operate the engine in a closed building.  
Danger of asphyxiation!

When starting the engine, rockshaft control lever must be in "lower" position.



ES 118 711

ES118711-ESPDAE-220688

### **HANDLE STARTING FLUID SAFELY**

Starting fluid is highly flammable.

Keep all sparks and flames away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, always keep the cap on the container and store in a cool, protected location.

Do not incinerate or puncture starting fluid containers, even when empty.



TS 6089A

TS6089A-ESPDAE-230388




### PARKING AND LEAVING THE TRACTOR

Lower mounted implement(s) or equipment to the ground before leaving the tractor.

When leaving the tractor and/or implements, shut off engine, engage range and gear shift levers as well as handbrake or parking lock, remove main switch key and lock the operator's cab (when equipped). Position chock blocks.

Never leave tractor unattended as long as engine is still running.

Never leave the operator's platform/cab when driving.

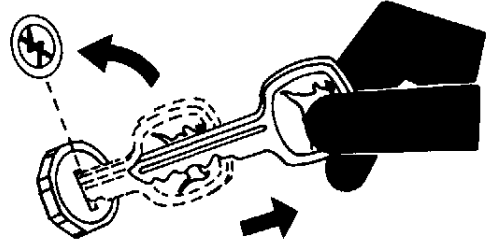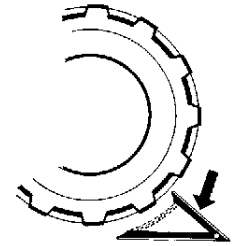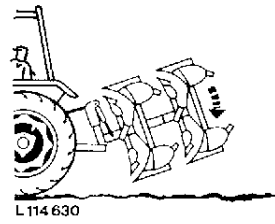


L114630,L102637A,TS230-ESPDAE-160288

### USE SAFETY LIGHTS AND DEVICES

When transporting your machine on a public road either at night or during the day, use the necessary safety lights. Check local government regulations.

Keep safety items in good condition. Replace missing or damaged items.

- A-Lights
- B-Slow moving vehicle emblem
- C-Reflector tape
- D-Reflectors

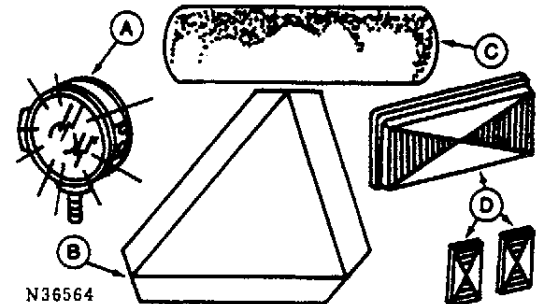

N36564-ESPDAE-260188

# Safety (Service)

## PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate or service machine while it is moving. Keep hands, feet and clothing from power-driven parts. Disengage all power and operate the controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil or debris.

Disconnect battery ground cable(s) (-) before making adjustments on electrical system or welding on machine.




TS218

TS218-ESPDAE-160288

## SERVICE MACHINE SAFELY

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

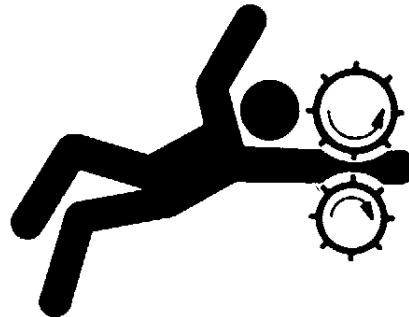


TS228

TS228-ESPDAE-160288

## SUPPORT MACHINE PROPERLY

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.

Do not support the machine on cinder blocks, hollow tiles or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

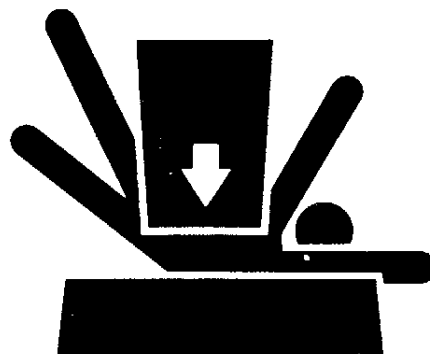


TS229

TS229-ESPDAE 160288

### SERVICE FRONT-WHEEL DRIVE TRACTOR SAFELY

When servicing front-wheel drive tractor with the rear wheels supported off the ground and rotating wheels by engine power, always support front wheels in a similar manner. Loss of electrical power or transmission/hydraulic system pressure will engage the front driving wheels, pulling the rear wheels off the support if front wheels are not raised. Under these conditions, front drive wheels can engage even with switch in disengaged position.

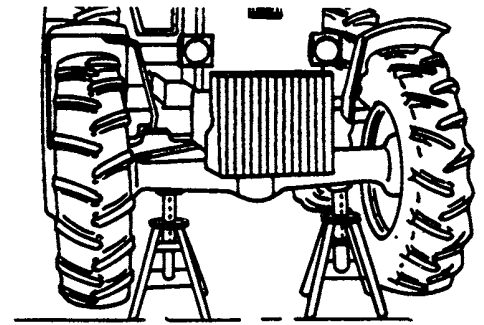

L114050

L114050-ESPD AE-140388

### USE GENUINE JOHN DEERE PARTS

Genuine John Deere parts have been specifically designed for John Deere machines.

Other parts are neither examined nor released by John Deere. Installation and/or use of such products could thus have negative effects upon the design characteristics of the machine and thereby affect its safety.

Avoid this risk by using only genuine John Deere parts.




ES 118837

ES118837-ESPD AE-141288

### RETIGHTEN WHEEL NUTS

Retighten machine wheel nuts at the intervals specified in section "Break-In Period" and "Service".

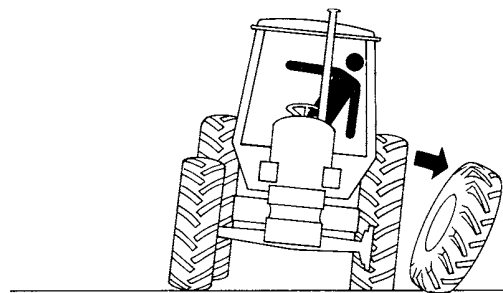


ES 114062

ES114062-ESPD AE-220688

### KEEP CAB/ROPS INSTALLED PROPERLY

Make certain all parts are reinstalled correctly if the cab or roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to specified torque.

Protection offered by cab or ROPS will be impaired if subjected to structural damage, involved in an overturn incident or altered in any way by welding, bending, drilling or cutting. A damaged cab or ROPS should be replaced, not reused.

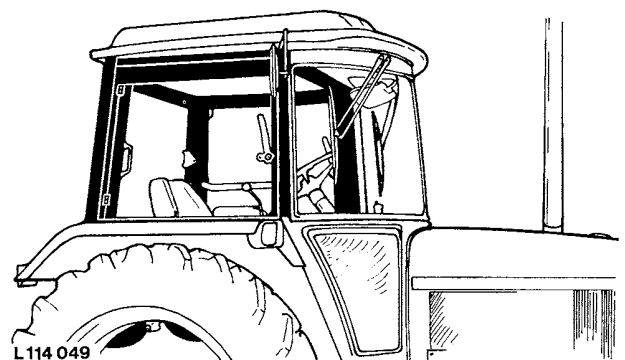


L114049

L114049-ESPD AE-140388

### AVOID HIGH-PRESSURE FLUIDS

Escaping fluid (fuel or hydraulic oil) under pressure can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure. Keep hands and body away from pinholes and nozzles which eject fluids under high pressure. Use a piece of cardboard to search for leaks.

If ANY fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type of injury, or gangrene may result.

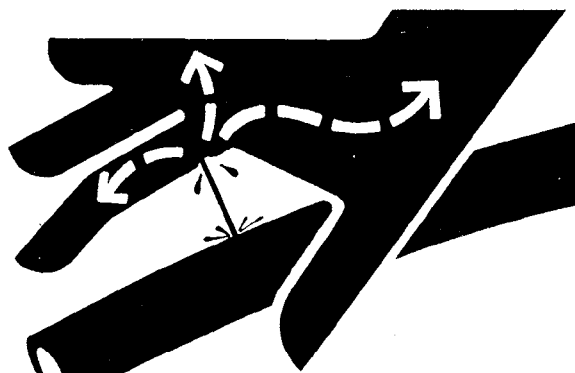


X9811-ESPDAE-000188

### AVOID BATTERY EXPLOSIONS

Battery gas can explode. Keep sparks and flames away from batteries. Use a flashlight to check battery electrolyte level.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Always remove grounded (-) battery clamp first and replace it last.

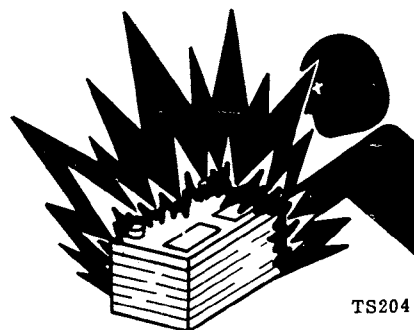

TS204

TS204-ESPDAE-260188



**Suggest:**

**If the above button click is invalid.**

**Please download this document**


**first, and then click the above link**

**to download the complete manual.**

**Thank you so much for reading**

## DISCONNECT ELECTRICAL CIRCUIT

Disconnect battery ground strap(s) before carrying out any electrical repairs or welding on the machine. See also under important notes for "Alternator" in section "Service – Electrical System".

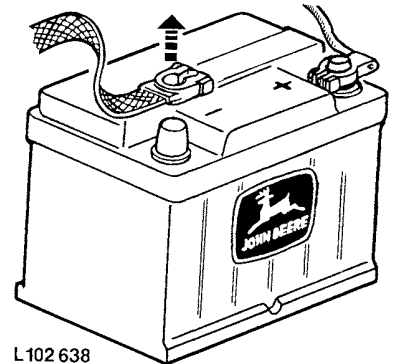

L102 638

L102638-ESPDAE-260188

## HANDLE BATTERIES SAFELY

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling the batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing in the fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Using the proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
  2. Apply baking soda or lime to help neutralize the acid.
  3. Flush your eyes with water for 10 – 15 minutes.
- Get medical attention immediately.

If acid is swallowed:

1. Drink large amounts of water or milk.
2. Then drink milk of magnesia, beaten eggs or vegetable oil.
3. Get medical attention immediately.

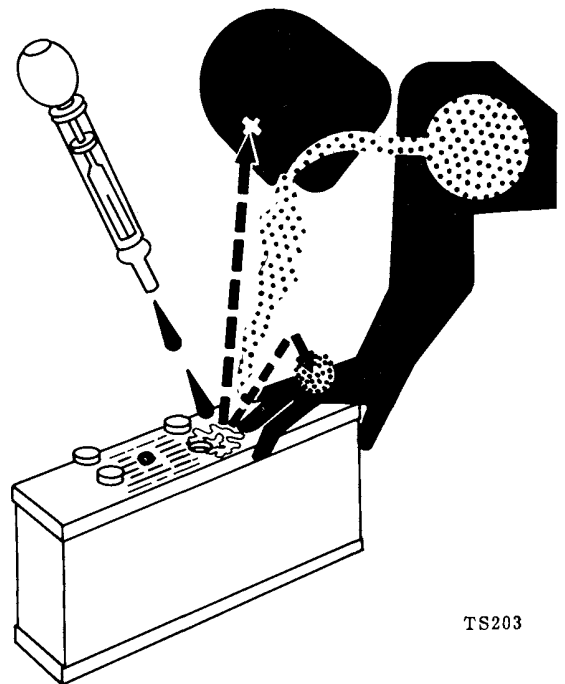

TS203

TS203-ESPDAE-160288

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**