

3040 and 3140 Tractors (From Serial No. 450,000 L)



JOHN DEERE

OPERATORS MANUAL

3040 and 3140 Tractors (From Serial
No. 450,000 L)

OML40946 E5 English

John Deere Werke Mannheim
OML40946 E5

LITHO IN U.S.A.
ENGLISH





INSPECTIONS

We appreciate the confidence you have shown in John Deere and your John Deere dealer for the purchase of this equipment.

We want you to have the best performance from your new machine. To accomplish this, your dealer will perform a Predelivery Inspection and will familiarize you with the proper and safe operation of this machine.

After the machine has operated the first 100 hours, you should contact your dealer and arrange an appropriate date at which the After-Sale Inspection will be performed. It will be performed most effectively in the workshop of your dealer.

Your dealer completed the predelivery inspection according to the check list, while at the end of this manual you will find the After-Sale Inspection check list.

These check lists will be completed by your dealer while the inspections are being performed. He will then forward the original and one copy of each inspection list to the John Deere Sales Branch Service Department, retaining the second copy for his files. The dealer will confirm completion of these inspections on that portion of the check list which remains in this manual.

The After-Sale Inspection is an important prerequisite to assure best performance of your new machine. For this reason you should not miss THE OPPORTUNITY to make proper arrangements with your dealer to get this service done at the proper time.

© Deere & Co., European Office, D-6800 Mannheim

All information, illustrations and specifications contained in this operator's manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

SAFETY



CAUTION: This safety alert symbol indicates important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

IMPORTANT: This machine is designed and manufactured according to JOHN DEERE specifications. To avoid accidents and to assure optimum performance the machine must not be modified or altered in ways not approved by JOHN DEERE, nor must it be used in conditions or for purposes it is not designed for.

To assure safe operation of this machine, read and comply with the Safety Rules on the first pages of this manual.

MEASUREMENTS

Your operator's manual contains the international standardized SI metric measurement system.


DIRECTION

Right-hand and left-hand sides of this machine are determined by facing in the direction of forward travel.

SERIAL NUMBERS

Record the serial numbers of your machine in the spaces provided at the end of this manual and provide this information to your dealer when ordering spare parts.

Identification Views

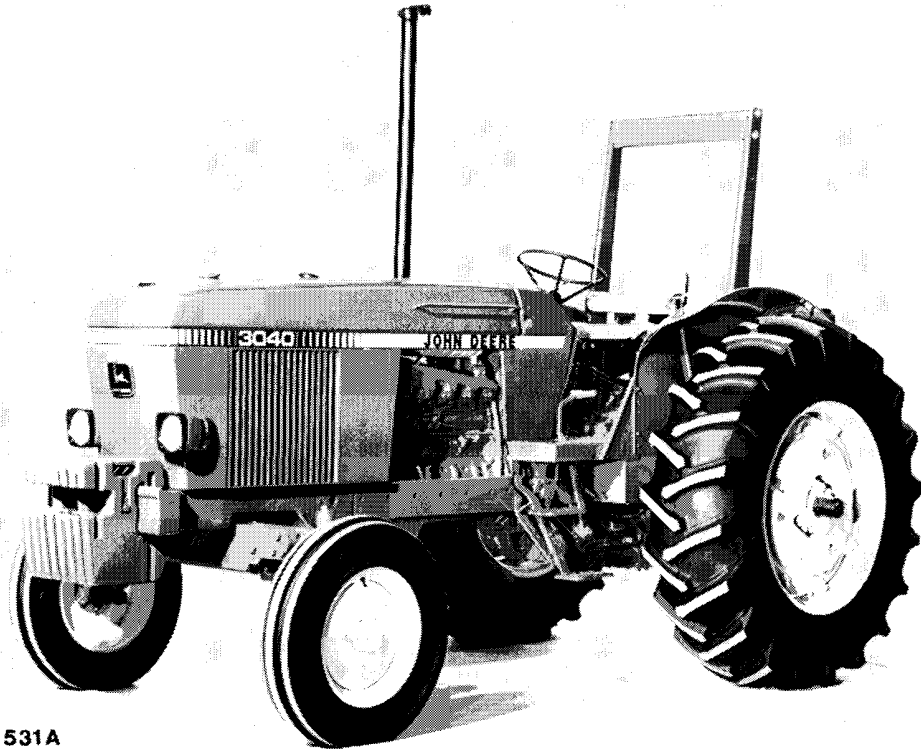

L 23 531A



L108 807

L23531A,L108807-3040ALE-010285

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Contents

Safety	05-	Operator's Platform and Cab	30-
– General	05-1	– “Bilux” lighting system	30-1
– Operation	05-4	– “Sealed Beam” lighting system	30-4
– Service	05-6	– Operator's seat	30-5
 		– Roll guard	30-5
Controls and Instruments	10-	– Seat belt	30-6
– Controls	10-1	– Opening windows	30-6
– Control lights	10-2	– Torques for hardware	30-6
– Instruments	10-3	– Cab air filters	30-7
 		– Windshield washer and wipers	30-7
Break-In Period	15-	– Fan, air louvers, heater	30-8
– After first 4 and 8 hours	15-1	– Air conditioning system	30-8
– After first 50 hours	15-1	– Cab interior lights	30-8
– After first 100 hours	15-2	– Steering wheel adjustment	30-9
– Within first 100 hours	15-2	– Cab hatch	30-9
Operating the Engine	20-	Wheel Treads, Tires and Ballast	35-
– Prestarting check	20-1	Wheel treads	35-1
– Starting the engine	20-2	– Adjusting front wheel tread	35-1
– Cold weather starting aids	20-2	– Front wheel steering angle	35-4
– Thermostart aid	20-3	– Checking front wheel toe-in	35-4
– Ether starting aid	20-3	– Adjusting front wheel toe-in	35-5
– Starting with a booster battery	20-5	– Rear wheel tread adjustment	35-6
– Towing the tractor to start	20-6	Tires	35-10
– Towing the tractor	20-6	– Tire pressures	35-10
– Parking the tractor	20-7	– Service tires safely	35-10
– Stopping the engine	20-7	– Tire combinations	35-11
– Chock block	20-7	Ballast	35-12
 		– Selecting ballast	35-12
Operating the Tractor	25-	– Measuring rear wheel slip	35-13
– Reduce fuel consumption	25-1	– Installing rear wheel weights	35-14
– Selecting ground travel speeds	25-3	– Filling tires with liquid ballast	35-15
– At desired engine speed	25-3	– Installing front weights	35-16
– At rated engine speed	25-4	 	
– Shifting transmission gears	25-6	Rockshaft and Three-Point Hitch	40-
– Hi-Lo shift unit	25-7	Rockshaft	40-1
– Front wheel drive	25-8	– Control lever	40-1
– Differential lock	25-8	– Selector lever	40-3
– Hydraulic foot brakes	25-9	– Adjusting rate-of-implement drop	40-4
– Trailer brakes	25-9	Three-point hitch	40-5
 		– Draft links	40-5
		– Center link	40-7
		– Lift links	40-8
		– Attaching implements	40-10
		– Positioning sway blocks	40-11
		– Stabilizer chains	40-12

Contents

<p>Additional Equipment 45-</p> <ul style="list-style-type: none"> Selective control valves 45-1 – Hydraulic hose couplers 45-3 – Maximum permissible oil withdrawal 45-5 Double acting remote hydraulic cylinder 45-6 Drawbar 45-7 Trailer hitches 45-8 <p>Power Take-Off 50-</p> <ul style="list-style-type: none"> – PTO guard 50-1 – PTO options 50-1 – Operating rear PTO 50-2 – Changing PTO shafts 50-2 – Operating front PTO 50-4 – Attaching PTO driven equipment 50-5 <p>Fuel, Lubricants, Hydraulic Oil and Coolant 55-</p> <ul style="list-style-type: none"> Fuel 55-1 – Fuel specifications 55-1 – Fuel storage 55-1 Lubricants 55-1 – Fluid for hydraulically operated clutch 55-1 – Engine oil 55-2 – Transmission/hydraulic oil 55-2 – Front axle oil 55-3 – EP-multipurpose grease 55-3 – Engine coolant 55-4 <p>Lubrication and Periodic Service 60-</p> <ul style="list-style-type: none"> – Service intervals 60-1 – Removing radiator grille screens 60-1 – Removing hood 60-1 – Service time-table 60-2 <p>Service-Air Intake System 65-</p> <ul style="list-style-type: none"> – Air cleaner 65-1 – Cleaning primary air filter element 65-1 – Secondary (safety) air filter element 65-2 – Air pre-cleaner 65-3 – Dust unloading valve 65-3 – Air intake hoses 65-3 <p>Service-Brakes 70-</p> <ul style="list-style-type: none"> – Bleeding brakes 70-1 – Adjusting handbrake 70-2 	<p>Service-Engine 75-</p> <ul style="list-style-type: none"> – Engine oil 75-1 – Engine filter element 75-2 – Alternator V-belt tension 75-2 – Check engine speeds 75-3 <p>Service-Cooling System 80-</p> <ul style="list-style-type: none"> – Checking coolant level 80-1 – Replacing coolant 80-2 <p>Service-Axles and Wheels 85-</p> <ul style="list-style-type: none"> – Lubricating front axle 85-1 – Checking front axle oil levels 85-2 – Lubricating rear axle bearings 85-2 – Changing front axle oil 85-3 <p>Service-Fuel System 90-</p> <ul style="list-style-type: none"> – Checking fuel filter 90-1 – Replacing fuel filter 90-1 – Bleeding the fuel system 90-2 – Draining water trap 90-2 <p>Service-Transmission/Hydraulic System 95-</p> <ul style="list-style-type: none"> – Checking oil level 95-1 – Replacing filter element 95-2 – Changing transmission/hydraulic oil 95-3 <p>Service-Miscellaneous 100-</p> <ul style="list-style-type: none"> – Checking clutch pedal free travel 100-1 – Checking clutch reservoir fluid level 100-1 – Operator's seat 100-1 – Cab air filters 100-2 – Hydraulic trailer hitch 100-3 – Compressor V-belt 100-3 – 3-point hitch 100-4
---	---

Contents

Service-Electrical System	105-	Troubleshooting	120-
– Batteries	105-1	– Hydraulic system	120-1
– Starting motor	105-4	– Engine	120-2
– Alternator	105-5	– Electrical system	120-3
– Fuses	105-6		
 		Specifications	125-
Service-Heater and Air Conditioning System .	110-	– Engine	125-1
		– Permissible axle loads and weights	125-2
		– Electrical system	125-3
		– Capacities	125-3
Tractor Storage	115-		
– Storage	115-1	Serial Numbers	130-
– Removing tractor from storage	115-2		
		Lubrication and Maintenance Records	135-
		Index	140-


Safety Rules (General)

AVOID TRACTOR RUNAWAY

1. Do not start engine by shorting across starting motor terminals. With gear engaged machine will immediately start to move.

Never attempt to start or operate tractor except from operator's station. When starting the tractor make sure transmission is in neutral or "park" position.

2. When servicing front wheel drive tractor with rear wheels supported off ground and rotating wheels by engine power, always support front wheels in a similar manner. Loss of electrical power or transmission/hydraulic system pressure will engage front driving wheels, pulling rear wheels off support if front wheels are not raised. Under these conditions, the front drive wheels can engage even with switch in disengaged position.

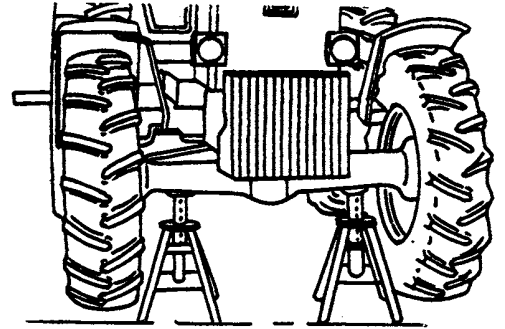


L102 631

L102631-1640ALE-251182


BE INFORMED

1. Do not put this operator's manual away unread. Read the manual carefully regardless of your previous experience. Allow yourself this time, it will save you time and labour later on.

2. Be prepared in case of accident or fire. Keep first aid kit and fire extinguisher handy. Be acquainted with correct handling of the fire extinguisher.

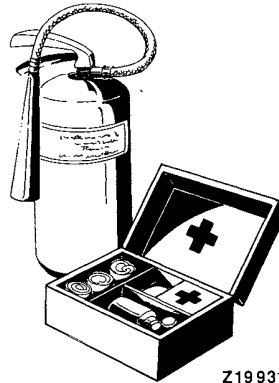

Z19931

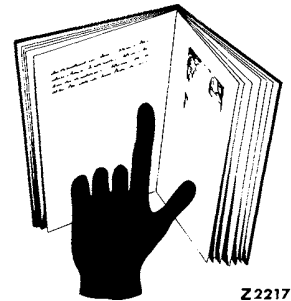

Z22172

Z19931,Z22172-1640ALE-251182

WEAR SUITABLE CLOTHING

Clothing worn by operator must be fairly tight and belted. Loose jackets, shirts or ties must never be worn.



Z 20912

Z20912-1640ALE-251182


Safety Rules (General)

HANDLING FUEL

Always shut off engine before refilling fuel tank.



CAUTION: Smoking is strictly forbidden when handling fuel.

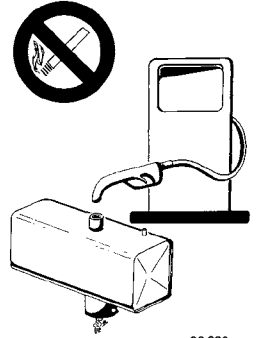


z 20 923

Z20923-1065AZE-261081

NOISE PROTECTION

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs (A) or earplugs (B) to protect against objectionable or uncomfortable loud noises.

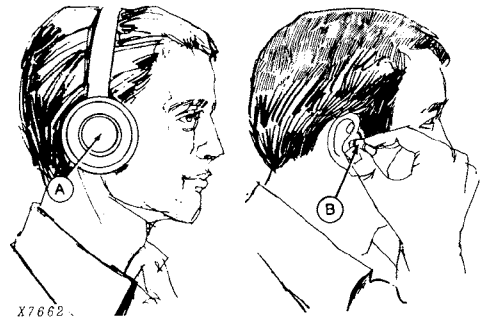


X7662

X7662-1065AZE-261081

SAFETY ON PUBLIC ROADS



CAUTION: Always comply with local traffic regulations when driving on public roads.

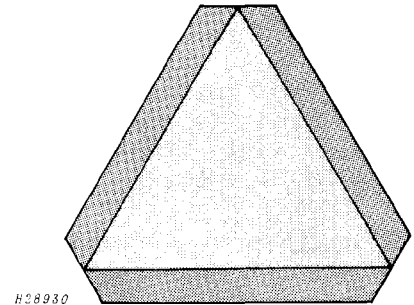


H28930

H28930-1065AZE-261081

HANDLE CHEMICALS PROPERLY

The operator's cab body air filters (A) are not designed to filter out harmful chemicals. Follow instructions given in the implement operator's manual and those given by the chemical manufacturer when using agricultural chemicals.

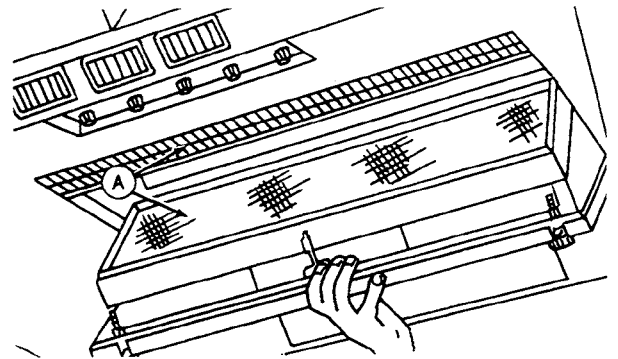

AJ7;RW5704L U01;SAX1 18 001282



CAUTION :Steering and braking performance of the tractor can be considerably affected by attached implements. To maintain the necessary tractor ground contact, ballast tractor as necessary.

Braking performance: On tractors equipped with a front loader or heavy equipment attached to front hitch, ballast rear end of tractor (rear wheel weights, filling rear tires with liquid ballast or attaching a rear mounted implement).

When driving the tractor with front implement installed and without rear implement, never drive tractor faster than 20 km/h (12.5 mph).


Steering performance: On tractors equipped with heavy rear-mounted implement, install sufficient front ballast (front weights).

Safety Rules (Operation)

OPERATING THE ENGINE

Before starting the engine make sure there is plenty of ventilation. Never operate the engine in a closed building. Danger of asphyxiation!

When starting the engine rockshaft control lever must be in "lower" position.

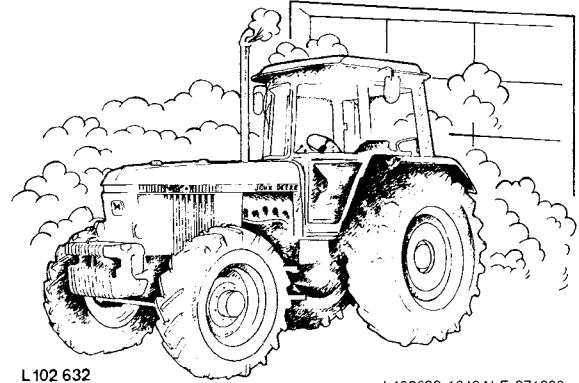

L 102 632

L102632-1640ALE-271282

DRIVING THE TRACTOR


Reduce ground speed when driving the tractor on slopes or uneven ground and before making sharp turns. Before descending a steep hill, shift to a lower gear. Never coast downhill!

Avoid holes ditches and obstructions which may cause the tractor to tip, particularly on hillsides.


Front-wheel drive (A) greatly increases traction. This means that the tractor can be driven on steeper slopes, increasing the possibility of a tip over.

Never drive near the edge of a gully or steep embankment, it might cave in!

Driving forward out of a ditch or up a steep slope could cause tractor to tip over to the rear. Therefore reverse out of these situations whenever possible (B).

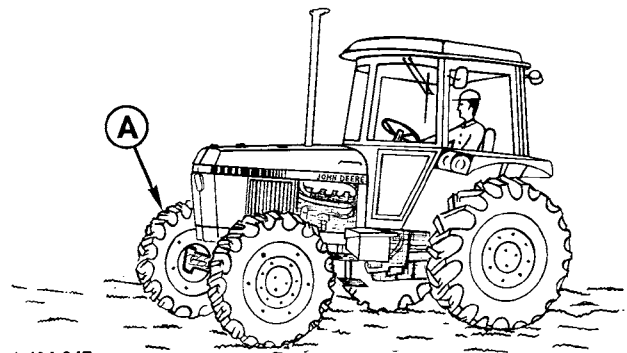

L 104 647

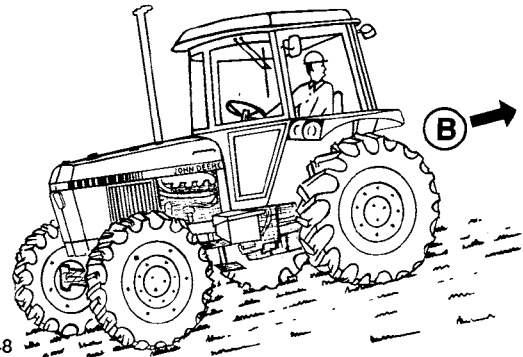


L 104 648

L104647,L104648-3040ALE-010285

ROLL GUARD

A protective roll guard is incorporated in the operator's cab. On this construction, as well as on the roll guard on tractors without an operator's cab, do not, under any circumstances, modify structural members by welding on additional parts, drilling holes, grinding etc. Disregarding this instruction reduces stability of the roll guard.

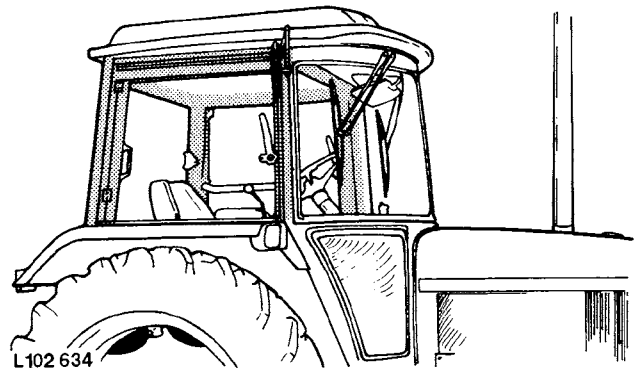

L102 634


L102634-1640ALE-271282

Safety Rules (Operation)

PTO DRIVE

High-inertia implements do not become stationary immediately when PTO control lever is shifted to disengaged position. Allow sufficient time for implement to "coast down" to a halt after having disengaged the PTO.

Make sure PTO drive shaft guard is installed.

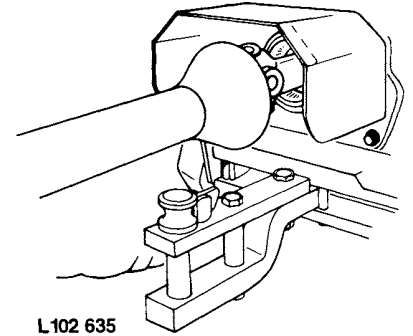


L102 635

L102635-1640ALE-271282


PARKING THE TRACTOR

Before leaving the tractor lower any equipment to the ground.

When parking on a slope, place chock behind a rear wheel.

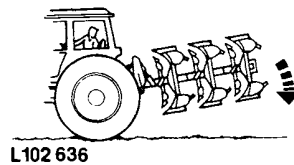

L102 636

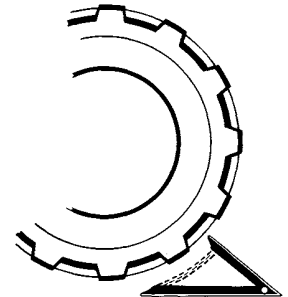

L102 637

L102636,L102637-1640ALE-271282


Safety Rules (Service)

SERVICE – GENERAL

Do not service the tractor while the engine is running.

Reinstall all shields and guard removed for servicing and make sure they are in a servicable condition.

Have adjustments carried out by trained personnel only.

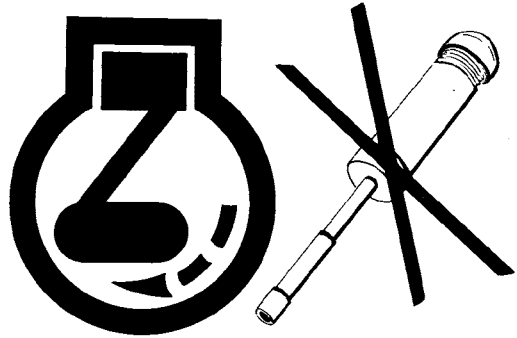


Z 20 919

Z20919-1640ALE-271282

AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure (fuel or hydraulic oil) can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure. Keep hands and body away from pin holes and nozzles which eject fluids under high pressure. Use a piece of cardboard or wood to search for leaks. Do not use your hands.

If any fluid is injected into the skin, consult a doctor immediately, otherwise this may result in a serious infection.

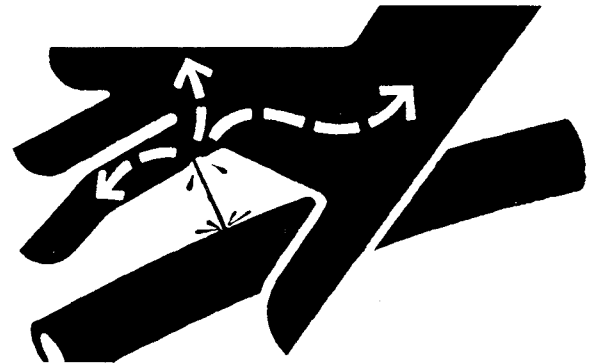


L 102 134

L102134-1640ALE-271282

SERVICE COOLING SYSTEM SAFELY

Remove radiator cap carefully when engine is hot. With engine shut off, turn radiator cap to first stop to relieve pressure before removing it completely.

Top up radiator with coolant with engine stationary.

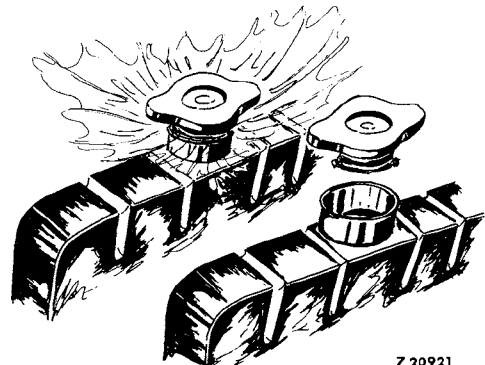

Z 20921


Z20921-1640ALE-271282

SERVICE TIRES SAFELY

Failure to follow proper procedures when mounting a tire on a wheel or rim can produce an explosion which may result in serious bodily injury or death. **DO NOT** attempt to mount a tire unless you have the proper equipment and experience to perform the job safely. Have it done by your JOHN DEERE dealer or a qualified tire repair service.

When sealing tire beads on rims, never exceed maximum inflation pressures specified by tire manufacturers for mounting tires. Inflation beyond this maximum pressure may break the bead, or even the rim, with dangerous explosive force. If both beads are not seated when the maximum recommended pressure is reached, deflate, reposition tire, relubricate bead and reinflate.

Detailed agricultural tire mounting instructions, including necessary safety precautions, are contained in John Deere Fundamentals of Service (FOS) Manual 55, Tires and Tracks, available through your JOHN DEERE dealer. Such information is also available from your local tire manufacturer agents.

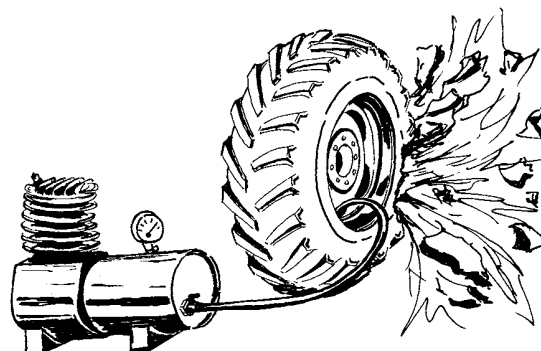


Z 20924

Z20924-1640ALE-271282

DISCONNECTING ELECTRICAL CIRCUIT

Disconnect battery ground strap before carrying out any electrical repairs on the tractor.

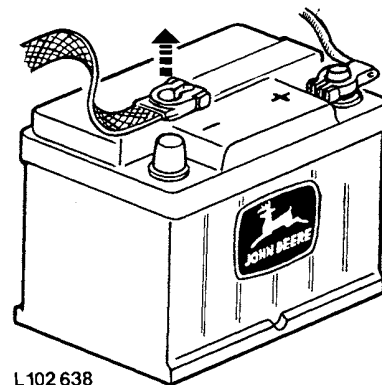


L102 638

L102638-1640ALE-271282

Controls and Instruments

①

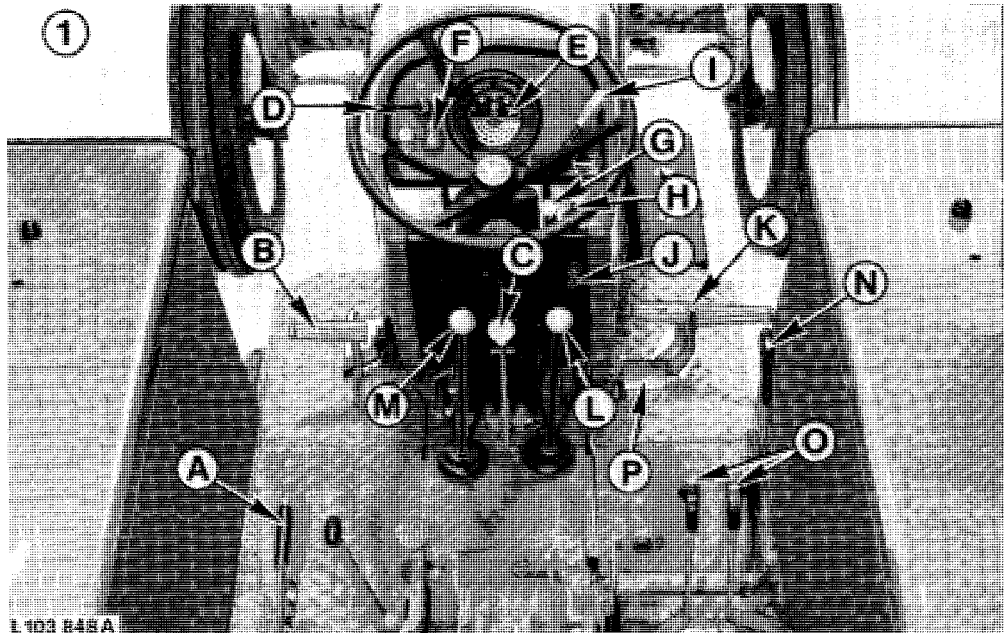


L103 845A

- A-Handbrake
- B-Clutch pedal
- C-PTO control lever
- D-Turn signal switch
- E-Speed-hour meter
- F-Hazard warning light switch
- G-Engine shut-off knob
- H-Starter switch
- I-Hand throttle lever
- J-Main switch
- K-Brake pedals
- L-Gear shift lever
- M-Range shift lever
- N-Rockshaft control lever
- O-Selective control valve lever
- P-Foot throttle

②


- 1-Tractor without Cab
- 2-Tractor with SG2 Cab

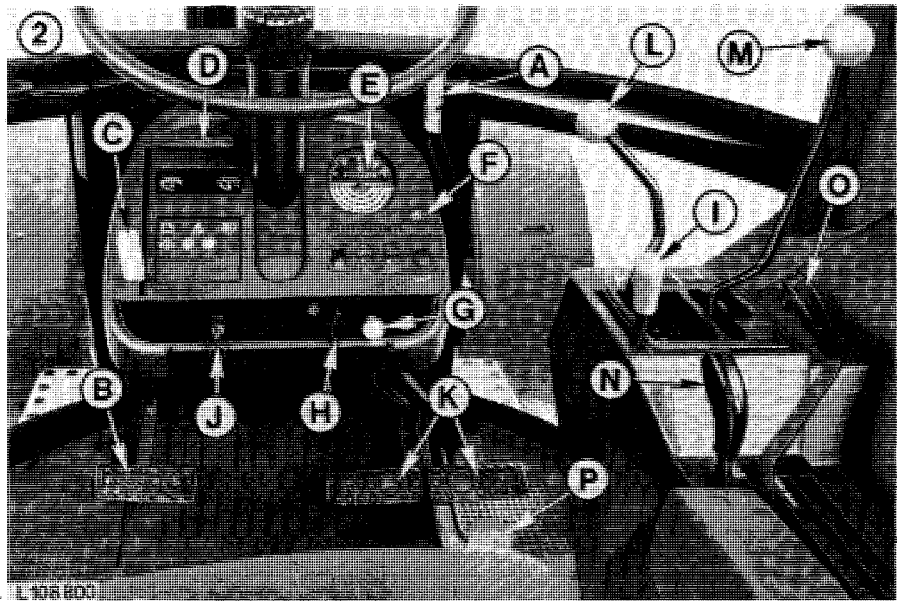

L103 800

L103848A,L108800-3040ALE-010285












- A-Windshield wiper switch, left-hand
- B-Air conditioning switch
- C-Fan switch
- D-Heater switch
- E-Windshield wiper switch, right-hand

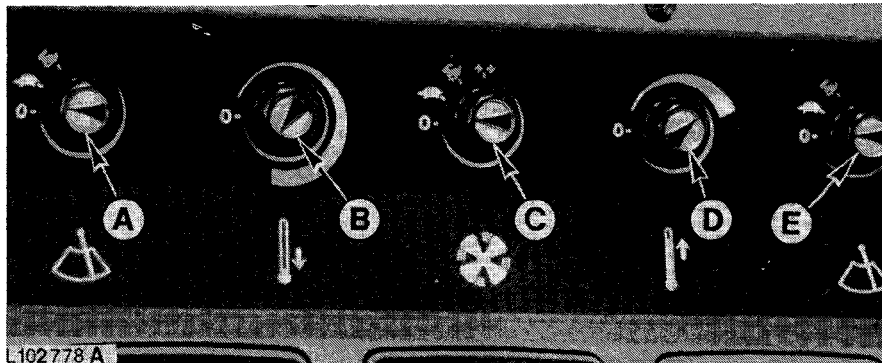

L102778 A

L102778A-3040ALE-300683

CONTROL LIGHTS

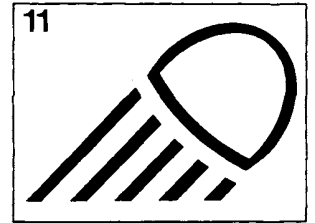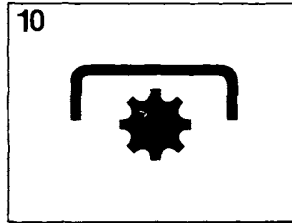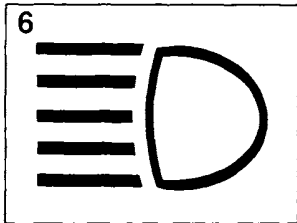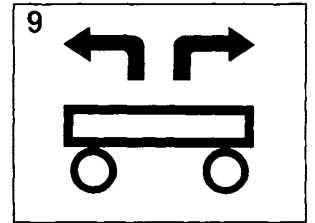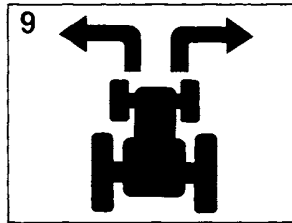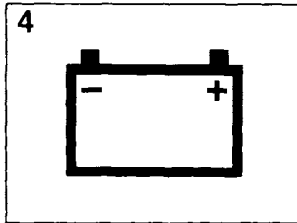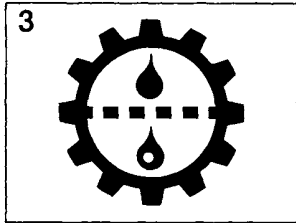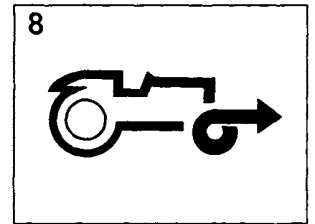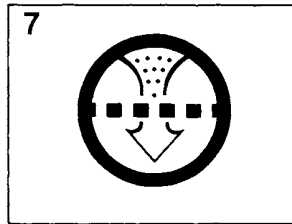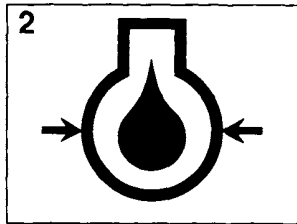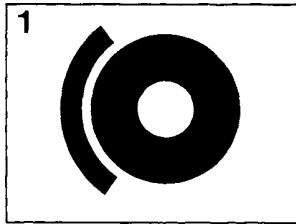

1 –The handbrake indicator light glows when handbrake is applied and main switch is turned on. In addition, an acoustical warning signal can be installed.

2 –If engine oil pressure indicator light glows with engine running, shut-off engine and check oil level.

3 –If transmission oil pressure indicator light glows during tractor operation, stop tractor and check transmission/hydraulic oil level. Should indicator light glow and oil level is correct, then oil filter is clogged. Replace filter.

4 –If alternator indicator light glows with engine running, this indicates a defect at alternator. Check alternator cable connections and tension of V-belt. If necessary, have alternator checked by your JOHN DEERE dealer.

5 –The warning light blinks when indicator lights 2, 3 or 4 glow or when the range shift lever is moved with the handbrake applied.

6 –The full-beam indicator light will glow as soon as the full-beam headlights are switched on.

L102 779

7 –If air cleaner indicator light glows with engine running, the air cleaner element must be cleaned or replaced.

8 –The front wheel drive indicator light glows when the front wheel drive is engaged.

9 –The flashing indicator lights for tractor and trailer start flashing when turn-signal or hazard warning lights are switched on.

10 –The PTO speed indicator lights (on tractors with PTO hand speed change only) show speed of PTO engaged.


11 –This indicator light glows when work light is switched on (on tractors with cab only).

NOTE: Indicator lights 2, 3, 4 and 7 should glow as soon as the main switch is turned on. If this is not the case, a defective bulb or blown fuse may be the cause. Check and replace parts as necessary.

The indicator lights should go out as soon as the engine is running.

FUEL GAUGE

The fuel gauge shows the amount of fuel in tank, from "full" (4/4) to "empty" (0). Never run fuel tank completely dry, otherwise you will have to bleed the fuel system.

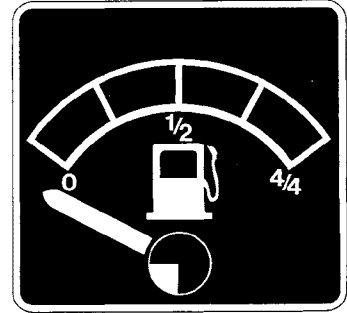


L102 646

L102646-1640ALE-271282

COOLANT TEMPERATURE GAUGE

Should the coolant gauge needle move into the red zone (A) the engine is overheating. Immediately reduce load or shift to a lower gear. Should the needle remain in the red zone, shut-off engine and determine cause of overheating (coolant level low or dirty radiator).

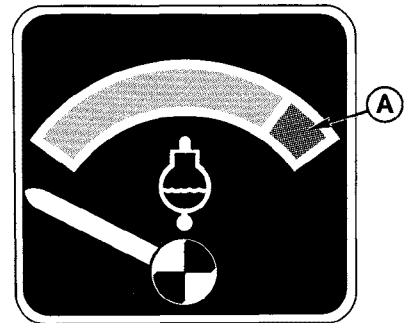

L102 647



L102647-1640ALE-271282

Break-In Period

AFTER FIRST 4 AND 8 HOURS OF OPERATION

Tighten Rear Wheel Retaining Bolts.
(bolt torques vary depending on tractor equipment)

- A—400 Nm (300 ft-lb)
- B—250 Nm (185 ft-lb)
- C—230 Nm (170 ft-lb)

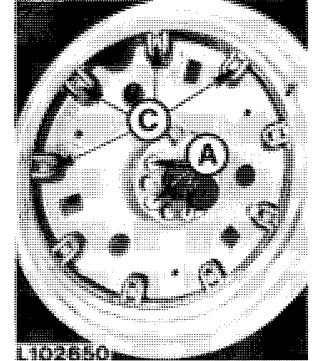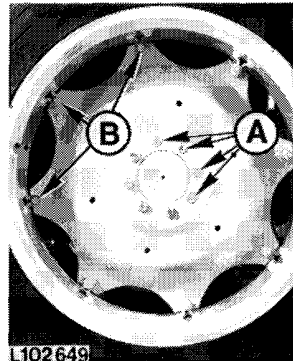



L102649

L102650

L102649,L102650-1640ALE-110183

Tighten Front Wheel Retaining Bolts.
(bolt torques vary depending on tractor equipment)

- A—180 Nm (130 ft-lb)
- B—300 Nm (220 ft-lb)
- C—250 Nm (185 ft-lb)

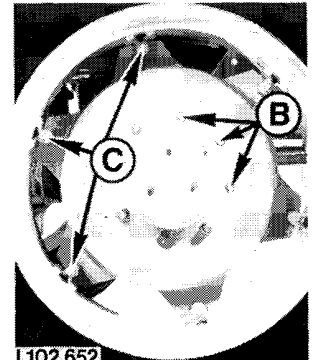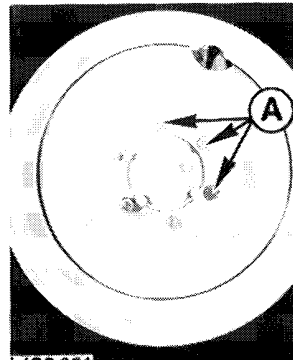


L102651

L102652

L102651,L102652-3040ALE-010285

Adjustable Front Axle

Tighten attaching screws (A) to 400 Nm (300 ft-lb) torque.

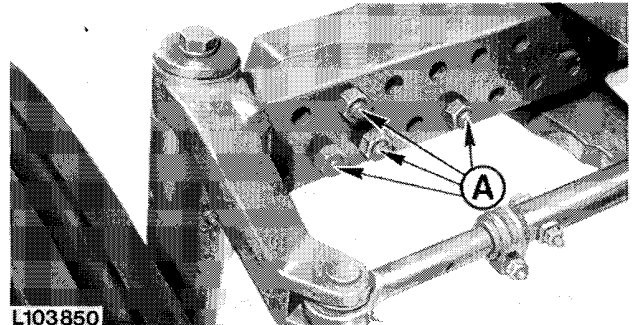


L103850

L103850-3040ALE-300683

AFTER FIRST 50 HOURS OF OPERATION

Replace transmission oil filter (see "Service – Transmission/Hydraulic System").

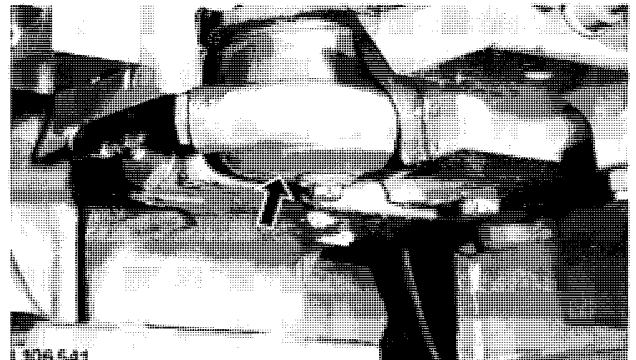

L106541

L106541-3640ALE-180484



Suggest:

If the above button click is invalid.

Please download this document

first, and then click the above link


to download the complete manual.

Thank you so much for reading


Break-In Period

AFTER THE FIRST 100 HOURS OF OPERATION

Tighten clamping screws (A) with 55 Nm (40 ft-lb) torque and clamping screw (B) with 90 Nm (65 ft-lb) torque.

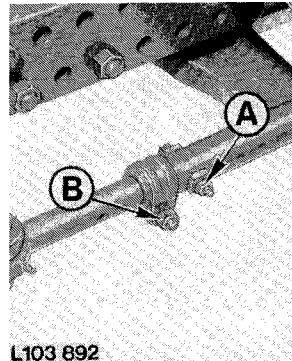

L103 892

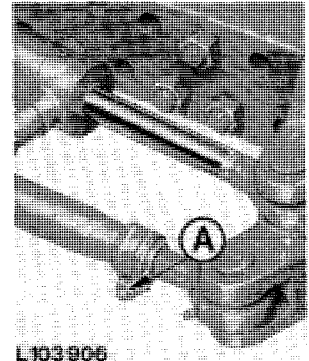

L103 906

Change engine oil.
See "Service – Engine".

Renew engine oil filter element.
See "Service – Engine".

Change front axle oil.
See "Service – Axles and Wheels".

L103892,L103906-3040ALE-010285

WITHIN THE FIRST 100 HOURS OF OPERATION

Operate engine at normal loads.
Avoid light loads.
Avoid excessive engine idling.
Check torque of wheel retaining bolts frequently.
Check engine crankcase oil level frequently.

NOTE: During the break-in period a higher-than-usual oil consumption should be considered as normal.

EINOM-1640ALE-120183

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>