



3155 TRACTOR



 
JOHN DEERE

OPERATORS MANUAL 3155 TRACTOR

OML60017 D1 English

JOHN DEERE WERKE MANNHEIM
OML60017 D1

LITHO IN THE U.S.A.
ENGLISH



Introduction

READ THIS MANUAL CAREFULLY to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

Measurements in this manual are U.S. customary units and their metric equivalents.

RIGHT-HAND AND LEFT-HAND SIDES are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS in the Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.

All information, illustrations, and specifications contained in this operator's manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 1991 DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION™ Manual
PREVIOUS EDITIONS
COPYRIGHT © 1986, 1988, 1990

Contents

Identification View	00-4	Operator's Station	30-
		– Lighting system	30-1
Safety	05-	– Seats	30-2
– Safety (General)	05-1	– Roll guard	30-4
– Safety (Operation)	05-4	– Seat belt	30-4
– Safety (Service)	05-10	– Windshield wipers	30-5
		– Fan, air louvers, heater	30-5
		– Air conditioning system	30-6
		– Steering wheel adjustment	30-6
Safety-Decals	06-		
– Safety-Decals	06-1	Treads, Tires, Ballast	35-
		Wheel treads	35-1
Controls and Instruments	10-	– Adjusting front wheel tread	35-1
– Controls	10-1	– Front wheel steering angle	35-2
– Control lights	10-2	– Checking front wheel toe-in	35-2
– Instruments	10-3	– Adjusting front wheel toe-in	35-2
		– Rear wheel tread adjustment	35-3
		Tires	35-6
Break-In Period	15-	– Servicing tires	35-6
– After the first 4 and 8 hours	15-1	– Tire pressures	35-6
– After the first 50 hours	15-1	– Use correct tire combinations	35-7
– Within the first 100 hours	15-2	Ballast	35-8
– After the first 100 hours	15-2	– Measuring rear wheel slip	35-9
		– Installing rear wheel weights	35-9
		– Filling tires with liquid ballast	35-11
		– Front weights	35-12
Operating the Engine	20-		
– Prestarting check	20-1	Rockshaft, Three-Point Hitch	40-
– Starting the engine	20-2	Rockshaft	40-1
– Electric starting aid	20-3	– Control lever	40-1
– Starting with a booster battery	20-3	– Load selector lever	40-2
– Ether starting aid	20-4	– Rate-of-implementation drop	40-3
– Towing the tractor to start	20-5	Three-point hitch	40-4
– Towing the tractor	20-6	– Draft links	40-4
– Parking the tractor	20-6	– Center link	40-4
– Stopping the engine	20-6	– Lift links	40-5
		– Attaching implements	40-6
		– Positioning sway blocks	40-6
Operating the Tractor	25-		
Reduce fuel consumption	25-1	Accessories	45-
Ground travel speeds	25-3	Selective control valves	45-1
– At desired engine speed	25-3	– Poppet type valves	45-1
– At rated engine speed	25-4	– Breakaway couplers	45-4
Operating the tractor	25-5	– Spool type valves	45-6
– Shifting gears	25-5	– Quick couplers	45-6
– Hi-Lo shift unit	25-6	– Maximum permissible oil withdrawal	45-7
– Differential lock	25-6	Double acting remote hydraulic cylinder	45-8
– Foot brakes	25-7	Swinging drawbar	45-9
– Front wheel drive	25-8	Front hitch	45-10

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>


Contents

Power Take-Off	50-	Service-Cooling System	85-
– PTO master shield	50-1	– Checking coolant level	85-1
– Operation of PTO	50-2	– Replacing coolant	85-2
– Attaching PTO driven equipment	50-3		
Front PTO	50-4	Service-Axles and Wheels	90-
		– Lubricating drive housings and shafts	90-1
Fuel, Lubricants, Coolant	55-	– Lubricating rear axles	90-1
Fuel	55-1	– Checking front axle oil level	90-2
– Fuel specifications	55-1	– Changing front axle oil	90-3
– Fuel storage	55-1		
Lubricants	55-2	Service-Fuel System	95-
– Engine oil	55-2	– Checking fuel filter	95-1
– Fluid for hydraulically operated clutch	55-2	– Replacing fuel filter	95-1
– Transmission/hydraulic oil	55-3	– Cleaning fuel transfer pump	95-2
– Transmission oil for MFWD front axle	55-4	– Bleeding fuel system	95-3
– Extreme pressure grease	55-4		
– Engine coolant	55-5	Service-Transmission/Hydraulics	100-
		– Checking oil level	100-1
Removing Access Covers	60-	– Replacing filter element	100-1
– Hood	60-1	– Changing oil	100-2
– Grille screens	60-1		
– Battery box covers	60-2	Service-Miscellaneous	105-
		– Adding fluid to clutch reservoir	105-1
Lubrication and Periodic Service	65-	– Operator's seat	105-1
– Service intervals	65-1	– 3-Point hitch	105-1
– Time-table	65-2	– Compressor V-belt	105-1
		– Front hitch	105-2
Service-Air Intake System	70-	– Front PTO	105-2
– Primary air filter	70-2	– SGB air filter	105-2
– Secondary air filter	70-3		
– Dust unloading valve	70-4	Service-Electrical System	110-
– Air intake hoses	70-4	– Batteries	110-1
		– Checking specific gravity	110-2
Service-Brakes	75-	– Level of electrolyte	110-3
– Bleeding brakes	75-1	– Neutral start system	110-4
– Adjusting hand brake	75-1	– Starting motor	110-4
		– Removing batteries	110-5
Service-Engine	80-	– Alternator	110-6
– Engine oil	80-1	– Lamps	110-7
– Engine filter	80-2	– Fuses	110-10
– Alternator V-belt	80-2		
– Engine speeds	80-2	Service-Heater and Air Conditioning System ..	115-
		– Air conditioning system	115-1
		– Heater	115-2

Contents

Tractor Storage	120-	Identification Numbers	135-
– Storage	120-1	– Identification numbers	135-1
– Removing tractor from storage	120-2		
Crime Prevention Tips	120-3	Lubrication and Maintenance Records	140-
– Crime prevention tips	120-3	– Lubrication and maintenance records	140-1
Troubleshooting	125-	Attachments	145-
– Hydraulic system	125-1	– Attachments	145-1
– Engine	125-2		
– Electrical system	125-3		
		Index	150-
Specifications	130-	– Index	150-1
– Engine	130-1		
– Weights	130-2		
– Electrical system	130-3		
– Capacities	130-3		

Identification Views

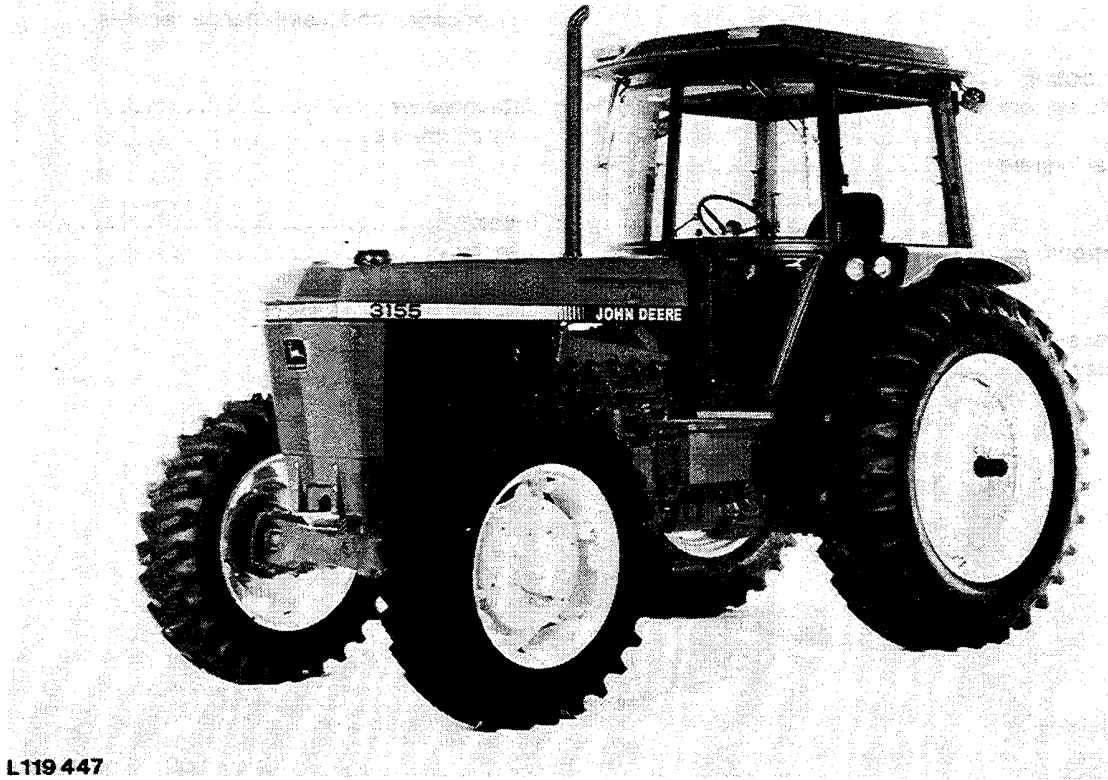

L119447-3155ALE-010988

Safety (General)

RECOGNIZE SAFETY INFORMATION

This is the safety alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices as well as the general safety and accident prevention regulations in order to avoid accidents.



T 81389

T81389-ESPD AE-260188

FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs.

Learn how to operate the machine and how to use the controls before starting work. During work is too late! Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.



TS201

TS201-ESPD AE-260188

UNDERSTAND SIGNAL WORDS

A signal word – DANGER, WARNING or CAUTION – is used with the safety alert symbol. DANGER identifies the most serious hazards.

Safety signs with signal words DANGER or WARNING are typically located near specific hazards.


General precautions are listed on the CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

SIGNAL-ESPD AE-140388

Safety (General)

OBSERVE ROAD TRAFFIC REGULATIONS

Always observe local road traffic regulations when using public roads.

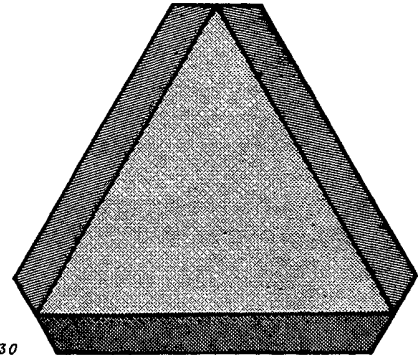

H28930

H28930-ESPAE-160288

PREVENT MACHINE RUNAWAY

Avoid possible injury or death from a machine runaway.

Do not start the engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with the transmission in neutral or "Park".



TS177


TS177-ESPAE-260188

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital and fire department near your telephone.

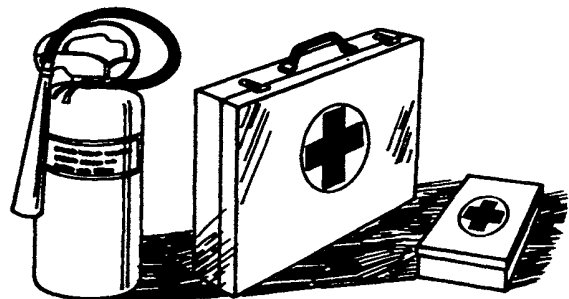

L114052


L114052-ESPAE-170388

WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as ear-muffs or earplugs to protect against objectionable or uncomfortable loud noises.

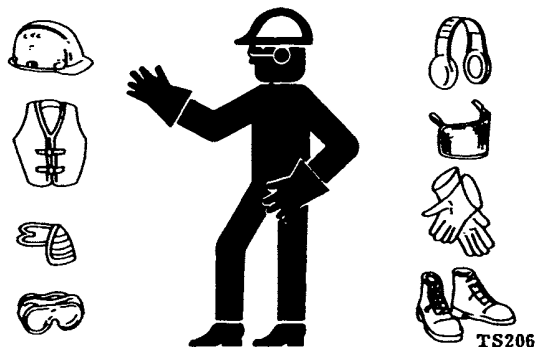

TS206

TS206-ESPAE-230487

HANDLE FUEL SAFELY – AVOID FIRES

Handle fuel with care: It is highly flammable. Do not refuel the machine while smoking or when near an open flame or sparks.

Always stop engine and remove key from main switch before refueling machine. Fill fuel tank outdoors.


Prevent fires by keeping machine clean of accumulated trash, grease and debris. Always clean up spilled fuel.



TS202-ESPD AE-250188

HANDLE CHEMICALS PROPERLY

The operator's cab air filters are NOT designed to filter out harmful chemicals. Follow instructions given in the implement operator's manual and those given by chemical manufacturer when using agricultural chemicals.

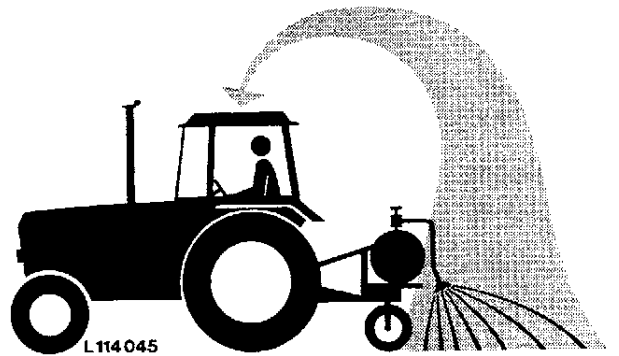


L114045-ESPD AE-140388

STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.

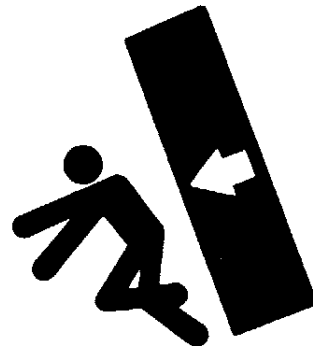

TS219-ESPD AE-160288

Safety (Operation)

CHECK MACHINE SAFETY

Always check the road and general operating safety of the machine before using.

SAFETY-ESPDAE-260188

DRIVING THE TRACTOR

Operate tractor only when all guards are fitted and in their correct position.

Before moving away, always check immediate vicinity of machine (e.g. for children). Ensure adequate visibility.


Always adapt your ground speed to meet the ground conditions. Avoid making sharp turns when driving up or down slopes or when driving across the slope. Do not attempt to turn the machine with the differential lock engaged. When driving down slopes, never depress the clutch and change gear!

Attach implements and trailers to the tractor only using the prescribed drawbars or hitches. Attach trailers and implements correctly. Always ensure that trailers and implements cannot roll away.

When making turns with towed or mounted implements, always take into consideration the width and inertia of the implement.

Reduce your ground speed when driving the tractor on slopes or over uneven ground and before making sharp turns. Before descending a steep hill, shift to a lower gear. Never coast downhill!

Avoid holes, ditches and obstructions which may cause the tractor to tip, particularly on hillsides.

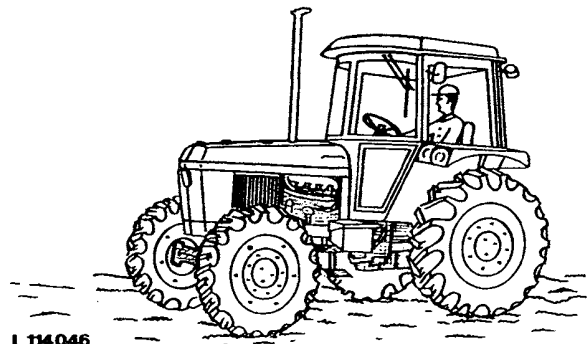

L 114046


L114046-ESPDAE-140388

KEEP RIDERS OFF MACHINE

Only allow the operator on the machine.
Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

On machines equipped with a passenger seat, one rider is permitted.

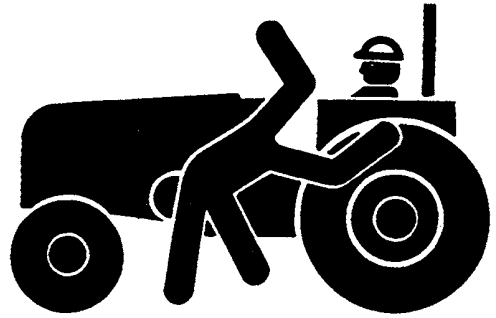


TS213

TS213-ESPD AE-140388

USE SEAT BELT PROPERLY

Use a seat belt when operating the machine with a roll-over protective structure (ROPS) to minimize the risk of injury from an accident such as an overturn.

Do not use a seat belt if operating without a ROPS.

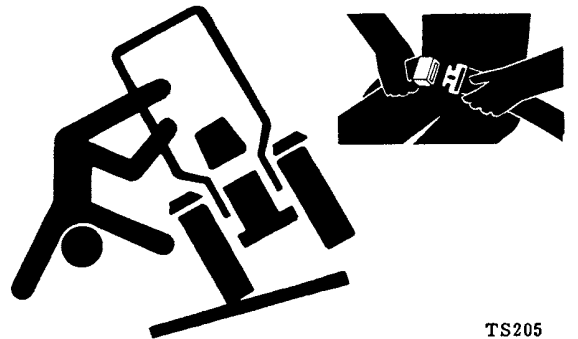

TS205

TS205-ESPD AE-260188


USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar while transporting.

Using appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine.

Do not use the safety chain for towing!

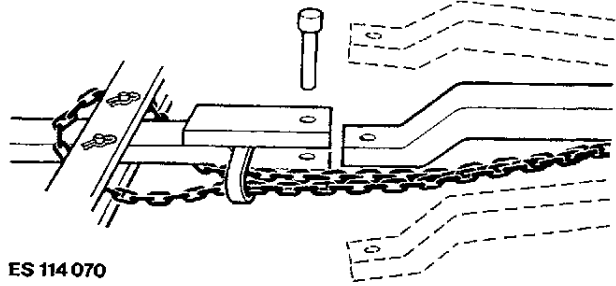

ES 114 070

ES114070-ESPD AE-080988

STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death. When operating with the PTO, no-one must be allowed to remain in the vicinity of the rotating PTO stub shaft or drive shaft. Always ensure that the guards for PTO drive shaft, PTO stub shaft and drive shaft guards are in position and that rotating shields turn freely.

Wear close-fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections or cleaning out PTO-driven equipment.

As soon as PTO drive shaft has been removed, reinstall guard over PTO stub shaft.



TS198

TS198-ESPD AE-160286

REDUCE SPEED WHEN TOWING LOADS

Braking to stop towed loads from transport speeds can cause the towed load to swerve and upset. Reduce speed if towed load weighs more than the tractor and is not equipped with brakes.


Follow recommended speed-weight ratio guidelines for towed loads not equipped with independent brakes:

Maximum speed is 32 km/h (20 mph) when towing load equal to or less in weight than the tractor.

Reduce speed to 16 km/h (10 mph) when towing load more than the tractor weight.

Do not tow loads exceeding double the tractor weight.

Use additional caution when towing loads under adverse surface conditions, when turning and on inclines.

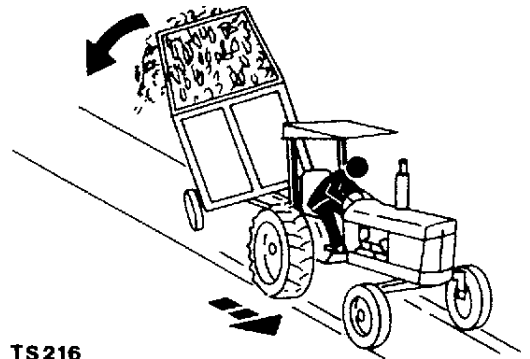


TS216

TS216-ESPD AE-160388

FRONT-WHEEL DRIVE

Front-wheel drive greatly increases traction. This means that the tractor can be driven on steeper slopes, increasing the possibility of a tip over. Driving forward out of a ditch or up a steep slope could cause tractor to tip over to the rear. Therefore reverse out of these situations whenever possible.

Never drive near the edge of a gully or steep embankment – it might cave in!

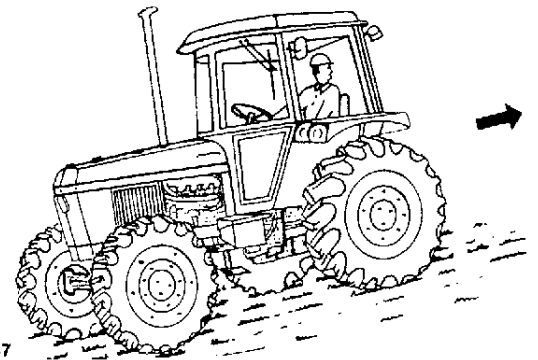

L 114 047


L114047-ESPD AE-140388

BALLASTING FOR SAFE GROUND CONTACT

Operating, steering and braking performance of tractor can be considerably affected by attached implements, trailers or ballast weights.

To maintain the necessary ground contact, ballast the tractor as necessary.

Observe the maximum permissible axle loads and total weights.

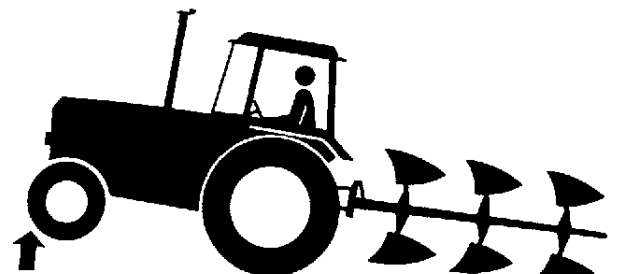

ES 114 061

ES114061-ESPD AE-220688

OPERATING THE ENGINE

Never operate the engine in a closed building.
Danger of asphyxiation!

When starting the engine, rockshaft control lever must be in "lower" position.



ES 118 711

ES118711-ESPDAE-220688

HANDLE STARTING FLUID SAFELY

Starting fluid is highly flammable.

Keep all sparks and flames away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, always keep the cap on the container and store in a cool, protected location.

Do not incinerate or puncture starting fluid containers, even when empty.



TS 6089 A

TS6089A-ESPDAE-230388


PARKING AND LEAVING THE TRACTOR

Lower mounted implement(s) or equipment to the ground before leaving the tractor.


When leaving the tractor and/or implements, shut off engine, engage range and gear shift levers as well as handbrake or parking lock, remove main switch key and lock the operator's cab (when equipped). Position chock blocks.

Never leave tractor unattended as long as engine is still running.


Never leave the operator's platform/cab when driving.

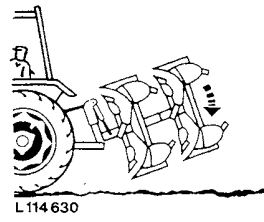

L114 630

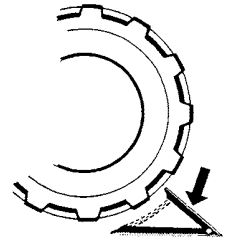

L102 637 A

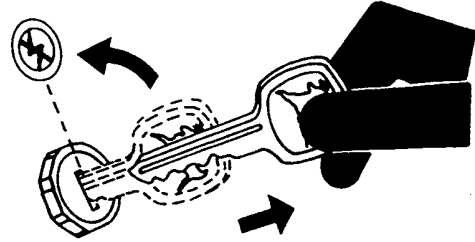

TS 230

Safety (Service)

PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate or service machine while it is moving. Keep hands, feet and clothing from power-driven parts. Disengage all power and operate the controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil or debris.

Disconnect battery ground cable(s) (-) before making adjustments on electrical system or welding on machine.




TS218

TS218-ESPDAE-160288

SERVICE MACHINE SAFELY

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

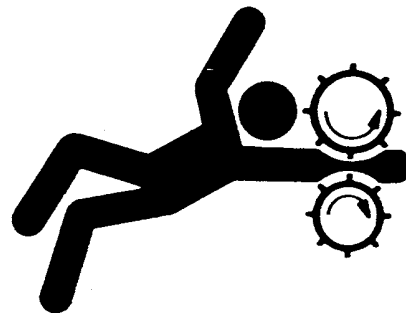


TS228

TS228-ESPDAE-160288

SUPPORT MACHINE PROPERLY

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.

Do not support the machine on cinder blocks, hollow tiles or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

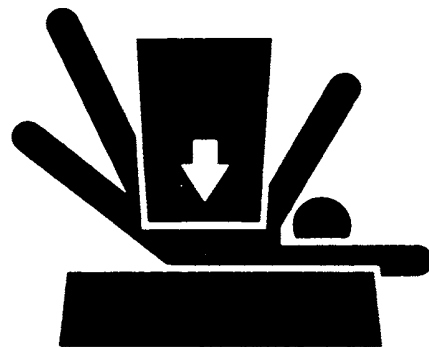


TS229

TS229-ESPDAE-160288

SERVICE FRONT-WHEEL DRIVE TRACTOR SAFELY

When servicing front-wheel drive tractor with the rear wheels supported off the ground and rotating wheels by engine power, always support front wheels in a similar manner. Loss of electrical power or transmission/hydraulic system pressure will engage the front driving wheels, pulling the rear wheels off the support if front wheels are not raised. Under these conditions, front drive wheels can engage even with switch in disengaged position.

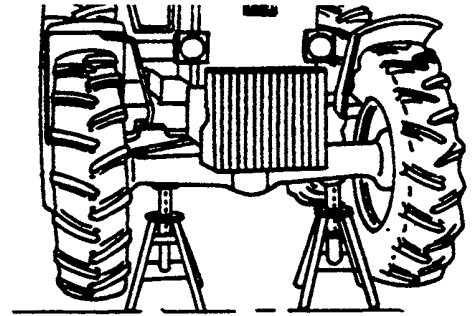


L114 050

L114050-ESPD AE-140388

RETIGHTEN WHEEL NUTS

Retighten machine wheel nuts at the intervals specified in section "Break-In Period" and "Service".

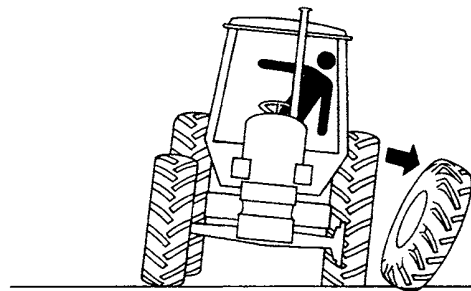


ES 114 062

ES114062-ESPD AE-220688

KEEP CAB/ROPS INSTALLED PROPERLY

Make certain all parts are reinstalled correctly if the cab or roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to specified torque.

Protection offered by cab or ROPS will be impaired if subjected to structural damage, involved in an overturn incident or altered in any way by welding, bending, drilling or cutting. A damaged cab or ROPS should be replaced, not reused.

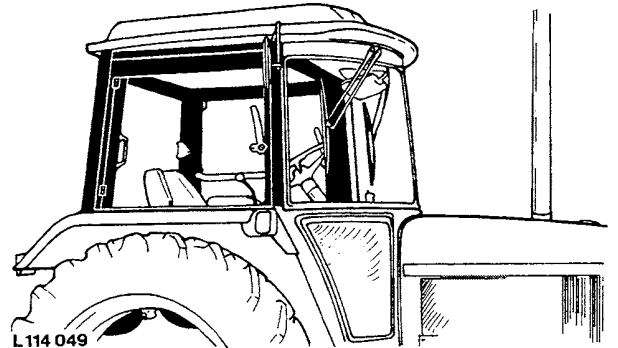

L114 049


L114049-ESPD AE-140388

USE SAFETY LIGHTS AND DEVICES

When transporting your machine on a public road either at night or during the day, use the necessary safety lights. Check local government regulations.

Keep safety items in good condition. Replace missing or damaged items.

- A-Lights
- B-Slow moving vehicle emblem
- C-Reflector tape
- D-Reflectors

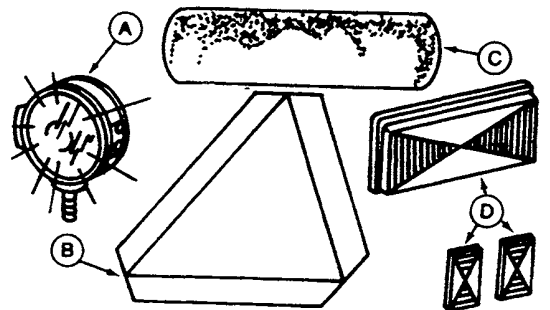

N36564-ESPD AE-260188



Suggest:

If the above button click is invalid.

Please download this document

first, and then click the above link


to download the complete manual.

Thank you so much for reading

AVOID HIGH-PRESSURE FLUIDS

Escaping fluid (fuel or hydraulic oil) under pressure can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure. Keep hands and body away from pinholes and nozzles which eject fluids under high pressure. Use a piece of cardboard to search for leaks.

If ANY fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type of injury, or gangrene may result.

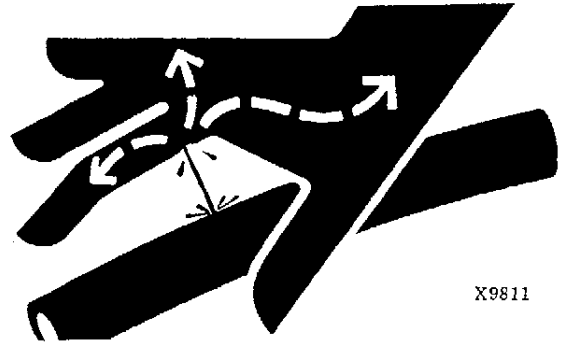

X9811


X9811-ESPDAE-000188

AVOID BATTERY EXPLOSIONS

Battery gas can explode. Keep sparks and flames away from batteries. Use a flashlight to check battery electrolyte level.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Always remove grounded (-) battery clamp first and replace it last.

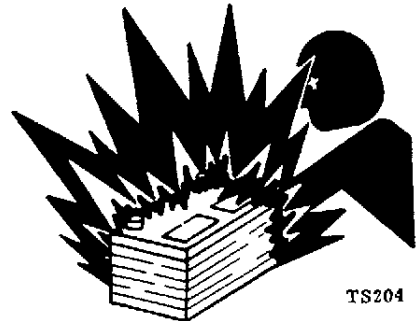

TS204

TS204-ESPDAE-260188

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>