

7721 Combine



JOHN DEERE

 
OPERATORS MANUAL

7721
Combine

OMH133891 Issue A8 English

John Deere Harvester Works
OMH133891 Issue A8

LITHO IN U.S.A.
ENGLISH



INTRODUCTION



This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

Your operator's manual contains SI metric equivalents which follow immediately after the U.S. customary units of measure.

"Right-hand and "left-hand" sides are determined by facing in the direction the combine will travel when in use.

Record identification number(s) in the space provided in Specifications. Accurately record "ALL" of the letters and numbers in case a computer is used to trace a stolen machine or for ordering parts from a dealer. Make an additional copy of the numbers and file it in a safe place.

The warranty on this combine appears on your copy of the purchase order which you should have received from your dealer when making your purchase. This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty.

Warranty and field improvements are a part of John Deere's product support program for customers who operate and maintain their equipment as described in this manual. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied.



Contents

	Page
Introduction	
Contents	1
Safety	2
Safety Decal and Reflector Location	6A, 6B
Combine Function Controls	7
Initial Tractor Preparation	8
Preparing the Combine	13
Attaching and Detaching the Combine	14
Transporting	20
Lighting and Signals	23
Operating the Combine	26
Lubricants	30
Lubrication and Maintenance	33
Fundamentals of Combine Harvesting	41
Feeder House	61
Separator	70
Grain Tank and Unloading Auger	124
Electrical System	131
Monitors	133
Hydraulic System	141
Power Train	143
Trouble Shooting	146
Storage	152
Crime Prevention	153
Specifications	157
Index	161

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>



Safety

SAFETY DECALS



H28488N




CAUTION, WARNING or DANGER: Decals with these headings and symbol indicate the possibility of personal injury.

IMPORTANT: Decals with this heading indicate the possibility of damage to the machine.

Decals are located in areas where they apply.

H28488N

AVOID CONTACT WITH MOVING PARTS

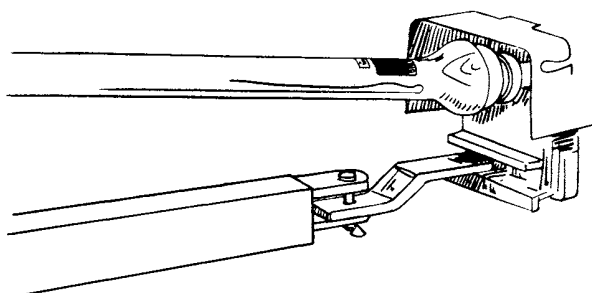

A19405

A19405

Keep guards and shields in place at all times while operating the combine. Always disengage tractor PTO and shut off engine before removing guards or shields.

Unauthorized modifications to the machine may impair the function and or safety and affect machine life.

Keep hands, feet, and clothing away from power-driven parts.

Never clean, lubricate, or adjust the combine when it is running.

Honk horn to clear everyone from area before starting tractor engine or running combine.

Never attempt to clear obstructions off the header unless the PTO is disengaged and the tractor engine is shut off and key removed.

OPERATE SAFELY



H35333



H35333

Clothing worn by operator must be fairly tight and belted. Loose jackets, shirts, or sleeves must never be worn.

The gearshift lever of tractor must be in neutral and the PTO lever disengaged before starting tractor engine.

Be careful when operating on hillsides so the combine or tractor will not tip.

Always keep the tractor in gear when going down hills.

Do not adjust cleaning fan when combine is moving.

AVOID HIGH PRESSURE LEAKS

Escaping hydraulic fluid under pressure can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure. Keep hands and body away from pin holes and nozzles which eject fluids under high pressure. Use a piece of cardboard or wood to search for leaks. Do not use your hand.

If ANY fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type injury or gangrene may result.

Cracking hydraulic line fittings to lower the feeder house will result in an instantaneous dropping of feeder house or feeder house and header.



X9811


LEAVING COMBINE UNATTENDED

Before leaving the combine unattended, support the header with either the hydraulic cylinder safety stop or with blocks, or lower it to the ground.

Lower hitch and separator support stands and block wheels.

If combine is attached to tractor, place tractor transmission in park, stop engine and remove tractor key.

CAUTION: Before platform is removed attach support stand to separator and place in "down" position as shown. Adjust stand to contact ground so hitch tube will not fly upward when platform is removed.

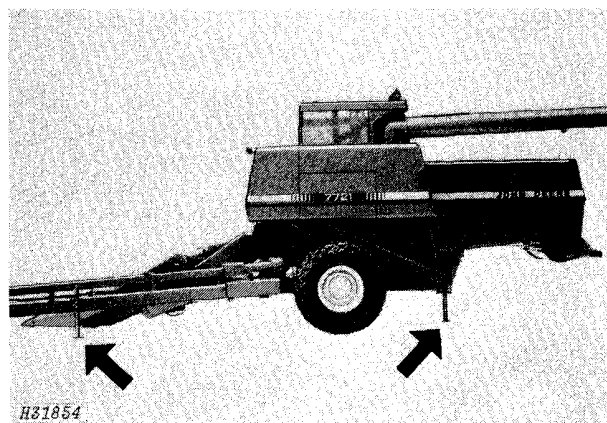

H31854

H31854

TRANSPORT SAFELY

Never ride or allow anyone on the tractor, drawbar, or hitch.


Be extra careful when transporting the combine in hilly country. Never transport with grain in tank.

Use a tractor large enough to maintain control.

When transporting the combine on a road or highway, use accessory lights and devices for adequate warning to the operators of other vehicles. In this regard, check local governmental regulations.

Tow only with an agricultural tractor equipped with stationary drawbar.

Do not transport combine over 20 MPH (32.2 km/h).

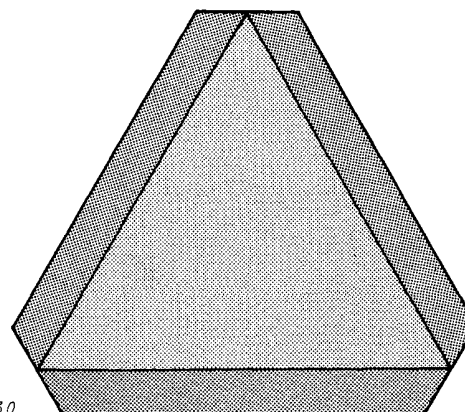





H28930

H28930

 
RECOMMENDED MAXIMUM TOWING SPEEDS

For safe braking performance and control during transport, do not exceed recommended maximum towing speed given in table below. When operating on slopes or less than good traction conditions, these towing speeds must be reduced. Always refer to this table before transporting combine.

Gross Tractor Weight	Total Weight of Combine with Empty Grain Tank and Attaching Equipment		
			
0-5,000 lbs. (0-2270 kg)	10,000 lbs. (4536 kg)	16,000 lbs. (7200 kg)	18,000 lbs. (8100 kg)
5,000-8,000 lbs. (2270-3632 kg)	Do not tow	Do not tow	Do not tow
8,000-9,000 lbs. (3632-4086 kg)	10 mph (16.1 km/h)	Do not tow	Do not tow
9,000-10,000 lbs. (4086-4536 kg)	10 mph (16.1 km/h)	10 mph (16.1 km/h)	Do not tow
10,000-16,000 lbs. (4536-7258 kg)	10 mph (16.1 km/h)	10 mph (16.1 km/h)	10 mph (16.1 km/h)
16,000-18,000 lbs. (7258-8100 kg)	20 mph (32.2 km/h)	10 mph (16.1 km/h)	10 mph (16.1 km/h)
18,000 lbs. (8100 kg)—Up	20 mph (32.2 km/h)	20 mph (32.2 km/h)	10 mph (16.1 km/h)
	20 mph (32.2 km/h)	20 mph (32.2 km/h)	20 mph (32.2 km/h)

F3B502

USE A SAFETY CHAIN

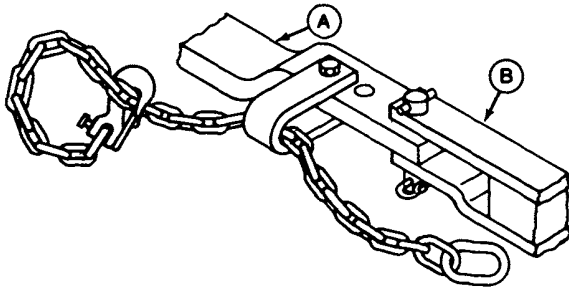

A safety chain will help control drawn equipment (B) should it accidentally separate from the drawbar (A) while transporting. Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning. See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine.


1S163

SERVICE TIRES SAFELY

Failure to follow proper procedures when mounting a tire on a wheel or rim can produce an explosion which may result in serious injury or death. Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job. Have it done by your John Deere dealer or a qualified repair service.

When sealing tire beads on rims, never exceed 35 psi (240 kPa) (2.4 bar) or maximum inflation pressures specified by tire manufacturers for mounting tires. Inflation beyond this maximum pressure may break the bead, or even the rim, with dangerous explosive force. If both beads are not seated when the maximum recommended pressure is reached, deflate, reposition tire, re-lubricate bead, and reinflate.

- A—Use a safety cage if available.
- B—Do not stand over tire. Use a clip-on chuck and extension hose.

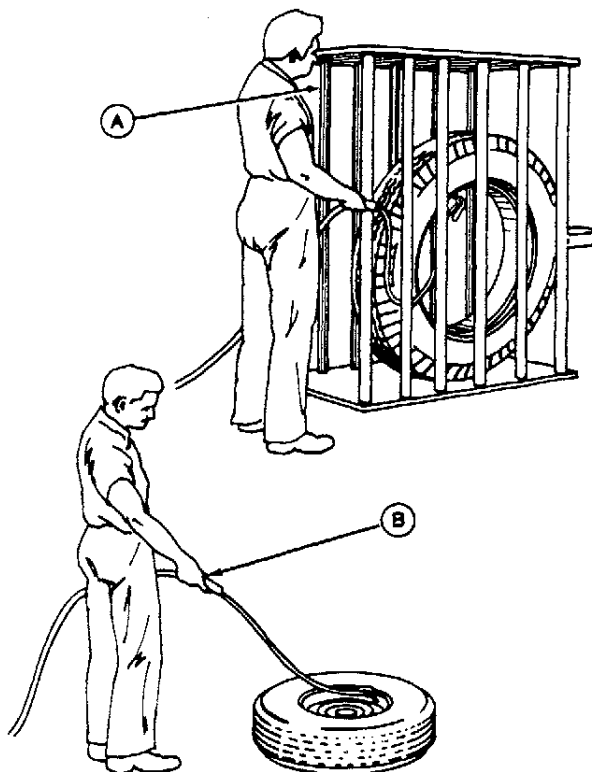


15.0123

NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs (A) or earplugs (B) to protect against objectionable or uncomfortable loud noises.

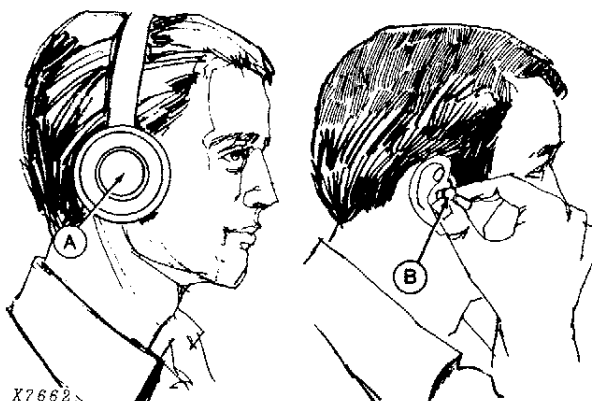

- A—Earmuffs
- B—Earplugs

X7662

X7662

SEPARATOR LADDER

Do not ride or attempt to climb on rear separator ladder or any part of combine while combine is moving or running. Check tailings at lower door only after combine has been stopped and turned off.

FIRE EXTINGUISHER



RW2389


Have a multipurpose dry chemical fire extinguisher filled and handy. Know how to use it.

DO NOT refuel with the tractor engine running.

DO NOT smoke or use a lantern when refueling.

The part number of the extinguisher is AT81764.

SERVICING DRIVES AND DRIVE RELATED AREAS

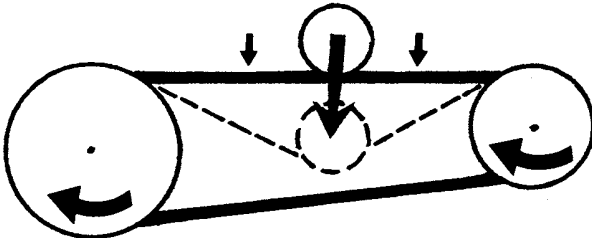


H37564

Shut off engine and remove key before servicing the combine in either a belt driven area or any area receiving power from a belt drive. Some drives, due to their clutching and declutching characteristics, can be engaged when the engine is running by the applying or removing of outside forces.

Replace any shields that were removed.

AVOID CONTACT WITH SHARP PARTS

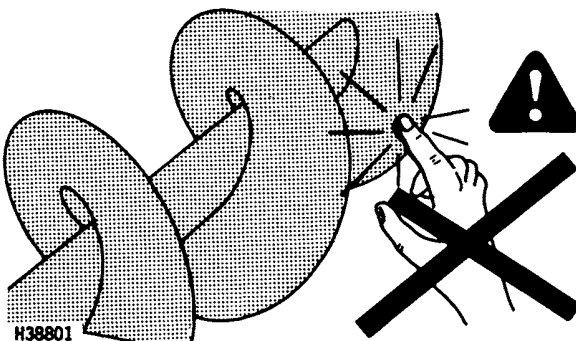

H38801

H38301

Auger flighting will develop sharp edges through normal wear. Use caution to avoid being cut with these edges.



Safety Decal and Reflector Location

CAUTION

To assure adequate braking performance and control during transport:

1. Tow only with an agricultural tractor.
2. Do not exceed recommended maximum towing speeds given in operators manual. Safe towing speed depends on weight of tractor and weight of towed load, and is never greater than 20 m.p.h.

WARNING

To avoid bodily injury from fall of raised header or feeder house, completely raise feeder house, stop engine, remove start key, and set safety stop on lift cylinder rod before getting under header or feeder house. Safety stop is located above one of the feeder house lift cylinder rods.

WARNING

To prevent personal injury resulting from driveline failure, use correct drawbar extension to attach implement to tractor. Use:


- 10" extension for 1-3/8" PTO
- 5-1/2" extension for 1-3/4" PTO

See operator's manual for driveline adjustment instructions.

DANGER



Entanglement in rotating driveline can cause serious injury or death. Keep all shields in place. Avoid contact with rotating parts.

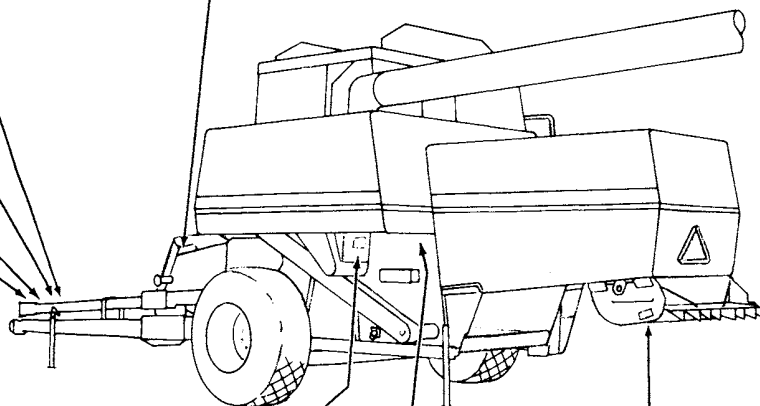

WARNING

To prevent backward tipover when platform is removed support rear of machine with jack stand or other support.

WARNING

To avoid bodily injury from turning auger, stop engine and remove start key before opening clean out doors.



CAUTION

1. Keep all shields in place.
2. Disengage and shut off all engine and/or motor power before servicing or unclogging machine.
3. Keep hands, feet, and clothing away from power-driven parts.

WARNING

Do Not Stand Behind Chopper Or Make Adjustments While Engine Is Running

WARNING
Do Not enter grain tank when engine is running

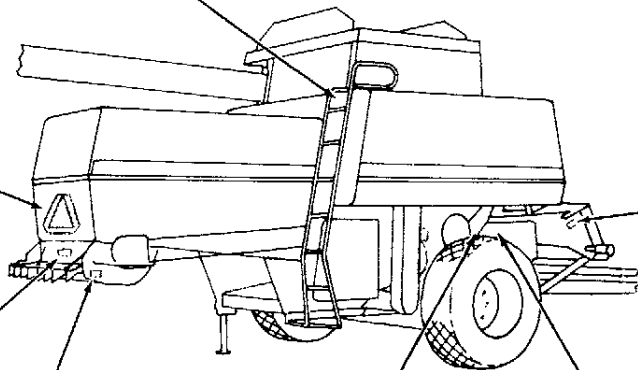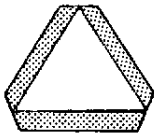

WARNING
To avoid bodily injury from fall of raised header or feeder house, completely raise feeder house, stop engine, remove start key, and set safety stop on lift cylinder rod before getting under header or feeder house. Safety stop is located above one of the feeder house lift cylinder rods.

DANGER
Stay clear

WARNING
Do Not Stand Behind Chopper Or Make Adjustments While Engine Is Running

WARNING
Lower shafts of variable speed drive contains spring under load. To avoid bodily injury from spring action when disassembling shafts, relieve spring load as follows:

1. Set variable speed drive at low speed position (lower sheaves engaged)
2. Loosen bolt on outer end of shaft, but **DO NOT REMOVE**
3. Release outer sheave half from shaft taper (by tapping or with a puller) so that spring forces bearing against bolt head
4. Remove bolt.


See detailed instructions in the Operator's Manual

CAUTION

1. Keep all shields in place.
2. Disengage and shut off all engine and/or motor power before servicing or unclogging machine.
3. Keep hands, feet, and clothing away from power-driven parts.



Combine Function Controls

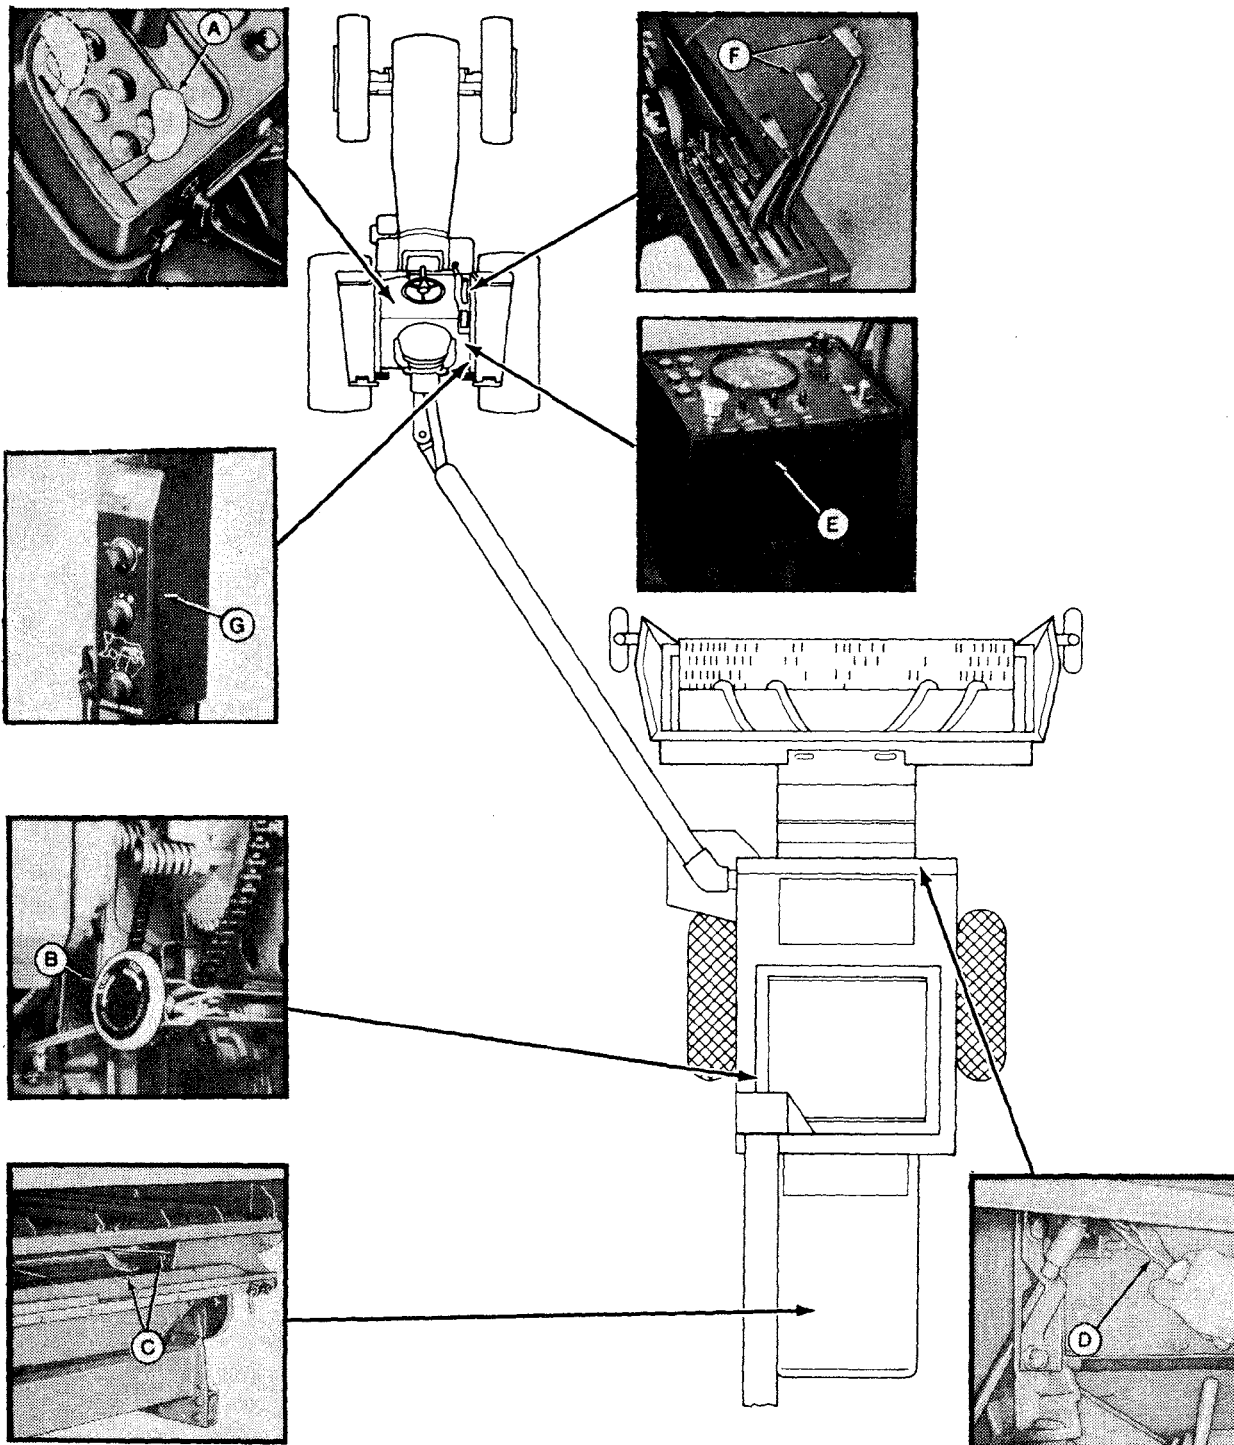

- A—PTO Clutch Lever
- B—Cleaning Fan Speed Control Wheel
- C—Chaffer and Sieve Levers
- D—Concave Spacing Control Ratchet

- See page 26
- See page 72
- See pages 114,115
- See page 71




- E—Control Box
- F—Header Height and Unloading Auger Swing Controls
- G—HARVESTRAK™ Combine Monitor

- 114/912
- See page 27
 - See page 26
 - See page 135



Initial Tractor Preparation

INSTALLING CONTROL BOX IN TRACTORS WITH PRE-SOUND GARD CABS (1968-1971)

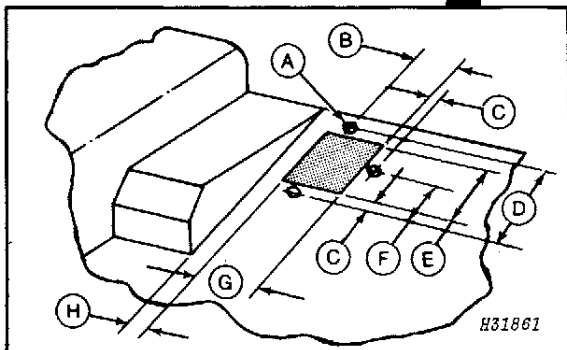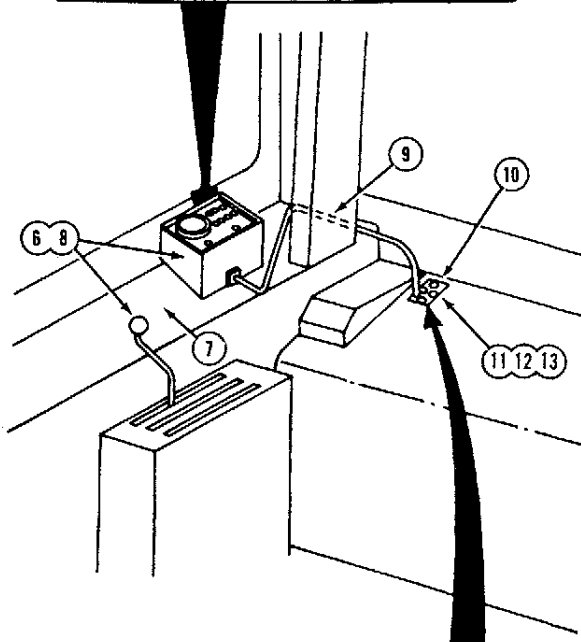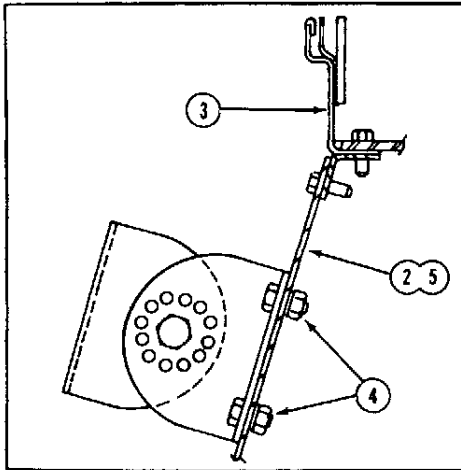


IMPORTANT: This combine must be used with tractors having a minimum of 125 (93 kW) PTO horsepower and be equipped with 1000 RPM PTO.

1. (Not Illustrated) Install seven pin connector following the instructions provided with it.
2. Remove five 1/4 x 5/8-inch screws and remove base on back of control box.
3. Discard adapter for Sound Gard Cabs.
4. Attach mounting brackets to base with four 1/4 x 1/2-inch cap screws, lock washers, and nuts.
5. Attach base to control box with the five screws removed in step 2.
6. Position control box to allow for full movement of the hydraulic control levers.
7. Using the mounting bracket as a guide, mark through the bracket for four holes. Center punch fender and drill four 11/32-inch diameter holes.
8. Attach control box with mounting bracket to fender with four 5/16 x 5/8-inch cap screws, lock washers, 11/32 x 1-1/8 x .060-inch flat washers, and special cage nuts.
9. Route harness around cab post.
10. Cut panel and drill holes to the dimensions shown for the right hand rear deck area of the cab.
11. Attach harness plate to rear deck with three 1/4 x 7/8-inch machine screws, lock washers, and nuts.
12. Remove plug and route harness through harness plate.
13. Slip grommet over harness and press grommet into harness plate.

A—Three 9/32-inch
(7 mm) Diameter Holes
B—2 Inches (51 mm)
C—19/64-inch (7 mm)
D—4-19/32 Inches (118 mm)


E—4 Inches (102 mm)
F—2-19/64 inches (58 mm)
G—3 Inches (76 mm)
H—1-1/2 Inches (38 mm)

14. Remove four cap screws and discard the two straps.
15. Attach harness mounting bracket with the four cap screws removed in step 14.
16. Secure harness connector to bracket with a 5/16 x 1/2-inch self tapping screw and a coated clamp.
17. Attach dust cap to harness.
18. Attach harness support rod to bracket with two 3/8-inch nuts.

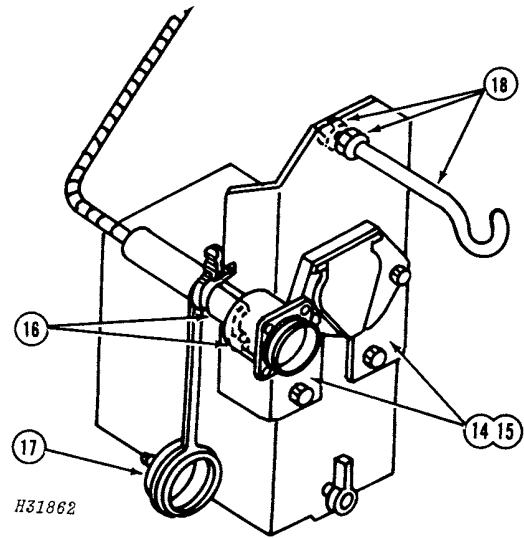

H31862

INSTALLING CONTROL BOX IN ROW-CROP TRACTORS WITH SOUND GARD® CABS (1972-)


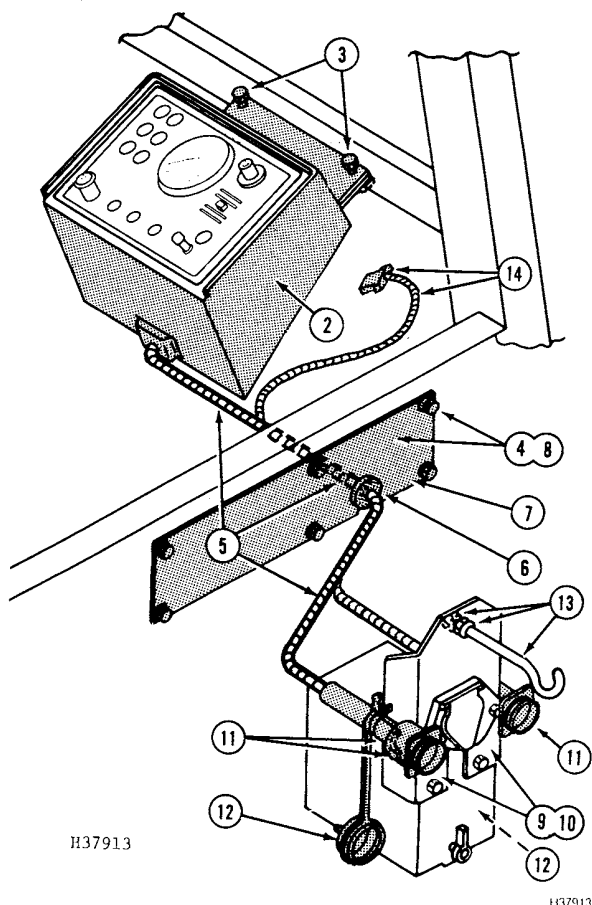


IMPORTANT: This combine must be used with tractors having a minimum of 125 (93 kW) PTO horsepower and be equipped with 1000 RPM PTO.

1. (Not Illustrated) Install seven pin connector following the instructions provided with it.
2. Position control box to allow for full movement of the hydraulic control levers.
3. Install and tighten two 1/4-20 x 3/4-in. cap screws to secure control box to window frame.
4. Remove six self tapping screws, cover, and gasket on rear of cab. Save screws, cover and gasket. Cover can be used when tractor is not used with combine.
5. Route harness from control box under cab foam.
6. Slip grommet over harness and press grommet into new cover provided.
7. Align cover with gasket.
8. Reinstall cover and gasket with the six screws removed in step 4.
9. Remove four cap screws and discard the two straps.
10. Attach harness mounting bracket with the four cap screws removed in step 9.
11. Secure both harness connectors to bracket with 5/16 x 1/2-in. self tapping screws and coated clamps.
12. Attach both dust caps to harnesses.
13. Attach harness support rod to bracket with two 3/8-in. nuts.
14. Plug in HARVESTRAK connector if equipped. If not equipped with HARVESTRAK place harness under foam cover.

INSTALLING CONTROL BOX IN JOHN DEERE 8430, 8440, 8450, 8630, 8640 AND 8650 FOUR WHEEL DRIVE TRACTORS


1. (Not Illustrated) Install seven pin connector following the instruction provided with it.
2. Remove two 1/4-20 x 5/8-in. and two 1/4 x 5/8-in. screws and remove base on back of control box.
3. Attach plate to mounting bracket with four 1/4 x 1/2-in. cap screws, lock washers, and nuts.
4. Attach control box to base with the four screws removed in step 2.
5. Position control box to allow for full movement of the hydraulic control levers.
6. Install and tighten two 1/4-20 x 3/4-in. cap screws to secure control box to window frame.
7. Remove six self tapping screws, cover, and gasket on rear of cab. Save screws, cover and gasket. Cover can be used when tractor is not used with combine.
8. Route harness from control box under cab foam.
9. Slip grommet over harness and press grommet into new cover provided.
10. Align cover with gasket.
11. Reinstall cover and gasket with the six screws removed in step 7.
12. Install BH77003 wiring harness extension between harness (A) and bracket (B).
13. Remove four cap screws and discard the two straps.
14. Attach harness mounting bracket with the four screws removed in step 13.
15. Secure both harness connectors to bracket with 5/16 x 1/2-in. self tapping screws and coated clamps.
16. Attach dust caps to both harnesses.
17. Attach harness support rod to bracket with two 3/8-in. nuts.
18. Plug in HARVESTRAK connector if equipped. If not equipped with HARVESTRAK, place harness under foam cover.

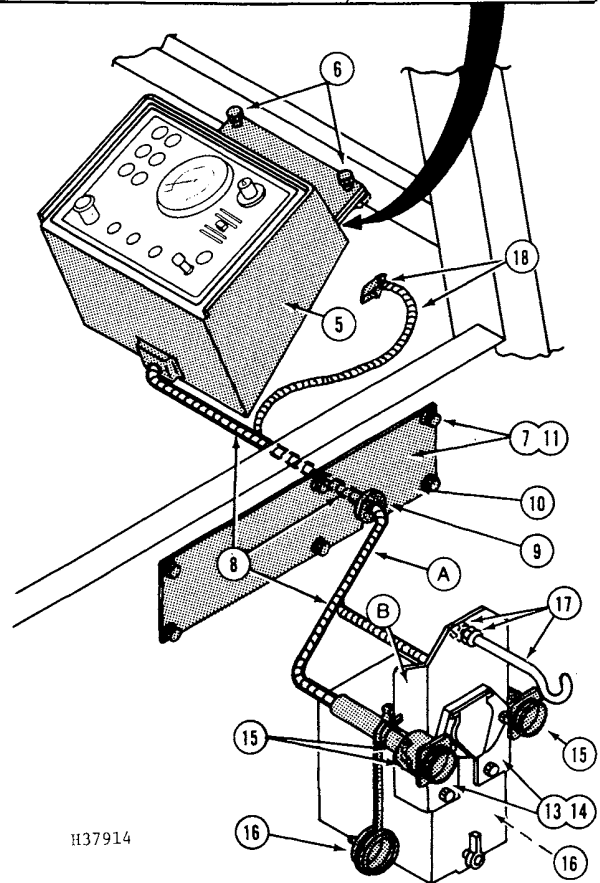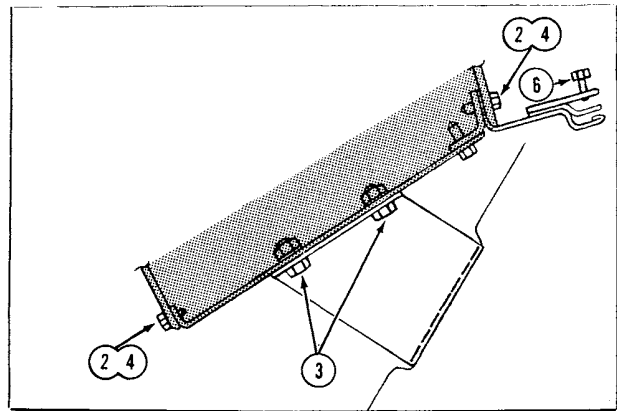

H37914

H37914

**INSTALLING HARVESTRAK CONTROL BOX IN JOHN DEERE
ROW-CROP TRACTORS WITH SOUND GARD CABS (1972-) AND
JOHN DEERE 8430, 8440, 8450, 8630, 8640 AND
8650 FOUR WHEEL DRIVE TRACTORS**

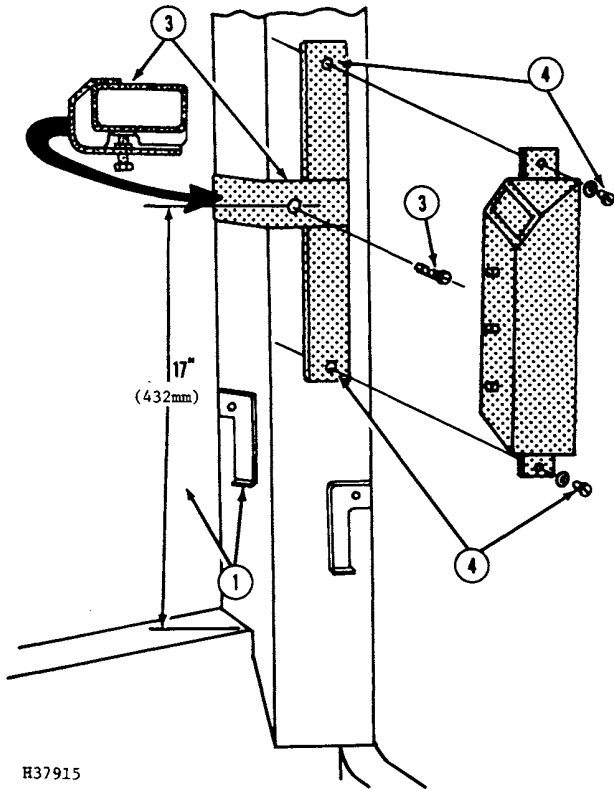

1. Open right hand tractor window.
2. Locate center of mounting bracket about 17-in. up on post.
3. Hook HARVESTRAK mounting bracket around post and tighten 1/4 x 1-3/8-in. pan head screw. Plug must be between screw and post.
4. Secure control panel to mounting bracket with two #10 x 3/8-in. black pan head screws and 9/32 x 1 x .060-in. washers. These plated washers must be painted black to match control panel.
5. (Not illustrated) Connect harness to control box.

H37915


H37915




Preparing the Combine

Before starting to combine for the first time each day:

1. Check hydraulic oil level. Oil level must be above lower sight glass (A) and below top of upper sight glass (B). Add oil as needed.

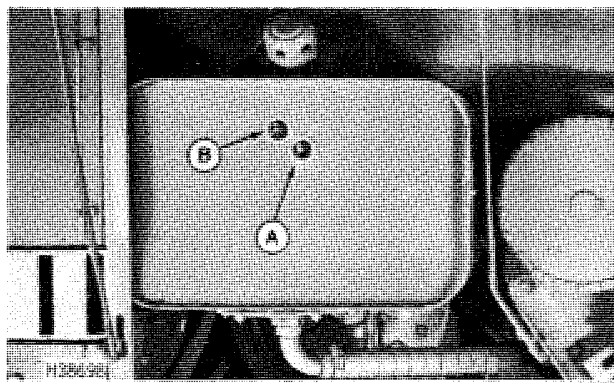

2. Perform all daily lubrication and maintenance.

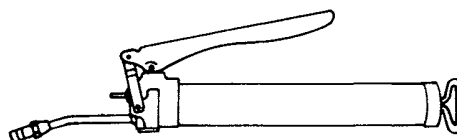


H31858

H31858

3. Clean out stone traps.


CAUTION: Always lower the hydraulic cylinder safety stop, stop engine and remove tractor key when working under the header or feeder house.

To dump stone trap, move levers up. Close by moving levers down. Empty stone traps often.

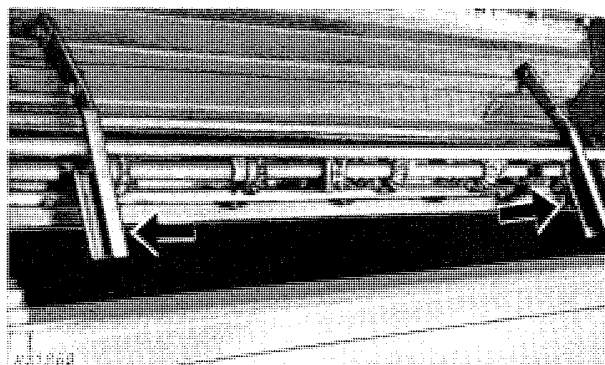

H31859

4. Clean tractor cab glass.

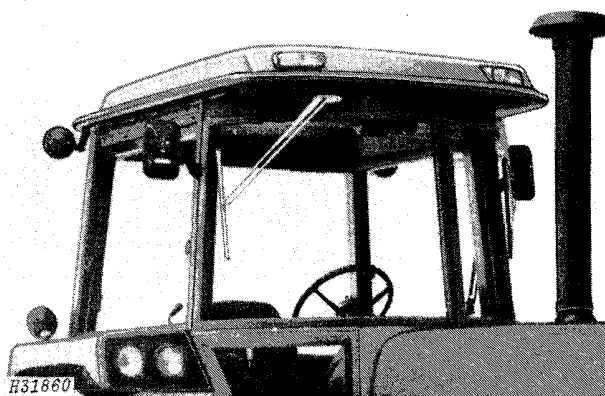

H31860

H31860



Suggest:

If the above button click is invalid.

Please download this document

first, and then click the above link


to download the complete manual.

Thank you so much for reading



Attaching and Detaching the Combine

ATTACHING COMBINE TO TRACTOR

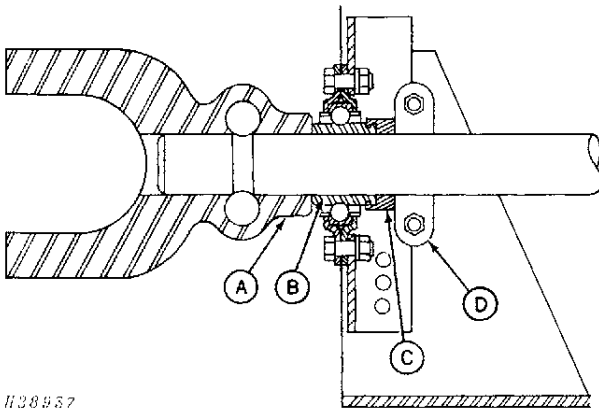

H38857

H28937

Combine to Tractor Hookup

IMPORTANT: Tractor minimum horsepower 125 (93 kW), maximum horsepower 300 (224 kW).

IMPORTANT: Locking clamp must not be moved unless it is necessary to replace parts.

A—Yoke
B—Bearing
C—Locking Collar
D—Locking Clamp

If the combine is to be hooked up to a different model John Deere tractor than originally equipped for, the following parts must be ordered and installed:

If combine is to be used with a 40 or 50 series tractors, install two AR93819 couplers, AR93820 coupler and two R28006 dust caps. Two AR98201 adapters can also be used.

4430 Tractors

BH76512 10-inch (254 mm) Drawbar Extension. Support braces for the extension are included.

NOTE: If tractor is equipped with AR46810 wide swinging drawbar kit, also order AR33911 drawbar support and two R49106 bolts.

BH76535 1-3/8-inch (10 mm) PTO Shaft

BH76472 Drawbar Attaching Parts

4440, 4450, 4520, 4630, and 5020 Tractors

BH76513 10-inch (254 mm) Drawbar Extension

BH76535 1-3/8-inch (10 mm) PTO Shaft

BH76473 Drawbar Attaching Parts

4640, 4650, 4840, 4850 and 6030 Tractors

BH76511 6-inch (152 mm) Drawbar Extension

BH76534 1-3/4-inch (44 mm) PTO Shaft

BH76473 Drawbar Attaching Parts

8430, 8440, 8450, 8630, 8640 and 8650

BH76511 6-inch (152 mm) Drawbar Extension

BH76534 1-3/4-inch (44 mm) PTO Shaft

BH76473 Drawbar Attaching Parts

BH71110 Wiring Harness Extension

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>