

**8560**

(001673- )

**8760**

 
(002653- )

**8960**

(001768- )

**Tractors**

**OPERATORS  
MANUAL**

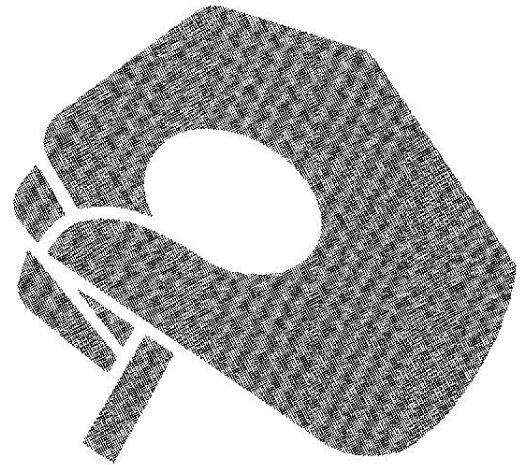

**John Deere Waterloo Works**  
**OMAR109479 Issue B0**  
(Mark old manual OMRW25626K9 for  
machines up to Serial No. above.)

LITHO IN U.S.A.

# Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are U.S. customary units and their metric equivalents.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS in the Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.



RW15247  
-JUN-07DEC88

# Contents

	Page		Page
<b>Safety</b> .....	05-1	12-Speed Syncro and 24-Speed POWRSYNC® Transmission .....	45-2
<b>Safety Signs</b> .....	10-1	Power Shift Transmission .....	45-6
<b>Controls and Instruments</b>		<b>Three-Point Hitch</b>	
Control Location .....	15-1	Component Identification .....	50-1
Instrument Identification .....	15-3	Hitch Control Lever .....	50-2
Gauges and Indicators Description .....	15-3	Sway Blocks .....	50-5
Tachometer .....	15-7	Attaching Implement Hitch .....	50-6
Performance Monitor .....	15-10	Adjusting Implement Level .....	50-7
Radar Sensor .....	15-16	Removing Implement .....	50-8
<b>Lighting and Signals</b>		<b>Remote Hydraulic Cylinders</b>	
Switch .....	20-1	Hose Tips .....	55-1
Lamps and Signals .....	20-1	Identifying SCV .....	55-1
Electrical Outlets .....	20-4	Connecting Cylinder Hoses .....	55-2
Load Center .....	20-6	Operating SCV .....	55-4
<b>Operator's Station</b>		Setting Remote Cylinder Stroke .....	55-6
SOUND-GARD® Body Temperature Controls .....	25-1	Disconnecting Cylinder Hoses .....	55-7
Window Wipers .....	25-3	<b>Drawbar and PTO</b>	
Windows .....	25-3	Drawbar Adjustments .....	60-1
Radio .....	25-4	Power Take-Off (PTO) .....	60-3
Seat .....	25-7	<b>Ballast</b>	
Steering Wheel .....	25-10	Importance of Ballast .....	65-1
<b>Engine Break-in</b> .....	30-1	Measuring Wheel Slip .....	65-2
<b>Prestarting Checks</b> .....	35-1	Determining Ballast .....	65-5
<b>Operating the Engine</b>		<b>Wheels, Tires, and Treads</b>	
Start-up Procedures .....	40-1	Wheel Tightening .....	70-1
Cold Weather Starting .....	40-4	Tread Width Limitations .....	70-3
Starting Aids .....	40-5	Adjusting Tread Width .....	70-5
Warm-up and Operation .....	40-7	Steering Stops .....	70-8
Stopping the Engine .....	40-10	Inflation Pressure .....	70-9
<b>Operating the Tractor</b>		<b>Transporting</b>	
Brakes .....	45-1	Driving .....	75-1
Differential Lock .....	45-1	Carrier .....	75-3
		Towing .....	75-4

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OMAR109479 B0-19-06MAR90

COPYRIGHT® 1990  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION™ Manual

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

*Contents*

	<b>Page</b>		<b>Page</b>
<b>Fuels, Lubricants, and Coolant</b>		<b>Lighting</b> . . . . .	
Fuel . . . . .	80-1	Brakes . . . . .	135-27
Engine Oil . . . . .	80-4	Heating . . . . .	135-33
Coolant . . . . .	80-5	Air Conditioner . . . . .	135-37
Transmission/Hydraulic Oil . . . . .	80-6	Rollover Protective Structure . . . . .	135-40
Lubricants . . . . .	80-8		
Lubricant Storage . . . . .	80-8	<b>Storage</b>	
<b>Lubrication and Maintenance/10 Hour</b> . . .	85-1	Placing Tractor in Storage . . . . .	140-1
<b>Lubrication and Maintenance/After 100 Hours</b> . . . . .	90-1	Removing Tractor From Storage . . . . .	140-4
<b>Lubrication and Maintenance/250 Hours</b> . .	95-1	<b>Crime Prevention Tips</b> . . . . .	145-1
<b>Lubrication and Maintenance/500 Hours</b> . .	100-1	<b>Specifications</b>	
<b>Lubrication and Maintenance/750 Hours</b> . .	105-1	General . . . . .	150-1
<b>Lubrication and Maintenance/1500 Hour</b> . .	110-1	Ground Speeds . . . . .	150-4
<b>Lubrication and Maintenance/Annually</b> . . .	115-1	<b>Identification Numbers</b>	
<b>Lubrication and Maintenance/2 Year</b> . . . . .	120-1	Identification Plates . . . . .	155-1
<b>Lubrication and Maintenance/As Required</b> . . . . .	125-1	<b>Daily Maintenance</b> . . . . .	160-1
<b>Operational Checkout and Troubleshooting</b>		<b>Lubrication and Maintenance Records</b> . . .	165-1
Operational Checkout . . . . .	130-1		
Engine . . . . .	130-14		
Transmission . . . . .	130-17		
Drive Line . . . . .	130-17		
Hydraulic System . . . . .	130-18		
Brakes . . . . .	130-19		
Axles . . . . .	130-19		
3-Point Hitch and Quick-Coupler . . . . .	130-20		
Remote Hydraulic Cylinders . . . . .	130-21		
Electrical . . . . .	130-22		
SOUND-GARD® Body . . . . .	130-24		
<b>Service</b>			
Access . . . . .	135-1		
Air Cleaner . . . . .	135-3		
Fuel System . . . . .	135-6		
Cooling System . . . . .	135-11		
Belts . . . . .	135-17		
Electrical . . . . .	135-22		
Fuses . . . . .	135-26		

# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



O53,ALERT -19-26JAN90

T81389 -JUN-07DEC88

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

Safety signs with signal word DANGER or WARNING are typically near specific hazards.

General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



O53,SIGNAL -19-26JAN90


TS187 -19-30SEP88

## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

 Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

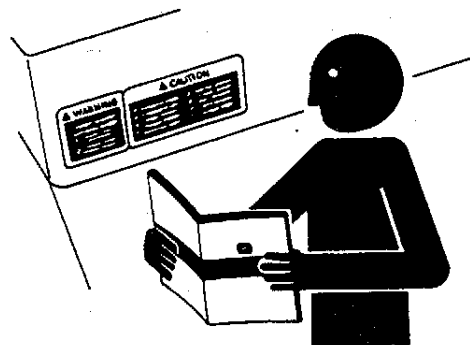

O53,READ -19-26JAN90

TS201 -JUN-23AUG88



## PROTECT BYSTANDERS

Be sure everyone is clear of tractor and attached equipment before starting engine or moving steering wheel. Tractor and equipment move, even with transmission in PARK. Some steering movement often occurs as engine starts.



RX,CRUSH -19-05MAY88

-JUN-07DEC88

RW13091

## USE HAND HOLDS AND STEPS

Clean off slippery mud, grease, and any crop residue that may have accumulated on the steps and operator's platform of your tractor. Remember that chains and tools carried on the platform may interfere with pedal operation or cause a slip or fall from the tractor. Remove them.



RX,SLIP -19-05MAY88

-JUN-07DEC88


RW13082

## PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

 NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

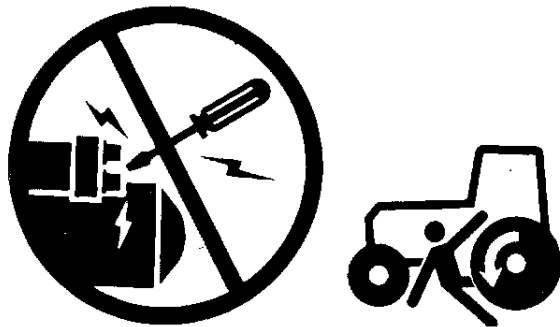


O53,BYPAS1 -19-26JAN90

-JUN-11JAN89

TS177

## USE SEAT BELT PROPERLY

 Use a seat belt when you operate with a roll-over protective structure (ROPS) to minimize chance of injury from an accident such as an overturn.

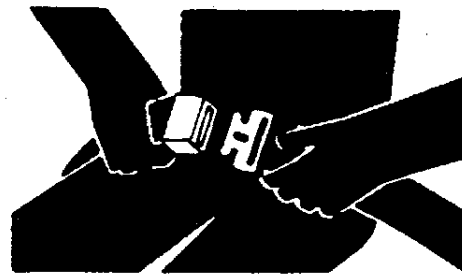

RX,4WDBELT -19-19FEB90

-JUN-05JAN89

RW16064




## OPERATE TRACTOR SAFELY

 Features designed into your tractor make operation safer and let it perform a wide variety of jobs. Use your tractor only for specific jobs it was designed to perform: implement carrier, load mover, remote power source, or transport unit—not a recreational vehicle.

Careless use or misuse can result in unnecessary accidents. Be alert to hazards of tractor operation. Understand causes of accidents and take every precaution to avoid them. Most common accidents are caused from:

- Tractor upsets
- Improper starting procedures
- Crushing and pinching during hitching
- Collisions with other motor vehicles
- Getting entangled in PTO shafts
- Falls from tractors

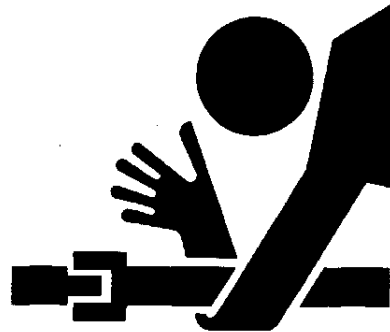

RX,HAZARD,S -19-25JUL89


TS276 -UN-23AUG88

## SHIFT TO LOW GEAR ON HILLS

 Shift to a low gear before descending a steep hill to improve your control of the tractor with little or no braking. Use engine braking to reduce speed before applying tractor brakes. Run-away tractors often tip over. Never coast downhill.

When driving on icy, wet, or graveled surfaces, reduce speed and be sure tractor is properly ballasted to avoid skidding and loss of steering control. For best control, engage front-wheel drive, if equipped, by using "ON" mode, rather than "AUTO" mode for four-wheel braking.

Additional ballast may be needed for transporting heavy integral implements. When implement is raised, drive slowly over rough ground, regardless of how much ballast is used.

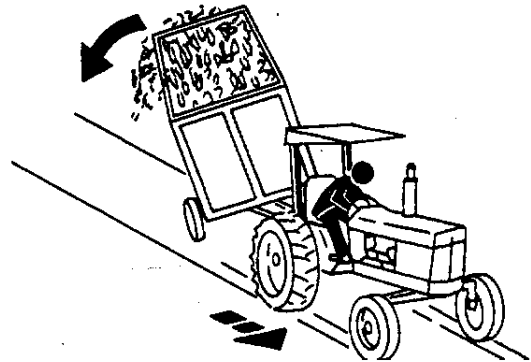

RX,DRIVE,SAFE -19-07DEC88

TS216 -UN-23AUG88



## USE CAUTION ON HILLSIDES

Avoid holes, ditches, and obstructions which may cause the tractor to tip, especially on hillsides.

 
Never drive near the edge of a gully or steep embankment—it might cave in.

Be especially careful when using single wheels. Danger of overturn increases greatly with narrow tread, 80 in. (2032 mm), or less and high speed.

For hillside operation, always use front and rear dual wheels. Avoid sharp, uphill turns.

Keep transmission-hydraulic oil level at upper mark on dipstick when operating on hillsides. Low oil level might result in loss of steering and clutch engagement. If this should happen, hold tractor with brakes, shift to PARK, stop engine, and add hydraulic oil to proper level.

Before operating on extremely steep slopes, fill transmission-hydraulic system beyond overfill mark on dipstick 1—2 gal (4—8 L). This is particularly important when using large hydraulic cylinders, due to the volume of oil used to extend them.

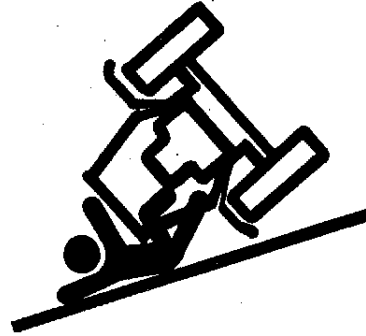

-JUN-07DEC88

RW13093

RX,HILL,SIDE -19-19FEB90




## STOPPING AND PARKING TRACTOR

 Your ability to stop your tractor and park it safely is just as important as being able to get it underway safely.

Tractor upsets, collisions, runaway tractors, and people being crushed under machines and implements can happen when operators ignore safety.

To avoid these accidents, take some precautions:

- Signal before stopping, turning, or slowing down on highways.
- Pull over to shoulder of highway before stopping, if possible.
- Slow down before braking.
- Pump brakes when stopping on slippery surfaces like ice, snow, mud, or loose gravel.
- Be careful when towing and stopping heavy loads.
- Shift to park or set parking brake.
- Lower all equipment when leaving tractor.
- Turn off all electrical switches and remove key.

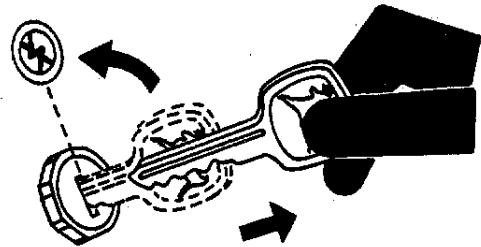


RX,STOP,PARK -19-19FEB90

TS230 -JUN-24MAY99

## WORK IN VENTILATED AREA

 Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

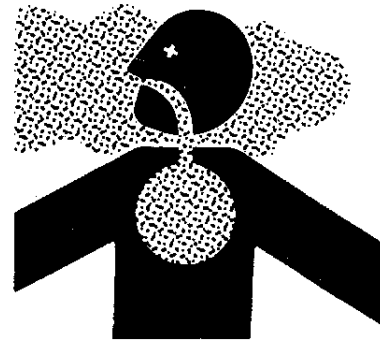


O53,AIR -19-26JAN90

TS220 -JUN-23AUG88

## KEEP RIDERS OFF MACHINE

 Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

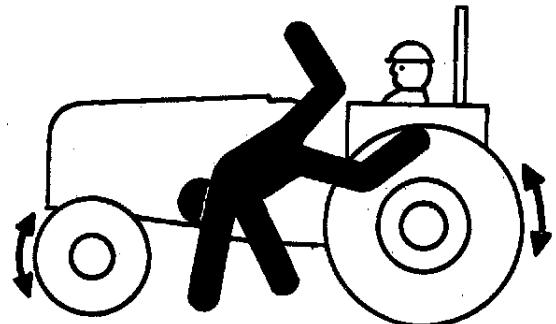


O53,RIDER -19-26JAN90

TS290 -JUN-29AUG88



### OPERATE RADAR UNIT SAFELY

 Radar ground speed sensor emits a very low intensity microwave signal. It will not cause any ill effects during normal use. Although intensity is low, DO NOT look directly into face of sensor while in operation, to avoid any possible eye damage.

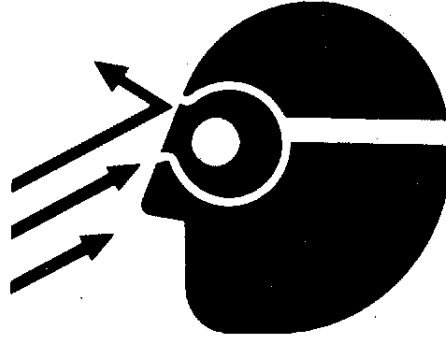

RX,SAFTY,RADAR -19-26NOV88

TS266 -JUN-23AUG88

### HANDLE FLUIDS SAFELY—AVOID FIRES

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.



O53,FLAME -19-26JAN90


TS227 -JUN-23AUG88

### PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

 Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

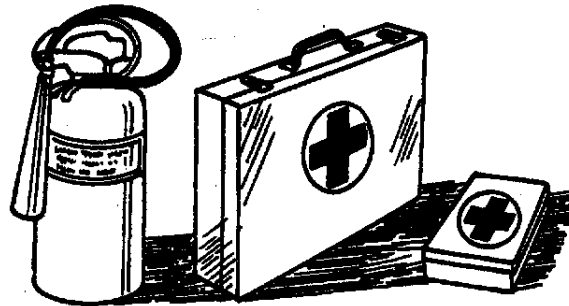

O53,FIRE2 -19-26JAN90

TS291 -JUN-23AUG88



### HANDLE STARTING FLUID SAFELY

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.



 
O53,FIRE3 -19-26JAN90

T6089AU -JUN-23MAR89

### DISPOSE OF FLUIDS PROPERLY

Improperly disposing of fluids can harm the environment and ecology. Before draining any fluids, find out the proper way to dispose of waste from your local environmental agency.

Avoid pouring oil into the ground, down a drain, or into a stream, pond, or lake. Observe relevant environmental protection regulations when disposing of oil, fuel, coolant, brake fluid, filters, batteries, and other harmful waste.

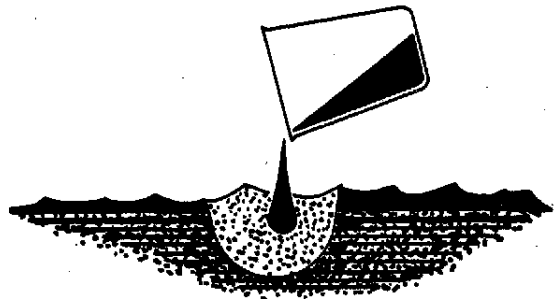


O53,DRAIN -19-26JAN90

TS222 -JUN-23AUG88

### WEAR PROTECTIVE CLOTHING

 Wear close fitting clothing and safety equipment appropriate to the job.

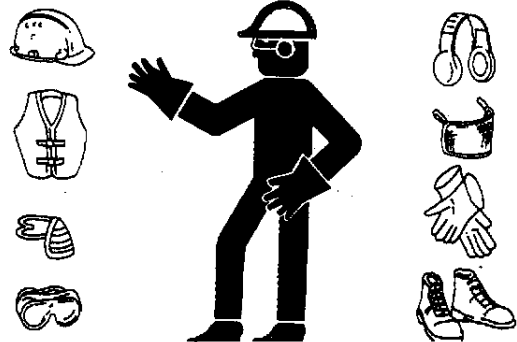

O53,WEAR2 -19-26JAN90

TS206 -JUN-23AUG88



## PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.



O53,NOISE -19-26JAN90


-JUN-23AUG88

TS207

## HANDLE CHEMICALS PROPERLY

Know hazards of fertilizers, insecticides, herbicides, and other chemicals you use during tillage and planting operations. Avoid any contact with dust, spray mixes, and vapors, especially from deadly organic phosphates, which are fast-acting nerve poisons.

 SOUND-GARD body air filters are not designed to filter out harmful chemicals. Follow instructions given in the implement operator's manual and those given by the chemical manufacturer when using agricultural chemicals.

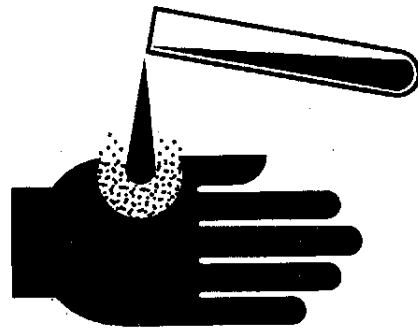

RX,HANDLE,CHEM -19-10NOV88

-JUN-23AUG88

TS272

## STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.



O53,PTO -19-26JAN90

-JUN-23AUG88

TS198

 


## USE SAFETY LIGHTS AND DEVICES

When transporting your machine on a road or highway at night or during the day, use necessary safety lights. Check local governmental regulations. A safety lighting kit is available from you John Deere dealer.

Keep safety items in good condition. Replace missing or damaged items.

- A—Lights  
B—Slow Moving Vehicle Emblem  
C—Reflector Tape  
D—Reflectors

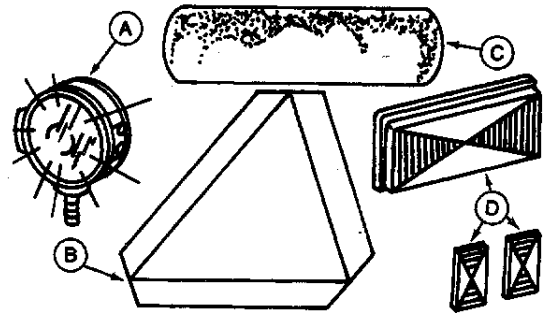

N86564 -JUN-10FEB89


O53,WARN -19-26JAN90

## USE A SAFETY CHAIN

 A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

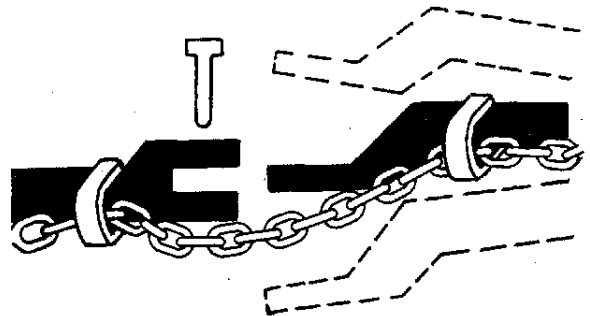


TS217 -JUN-23AUG88

O53,CHAIN -19-26JAN90

## TRANSPORT TRACTOR SAFELY

 The best method for transporting a disabled tractor is to haul it on a flatbed carrier. Chain tractor to carrier securely.

If towing a tractor, never tow faster than 10 mph (16 km/h) with rear wheels raised or faster than 5 mph (8 km/h) with all wheels on the ground. Have an operator steer and brake tractor.

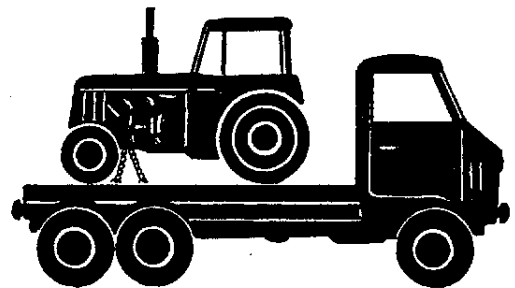

RW13090 -JUN-07DEC88

RX,HAUL,IT1 -19-05MAY88




## REDUCE SPEED WHEN TOWING LOADS

 Braking to stop towed loads from transport speeds can cause the towed load to swerve and upset. Reduce speed if towed load weighs more than the tractor and is not equipped with brakes.

Follow recommended speed-weight ratio guidelines:

- Maximum speed is 20 mph (32 km/h) when towing load equal to or less in weight than the tractor.
- Reduce speed to 10 mph (16 km/h) when towing load up to double the tractor weight.
- Do not tow loads exceeding double the tractor weight.
- Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

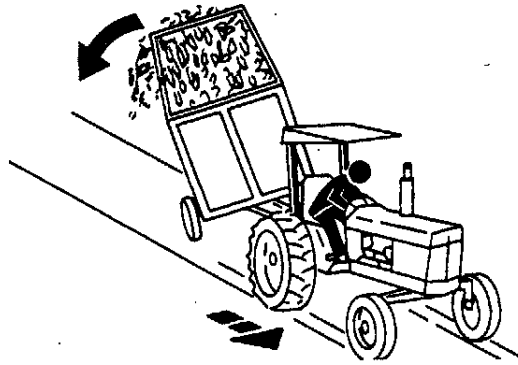


O53,TOW -19-26JAN90

TS216 JUN-23AUG88

## KEEP ROPS INSTALLED PROPERLY

 Make certain all parts are reinstalled correctly if the roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to proper torque.

The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged ROPS should be replaced, not reused.

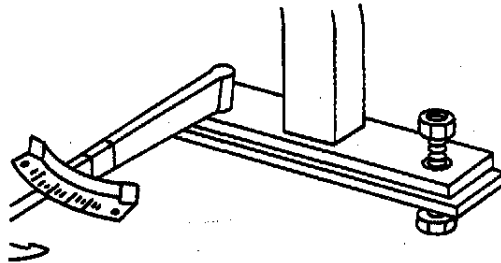

O53,ROPS3 -19-26JAN90

TS212 JUN-23AUG88



## PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate or service machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



O53,SERV -19-26JAN90

TS218 -UN-23AUG88

 
## AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury may call the Deere & Company Medical Department in Moline, Illinois, or other knowledgeable medical source.

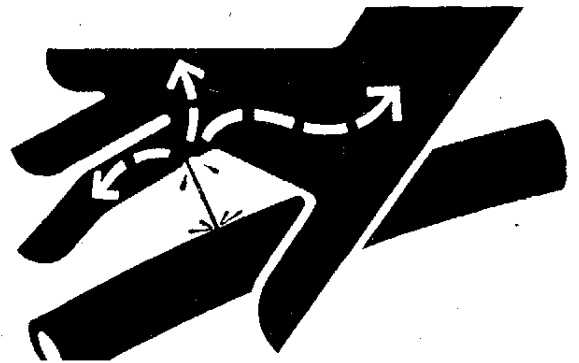

O53,FLUID -19-26JAN90


X9811 -UN-23AUG88



## SERVICE BRAKE ACCUMULATOR SAFELY

 Accumulator contains gas and oil under pressure. To avoid injury from escaping fluid, relieve all pressure from accumulator before disconnecting brake accumulator or brake valve. To do so open bleed screws and pump brake pedal with engine stopped, until pedal easily goes all the way down.

The accumulator is charged with dry nitrogen to a pressure of 500 psi (3450 kPa) (35 bar). If it needs recharging, have job done only by a qualified service person and only with dry nitrogen.

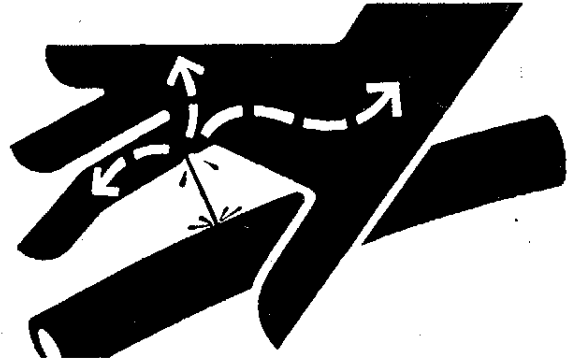

-JUN-23AUG88


X9811

RX,BRAKE,FIX -19-26JUL89

## SERVICE COOLING SYSTEM SAFELY

 Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

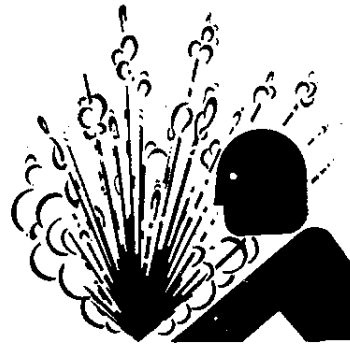

-JUN-23AUG88

TS281

O53,RCAP -19-26JAN90

## STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.




-JUN-23AUG88

TS219

O53,STORE -19-26JAN90

# Safety Signs
 
## PREVENT MACHINE RUNAWAY

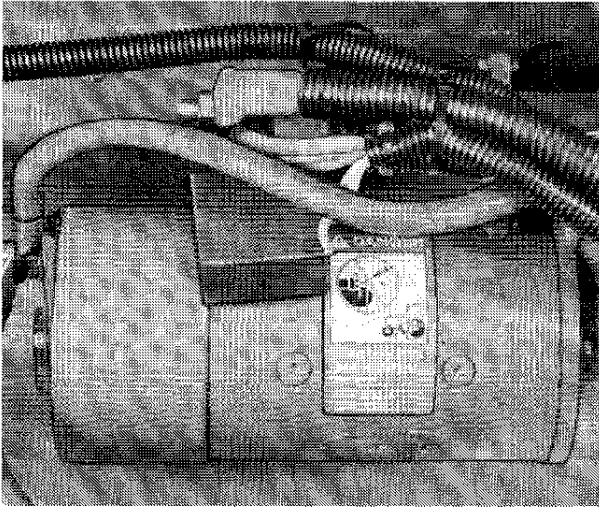

RW17481 -JUN-31/OCT89


**!** **DANGER**

A safety sign with a black border. At the top left is a warning triangle with an exclamation mark. To its right is the word "DANGER" in bold, uppercase letters. Below this is a circular icon with a diagonal slash through it. The icon depicts a hand pressing a button with a lightning bolt symbol, representing a start button. To the right of the circle is a small icon of a tractor with a person sitting on it. Below the sign, the text reads: "Start only from seat in park or neutral. Starting in gear kills." in bold, uppercase letters.

RW15224 -19-06/APF89

RX,J424,10 -19-16/OCT89

 **STAY CLEAR OF ENGINE FAN**

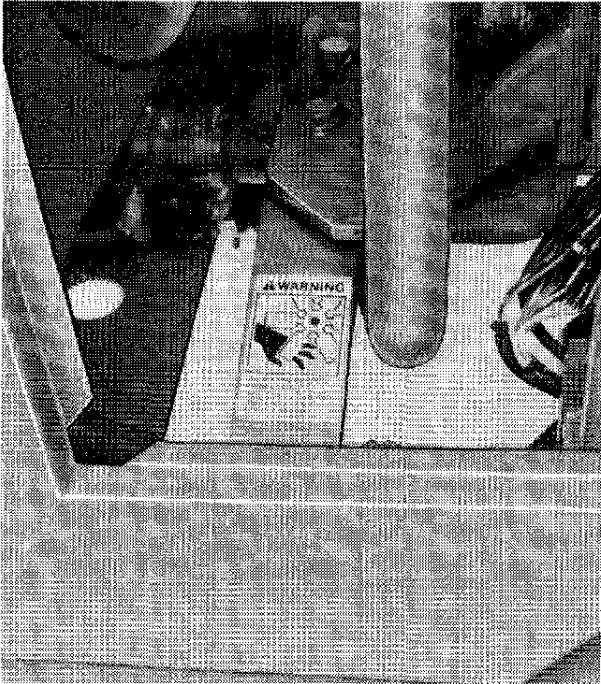

RW15251 -JUN-07DEC88

**▲ WARNING**

**Avoid bodily injury from rotating engine fan: Keep hands out of fan discharge area when engine is running.**

RW15252 -19-03APR89

RX,H55 -19-29NOV88



**Suggest:**

**If the above button click is invalid.**

 
**Please download this document**

**first, and then click the above link**

**to download the complete manual.**

**Thank you so much for reading**

**OPERATE TRACTOR SAFELY—  
STAY CLEAR OF MOVING TRACTOR—  
DO NOT MODIFY ROPS**

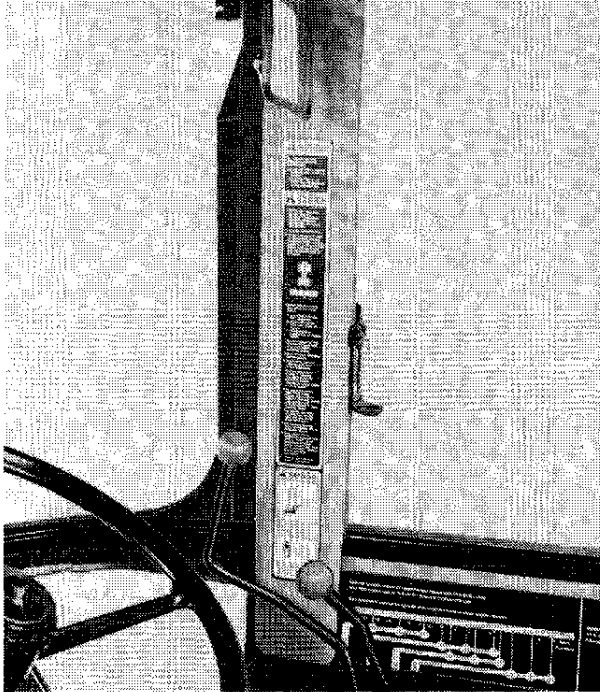

RW17482 -JUN-31OCT89

**WARNING**

To maintain operator protection and ROPS certification:

- Damaged ROPS must be replaced, not repaired or revised.
- Any alteration to the ROPS must be approved by the manufacturer.

**CAUTION**

1. Before operating this tractor, read the Operator's Manual for complete operating instructions and safety information.
2. Keep all shields in place.
3. Be sure everyone is clear of tractor and attached equipment before starting engine or moving steering wheel, because tractor and equipment move as pictured.

4. Install lock-pin or lock-bars on tractor hinge before:
  - a. operating stationary PTO equipment.
  - b. performing service work near center of tractor.
  - c. lifting tractor or transporting on another vehicle.Be sure lock-pin or lock-bars are removed from hinge area before operating tractor.
5. Keep all riders off tractor and equipment.
6. Keep hands, feet and clothing away from power-driven parts.
7. Reduce speed when turning or applying individual brakes or operating around hazards, on rough ground or steep slopes.
8. Be especially careful when using single wheels. Danger of an overturn increases greatly with narrow tread (2 m [80 inches] or less) and high speed.  
For hillside operation, use only dual wheels, front and rear. Avoid sharp uphill turns.
9. Use flashing warning lights on highway unless prohibited by law.
10. Stop engine, lower implement to ground and shift to "PARK" or set hand-brake securely before dismounting. Wait for all movement to stop before servicing machinery.
11. Remove key if leaving tractor unattended.

RW17863 -19-07NOV89

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**