

COMBINE OPERATOR'S CAB



JOHN DEERE

OPERATORS MANUAL COMBINE OPERATOR'S CAB

OMH90827 (01NOV61) English

OMH90827 (01NOV61)

LITHO IN THE U.S.A.
ENGLISH



To the purchaser


This operator's manual contains the necessary information regarding operation and adjustments so that you may obtain maximum service and satisfaction from your operator's cab with either air conditioner, heater, or ventilating fan.

If you should find that you require information not covered in this manual, consult your John Deere dealer. He will be glad to answer any question that may arise.

Your John Deere dealer has trained mechanics who are kept informed on the best John Deere service methods and will render you prompt service if needed.

The operator's cab can be installed on the following John Deere combines:

- 45 combine, serial no. 45-21501 and up
- 55 combine, serial no. 55-46801 and up
- 95 combine, all series, except 95H Hillside

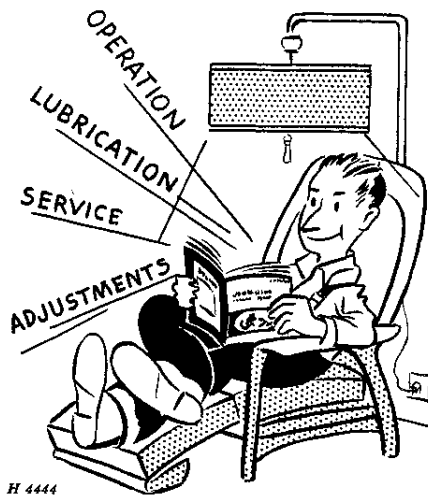

H 4444

Study this manual carefully and keep it handy in a safe place for future reference

Location reference


"Right-hand" and "left-hand" sides are determined by facing in the direction the combine will travel when in use.

Date of Purchase _____

Contents

Specifications	1	Heater Unit	5-6
Operator's Cab	2	Ventilating Fan	6
Air Conditioner	3-4	Trouble Shooting	7-8

Specifications

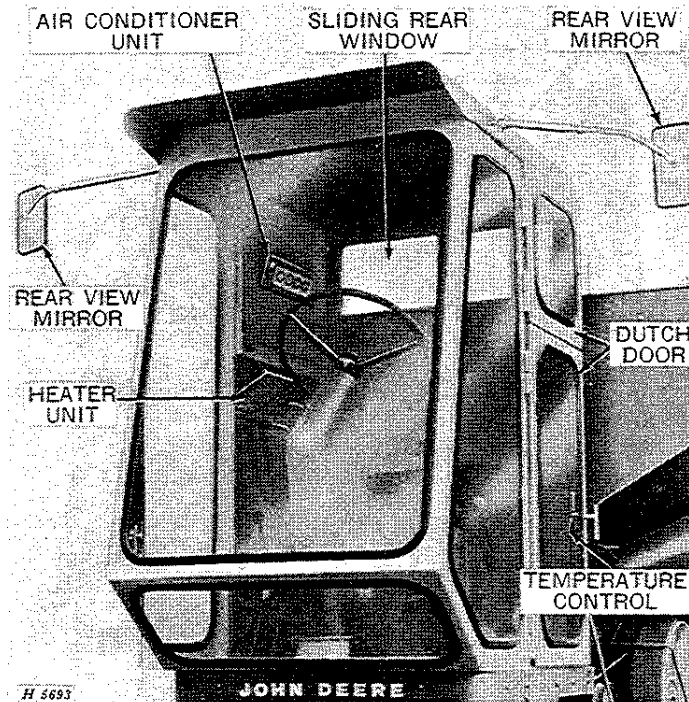

<p>Cab glass</p> <p>45 combine cab area 31 square feet</p> <p>55 combine cab area 35 square feet</p> <p>95 combine cab area 39 square feet</p> <p>Cab filters</p> <p>Outside:</p> <p>Type permanent, metal</p> <p>Size 13 x 13 x 1-inch thick</p> <p>Inside:</p> <p>Type permanent, metal</p> <p>Size 22 x 10 x 1-inch thick</p> <p>Cab insulation</p> <p>Top sprayed composition</p>	<p>Back sprayed composition</p> <p>Floorboard sponge rubber matting</p> <p>Air conditioner</p> <p>Capacity 1-1/2 tons (334 cfm)</p> <p>Controls located inside of cab</p> <p>Heater</p> <p>Capacity 12,000 B.T.U.</p> <p>Controls located inside of cab</p> <p>Ventilating fan</p> <p>Capacity 400 cfm.</p> <p>Controls located inside of cab</p>
---	---

(Specifications and design subject to change without notice.)

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

<https://www.ebooklibonline.com>

Hello dear friend!


Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Operator's cab

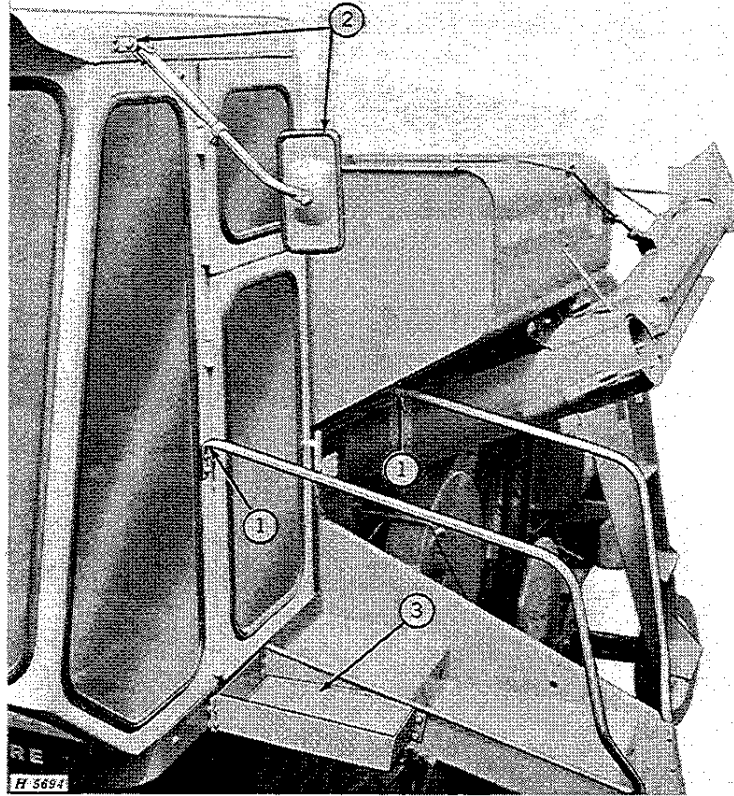

45 Combine illustrated

Assembly

1. Bolt new front ladder hand rail to ladder and cab with hardware furnished.
2. Attach mirrors to brackets on cab with hardware furnished.
3. (45 combines only) Bolt auxiliary step to operator's platform and ladder with two 5/16-inch machine bolts furnished.

NOTE: On combines equipped with rigid ladder it will be necessary to drill two 11/32-inch holes in ladder using step as template.

Operation

The operator's cab has a dutch door on the left-hand side which may be opened when the ventilating fan is used.

On the right-hand side of the cab there is one door which also may be opened when the ventilating fan is being used.

Sliding glass windows in the rear of cab are for access to the grain tank.



Suggest:

If the above button click is invalid.


Please download this document

first, and then click the above link

to download the complete manual.

Thank you so much for reading

Air conditioner

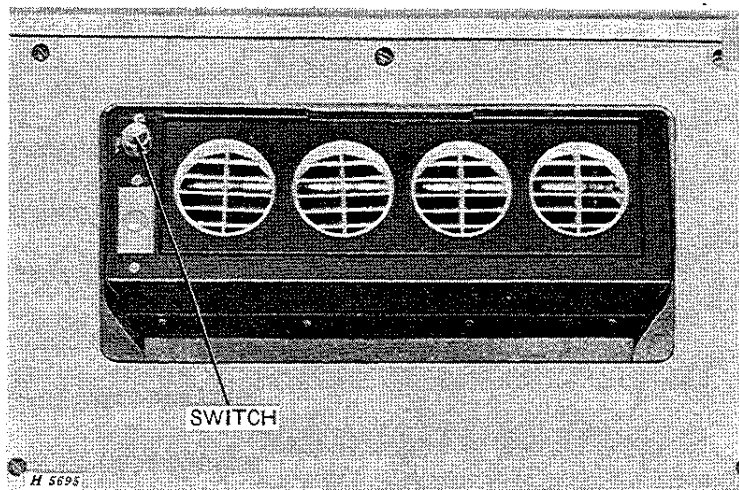

Evaporator unit

Operation

The function of the air conditioning unit is to bring air into the cab from outside, cool, and re-circulate it.

Controls

There are two controls for the air conditioner; the blower switch, located on the front of the evaporator and the "T" shaped temperature control handle, located in the lower left-hand rear corner of the cab.

For maximum cooling, turn blower switch to the right. Turn temperature control handle to unlock, and pull all the way out; twist handle to lock in desired position.

To shut-off cooling system, turn blower switch all the way to the left and push temperature control handle all the way in and lock.

For intermediate cooling, set blower switch on lower speed and pull temperature control handle approximately halfway out.

