


**Planetary and Chain
Drive Augers
PA30 and CA25 for
240, 250, 260, 270, and
4475, 5575, 6675, 7775, 8875
Skid Steers**

(Serial No. 100100 –)

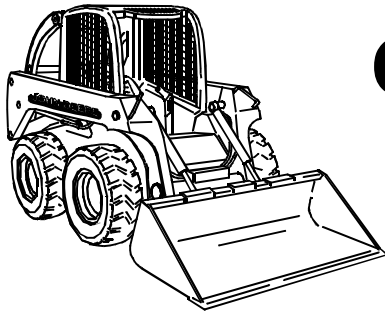

**OPERATOR'S
MANUAL**

**John Deere
Commercial Worksite Products**

OMKV16795 A9

North American Version
Litho in U.S.A
English

INTRODUCTION

THANK YOU for purchasing a John Deere product.

Read this manual and your vehicle manual thoroughly. Failure to do so could result in personal injury or equipment damage.



This manual should be considered a permanent part of your attachment and should remain with the attachment when you sell it.

Measurements in this manual are metric units and their U.S. customary equivalents. RIGHT-HAND and LEFT-HAND sides are determined by facing in the direction the machine will travel when going forward. When you see a broken line arrow (----->), it indicates the part it is pointing to is hidden.

Product warranty is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The product warranty is explained on the warranty certificate you received from your dealer.


Record identification numbers below. Be sure to record all the numbers to help in tracing the attachment if it is stolen. You also need to give these numbers to your authorized John Deere skid steer dealer when you order parts.

DATE OF PURCHASE:

DEALER NAME:

DEALER PHONE:

SERIAL NUMBER (A):

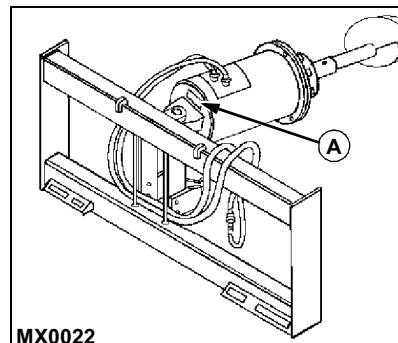

MX0022

TABLE OF CONTENTS

	Page
Safety Signs	1
Preparing the Vehicle	2
Installing	3
Removing	10
Operating	14
Service Machine Safely	25
Service	27
Troubleshooting	39
Storing Machine	41
Specifications	42
Warranty	44
Index	45
John Deere Service Literature	49

All information, illustrations and specifications in this manual are based on the latest information at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT© 1999
John Deere Commercial Worksite Products
All rights reserved

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

SAFETY SIGNS

Safety-Alert Symbol

Read and recognize safety information. Be alert to the potential for personal injury when you see this safety-alert symbol.



On your machine safety labels, the words DANGER, WARNING, and CAUTION are used with this safety-alert symbol. DANGER identifies the most serious hazards. In this manual, the word CAUTION and this symbol call attention to safety messages.

Machine Safety Labels



DANGER (A)

AVOID INJURY OR DEATH
STAY 10 FT. (3m) OR MORE
AWAY UNLESS OPERATING
MACHINE

- Read and understand operator's manual before operating or servicing machine.
- Stay away from rotating auger & cutting head.
- Check for underground utility lines.

WARNING (B)

- Before dismounting, lower mast and safely stow auger.
- Always cradle auger when moving from hole to hole.
- Always remove auger when transporting to and from site.
- Never put auger in a pry position.
- Failure to follow these instructions could result in serious injury or damage!!!

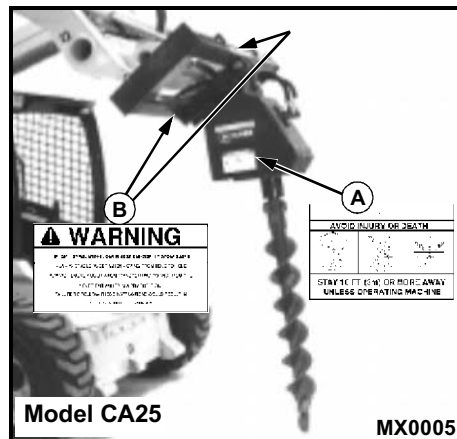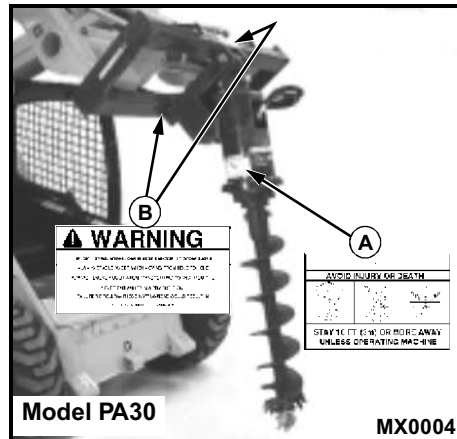


PREPARING THE VEHICLE

Ballasting

Rear ballast is not required but will improve skid steer stability when the auger is installed. Rear ballast consist of a total of eight 20 kg (44 lb) Quik-Tatch weights mounted behind the rear skid steer tires.

Install rear weight brackets (A) and weights using the installation instructions supplied with the weight bracket kit. Ballasting kits are available at your authorized John Deere skid steer dealer.

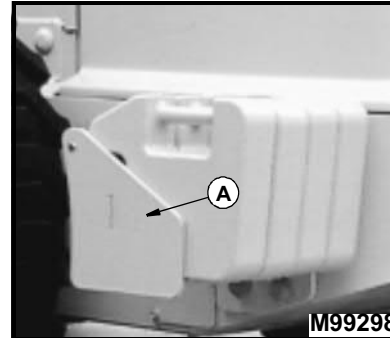

INSTALLING


Park Skid Steer Safely

- Stop skid steer on a level surface, not on a slope.
- Lower boom to the ground.
- Engage the park brake.
- STOP the engine.
- Remove the key.
- Remove the seat belt.
- Before you leave the operator's seat, wait for engine and all moving parts to STOP.
- If desired, install proper ballast to improve skid steer stability. (See Ballasting in the PREPARING THE VEHICLE section.)

Select Auger Bit

Auger bit selection is important to ensure maximum digging performance and prevent premature wear or damage to the bit. Select the correct bit for the type of ground conditions and digging applications you encounter.


Standard Duty Bit – For moderate to difficult ground conditions including compacted soil, heavy clay, asphalt, and rocky or frozen ground.

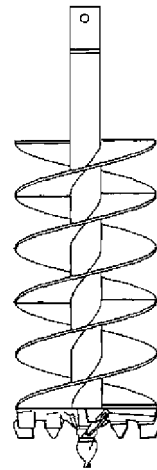

MX0023

INSTALLING

Tree and Shrub Bit – For tree and shrub planting. Two-diameter design digs a smaller diameter hole for fertilizer or mulch mixture underneath the root ball. The larger diameter provides clearance between the side walls of the hole and the root ball.

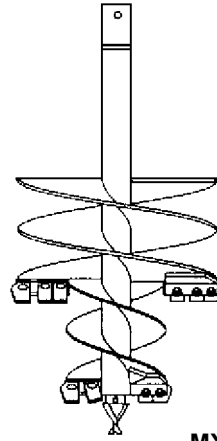

MX0024


Rock Bit – For fracturable rock, frozen ground, and extremely compacted soils.



MX0025

INSTALLING

Route Auger Hydraulic Hoses

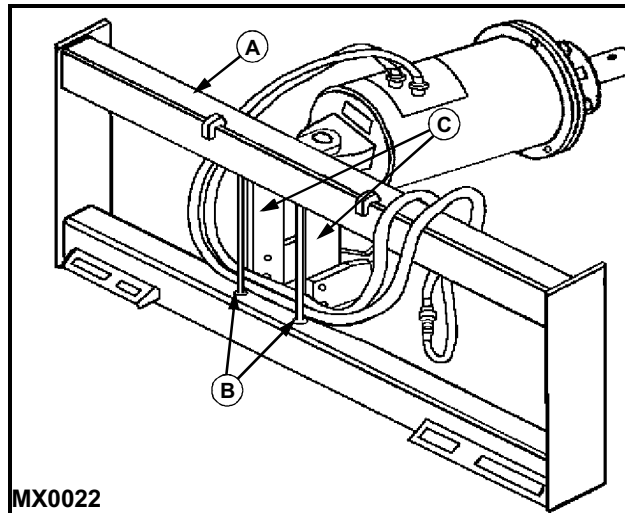

1. Disconnect the auger hydraulic hose couplers.
2. Route the hydraulic hoses through opening at left side of mounting bracket (A) and between rods (B) and center supports (C).
3. Connect the hydraulic hose couplers together to keep them clean.

INSTALLING

Install Auger




CAUTION: To avoid injury:

- **DO NOT** try to latch or unlatch handles from cab.
- **Be careful not to pinch hands between latch handle and step or latch handle and attachment.**

1. Pull latch handles (A) all the way upward to the UNLATCHED position.


2. Enter skid steer, fasten seat belt, and start the engine. Disengage the park brake.

3. Drive skid steer so it is aligned straight behind the auger mounting bracket with boom lowered. Stop the skid steer.

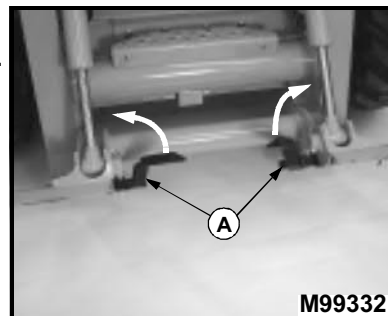

4. Using the bucket control pedal, tilt attaching plates (B) as shown.

5. Drive forward slowly and guide top edges of attaching plates under upper flanges (C). Using bucket control pedal, tilt attaching plates partially rearward until auger is hooked on plates.

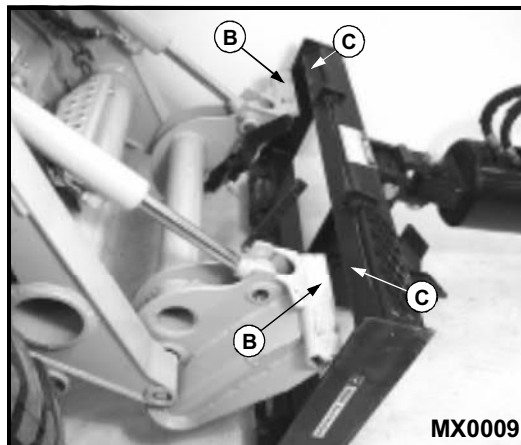

6. Using bucket control pedal, tilt attaching plates rearward as far as possible. Bottom surface of attaching plates must be tight against auger mounting bracket.

7. Engage park brake, stop engine, and remove the key.

8. Pivot the auxiliary hydraulic control handle toward the operator's seat several times to relieve system pressure.

9. Remove seat belt and exit the skid steer.


INSTALLING



CAUTION: To avoid injury, be sure pins and latch handles are secure before operating boom and bucket pedals. If attachment is not securely latched, remove it and repeat the installation.

10. Push latch handles (A) downward completely to engage lock pins.


11. Disconnect the auger hydraulic hose couplers.

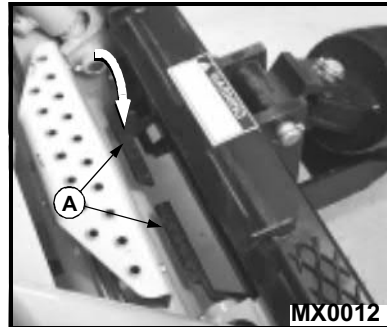

CAUTION: Escaping fluid under pressure can penetrate the skin causing serious injury. Avoid the hazard by relieving pressure before disconnecting or connecting hydraulic and other lines. Tighten all connections before applying pressure. Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

12. Connect the auger hydraulic hoses to skid steer hydraulic couplers (D) at left side of machine.

13. Install auger bit if necessary.

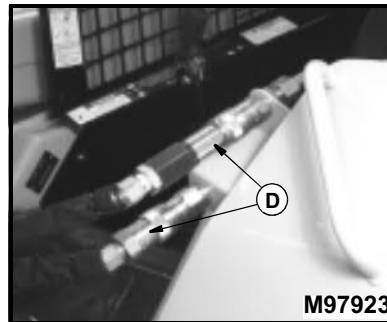

INSTALLING

Installing Auger Bit



CAUTION: AVOID INJURY OR DEATH!


Use an overhead crane or other safe lifting device and two people to install or remove larger bits:

- Visually inspect skid steer attachment mechanism to ensure lock pins are engaged in auger mounting bracket.
- Secure a safe lifting sling around the bit.
- Balance auger bit weight when attaching sling.
- DO NOT raise bit above auger output shaft.
- Maintain visual and verbal contact with one another at all times.
- Wear protective hard hat and gloves.
- DO NOT put hands between bit and output shaft.

1. Install auger on skid steer.

2. Enter skid steer, fasten seat belt, and start the engine. Disengage the park brake.

3. Tilt auger mounting bracket (A) as far rearward as possible and lower boom to ground.

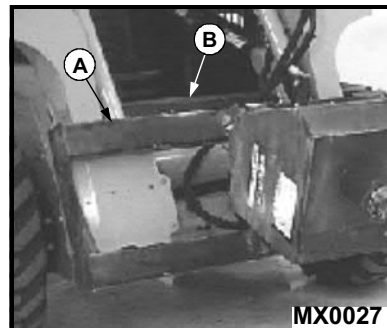


4. Raise boom approximately 15 - 20 cm (6 - 8 in.), making sure boom step is not higher than top edge of toe guard (B).

5. Engage park brake, stop engine, and the remove key.


6. Remove seat belt and exit the skid steer.

7. Slide auger bit (C) over output shaft (D). Align the auger mounting pin holes.

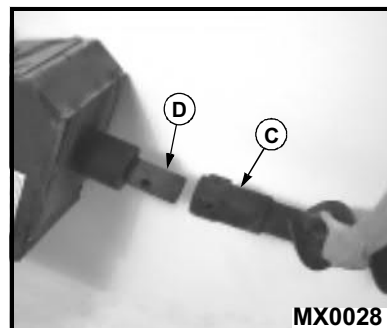


INSTALLING

8. Install auger mounting pin (E). If necessary, tap pin head gently with hammer until pin is fully seated.

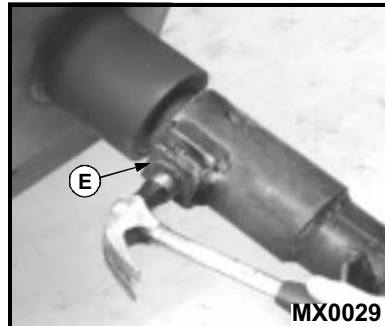

9. Insert quick-lock pin (F) through hole in auger mounting pin. Fold down the retaining ring to secure.

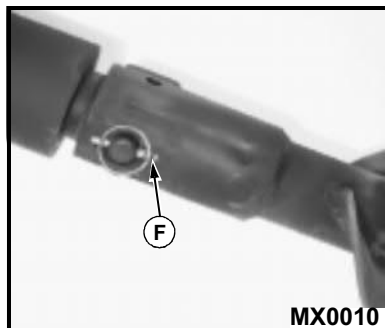

REMOVING

Removing Auger Bit



CAUTION: AVOID INJURY OR DEATH!


Use an overhead crane or other safe lifting device and two people to install or remove larger bits:

- Visually inspect skid steer attachment mechanism to ensure lock pins are engaged in auger mounting bracket.
- Secure a safe lifting sling around the bit.
- Balance auger bit weight when attaching sling.
- DO NOT raise bit above auger output shaft.
- Maintain visual and verbal contact with one another at all times.
- Wear protective hard hat and gloves.
- DO NOT put hands between bit and output shaft.

1. Enter skid steer, fasten seat belt, and start the engine. Disengage the park brake.

2. Tilt auger mounting bracket as far rearward as possible and lower boom to the ground.


3. Raise boom approximately 15 - 20 cm (6 - 8 in.) Make sure boom step is not higher than top edge of toe guard (A).

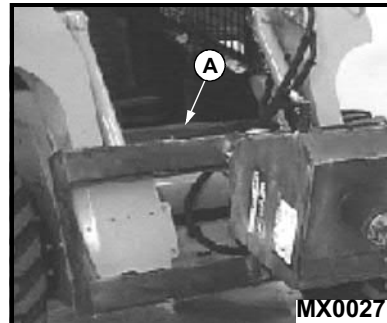

4. Engage park brake, stop engine, and remove the key.

5. Remove seat belt and exit the skid steer.

6. Remove quick-lock pin (B). Tap gently on auger pin (C) with wood block to loosen pin.

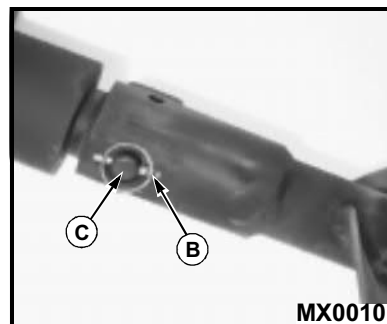


REMOVING

IMPORTANT: To prevent damage, do not pry against output shaft housing. Position hammer against bit and pull outward.

7. Position hammer head against bit (D) and insert claw under head of pin (C). Gently pull pin outward until removed.

8. Slide auger bit off of output shaft.

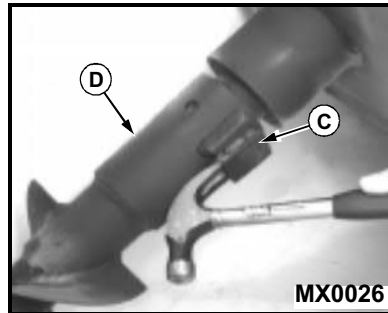



Suggest:

If the above button click is invalid.

Please download this document

first, and then click the above link

to download the complete manual.


Thank you so much for reading

REMOVING

Remove Auger


NOTE: Auger storage site should be a firm, level surface for ease of removal.

1. Drive skid steer to auger storage site and stop machine.
2. Using the bucket control pedal, tilt auger to a horizontal position.
3. Using the boom control pedal, slowly lower boom to the ground.
4. Engage park brake, stop engine, and remove the key.
5. Pivot the auxiliary hydraulic control handle toward the operator's seat several times to relieve system pressure.
6. Remove seat belt and exit the skid steer.

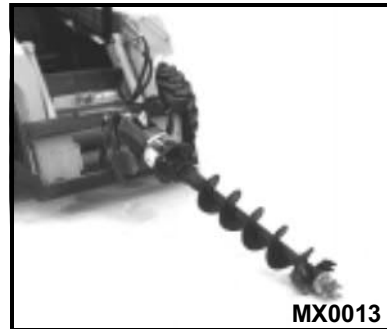

CAUTION: Escaping fluid under pressure can penetrate the skin causing serious injury. Avoid the hazard by relieving pressure before disconnecting or connecting hydraulic and other lines. Tighten all connections before applying pressure. Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

7. Disconnect hydraulic couplers (A) and pull hoses clear of skid steer.
8. Connect the pressure hose female coupler to the return hose male coupler to keep couplers clean.

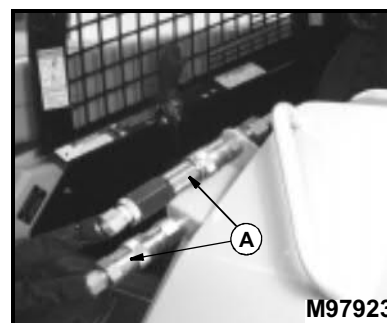

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>