 


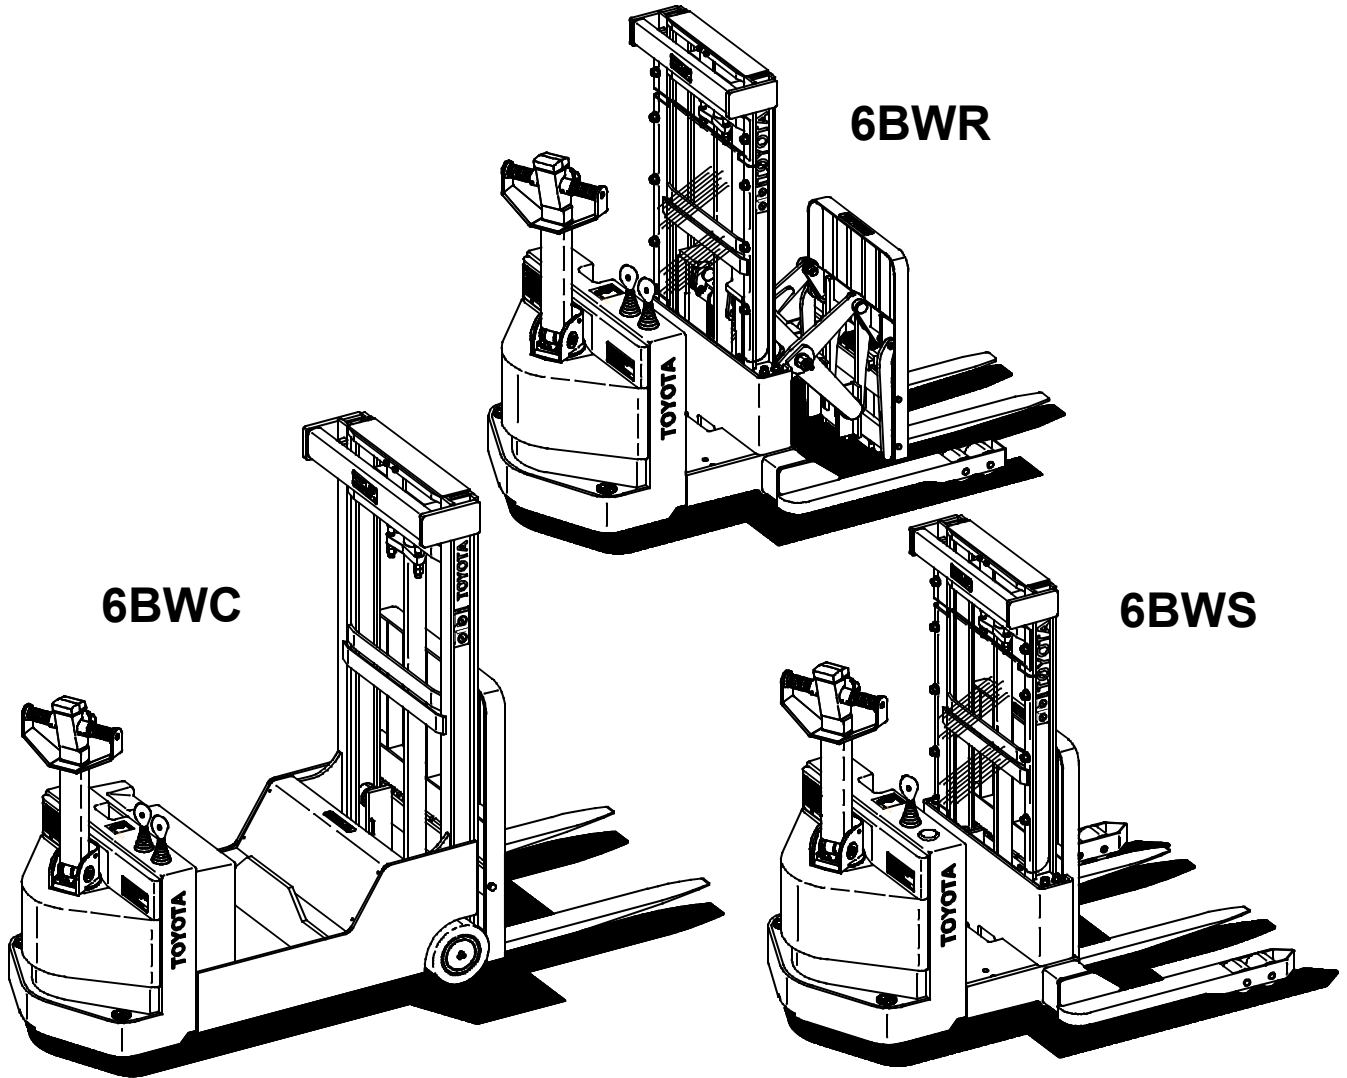

## 6BWC10/15/20 6BWS11/15/20 6BWR15

Electric Walkie High Lifter Trucks

Effective Serial Number 6BWC10-20001 - UP



 **WARNING** Read and observe all warnings on this unit before operating it.

 **WARNING DO NOT** operate this equipment unless all factory installed guards and shields are properly secured in place.

## Standard Codes

- B-Code = Business area  
 F-Code = Product family  
 T-Code = Product type  
 C-Code = Component function

### Worksheet standard

- W-Code = Working code  
 R-Code = Reason code  
 SO-Code = Assortment

### F-Code List

PS Powered Pallet Stackers

### T-Code List

No.	Model
6BWC	6BWC10/15/20
6BWS	6BWS11/15/20
6BWR	6BWR15

### C-Code List

No	Function Group	C-Code
0	Chassis	0000
1	Motors	1000
2	Drive Gear / Transmission	2000
3	Brake / Wheel System	3000
4	Steering System	4000
5	Electrical System	5000
6	Hydraulic / Pneumatic System	6000
7	Operating Function-lifting Mast / Cylinders	7000

F-code                      Section                      C-code

## Standard Codes

Version no                      T-code  
**001**

---

8	Peripheral / Installation Equipment	8000
9	Optionals / Attachments	9000
10	Tools	10000

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

## Table of Contents

<b>Standard Codes</b> .....	<b>1</b>
<b>Warning Symbols</b> .....	<b>13</b>
Warning Levels .....	13
<b>Prohibitory Symbols</b> .....	<b>14</b>
Ordinance Symbols .....	14
<b>Safety</b> .....	<b>15</b>
General Safety .....	15
<b>Battery Safety</b> .....	<b>19</b>
<b>Static Safety</b> .....	<b>24</b>
<b>Welding Safety</b> .....	<b>25</b>
<b>Introduction, Service Manual</b> .....	<b>27</b>
<b>Contents, Section M</b> .....	<b>29</b>
Machine Information .....	29
<b>General Product Information</b> .....	<b>31</b>
Presentation of Walkie Trucks. ....	31
Truck Side Views .....	32
Intended Truck Application .....	32
Prohibited Truck Application .....	32
Truck Data .....	33
6BWC10 Dimensions .....	34
6BWC15 Dimensions .....	35
6BWC20 Dimensions .....	36
6BWS11 Dimensions .....	37
6BWS15 Dimensions .....	38
6BWS20 Dimensions .....	39
6BWR15 Dimensions .....	40
Data Plate .....	41
Main Components .....	42
<b>Inch (SAE) and Metric Fasteners</b> .....	<b>45</b>
Introduction .....	45
Nomenclature, Threads .....	46
Strength Identification .....	47
Conversion of Metric and English Units .....	54
<b>Technical Service Data</b> .....	<b>57</b>
<b>Ordering Spare Parts</b> .....	<b>61</b>
<b>Contents, Section P</b> .....	<b>63</b>

## Table of Contents

Planned Maintenance .....	63
<b>Introduction, Maintenance .....</b>	<b>65</b>
Jacking Truck Off The Floor .....	66
Elevate Rear of Truck .....	66
Elevate Either Side of Truck .....	66
Lubricants .....	67
Standard .....	67
Corrosion .....	67
Cold Storage .....	68
<b>Service Schedule .....</b>	<b>71</b>
Planned Maintenance Schedule .....	71
Planned Maintenance Procedures .....	76
Services Performed Daily or Every 8 Operating Hours .....	76
Services Performed Monthly or Every 120 Operating Hours. ....	77
Services Performed Every 480 or 960 Operating Hours .....	80
Services Performed Annually or Every 1400 Operating Hours .....	81
<b>Lubrication Chart .....</b>	<b>83</b>
<b>Oil and Grease Specifications .....</b>	<b>84</b>
Approved Oils and Grease .....	84
6BWC Grease & Mast Adjustment Points Location .....	85
6BWS Grease & Mast Adjustment Points Location .....	86
6BWR Grease & Mast Adjustment Points Location .....	87
<b>Contents, Section S .....</b>	<b>89</b>
Service Instructions .....	89
<b>Frame/Chassis .....</b>	<b>91</b>
General .....	93
Main Components .....	93
<b>Inspection Covers .....</b>	<b>95</b>
<b>Battery Roller (Optional) .....</b>	<b>103</b>
Battery Cover, Optional (6BWS11 "EE" Trucks Only) .....	105
Inspection .....	105
Removal .....	105
Installation .....	106
Battery Rollers .....	106
Inspection .....	106
Replacement .....	106
<b>Driver Controls, One Spool .....</b>	<b>107</b>
Removal .....	109
Installation .....	110

## Table of Contents

<b>Driver Controls, Two Spool .....</b>	<b>111</b>
Removal .....	114
Installation .....	115
<b>Decals .....</b>	<b>117</b>
Decal with Protective Sheet .....	117
Decal without Protective Sheet .....	117
<b>Motor Maintenance</b>	
<b>Schedule/Troubleshooting .....</b>	<b>119</b>
General Information .....	119
Operating Conditions .....	119
Troubleshooting .....	120
<b>Motor Repair .....</b>	<b>127</b>
Pump Motor .....	127
Pump Motor Removal .....	128
Pump Motor Installation .....	128
Drive Motor .....	129
Brush Replacement .....	133
Drive Motor Removal .....	133
Drive Motor Installation .....	134
Component Repair .....	136
Disassembly .....	136
Inspection .....	138
Drive End head .....	138
Commutator End Head .....	138
Bearings .....	138
Brush and Commutator .....	139
Armature .....	141
Frame and Field Assembly .....	142
Assembly/Testing .....	143
<b>Transmission .....</b>	<b>145</b>
System Description .....	145
Troubleshooting .....	145
Kick Panel .....	146
Transmission Repair .....	147
Removal .....	148
Installation .....	149
Transmission Assembly .....	151
Disassembly .....	152
Assembly .....	152
Axle Seal .....	154
Removal .....	154
Installation .....	154
<b>Parking Brake System .....</b>	<b>157</b>
Brake Theory of Operation .....	159

## Table of Contents

Brake Adjustment .....	160
Brake Shoe Removal / Installation .....	161
<b>Drive Wheel .....</b>	<b>163</b>
Removal .....	163
Installation .....	164
Tire Pressing Procedure .....	165
<b>Support/Swivel Wheel .....</b>	<b>167</b>
Maintenance and Adjustments .....	170
Caster Adjustment .....	171
Troubleshooting .....	172
Stabilizing Caster .....	172
<b>Load Wheels .....</b>	<b>173</b>
Removal and Installation .....	176
<b>Caster Assembly .....</b>	<b>177</b>
Disassembly .....	178
Inspection .....	179
Assembly .....	180
Installation .....	181
<b>Steering Arm/Wheel, Tiller Arm .....</b>	<b>183</b>
Removal .....	184
Inspection .....	185
Installation .....	186
<b>Steering Arm/Wheel, Head .....</b>	<b>187</b>
Control Handle Head .....	188
Removal .....	188
Installation .....	188
Direction Control Switches .....	189
Raise, Lower, and Horn Switches .....	191
Potentiometer .....	194
Removal .....	194
Installation .....	195
Reverser Assembly Replacement .....	199
<b>Electrical Functions .....</b>	<b>201</b>
General .....	201
Adjustable Settings .....	201
References .....	201
Key Switch S17 in ON Position .....	202
Operating Arm in Drive Position, S10, Brake Switch Closed .....	202
Travel Request, Forks First .....	202
Travel Request, Forks Trailing .....	202
Reversing/Motor Brake Forks First to Forks Trailing Direction .....	203
Reversing/Motor Brake Forks Trailing to Forks First Direction .....	203

## Table of Contents

Reverser switch .....	203
Lifting Forks .....	203
Lowering Forks .....	204
Horn .....	204
Options .....	204
Lifting Forks (Manual Valve) .....	204
Tilting Forks .....	204
Side Shifting Forks .....	204
Extend/Retract Forks .....	205
<b>Electrical Symbols .....</b>	<b>207</b>
<b>Electrical Schematics .....</b>	<b>213</b>
<b>Battery .....</b>	<b>219</b>
Removal .....	219
Installation .....	220
Battery Maintenance .....	221
Battery Inspection and Care .....	221
Battery Exterior Cleaning .....	222
Charging .....	222
Storage .....	223
Battery History Record .....	223
<b>Battery Connector .....</b>	<b>225</b>
Location .....	225
Inspection .....	226
Installation .....	226
<b>200 Amp System Line Contactor .....</b>	<b>229</b>
Replacement .....	229
Removal .....	229
Installation .....	229
<b>300 Amp System Line Contactor (6BWC15/20 only) .....</b>	<b>231</b>
Maintenance .....	231
Removal/Replacement of Contact Tips .....	232
<b>200/300 Amp System "EE" Line Contactor .....</b>	<b>233</b>
Maintenance .....	233
Removal/Replacement of Contact Tips .....	234
<b>Battery Controller/Hourmeter/Lift Interrupt .....</b>	<b>237</b>
General Information .....	237
Electrical .....	238
Voltage .....	238
Battery Controller (BC) .....	239
General Information .....	239
Reset .....	241

## Table of Contents

Key Switch .....	241
Hourmeter .....	242
Troubleshooting .....	242
Battery Discharge Indicator (BDI) .....	242
Hourmeter .....	245
<b>Start/Stop Switches .....</b>	<b>247</b>
General .....	247
Test/Inspection .....	247
Master Control On/Off Switch (S21) .....	249
Inspection .....	249
Removal .....	249
Installation .....	249
<b>Light Assemblies .....</b>	<b>251</b>
Warning Lights (Option) .....	251
Removal .....	253
Installation .....	253
Travel/Back-up Alarm (Option) .....	254
Removal .....	254
Installation .....	254
<b>Transistor Controller .....</b>	<b>255</b>
Basics Of Circuit Operation .....	255
Control Features .....	257
Maintenance .....	258
Safety .....	258
Cleaning .....	258
Motor Circuit .....	259
Control Circuit .....	260
Troubleshooting Guidelines .....	261
General .....	263
Shorts to Frame Test .....	264
Definitions .....	268
Diagnostics and Troubleshooting .....	269
Handset Diagnostics .....	269
Troubleshooting .....	269
Troubleshooting Chart .....	271
Technical Specification .....	276
Troubleshooting Chart Using Handset .....	277
<b>Transistor Controller Troubleshooting .....</b>	<b>279</b>
Troubleshooting Chart Index .....	279
Troubleshooting Charts .....	280
<b>Hydraulic System .....</b>	<b>299</b>
General .....	299
Description of Function .....	299
Main Components .....	300

## Table of Contents

Lift (Solenoid valve) .....	300
Lift (Mechanical Valve) .....	300
Lower (Solenoid Valve) .....	300
Lower (Mechanical Valve) .....	300
Relief Pressure .....	300
Compensating Cylinder .....	301
Reach (Solenoid valve) .....	301
Tilt (Solenoid valve) .....	301
Sideshift (Solenoid valve) .....	301
Maintenance .....	302
Adjustments .....	303
Troubleshooting .....	304
Primary Malfunctions .....	305
Definitions .....	306
Removal .....	307
Installation .....	309
<b>Hydraulic Schematics .....</b>	<b>311</b>
<b>Hydraulic Fluid .....</b>	<b>315</b>
Hydraulic Fluid Selection .....	315
Changing Hydraulic System Fluid .....	315
System Draining .....	316
Refilling System .....	317
Bleeding Hydraulic System .....	318
<b>Hydraulic Tank .....</b>	<b>319</b>
Removal .....	320
Installation .....	320
<b>Hydraulic Pump Assembly .....</b>	<b>321</b>
Disassembly .....	323
Inspection .....	324
Assembly .....	325
<b>One Spool Control Valve .....</b>	<b>327</b>
Operators Controls Removal .....	328
Control Valve Disassembly and Inspection .....	328
Operators Controls Installation .....	329
<b>Two Spool Control Valve .....</b>	<b>330</b>
Operators Controls Removal .....	331
Control Valve Disassembly and Inspection .....	331
Operators Controls Installation .....	332
Lift Cylinder, Two Stage Mast .....	337
Removal .....	337
Disassembly .....	338
Assembly .....	338
Installation .....	338

## Table of Contents

Two Stage Full Freelif Mast Cylinder Repair .....	339
Removal .....	339
Disassembly .....	340
Assembly .....	340
Installation .....	340
Two Stage Full Freelif Mast Staging Cylinder Repair .....	341
Removal .....	341
Disassembly .....	342
Assembly .....	342
Installation .....	342
<b>Lift Cylinder, Three Stage Mast .....</b>	<b>343</b>
Repair .....	346
Removal .....	346
Disassembly .....	347
Assembly .....	347
Installation .....	347
<b>Reach Cylinder, 6BWR15 .....</b>	<b>349</b>
Removal .....	351
Disassembly .....	352
Inspection .....	353
Assembly .....	354
Installation .....	355
<b>Tilt Cylinder .....</b>	<b>357</b>
Removal .....	359
Disassembly .....	360
Inspection .....	361
Assembly .....	362
Installation .....	363
Removal .....	365
Disassembly .....	366
Inspection .....	367
Assembly .....	368
Installation .....	369
Shimming Carriage with Mast on Truck. ....	377
Repair .....	379
Removal .....	379
Disassembly .....	380
Assembly .....	381
Installation .....	383
Lift Chain .....	384
Lift Chain Adjustment: .....	384
Lift Chain Maintenance .....	384
Lift Chain Inspection .....	384
Lift Chain Replacement .....	391
<b>Mast, Three Stage .....</b>	<b>393</b>

## Table of Contents

Shimming Carriage with Mast on Truck .....	399
Repair .....	401
Removal .....	401
Disassembly .....	402
Assembly .....	403
Installation .....	405
Lift Chain .....	406
<b>Sideshifter .....</b>	<b>407</b>
Mounting Instructions .....	409
Installation .....	409
Operation .....	410
Maintenance .....	410
Carriage Removal .....	411
Upper Pad Replacement .....	411
Lower Pad Replacement .....	412
Cylinder .....	413
Troubleshooting .....	414
No Sideshifting .....	414
Very Slow Sideshifting .....	414
Irregular Sideshifting .....	415
<b>Single Reach, 6BWR .....</b>	<b>417</b>
Maintenance .....	419
Inspection .....	419
Adjustment .....	420
Repair .....	424
Disassembly .....	424
Assembly .....	426
Carriage Bumpers .....	428
Reach Adjustment .....	428
Fork Carriage Pivot Pins .....	430
Carriage Roller Bearings .....	430
Removal .....	430
Installation .....	430
Removal .....	432
Inspection .....	432
Installation .....	433
<b>Load Backrest .....</b>	<b>435</b>
Removal .....	436
Installation .....	436
<b>Handset Operation .....</b>	<b>437</b>
Operating Modes .....	440
Revert to Previous Settings .....	443
Handset Self Test .....	443
<b>Electrical Controllers (Handset) .....</b>	<b>445</b>

## Table of Contents

Display Screen .....	446
Menu Navigation Key .....	446
Data Inc/Dec Key .....	446
Bookmark Keys .....	446
Operation .....	447
Menu Structure .....	447
Main Menu .....	448
Interface Protocols and Backward Compatibility .....	449
Parameter Changing .....	450
Real-Time Monitoring .....	450
Reading Faults and Diagnostic History File .....	451
Cloning and Restoring the Previous Programming .....	451
Information Displays .....	452
Programmer SetUp .....	452

# Warning Symbols

*Always follow the warnings given in this Instruction Manual and on the truck to avoid accidents and incidents from occurring.*

## 1. Warning Levels

### Warning levels

Warning text is given in four levels and provide information on the risks, describe the consequences, and instruct how to avoid accidents.

#### **DANGER**

*Warns that an accident will occur if the instructions are not followed.*

*The consequences are serious personal injury or possibly death, and/or extremely large material damage.*

#### **WARNING**

*Warns that an accident can occur if the instructions are not followed.*

*The consequences are serious personal injury or possibly death, and/or large material damage.*

#### **CAUTION**

*Warns that an accident can occur if the instructions are not followed.*

*The consequences are personal injury and/or material damage.*

#### **NOTE!**

*Marks the risk of an accident or breakdown if the instructions are not followed.*

## Prohibitory Symbols

Version no  
**001**

T-code

# Prohibitory Symbols



### NO SMOKING

*If smoking occurs in situations where a restriction against smoking is stated, a serious accident can occur.*



### OPEN FLAMES PROHIBITED

*If open flames are used in situations where open flames are prohibited, a serious accident can occur.*



### GENERAL PROHIBITION

*If the prohibition is ignored, a serious accident can occur.*

## 1. Ordinance Symbols



### SAFETY SHOES

*When the directive for safety shoes is given, safety shoes shall always be worn to reduce personal injury.*



### PROTECTIVE GLASSES

*When the directive for protective glasses is given, protective glasses shall always be worn to reduce personal injury.*

 
# Safety

## 1. General Safety


Do **NOT** operate or work on truck unless trained, qualified, and authorized to do so and have read the Operator's Manual.



Know the truck controls and what they do.

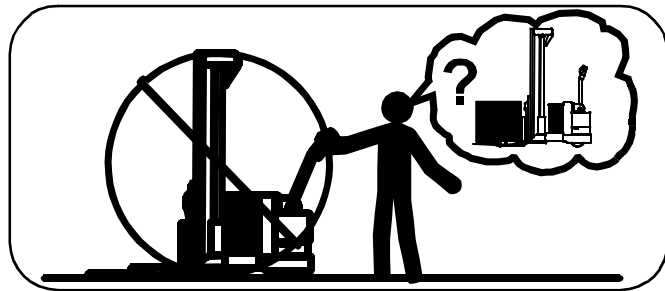

 Do **NOT** operate truck if it needs repair or if it is in any way unsafe.

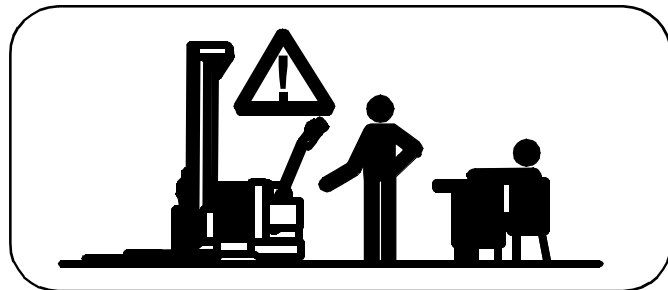


## Safety


Version no  
**001**

T-code

 
Operate truck only from the operator's position.

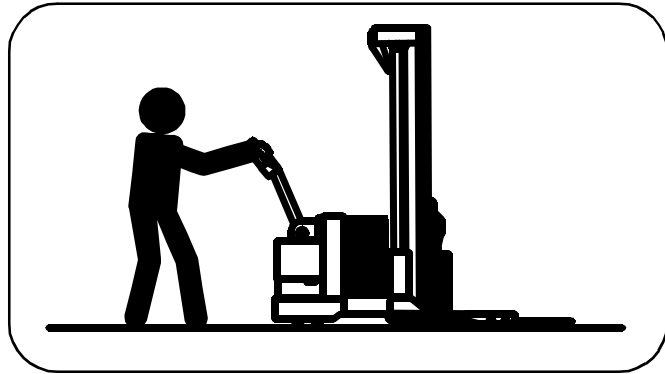

 
Before working on truck always turn key switch to **OFF** and disconnect truck's battery connector (unless this manual states otherwise).

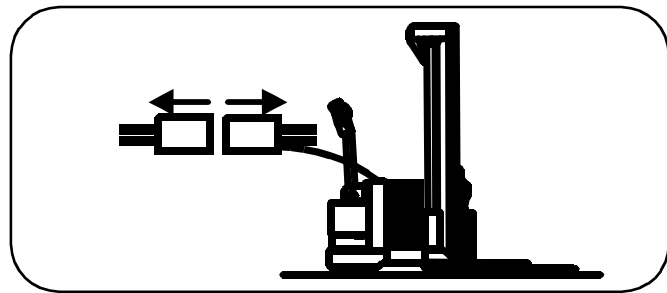

 
Do **NOT** wear watches, rings, or jewelry when working on truck.

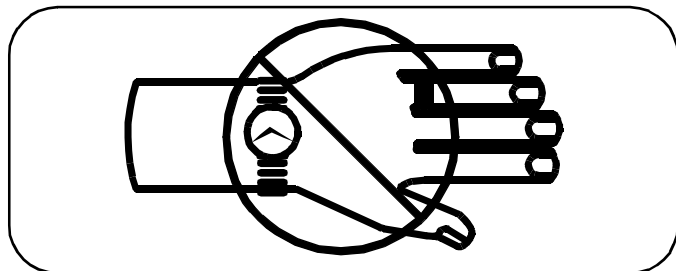

 Follow the scheduled lubrication, maintenance, and inspection steps.

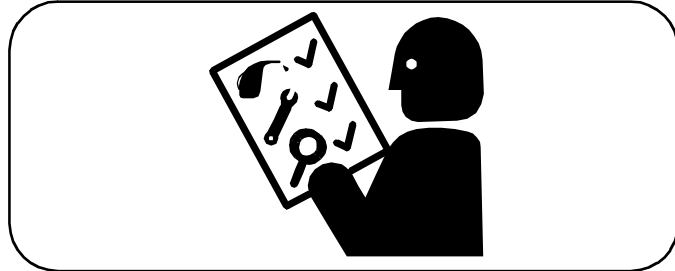

 
Follow exactly the safety and repair instructions in this manual. Do **NOT** take “shortcuts”.

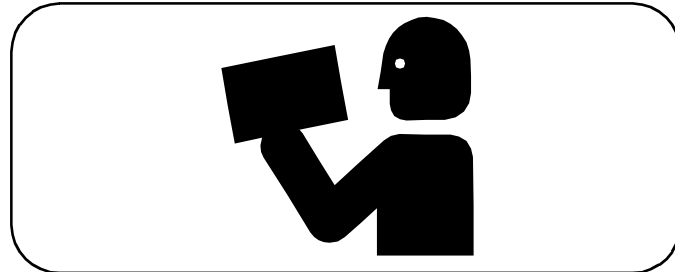

Do **NOT** Use an open flame near the truck.



 
Do **NOT** use gasoline or other flammable liquids for cleaning parts.

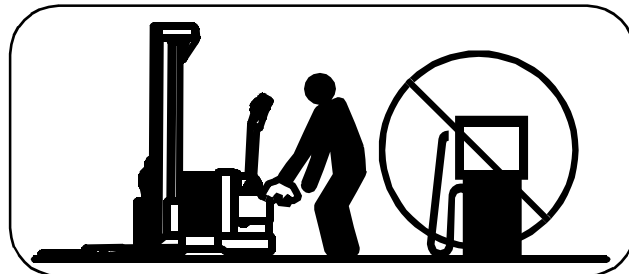


**Safety**Version no  
**001**

T-code

 
Clean up any hydraulic fluid, oil, or grease that has leaked or spilled on the floor.

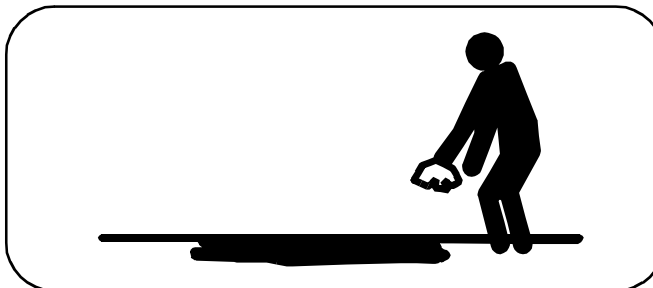


Always operate and park truck indoors.

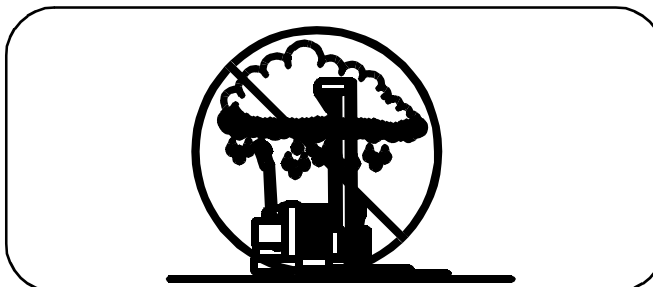 


Do **NOT** wash truck with a hose.

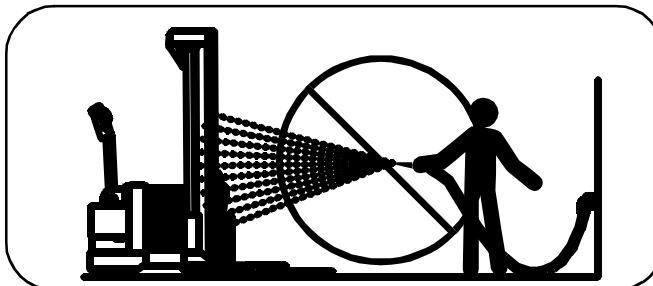 

 
Do **NOT** add to or modify truck without written approval from **Toyota**

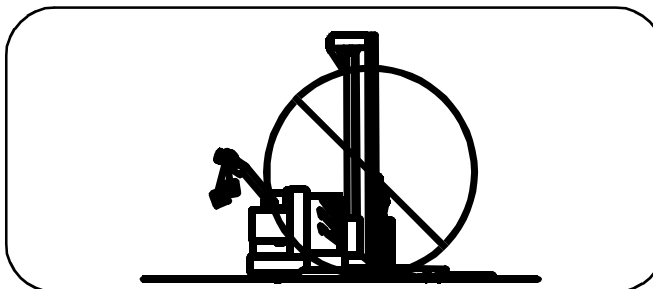


## Battery Safety

 **WARNING** As a battery is being charged, an explosive gas mixture forms within and around each cell. If the area is not properly ventilated, this explosive gas can remain in or around the battery for several hours after charging. Be sure there are no open flames or sparks in the charging area. An open flame or spark can ignite this gas, resulting in serious damage or injury.

 **WARNING** Battery electrolyte is a solution of sulfuric acid and water. Battery acid causes burns. Should any electrolyte come in contact with clothing or skin, flush the area immediately with cold water. Should the solution get on the face or in the eyes, flush the area with cold water and get medical help immediately.

 Read, understand and follow procedures, recommendations and specifications in the battery and battery charger manufacturer's manuals.

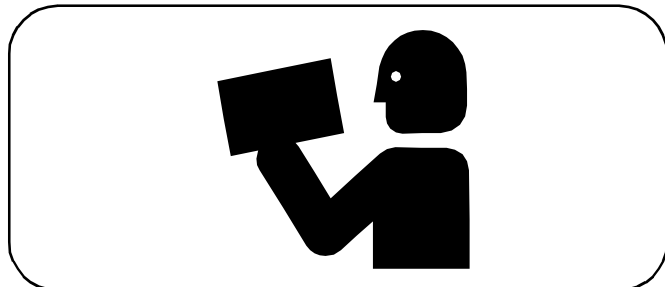


# Battery Safety

Version no


T-code

001

 
Wear personal protective equipment to protect eyes, face, and skin when checking, handling, or filling batteries. This equipment includes goggles or face shield, rubber gloves (with or without arm shields) and a rubber apron.

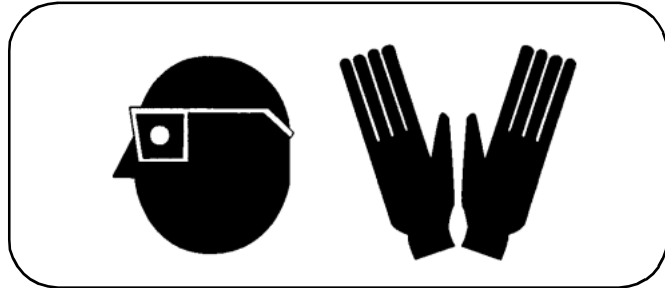

 Make sure a shower and eyewash station are nearby in case there is an accident.

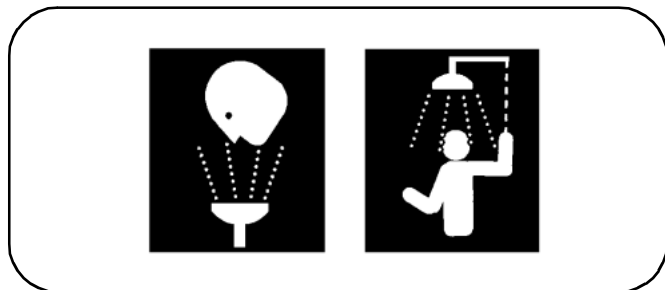

 A battery gives off explosive gases. Never smoke, use an open flame, or use anything that gives off sparks near a battery.

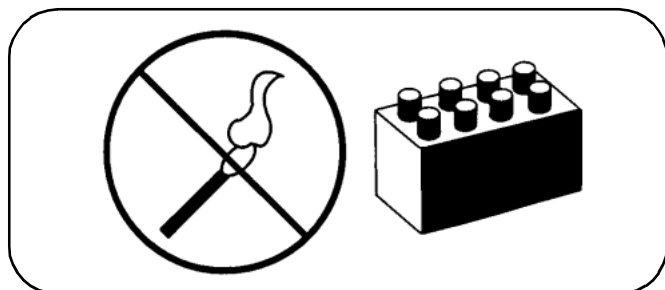



**Suggest:**

**For more complete manuals. Please go to the home page.**

 
**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**


**Thank you so much for reading**

**Battery Safety**


Keep the charger area well-ventilated to avoid hydrogen gas concentration.

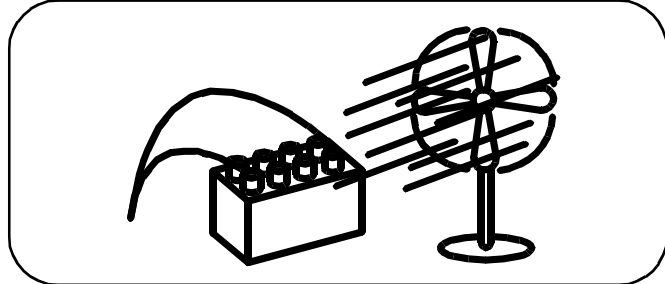

 Turn the key switch off before disconnecting the battery from the truck at the battery connector. Do **NOT** break live circuits at the battery terminals. A spark often occurs at the point where a live circuit is broken.

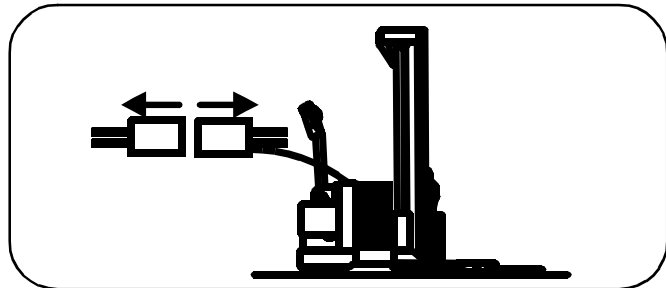

 Do **NOT** lay tools or metal objects on top of battery. A short circuit or explosion could result.

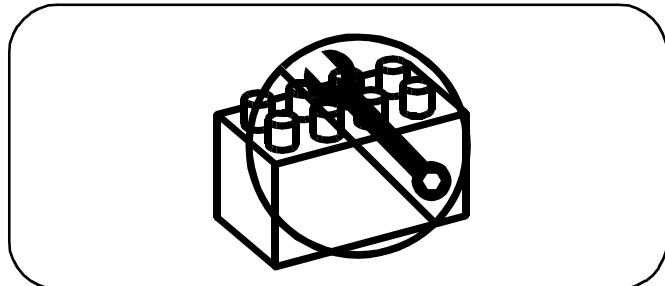

## Battery Safety

 
Version no

T-code

**001**


Keep batteries clean. Corrosion causes shorts to the frame and possibly sparks.

Keep plugs, terminals, cables, and receptacles in good condition to avoid shorts and sparks.

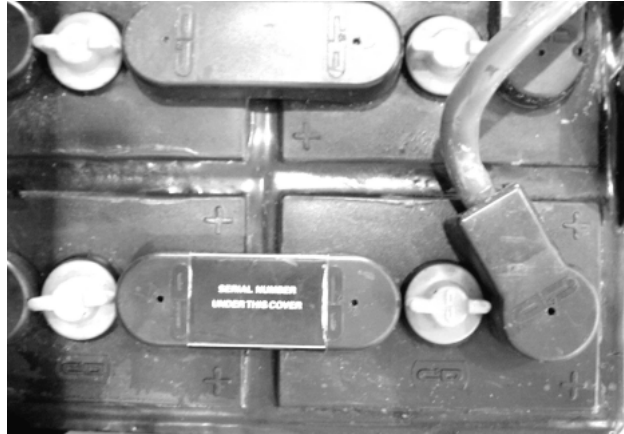

Keep filler plugs firmly in place at all times except when the electrolyte level is checked, when water is added to the cells or when the specific gravity is checked.

 Make sure vent holes in filler plugs are open to allow gas to escape from the cells.

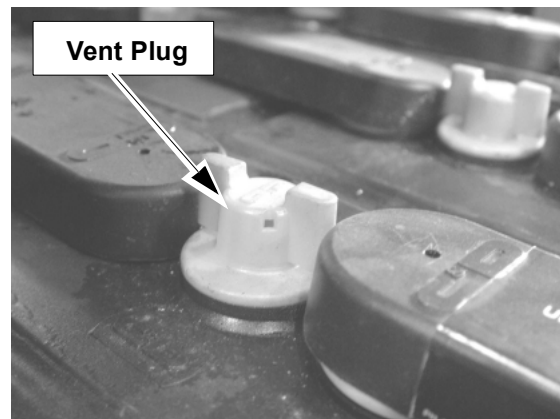

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**