


GLP20-35VX, GDP20-35VX (B875)

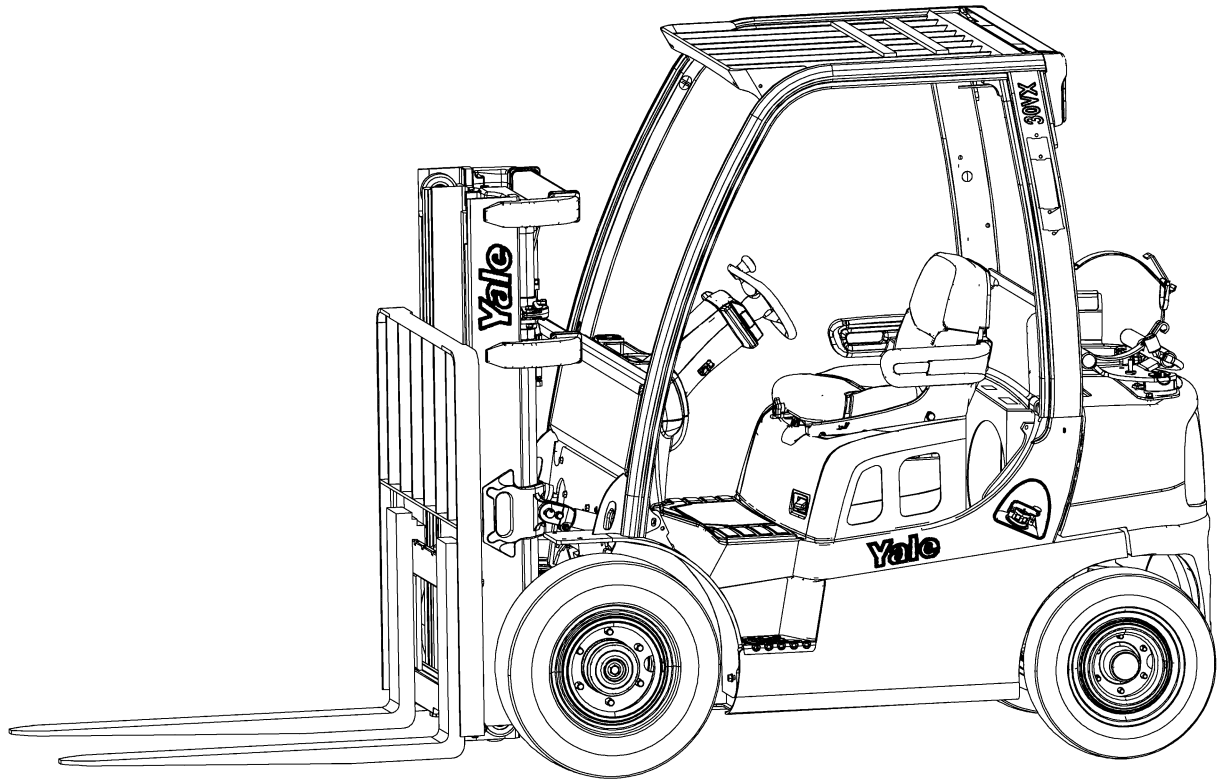

YP990151

1	GENERAL TRUCK
2	DIESEL ENGINE
3	LPG ENGINES
4	FUEL SYSTEM
5	ELECTRICAL SYSTEM
6	STEERING SYSTEM
7	BRAKE SYSTEM
8	TRANSMISSION
9	HYDRAULIC SYSTEM
10	MAST-TWO STAGE LIMITED FREE-LIFT
11	MAST-THREE STAGE FULL FREE-LIFT
12	MAST-TWO STAGE FULL FREE-LIFT
13	FORKS, LOAD BACKREST, AND MAST INSTALLATION
14	ATTACHMENTS AND HEADER HOSE GROUP
15	OPTIONS
16	NUMERICAL INDEX

**SECTION 1
GENERAL TRUCK**

DESCRIPTION	PAGE
CAB	
ASSEMBLY AND ATTACHING PARTS	1.18
FRAME AND ATTACHING PARTS	1.20
INTERIOR PANELS	1.22
LH DOOR.....	1.24
RH DOOR AND HEATER ASSEMBLY	1.26
WINDOWS AND WINDOW WIPER SYSTEM	1.28
COUNTERWEIGHTS	1.14
COWL MOUNT.....	1.12
FENDER EXTENSIONS.....	1.10
FLOOR PLATES AND COVERS	1.6
HOOD ASSEMBLY	1.2
LABELS	
CONTROL LEVER.....	1.42
ELECTRONIC LEVER	1.44
EXTERIOR.....	1.38
INTERIOR.....	1.40
JOYSTICK.....	1.46
OVERHEAD GUARD.....	1.16
SEAT	
FULL SUSPENSION	
WITH AND WITHOUT ELECTRONIC CONTROLS.....	1.30
NON-SUSPENSION	
WITHOUT ELECTRONIC CONTROLS	1.32
SEMI-SUSPENSION	
WITH AND WITHOUT ELECTRONIC CONTROLS.....	1.34
SWIVEL	
WITH AND WITHOUT ELECTRONIC CONTROLS.....	1.36

<https://www.ebooklibonline.com>

Hello dear friend!


Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

HOOD ASSEMBLY

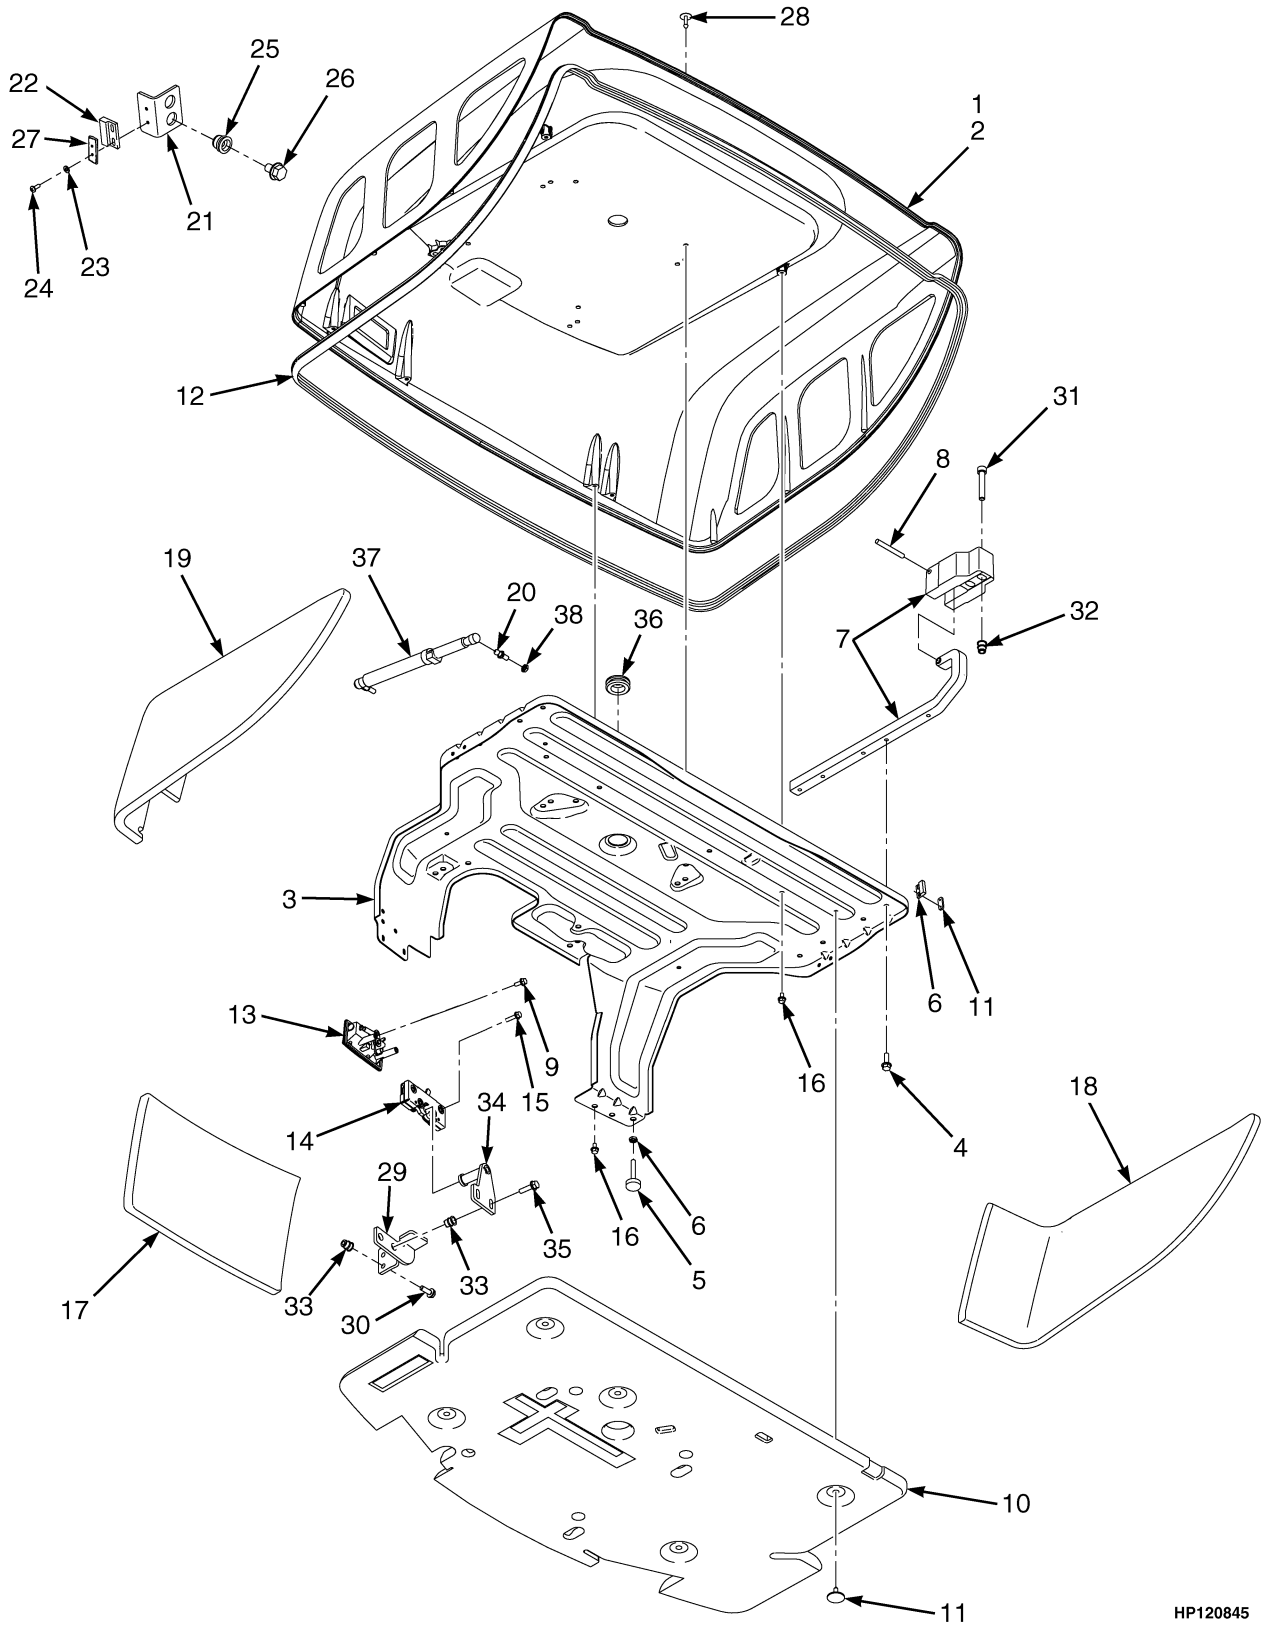

HP120845



HOOD ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
1	b 524232532	Hood Assembly (Low Noise)	1
1	c 524192217	Hood Assembly (Standard)	1
1	524236618	Hood Assembly (Vented)	1
1	ac 524242808	Hood Assembly (Non-Vented)	1
1	ac 524242809	Hood Assembly (Vented)	1
1	ab 524243724	Hood Assembly (Low Noise)	1
2	b 524232807	Hood (Low Noise)	1
2	c 524192885	Hood (Standard)	1
2	524236617	Hood (Vented)	1
2	ac 524242805	Hood (Non-Vented)	1
2	ac 524242807	Hood (Vented)	1
2	ab 524243723	Hood (Low Noise)	1
3	580063960	Reinforcement	1
4	580030966	Capscrew	8
5	580054194	Stop Screw	2
6	580004592	Nut	4
7	580057608	Hinge Assembly	2
8	580063963	Pin	2
9	580049011	Capscrew	2
10	580063964	Hood Liner	1
11	518793609	Fastener	4
12	580056851	Seal	1
13	580056434	Handle	1
14	580056433	Latch Rotor	1
15	580049840	Capscrew	4
16	580039900	Capscrew	6
17	b 580065322	Liner (Front Panel)	1
18	b 580065323	Liner (LH Panel)	1
19	b 580065324	Liner (RH Panel)	1
20	c 580049915	Ball Stud	4
20	b 580049915	Ball Stud	3
20	b 580064627	Ball Stud	1
21	580056665	Bracket (Hood Switch)	1
22	580051442	Magnet (Reed Switch) (Reed Switch)	1
23	940004902	Washer	4
24	449007034	Screw	4
25	580044861	Insert	2
26	580056815	Capscrew	2
27	580057864	Plate	1
28	580049758	Fastener	8
29	580063965	Cover	1
30	580056815	Capscrew	2
31	932202911	Capscrew	4
32	580044862	Insert	4
33	580044860	Insert	4
34	580057238	Striker Bolt	1
35	580049229	Capscrew	2
36	580051832	Grommet	1
37	c 580056664	Gas Spring	2
37	b 580060004	Gas Spring (LH)	1


HOOD ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
37	b 580060007	Gas Spring (RH).....	1
38	580004592	Nut.....	2
	a 580058137	Plug (Not Illustrated).....	1

FOOTNOTES:

- a** Use With Swivel Seat
- b** With Cab
- c** With Overhead Guard

FLOOR PLATES AND COVERS

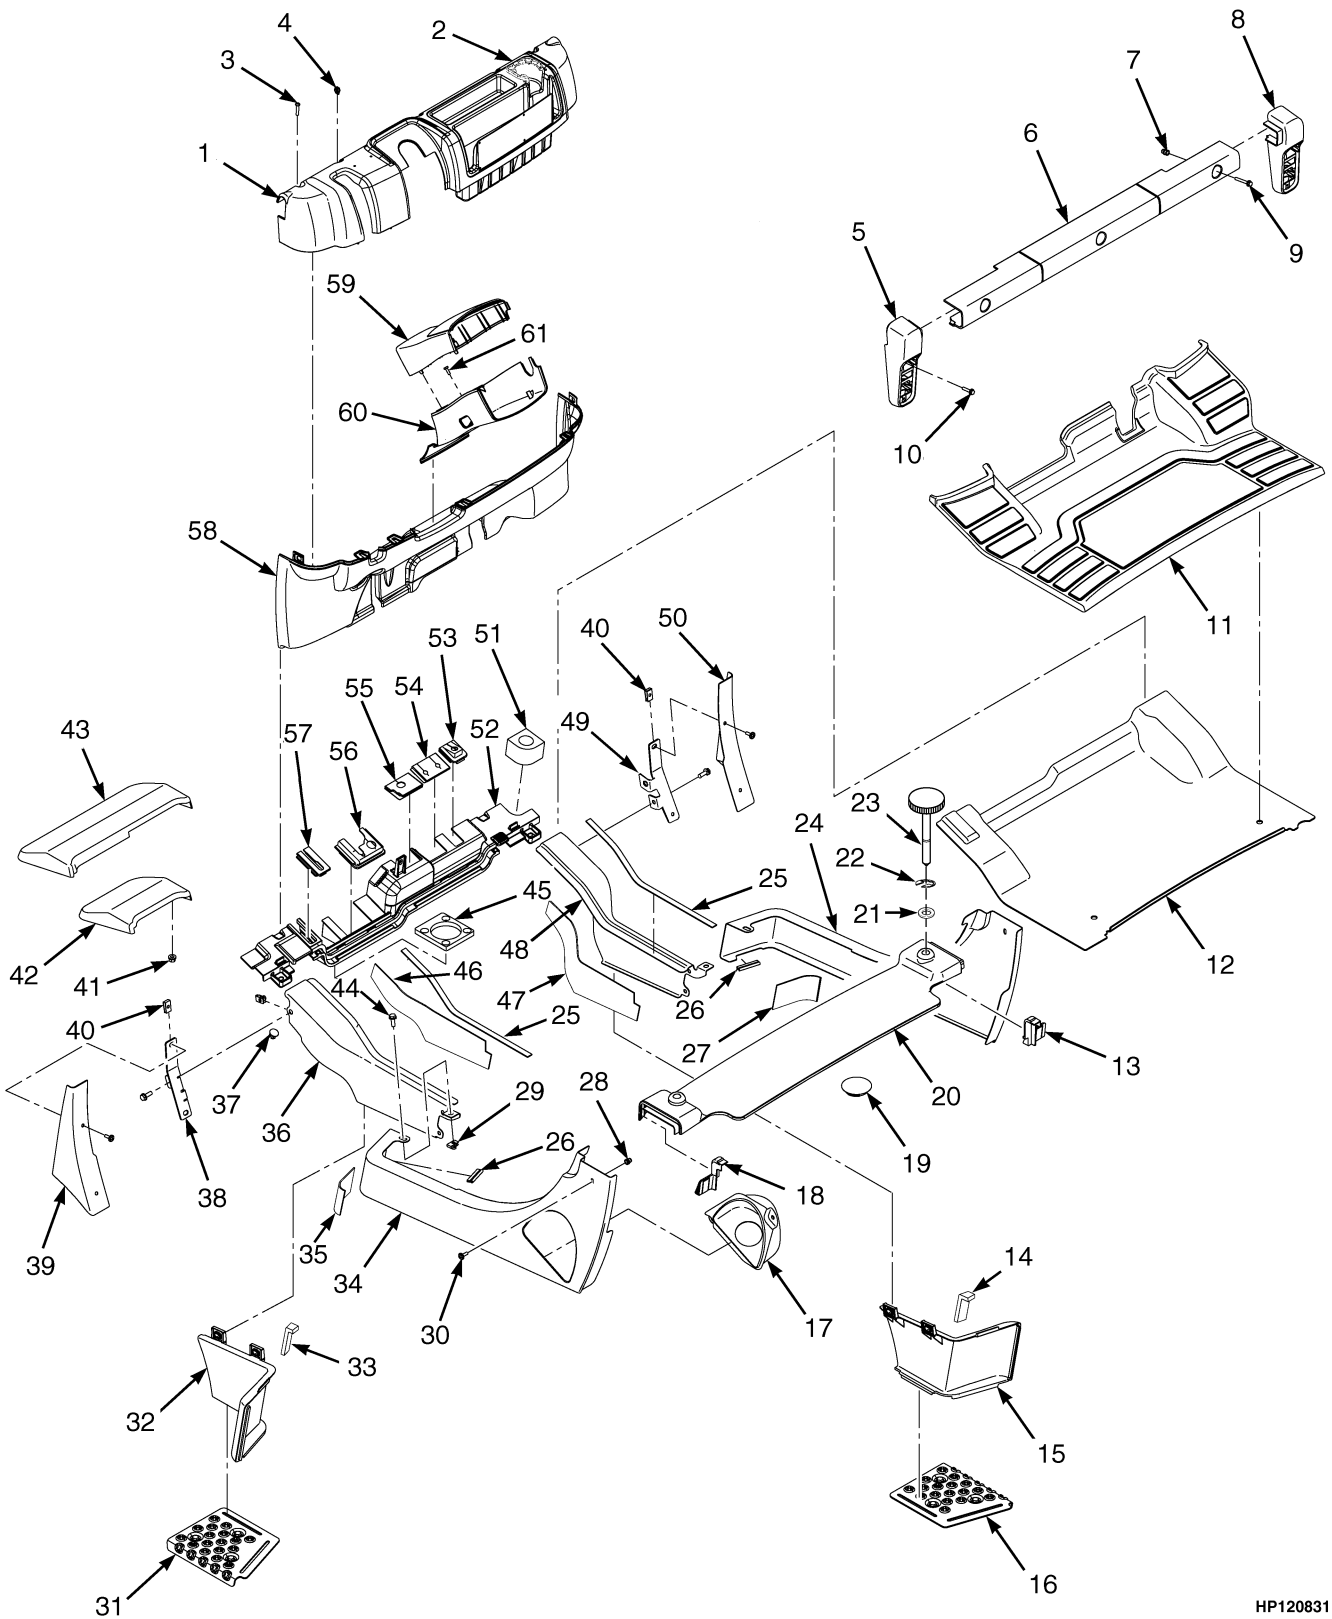

HP120831



FLOOR PLATES AND COVERS

KEY:

A: With Cab


B: With Overhead Guard

ITEM	PART NO.	DESCRIPTION	QTY	
			A	B
1	580052911	Dash Assembly (Manual Valve).....	1	1
1	580052912	Dash Assembly (Electronic Valve).....	1	1
2	580052409	Cup Holder.....	1	1
3	932728908	Capscrew.....	5	5
4	580046139	Clip.....	6	6
5	580037205	Bracket (Tail Light) (LH).....	1	1
6	580050625	Cover (Rear).....	..	1
7	580044859	Insert.....	..	8
7	580044859	Insert.....	5	..
8	580037206	Bracket (Tail Light) (RH).....	1	1
9	580041711	Capscrew.....	3	3
10	580058212	Capscrew.....	4	4
11	580052735	Floor Mat.....	1	1
12	580053622	Floor Plate.....	1	1
13	580051816	Seal Panel (RH).....	1	1
14	580061746	Seal (RH).....	1	1
15	524220654	Panel (Step) (RH).....	1	1
16	580049836	Plate (RH).....	1	1
17	524149438	Splash Shield (Diesel).....	1	1
18	580051815	Seal Panel (LH).....	1	1
19	925776402	Cap (LPG).....	1	1
20	524195754	Radiator Cover Assembly.....	..	1
20	580061815	Seal (LH).....	..	1
20	580061814	Seal (RH).....	..	1
21	449021001	Washer.....	..	2
22	507353800	Snap Ring.....	..	2
23	580036116	Screw.....	..	2
24	524177726	Panel (Rear) (RH).....	1	1
25	580050773	Seal.....	2	2
26	580056224	Trim Seal.....	2	2
27	580061747	Damping Sheet (RH Rear Panel).....	1	1
28	580041704	Insert.....	6	6
29	580026621	Clip Nut (Diesel).....	23	23
29	580026621	Clip Nut (LPG).....	21	21
30	580056530	Screw.....	6	6
31	580049835	Plate (LH).....	1	1
32	524220653	Panel (Step) (LH).....	1	1
33	580061184	Seal (LH).....	1	1
34	524177724	Panel (Rear) (LH, Diesel).....	1	1
34	524177725	Panel (Rear) (LH, LPG).....	1	1
35	580061749	Damping Sheet (LH Rear Panel).....	1	1
36	524188741	Panel (Front) (LH).....	1	1
37	524224752	Plug.....	4	4
38	580059333	Bracket (LH) (Fender Cover).....	1	1
39	524211381	Cover (LH Fender).....	1	1
40	505970526	Nut (Foldover).....	4	4

FLOOR PLATES AND COVERS

ITEM	PART NO.	DESCRIPTION	QTY	
			A	B
41	580042963	Lock Nut (Standard Tread, Wide Tread)	4	4
41	580042963	Lock Nut (Dual Tread).....	6	6
42	580050478	Mud Guard (Standard Tread).....	2	2
42	580051157	Mud Guard (RH, Wide Tread).....	1	1
42	580051390	Mud Guard (RH, Dual Tread).....	1	1
43	580051156	Mud Guard (LH, Wide Tread)	1	1
43	580051174	Mud Guard (LH, Dual Tread)	1	1
44	580056815	Capscrew (Diesel)	23	23
44	580056815	Capscrew (LPG)	21	21
45	580054552	Seal (Wet Brake)	1	1
45	580054667	Seal (Dry Brake)	1	1
46	580061748	Damping Sheet (LH Front Panel)	1	1
47	580061189	Damping Sheet (RH Front Panel).....	1	1
48	524188746	Panel (Front) (RH)	1	1
49	580059332	Bracket (RH) (Fender Cover).....	1	1
50	524211382	Cover (RH Fender)	1	1
51	580038033	Grommet (RH)	1	1
52	580050192	Seal Plate Assembly.....	1	1
52	580046075	Seal	1	1
53	580050979	Seal	1	..
54	580026351	Seal (Manual Valve)	1	..
54	580046391	Seal (Electronic Valve)	1	..
55	580046350	Seal (Manual Valve)	1	..
55	580046392	Seal (Electronic Valve)	1	..
56	580046349	Seal	1	..
57	580046348	Seal	1	..
58	580053149	Kick Panel (Single Brake Pedal)	1	1
59	580046143	Cover (Steering Column) (Upper).....	1	1
59	580053150	Kick Panel (Dual Brake Pedal).....	1	1
60	580046138	Cover (Steering Column) (Lower).....	1	1
61	909904403	Screw.....	2	2


FENDER EXTENSIONS

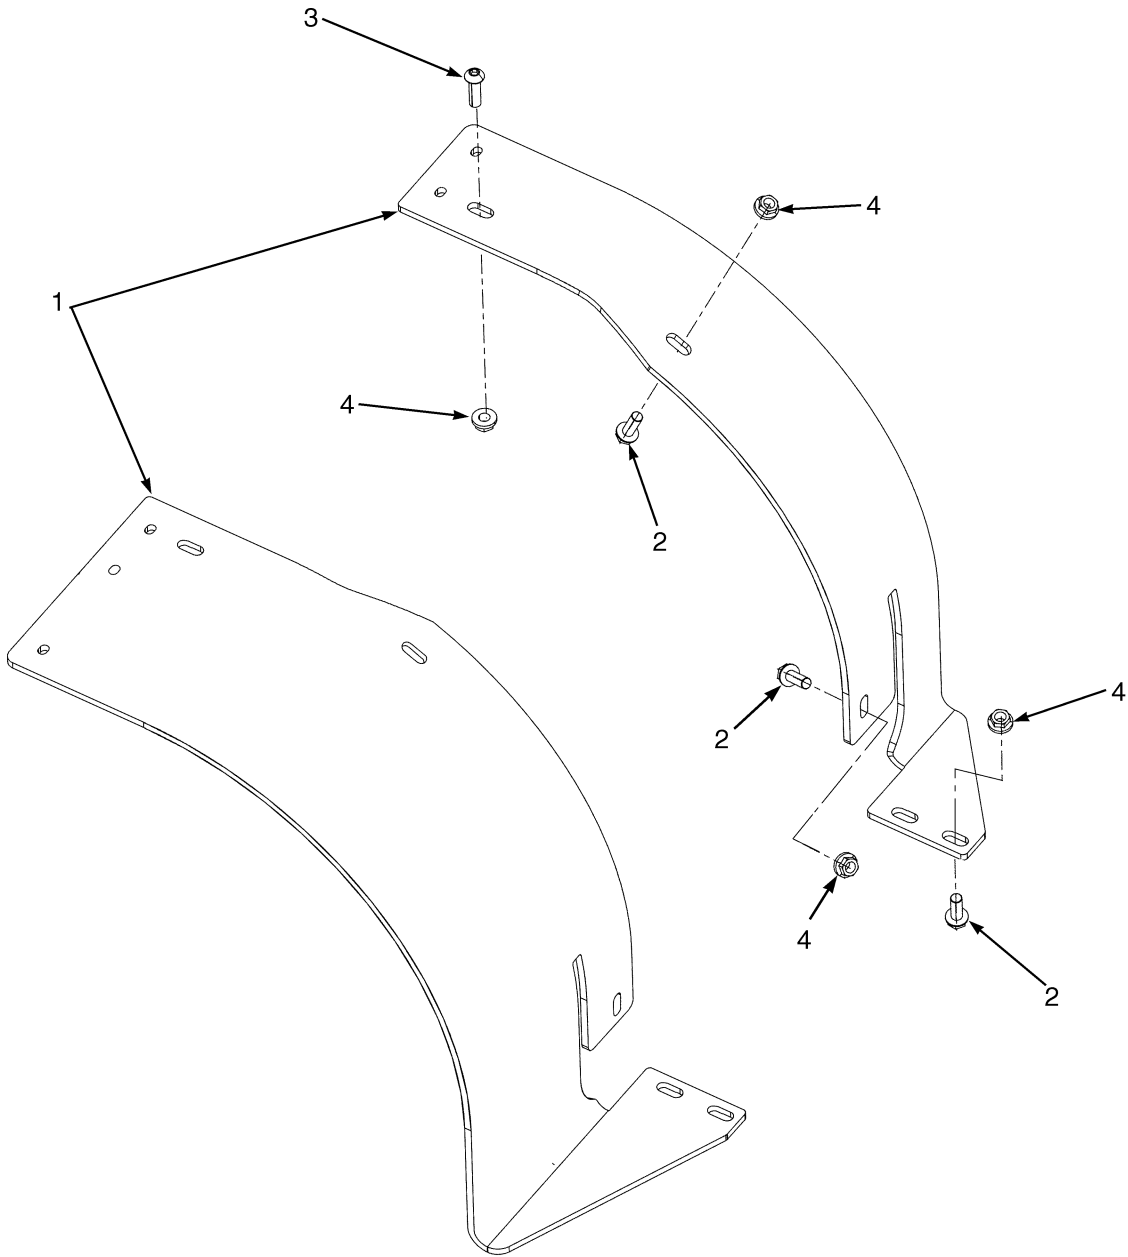

HP120835

ITEM	PART NO.	DESCRIPTION	QTY
1	524210176	Fender (Wide Tread) (LH).....	1
1	524210178	Fender (Dual Tread) (LH)	1
1	524210177	Fender (Wide Tread) (RH)	1
1	524210179	Fender (Dual Tread) (RH).....	1
2	580058271	Capscrew.....	8
3	932731908	Capscrew.....	2
4	580058192	Nut.....	10


COWL MOUNT

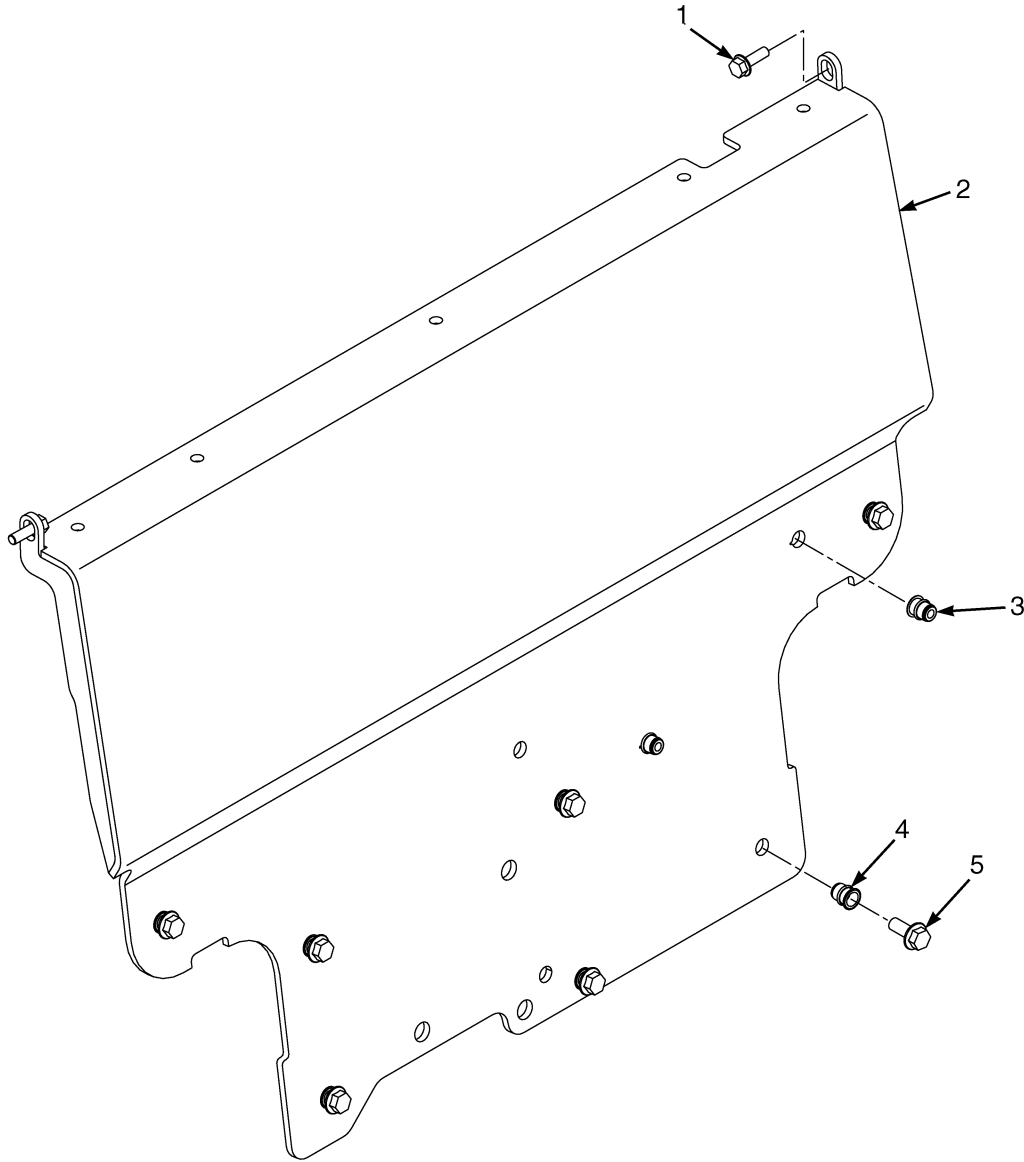

HP120730

ITEM	PART NO.	DESCRIPTION	QTY
1	580056815	Capscrew.....	2
2	524230676	Cowl.....	1
3	580044860	Insert	2
4	580044862	Insert	7
5	580064483	Capscrew.....	7

COUNTERWEIGHTS

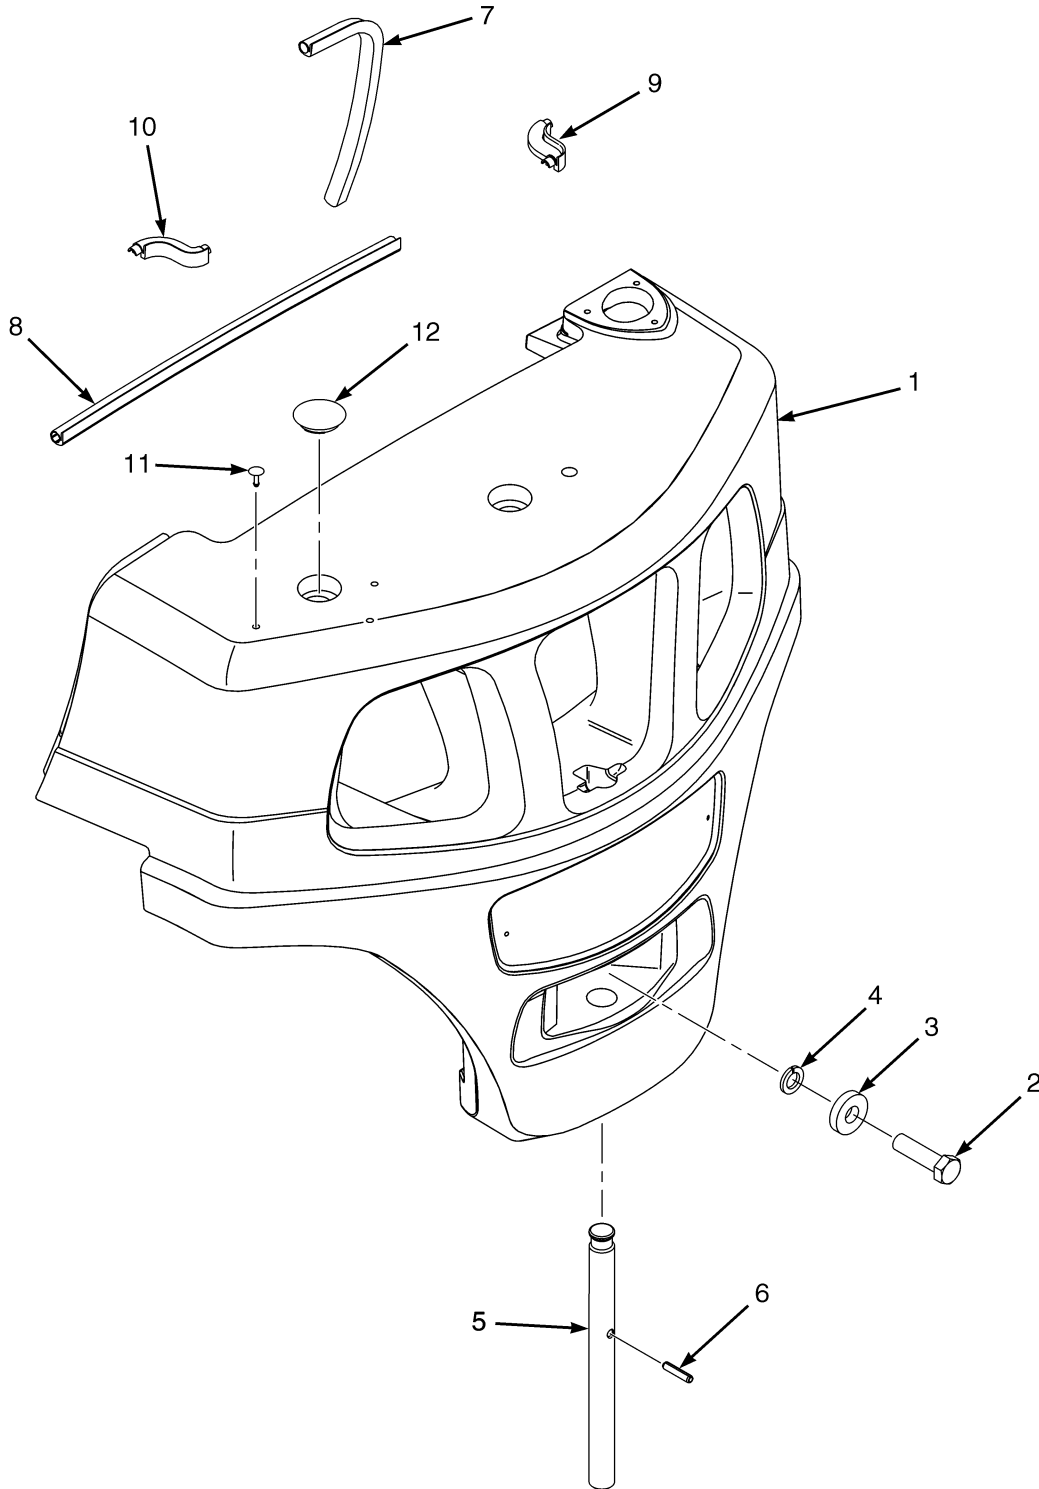



HP120833

ITEM	PART NO.	DESCRIPTION	QTY
1	524181656	Counterweight (20VX)	1
1	524181657	Counterweight (25VX)	1
1	524181658	Counterweight (30VX)	1
1	524181660	Counterweight (35VX)	1
2	a 449001399	Capscrew (101,6 mm)	1
2	b 449001295	Capscrew (152,4 mm)	1
3	580002019	Washer	1
4	955400911	Lockwasher	1
5	580063959	Pin	1
6	954513908	Pin	1
7	580059365	Seal (Counterweight).....	1
8	580059366	Seal (Counterweight) (Top).....	1
9	580059363	Seal (RH).....	1
10	580059364	Seal (LH)	1
11	580049758	Fastener	4
12	925776402	Cap.....	2

FOOTNOTES:

- a** 20VX
- b** 25-35VX


OVERHEAD GUARD

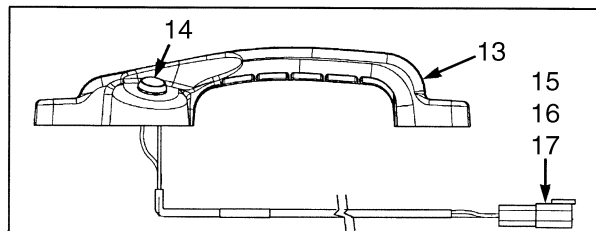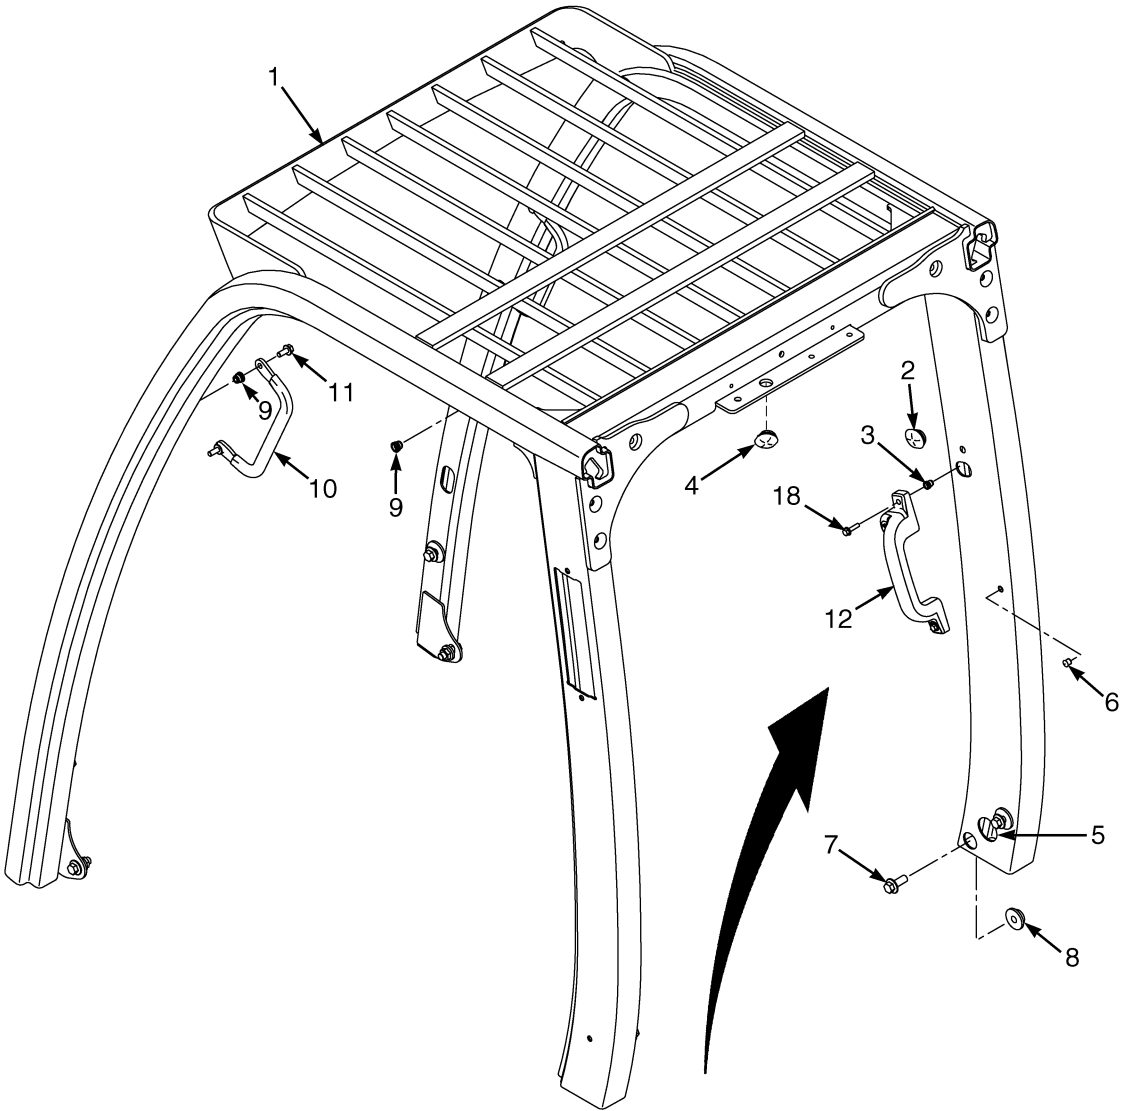

HP120756

ITEM	PART NO.	DESCRIPTION	QTY
1	524240423	Overhead Guard (High)	1
1	524240429	Overhead Guard (Low)	1
2	524201323	Grommet.....	3
3	580041704	Insert	2
4	524208883	Grommet.....	1
5	580055768	Grommet.....	1
6	258979300	Plug	2
7	580056527	Capscrew.....	8
8	580056528	Nut.....	2
9	580044861	Insert	4
10	580056526	Handle (Grab).....	1
11	580056815	Capscrew.....	2
12	580051747	Handle Assembly (Assembly) (RH, Rear)	1
13	580050959	Handle.....	1
14	580058447	Switch (Horn)	1
15	580022893	Connector.....	1
16	505968540	Secondary Lock	1
17	505968514	Terminal (Pin).....	2
18	580058212	Capscrew.....	2

CAB (ASSEMBLY AND ATTACHING PARTS)

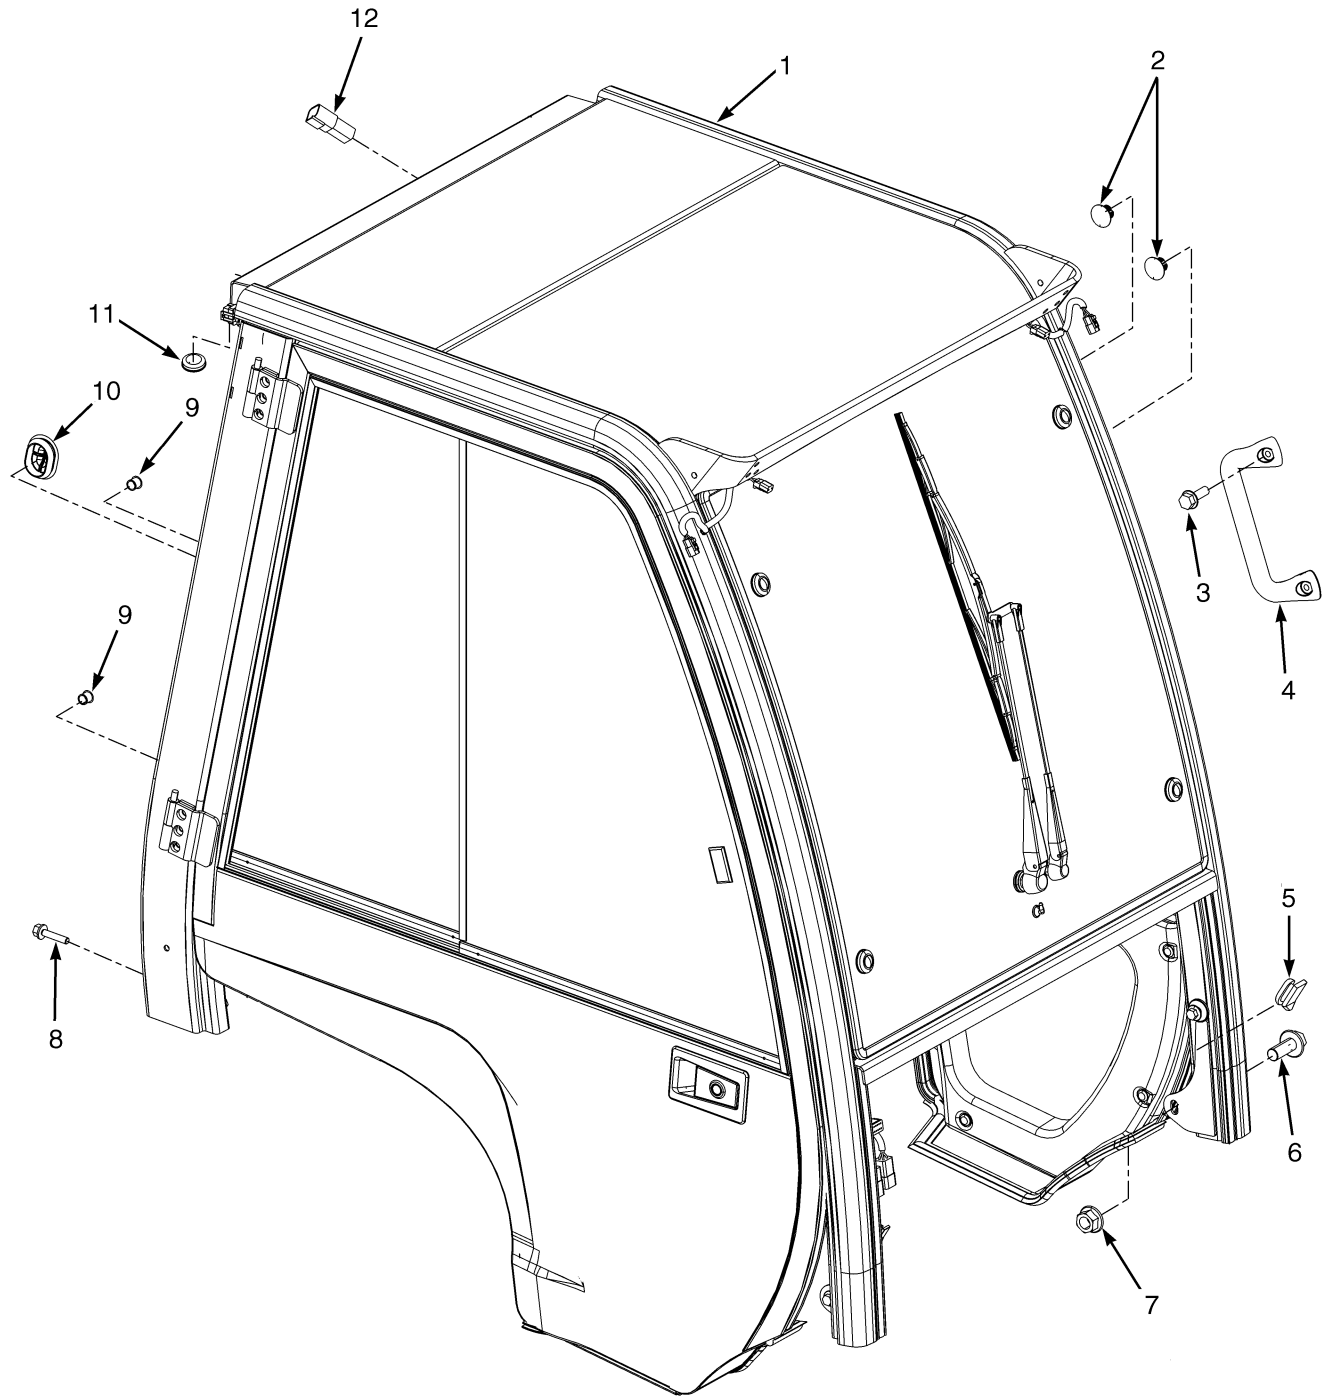

HP120858



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.


Thank you so much for reading



CAB
(ASSEMBLY AND ATTACHING PARTS)

ITEM	PART NO.	DESCRIPTION	QTY
1	524211730	Cab Assembly (☞ Page 1.20, ☞ Page 1.22, ☞ Page 1.24, ☞ Page 1.26, ☞ Page 1.28)	1
2	580059493	Plug	8
3	580030966	Capscrew	8
4	580056526	Handle (Grab)	1
5	580059127	Seal	2
6	580056527	Capscrew	8
7	580056528	Nut.....	2
8	580058212	Capscrew	5
9	258979300	Plug	2
10	524201323	Grommet	2
11	524208883	Grommet	1
12	520038820	Connector.....	1

CAB (FRAME AND ATTACHING PARTS)

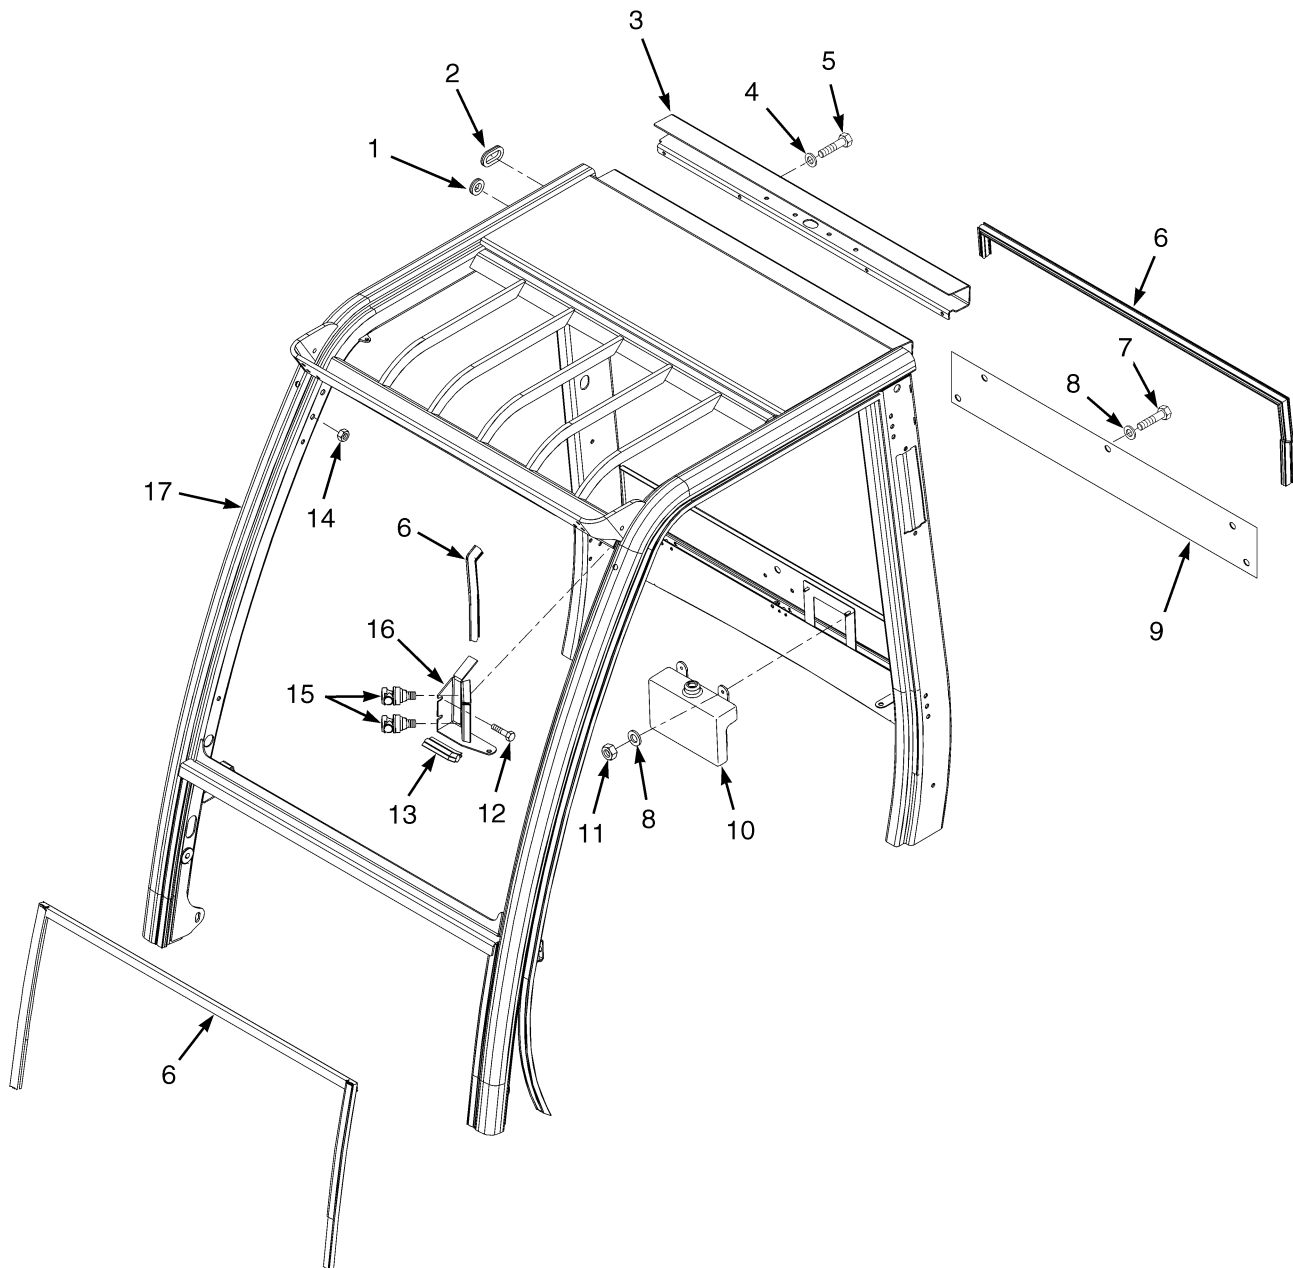

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>