

# Operator's Manual

## ZAXIS

**27U-3      27U-3F**

**30U-3      30U-3F**

**35U-3      35U-3F**

**40U-3      40U-3F**

**50U-3      50U-3F**

## Hydraulic Excavator

### Serial No.

ZX27U-3 020270 and up

ZX30U-3 020639 and up

ZX35U-3 020171 and up

ZX40U-3 020310 and up

ZX50U-3 020215 and up

ZX27U-3F 050003 and up

ZX30U-3F 050059 and up

ZX35U-3F 050059 and up

ZX40U-3F 050046 and up

ZX50U-3F 050345 and up

# INDEX

MACHINE NUMBERS

SAFETY

SAFETY SIGNS

COMPONENTS NAME

OPERATOR'S STATION

BREAK-IN

OPERATING ENGINE

DRIVING MACHINE

OPERATING MACHINE

TRANSPORTING

MAINTENANCE

CONSUMABLE PARTS LIST

MAINTENANCE UNDER SPECIAL ENVIRONMENTAL CONDITIONS

STORAGE

TROUBLESHOOTING

SPECIFICATIONS

OPTIONAL ATTACHMENT AND DEVICE

INDEX

# CONTENTS

<b>MACHINE NUMBERS</b> .....	1	Beware of Asbestos and Silicon Dust and Other Contamination .....	S-28
<b>SAFETY</b> .....	S-1	Precautions for Welding and Grinding .....	S-29
Recognize Safety Information .....	S-1	Avoid Heating Near Pressurized Fluid Lines .....	S-29
Understand Signal Words .....	S-1	Avoid Applying Heat to Lines Containing Flammable Fluids .....	S-29
Follow Safety Instructions .....	S-2	Remove Paint Before Welding or Heating .....	S-30
Prepare For Emergencies .....	S-2	Prevent Battery Explosions .....	S-30
Wear Protective Clothing .....	S-3	Precautions for Handling Refrigerant .....	S-31
Protect Against Noise .....	S-3	Handle Chemical Products Safely .....	S-31
Inspect Machine .....	S-3	Dispose of Waste Properly .....	S-32
Tidy Up Inside Operator's Space .....	S-4	<b>SAFETY SIGNS</b> .....	S-33
Use Handrails and Steps .....	S-4	<b>COMPONENTS NAME</b> .....	1-1
Never Ride Attachment .....	S-4	<b>OPERATOR'S STATION</b> .....	1-2
Adjust the Operator's Seat .....	S-5	Pedals, Levers and Monitor Panel .....	1-2
Ensure Safety Before Rising From or Leaving Operator's Seat .....	S-5	Key Switch .....	1-4
Fasten Your Seat Belt .....	S-5	Switch Panel .....	1-4
Move and Operate Machine Safely .....	S-6	Monitor Panel .....	1-5
Operate Only From Operator's Seat .....	S-7	Hour Meter .....	1-5
Jump Starting .....	S-7	Fuel Gauge .....	1-5
Keep Riders Off Machine .....	S-7	Coolant Temperature Gauge .....	1-5
Precautions for Operations .....	S-8	System Failure Indicator .....	1-6
Investigate Job Site Beforehand .....	S-9	Engine Oil Pressure Indicator .....	1-6
Equipment of OPG .....	S-10	Overheat Indicator .....	1-6
Provide Signals for Jobs Involving Multiple Machines .....	S-10	Fuel Level Indicator .....	1-6
Confirm Direction of Machine to be Driven .....	S-10	Alternator Indicator .....	1-7
Drive Machine Safely .....	S-11	Preheat Indicator .....	1-7
Avoid Injury From Rollaway Accidents .....	S-13	Fast Travel Mode Indicator .....	1-7
Avoid Injury From Back-over and Swing Accidents .....	S-14	Auto-Idle Indicator (Except ZX27U-3) .....	1-7
Keep Person Clear From Working Area .....	S-15	Auto-Idle Switch (Except ZX27U-3) .....	1-8
Never Position Bucket Over Anyone .....	S-15	Air Conditioner Operation .....	1-9
Avoid Undercutting .....	S-15	Tips for Air Conditioner Usage .....	1-11
Avoid Tipping .....	S-16	Radio (Cab Equipped Machines) .....	1-12
Never Undercut a High Bank .....	S-16	AM/FM Radio Operation .....	1-13
Dig With Caution .....	S-17	Cab Door Release Lever (Cab-equipped Machines) .....	1-16
Operate With Caution .....	S-17	Opening/Closing Cab Front Window (Cab-equipped Machines) .....	1-17
Avoid Power Lines .....	S-17	Adjusting Operator's Seat .....	1-18
Precautions for Lightning .....	S-18	Tool and Operator's Manual Boxes .....	1-18
Do Not Use for Craning Operations .....	S-18	Emergency Exit (Cab-equipped Machines) .....	1-19
Protect Against Flying Debris .....	S-18	Seat Belt (Optional) .....	1-20
Park Machine Safely .....	S-19	Cab Light (Cab-equipped Machines) .....	1-20
Handle Fluids Safely --- Avoid Fires .....	S-19	<b>BREAK-IN</b> .....	2-1
Safety Transporting .....	S-20	Breaking in New Machine .....	2-1
Practice Safe Maintenance .....	S-21	<b>OPERATING ENGINE</b> .....	3-1
Warn Others of Service Work .....	S-22	Before Starting Engine .....	3-1
Support Machine Properly .....	S-23	Starting Engine .....	3-2
Stay Clear of Moving Parts .....	S-23	Check Machine After Starting Engine .....	3-4
Prevent Parts From Flying .....	S-23	Using Booster Battery .....	3-5
Store Attachments Safely .....	S-24		
Prevent Burns .....	S-24		
Replace Rubber Hoses Periodically .....	S-25		
Avoid High-Pressure Fluids .....	S-25		
Prevent Fires .....	S-26		
Evacuating in Case of Fire .....	S-27		
Beware of Exhaust Fumes .....	S-28		

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

# CONTENTS

Stopping Engine .....	3-6	Securing Machine to Trailer for Transportation (Machines with Lightweight Object-Towing Bracket Provided) .....	6-3
<b>DRIVING MACHINE</b> .....	4-1	Securing Machine to Trailer for Transportation (Machines without Lightweight Object-Towing Bracket Provided) .....	6-4
Travel Levers and Pedals .....	4-1	Unloading .....	6-5
Travel Mode Switch .....	4-3	Lifting Machine With Crane .....	6-6
Traveling on Soft Ground .....	4-4	<b>MAINTENANCE</b> .....	7-1
Raise One Track Using Boom and Arm .....	4-4	Procedures .....	7-1
Towing Machine .....	4-5	Check Hour Meter Regularly .....	7-2
Driving in Water or on Soft Ground .....	4-6	Use Correct Fuels and Lubricants .....	7-2
Parking and Stopping on Slopes .....	4-7	Prepare Machine for Inspection/Maintenance.....	7-3
Parking on Slopes.....	4-7	Opening/Closing Engine Access Covers .....	7-4
<b>OPERATING MACHINE</b> .....	5-1	Opening/Closing Tank Covers .....	7-5
Control Lever (ISO Excavator Pattern) .....	5-1	Daily Inspection .....	7-6
Control Lever (H-pattern: HITACHI Excavator Pattern).....	5-2	Periodic Replacement of Parts.....	7-7
Control Lever (SAE-backhoe Pattern).....	5-3	Maintenance Guide .....	7-8
Boom-Swing Pedal.....	5-4	Brand Names of Recommended Oil and Lubricants .....	7-11
Auxiliary Pedal .....	5-5	A. Greasing.....	7-13
AUX Function Lever Switch (Optional) .....	5-5	Front Joint Pins (Incl. Swing Post Joint Pins).....	7-13
Blade Lever .....	5-6	Bucket and Link Pins.....	7-16
Precautions for Blade Operation.....	5-7	Blade Pins .....	7-16
Pilot Control Shut-off Lever .....	5-8	Swing Bearing.....	7-17
Warming Up Operation.....	5-9	Swing Internal Gear .....	7-18
Warming Up in Cold Weather .....	5-9	Control Lever Universal Joint .....	7-18
Auto-Idle Control (Except ZX27U-3) .....	5-10	Tilt Mechanism .....	7-19
Operating Backhoe .....	5-11	B. Engine .....	7-20
Grading Operation.....	5-12	Engine Oil .....	7-20
Avoid Driving Bucket Teeth into Ground .....	5-12	Change Engine Oil .....	7-20
Avoid Abusive Operation .....	5-12	Replace Engine Oil Filter .....	7-20
Avoid Striking With Bucket .....	5-13	C. Transmission.....	7-22
Avoid Excavation Using Upperstructure and/or Boom Swing Power .....	5-13	Travel Reduction Gear.....	7-22
Use Correct Track Shoe.....	5-13	D. Hydraulic System.....	7-24
Avoid other than Specified Machine Operations .....	5-14	Inspection and Maintenance of Hydraulic Equipment .....	7-24
Boom Cylinder may Hit Blade .....	5-15	Check Hydraulic Oil Level .....	7-25
Shackle Bracket Usage.....	5-16	Drain Hydraulic Oil Tank Sump.....	7-26
Avoid Hitting Blade With Bucket.....	5-17	Change Hydraulic Oil .....	7-27
Avoid Colliding Blade Against Rocks.....	5-17	Clean Suction Filter .....	7-30
Avoid Colliding Boom Cylinder With Track.....	5-17	Replace Full Flow Filter Element .....	7-31
Precautions for Installing Wide Bucket or Special Type Bucket.....	5-17	Replace Pilot Filter Element .....	7-32
Using Rubber Crawler .....	5-18	Check Hoses and Lines .....	7-34
Piping for Breaker and Crusher .....	5-20	E. Fuel System .....	7-41
Hydraulic Breaker (Optional) .....	5-21	Check Water Separator .....	7-42
Crusher Operation (Optional) .....	5-25	Drain Fuel Tank Sump .....	7-42
Precautions for After Operating Machine.....	5-26	Replace Fuel Filter .....	7-43
Auxiliary Flow Rate Control (Optional) (Except ZX27U-3) .....	5-27	Check Fuel Hoses.....	7-44
Emergency Boom Lowering Procedure .....	5-28	F. Air Cleaner.....	7-45
<b>TRANSPORTING</b> .....	6-1	Clean Air Cleaner Element.....	7-45
Transporting by Road .....	6-1	Replace Air Cleaner Element .....	7-45
Trailer Loading/Unloading.....	6-1	G. Cooling System .....	7-46
Loading .....	6-2	Check Coolant Level .....	7-47
		Check and Adjust Fan Belt Tension .....	7-48

# CONTENTS

---

Change Coolant .....	7-49	Specifications ZX40U-3 .....	12-13
Clean Radiator and Oil Cooler Core .....	7-50	Working Ranges ZX40U-3 .....	12-14
Clean Air Conditioner Condenser.....	7-50	Shoe Types and Applications ZX40U-3.....	12-15
H. Electrical System.....	7-51	Bucket Types and Applications ZX40U-3.....	12-16
Battery .....	7-51	Specifications ZX50U-3 .....	12-17
Replacing Fuses.....	7-54	Working Ranges ZX50U-3 .....	12-18
I. Miscellaneous.....	7-55	Shoe Types and Applications ZX50U-3.....	12-19
Check Bucket Teeth for Looseness and/or Wear .....	7-55	Bucket Types and Applications ZX50U-3.....	12-20
Replace Bucket .....	7-57		
Adjust Track Sag (Rubber Crawler) and Check for Damage .....	7-58	<b>OPTIONAL ATTACHMENT AND DEVICE .....</b>	<b>13-1</b>
Replace Rubber Crawler .....	7-60	Ignition Block System (Optional) .....	13-1
Check Track Sag (Steel Crawler) (Optional) .....	7-62	Additional Counterweight (Optional).....	13-8
Check and Replace Seat Belt .....	7-65		
Check Air Conditioner (Machine with Cab) .....	7-66	<b>INDEX.....</b>	<b>14-1</b>
Clean and Replace Air Conditioner Recirculation Filter.....	7-68		
Clean Cab Floor .....	7-70		
Check, Clean and Function Check Injection Nozzle .....	7-71		
Check and Adjust Valve Clearance .....	7-71		
Check and Adjust Injection Timing .....	7-71		
Measure Engine Compression Pressure .....	7-71		
Check Starter and Alternator.....	7-71		
Check Crankcase Breather .....	7-71		
Check Radiator Cap .....	7-71		
Check Tightening Torque of Bolts and Nuts .....	7-72		
Check Tilt Mechanism Fulcrum Bolts for Looseness.....	7-75		
Preparation for Inspection and Maintenance .....	7-76		
Tilting Floor Down .....	7-78		
<b>CONSUMABLE PARTS LIST .....</b>	<b>8-1</b>		
<b>MAINTENANCE UNDER SPECIAL ENVIRONMENTAL CONDITIONS .....</b>	<b>9-1</b>		
<b>STORAGE .....</b>	<b>10-1</b>		
Storing Machine.....	10-1		
Removing Machine from Storage .....	10-2		
<b>TROUBLESHOOTING .....</b>	<b>11-1</b>		
<b>SPECIFICATIONS .....</b>	<b>12-1</b>		
Specifications ZX27U-3 .....	12-1		
Working Ranges ZX27U-3 .....	12-2		
Shoe Types and Applications ZX27U-3.....	12-3		
Bucket Types and Applications ZX27U-3 .....	12-4		
Specifications ZX30U-3 .....	12-5		
Working Ranges ZX30U-3 .....	12-6		
Shoe Types and Applications ZX30U-3.....	12-7		
Bucket Types and Applications ZX30U-3 .....	12-8		
Specifications ZX35U-3 .....	12-9		
Working Ranges ZX35U-3 .....	12-10		
Shoe Types and Applications ZX35U-3.....	12-11		
Bucket Types and Applications ZX35U-3 .....	12-12		

---

# CONTENTS

---

---

## MEMO

A series of horizontal dotted lines for writing a memo.

# MACHINE NUMBERS


The manufacturing Nos. explained in this group is the individual number (serial No.) given to each machine and hydraulic components. These numbers are requested when inquiring any information on the machine and/or components. Fill these serial Nos. in the blank spaces in this group to immediately make them available upon request.

## Machine

MODEL/TYPE: \_\_\_\_\_

PRODUCT IDENTIFICATION NUMBER:

\_\_\_\_\_

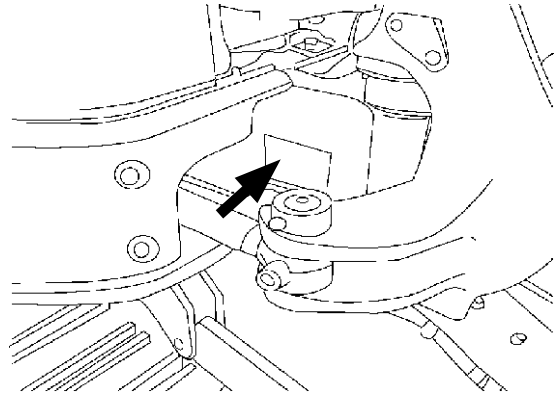


M1M7-00-001


## Product Identification Number

PRODUCT IDENTIFICATION NUMBER:

\_\_\_\_\_

 NOTE:

\_\_\_\_\_ Marks to indicate the start and end of the PIN  
\*HCM1NE00X00020001\*  
\_\_\_\_\_ PRODUCT IDENTIFICATION NUMBER (PIN)

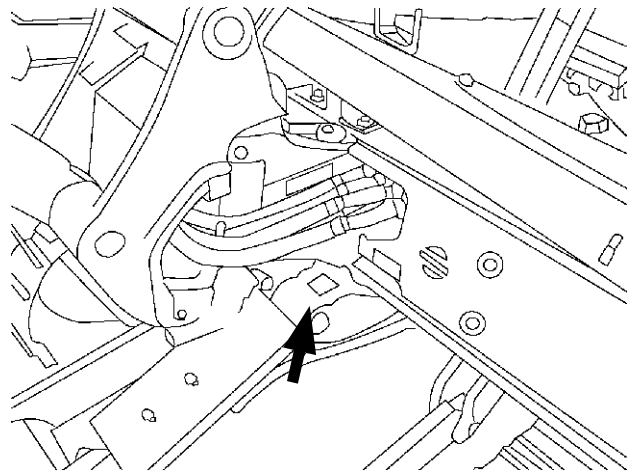


M1M7-00-002

## Engine

TYPE: \_\_\_\_\_

MFG. NO.: \_\_\_\_\_

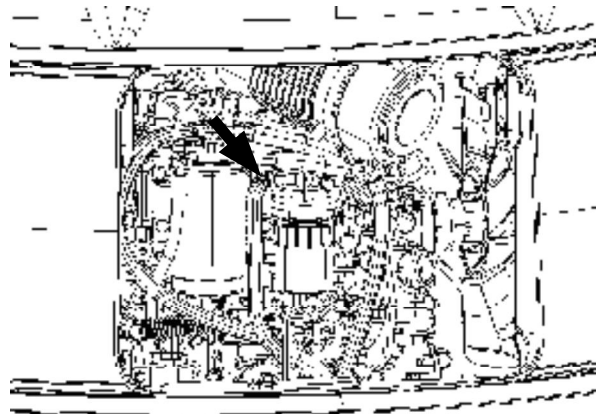


M1NE-00-001

# MACHINE NUMBERS

## Travel Motor

TYPE: \_\_\_\_\_

MFG. NO.: \_\_\_\_\_

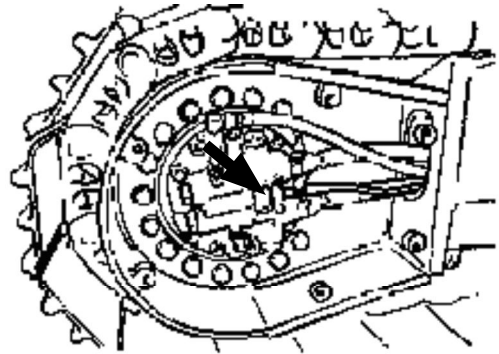


M1M0-00-004

## Swing Motor

TYPE: \_\_\_\_\_

MFG. NO.: \_\_\_\_\_

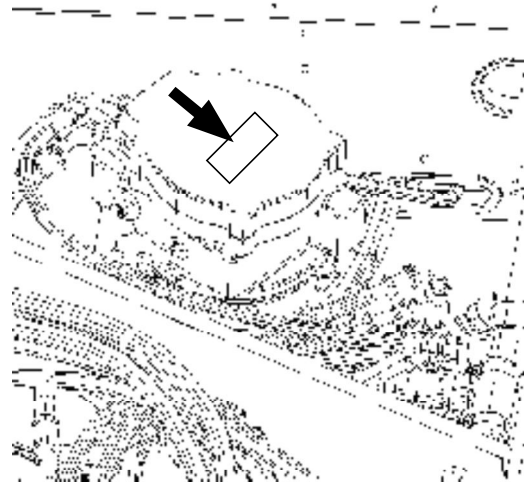


M1NE-00-002

## Hydraulic Pump

TYPE: \_\_\_\_\_

MFG. NO.: \_\_\_\_\_

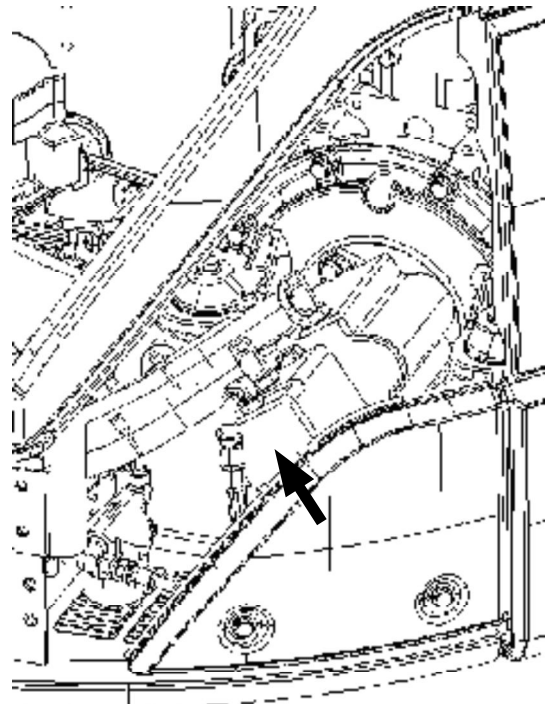

M1NE-00-003

## SAFETY

---


### Recognize Safety Information

- These are the **SAFETY ALERT SYMBOLS**.
  - When you see these symbols on your machine or in this manual, be alert to the potential for personal injury.
  - Follow recommended precautions and safe operating practices.



SA-688

### Understand Signal Words

- On machine safety signs, signal words designating the degree or level of hazard - **DANGER**, **WARNING**, or **CAUTION** - are used with the safety alert symbol.
  - **DANGER** indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
  - **WARNING** indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
  - **CAUTION** indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.
  - **DANGER** or **WARNING** safety signs are located near specific hazards. General precautions are listed on **CAUTION** safety signs.
  - Some safety signs do not use any of the designated signal words above after the safety alert symbol are occasionally used on this machine.
- To avoid confusing machine protection with personal safety messages, a signal word **IMPORTANT** indicates a situation which, if not avoided, could result in damage to the machine.
-  **NOTE** indicates an additional explanation for an element of information.



**IMPORTANT**




SA-1223

## SAFETY

---

### Follow Safety Instructions

- Carefully read and follow all safety signs on the machine as well as all safety messages in this manual.
- Safety signs must be installed, maintained and replaced if damaged.
  - If a safety sign or this manual is damaged or missing, order a replacement from your authorized dealer in the same way you order other replacement parts (be sure to state machine model and serial number when ordering).
- Allow only properly trained, qualified, authorized personnel to operate the machine.
- Learn how to correctly operate and service the machine.
- Keep your machine in proper working condition.
- Always operate the machine within the specification.
  - Unauthorized modifications of the machine may impair the functions and/or safety and affect machine life and the warranty will become void.
- The safety messages in this SAFETY chapter are intended to illustrate basic safety procedures of machines. However it is impossible for these safety messages to cover every possible hazardous situation you may encounter. If you have any questions concerning safety, you should first consult your supervisor and/or your authorized dealer before operating or performing maintenance work on the machine.

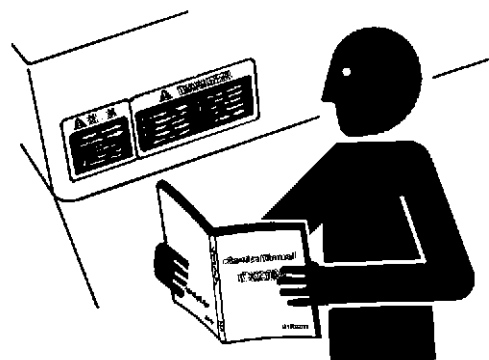


SA-003

---

### Prepare For Emergencies

- Be prepared if a fire starts or if an accident occurs.
  - Keep a first aid kit and fire extinguisher on hand.
  - Thoroughly read and understand the label attached on the fire extinguisher and use it properly.
  - To ensure that a fire extinguisher can be always used when necessary, check and service the fire extinguisher at the recommended intervals as specified in the fire-extinguisher manual.
  - Establish emergency procedure guidelines to cope with any fire or accidents which may occur.
- Keep emergency numbers for doctors, ambulance service, hospitals, and fire department posted near your telephone.

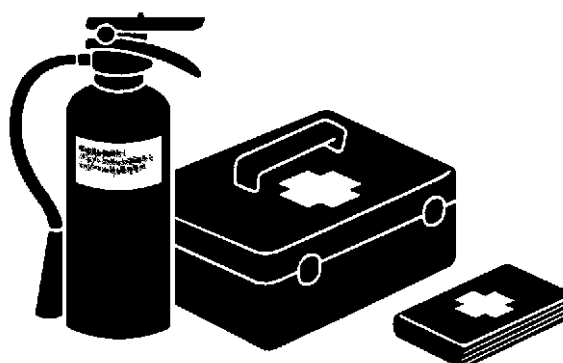

SA-437

## SAFETY

---

### Wear Protective Clothing

- Wear close fitting clothing and safety equipment appropriate to the job.

You may need:

- A hard hat
- Safety belt
- Safety shoes
- Safety glasses, goggles, or face shield
- Heavy gloves
- Hearing protection
- Reflective clothing
- Wet weather gear
- Respirator or filter mask.

Be sure to wear the correct equipment and clothing for the job. Do not take any chances.

- Avoid wearing loose clothing, jewelry, or other items that can catch on control levers or other parts of the machine.
- Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating the machine.



SA-438

---

### Protect Against Noise

- Prolonged exposure to loud noise can cause impairment or loss of hearing.
- Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortably loud noises.



SA-434

---

### Inspect Machine

- If any abnormality is found, be sure to repair it immediately before operating the machine.
- In the walk-around inspection, be sure to cover all points described in the "Daily Inspection" section in the operator's manual.



SA-435

## SAFETY

---


### Tidy Up Inside Operator's Space

- Always keep inside the cab clean by observing instructions below, to prevent any personal accidents from occurring.
- Remove mud and/or oily material from the shoe soles before entering the operator's space. If pedals are operated without removing mud or oily matter, the foot may slip off the pedal, possibly creating a hazardous situation.
- Do not leave parts and/or tools around the operator's seat.
- Do not keep a transparent water bottle in the cab. The transparent water bottle may focus the sun light like a lens, possibly causing a fire.
- Do not wear radio or music headphones and do not use a cell phone while traveling or operating the machine.
- Never allow hazardous materials such as combustible and/or explosive material in the operator's space.
- Do not leave cigarette lighters in the cab. If the temperature in the cab increases, the lighter may explode.

---

### Use Handrails and Steps

- Falling is one of the major causes of personal injury.
- When you get on and off the machine, always face the machine.
- Maintain a three-point contact with the steps and handrails.
- Do not use any controls as handholds.
- Never jump on or off the machine. Never mount or dismount a moving machine.
- In case adhered slippery material such as oil, grease, or mud is present on steps, handrails, or platforms, thoroughly remove such material.

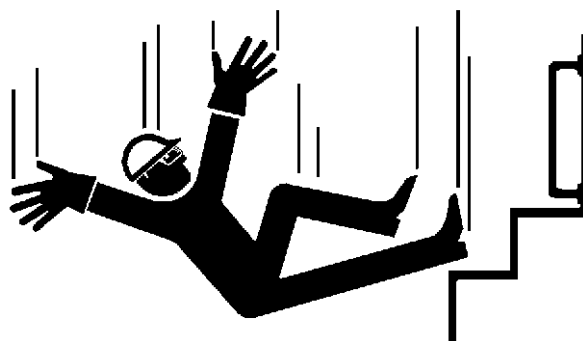

SA-439

---

### Never Ride Attachment


- Never allow anyone to ride attachments or the load. This is an extremely dangerous practice.

## SAFETY

---

### Adjust the Operator's Seat

- A poorly adjusted seat for either the operator or the work at hand may quickly fatigue the operator leading to misoperation of the machine.
- The seat should be adjusted whenever the operator for the machine changes.
- The operator should be able to fully depress the pedals and to correctly operate the control levers with his back firmly against the seat back.
- If not, readjust the seat forward or backward, and check again.

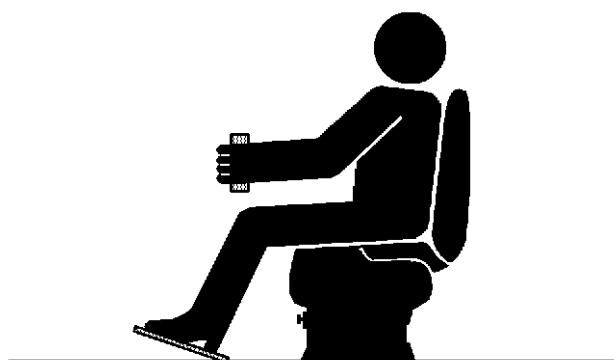

SA-378

---


### Ensure Safety Before Rising From or Leaving Operator's Seat

- Before rising from the operator's seat to open/close cab front window or to adjust the seat position, be sure to first lower the front attachment to the ground and then move the pilot control shut-off lever to the LOCK position. Failure to do so may allow the machine to unexpectedly move when a body part unintentionally comes in contact with a control lever, possibly resulting in serious personal injury or death.
- Before leaving the machine, be sure to first lower the front attachment to the ground and then move the pilot control shut-off lever to the LOCK position. Turn the key switch OFF to stop the engine.
- Before leaving the machine, close all windows, doors, and access covers and lock them up.

---

### Fasten Your Seat Belt

- If the machine should overturn, the operator may become injured and/or thrown from the cab. Additionally the operator may be crushed by the overturning machine, resulting in serious injury or death.
- Be sure to remain seated with the seat belt securely fastened whenever operating the machine.
- Prior to operating the machine, thoroughly examine webbing, buckle and attaching hardware. If any item is damaged or worn, replace the seat belt or component before operating the machine. Replace the seat belt at least once every 3 years regardless of appearance.

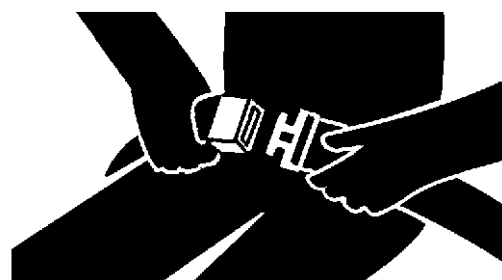


SA-237

## SAFETY

---

### Move and Operate Machine Safely

- Always be aware that there is a potential danger around the machine while operating the machine.
- Take extra care not to run over bystanders. Confirm the location of bystanders before moving, swinging, or operating the machine.
- Always keep the travel alarm and horn in working condition (if equipped).
- Before starting to move or operate the machine, sound the travel alarm and horn to alert bystanders.
- Use a signal person when moving, swinging, or operating the machine in congested areas. Locate the signal person so that the operator can always witness the signal person.
- Coordinate the meanings of all safety signs, hand signals and marks before starting the machine. Appoint a person who is responsible to make a signal and/or guidance.
- Never allow any persons or obstacles to enter the machine operation areas.
- Use appropriate illumination.

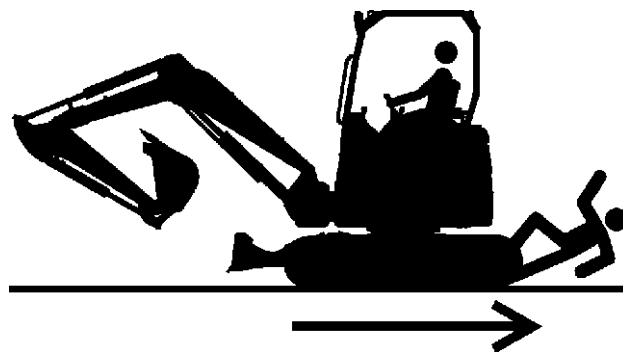

SA-1291

## SAFETY

---

### Operate Only From Operator's Seat

- Inappropriate engine starting procedures may cause the machine to runaway, possibly resulting in serious injury or death.
  - Start the engine only when seated in the operator's seat.
  - NEVER start the engine while standing on the tracks or on ground.
  - Do not start engine by shorting across starter terminals. A hazardous situation may be created and/or possible damage to the machine may result.
  - Before starting the engine, confirm that all control levers are in neutral.




SA-444

---

### Jump Starting

- Failure to follow correct jump starting procedures could result in a battery explosion or a runaway machine.
  - If the engine must be jump started, be sure to follow the instructions shown in the "OPERATING ENGINE" chapter.
  - The operator must be seated in the operator's seat so that the machine will be under control when the engine starts. Jump starting is a two-person operation.
  - Never use a frozen battery.
  - Failure to follow correct jump starting procedures could result in a battery explosion or a runaway machine.

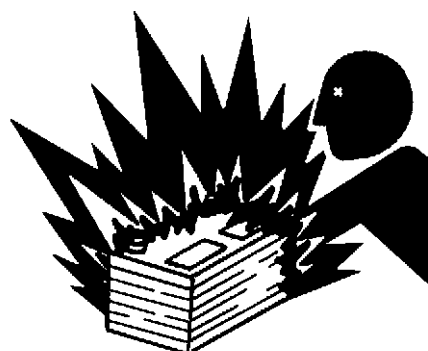

SA-032

---

### Keep Riders Off Machine

- Riders on machine are subject to injury such as being struck by foreign objects and being thrown off the machine.
  - Riders also obstruct the operator's view, resulting in the machine being operated in an unsafe manner.
  - Only the operator is allowed on the machine. Keep riders off.




SA-1292

## SAFETY

---

### Precautions for Operations

- Thoroughly make certain safety at the work site before starting operations. Especially always observe the following points.
  - Be sure to wear close fitting clothing and required safety items, such as a hard hat, when operating the machine.
  - Keep all bystanders and unnecessary objects out of and away from the machine working areas. Always beware of the surroundings while operating the machine. Take care not to allow the rear part of the upperstructure to come in contact with objects when swinging the machine in a small area.
  - When loading a dump truck, bring the bucket from the rear side of the dump truck to avoid moving the bucket over the dump truck cab or over any co-workers.

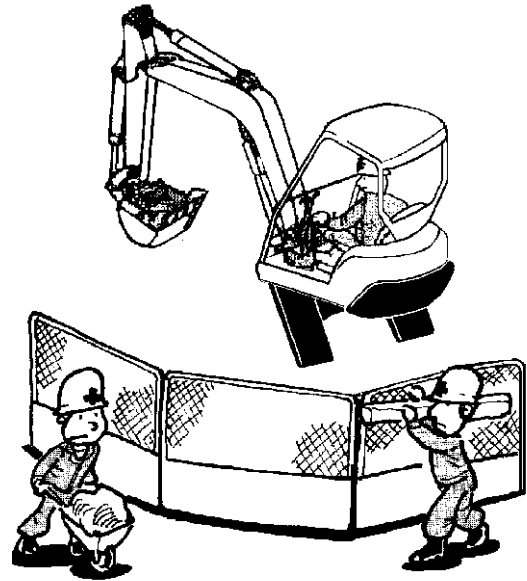


M586-12-012


## SAFETY

### Investigate Job Site Beforehand

- When working at the edge of an excavation or on a road shoulder, the machine could tip over due to collapse of the ground, possibly resulting in serious injury or death.
  - Investigate the configuration and ground conditions of the job site beforehand to prevent the machine from falling and to prevent the ground, stockpiles, or banks from collapsing.
  - Make a work plan. Use machines appropriate to the work and job site.
  - Reinforce ground, edges, and road shoulders as necessary. Keep the machine well back from the edges of excavations and road shoulders.
  - When working on an incline or on a road shoulder, employ a signal person as required.
  - Never allow bystanders to enter the working area such as swing radius or traveling range.
  - When the footing is weak, reinforce the ground before starting work.
  - When working on frozen ground, be extremely alert. As ambient temperatures rise, footing may become loose and slippery.
  - When operating the machine near open flame, sparks, and/or dead grass, a fire may easily break out. Use special care not to cause a fire.
- Make sure the work site ground has sufficient strength to firmly support the machine. When working close to an excavation or on road shoulders, operate the machine with the tracks positioned perpendicular to the cliff face with travel motors at the rear and with the blade at the front, so that the machine can more easily evacuate if the cliff face collapses.
- If working at the bottom of a cliff or on a high bank is required, be sure to investigate the area first and confirm that no danger of the cliff or bank collapsing exists. If any possibility of cliff or bank collapsing exists, do not work in that area.
- Soft ground may collapse when operating the machine on it, possibly causing the machine to tip over. When working on a soft ground is required, be sure to reinforce the ground first using large pieces of steel plates strong enough and firm to easily support the machine.
- Note that there is always a possibility of machine tipping over when working on rough terrain or on slopes. Prevent machine tipping over from occurring. Operate the machine slowly to ensure safe operation.

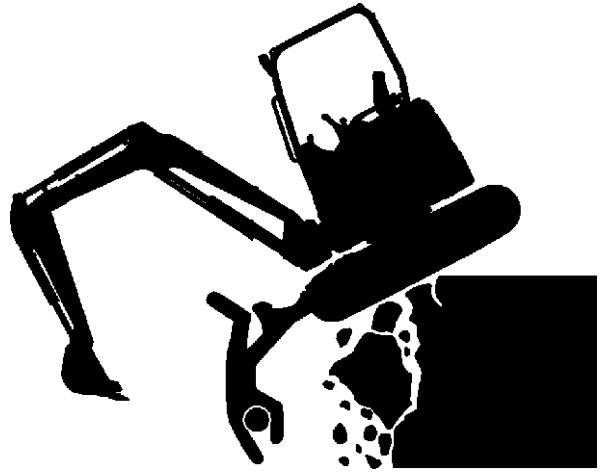

SA-1293

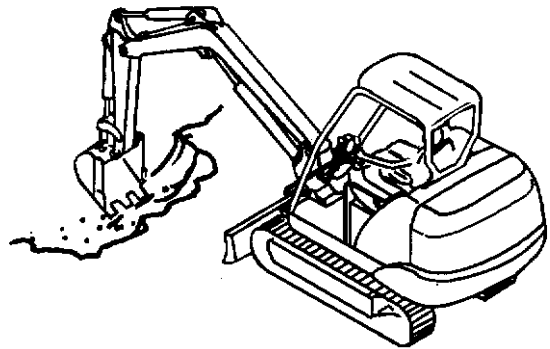

M586-05-021

## SAFETY

---

### Equipment of OPG

- In case the machine is operated in areas where the possibility of falling stones or debris exists, equip genuine Hitachi OPG guard. Contact your nearest Hitachi dealer for installation method of the OPG guard. Depending on the specifications applied to your machine, modification of the machine to meet ROPS standards will be possible.
- To maintain unimpaired operator protection and manufacture's protective structure.
  - Damaged ROPS, OPG guard must be replaced, not repaired or revised.
  - Any alternation to the ROPS or OPG guard must be approved by the manufacturer.

ROPS : Roll Over Protective Structure

OPG : Operator Protective Guard

---

### Provide Signals for Jobs Involving Multiple Machines

- In case more than one machine is operated in the same job site, accidental collision between machines may cause serious injury or death.
- For jobs involving multiple machines, provide signals commonly known by all personnel involved. Also, appoint a signal person to coordinate the job site. Make sure that all personnel obey the signal person's directions.




SA-481

---

### Confirm Direction of Machine to be Driven

- Incorrect travel pedal/lever operation may result in serious injury or death.
  - Before driving the machine, confirm the position of the undercarriage in relation to the operator's position.
  - If the travel motors are located towards the front of the cab, the machine will move in the reverse direction when travel pedals/levers are operated.

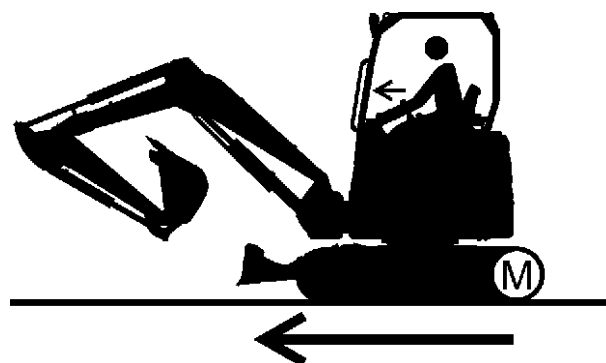


SA-1294


# SAFETY

## Drive Machine Safely


- Use a signal person when traveling the machine along road shoulders or in congested areas.
- Driving the machine in the incorrect direction may result in serious injury or death and/or severe damage to property.
- Before driving the machine, always confirm that the travel pedals/levers direction corresponds to the direction you wish to drive.
  - Be sure to detour around any obstructions.
  - Avoid traveling over obstructions. Soil, fragments of rocks, and/or metal pieces may scatter around the machine. Do not allow personnel to stay around the machine while traveling.
- Driving on a slope may cause the machine to slip or overturn, possibly resulting in serious injury or death.
  - Never attempt to ascend or descend 30 degrees or steeper slopes.
  - Be sure to fasten the seat belt.
  - When driving up or down a slope, keep the bucket facing the direction of travel, approximately 200 to 300 mm (8 to 12 in) (A) above the ground.
  - If machine starts to skid or becomes unstable, immediately lower the bucket to the ground and stop.
  - Driving across the face of a slope or steering on a slope may cause the machine to skid or turnover. If the direction must be changed, move the machine to level ground, then, change the direction to ensure safe operation.
  - Avoid swinging the upperstructure on slopes. Never attempt to swing the upperstructure downhill. The machine may tip over. If swinging uphill is unavoidable, carefully operate the upperstructure and boom at slow speed.
  - If the engine stalls on a slope, immediately lower the bucket to the ground. Return the control levers to neutral. Then, restart the engine.
  - Be sure to thoroughly warm up the machine before ascending steep slopes. If hydraulic oil has not warmed up sufficiently, sufficient performance may not be obtained.

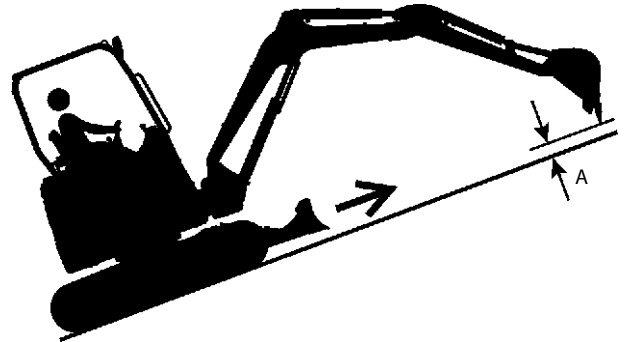


SA-1295

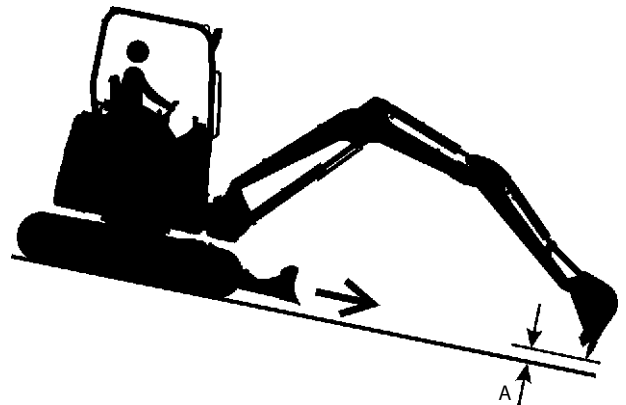

SA-1296

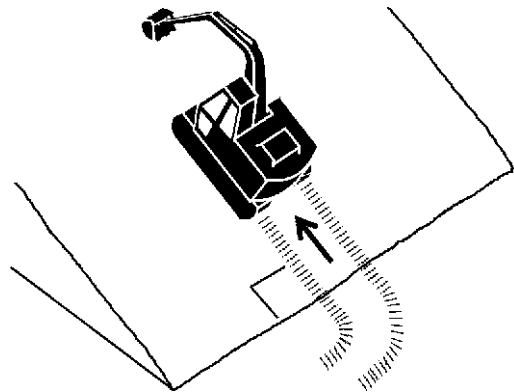


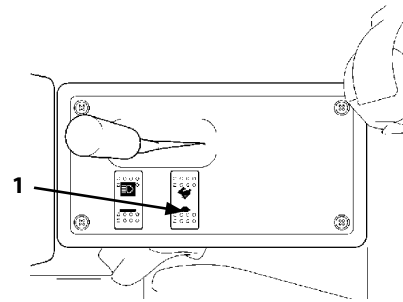
SA-441

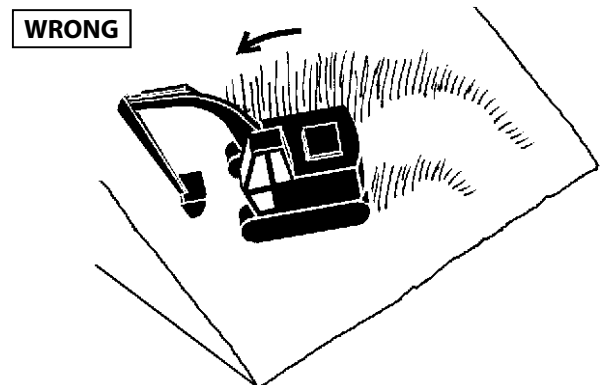

SA-589


## SAFETY

- Traveling down a slope in the fast mode requires a longer time to stop the machine. When traveling down a slope, place travel mode switch (1) in the TURTLE  position.
- Select a travel route that is as flat as possible. Steer the machine as straight as possible, making small gradual changes repeatedly in direction.
- Check the strengths of bridges and road shoulders before traveling on them, and reinforce if necessary.
- When the machine is equipped with steel shoes, cover the road surface with wood plates in order not to damage the road surface. Be careful of steering when operating on asphalt roads in summer.
- When crossing train tracks, lay wood plates over the tracks not to allow the machine to ride on only the rails.
- Check that the machine can pass under a bridge and electric lines before driving the machine.
- When crossing a river, drive the machine slowly while measuring the depth of the river using the bucket. Do not cross the river when the depth of the river is deeper than the upper track shoe surface.
- Reduce the engine speed when traveling on rough terrains. Select a slow travel speed. Slower speed will reduce possible damage to the machine.
- Drive the machine so that the travel motors do not come in contact with loose rocks. If the machine crosses over an obstruction, abnormally large loads may be loaded on the machine. Avoid contact with an obstruction while traveling the machine.
- During freezing weather, always clean snow and ice from track shoes before driving the machine on snowy and/or frozen roads, or loading and unloading the machine for transportation, to prevent the machine from slipping.




ZX27U-3 (Canopy)

M1M7-01-033

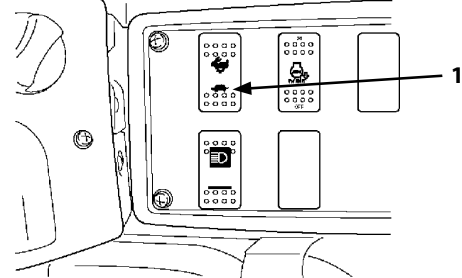


ZX30U-3, 35U-3, 40U-3, 50U-3  
(Canopy)


M1NE-01-010

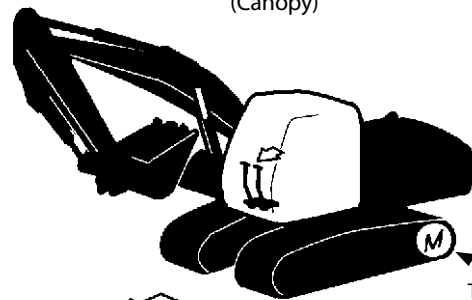

Travel Motor  
M104-05-008

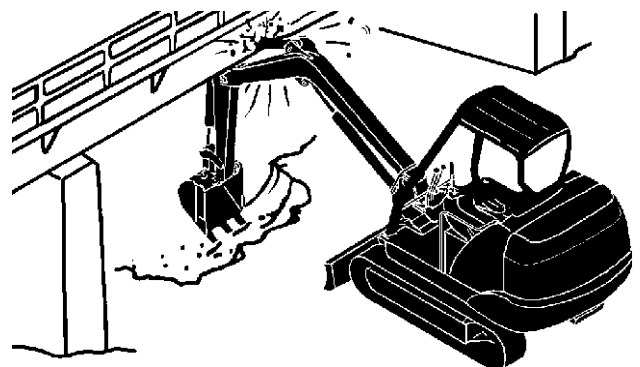

SA-673

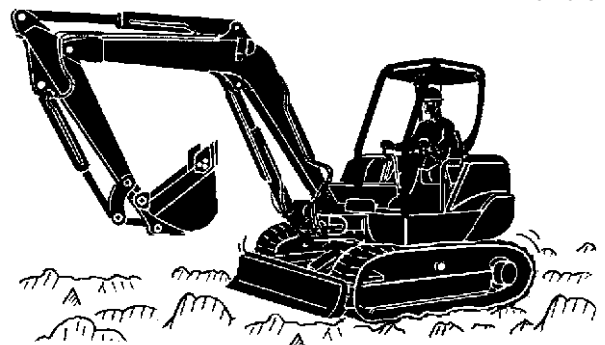

M586-05-002



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**

## SAFETY

---

### Avoid Injury From Rollaway Accidents

- Death or serious injury may result if you attempt to mount or try to bodily stop a moving machine.
- Park the machine in compliance with the safe parking procedures described on page S-19 to prevent the machine from running away.
- Block both tracks and lower the bucket to the ground, thrust the bucket teeth into the ground if you must park on a grade.
- Park at a reasonable distance from other machines.



SA-1297

## SAFETY


---

### Avoid Injury From Back-over and Swing Accidents


- If any person is present near the machine when backing or swinging the upperstructure, the machine may hit or run over that person, resulting in serious injury or death.

To avoid back-over and swing accidents:

- Always look around **BEFORE YOU BACK UP AND SWING THE MACHINE**. BE SURE THAT ALL BYSTANDERS ARE CLEAR.
- Keep the travel alarm in working condition (if equipped). **ALWAYS BE ALERT FOR BYSTANDERS MOVING INTO THE WORK AREA. USE THE HORN OR OTHER SIGNAL TO WARN BYSTANDERS BEFORE MOVING MACHINE.**
- **USE A SIGNAL PERSON WHEN BACKING UP IF YOUR VIEW IS OBSTRUCTED. ALWAYS KEEP THE SIGNAL PERSON IN VIEW.**  
Use hand signals, which conform to your local regulations, when work conditions require a signal person.
- No machine motions shall be made unless signals are clearly understood by both signal person and operator.
- Learn the meanings of all flags, signs, and markings used on the job and confirm who has the responsibility for signaling.
- Keep windows, mirrors, and lights clean and in good condition.
- Dust, heavy rain, fog, etc., can reduce visibility. As visibility decreases, reduce speed and use proper lighting.
- Read and understand all operating instructions in the operator's manual.

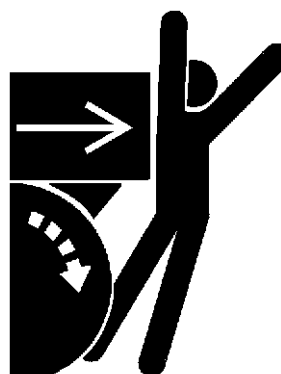

SA-383

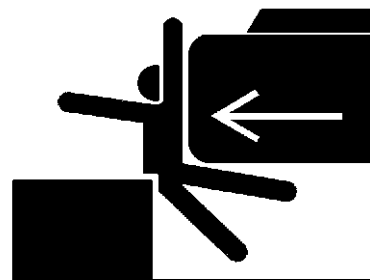

SA-384

021-E01A-0494-8

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**