

**1780 Front-Fold  
MaxEmerge® Plus  
Planter  
16-Row—22 Inch  
12-Row—30 Inch/23-Row—15 Inch**

**John Deere Harvester Works  
OMA61879 Issue L7  
(This manual replaces OMA60123 C7)**

LITHO IN U.S.A.  
ENGLISH

# Contents

	Page		Page
<b>Safety</b> .....	05-1	<b>Detaching from Tractor</b>	
<b>Safety Signs</b> .....	10-1	Detaching Planter from Tractor .....	40-1
<b>Preparing the Planter</b>		<b>Control Console</b>	
Changeover from Corn to Soybeans .....	15-1	Control Console .....	45-1
Changeover from Soybeans to Corn .....	15-2	<b>Transporting</b>	
Tighten Hardware .....	15-3	Transport Safely .....	50-1
Tire Inflation .....	15-3	Folding the Planter .....	50-2
Lubrication .....	15-4	Unfolding the Planter .....	50-3
<b>Preparing the Tractor</b>		<b>Preparing the Vacuum Meter Unit</b>	
Check Tractor Hydraulic System .....	20-1	Choosing Seed Disks .....	55-1
Prepare Tractor .....	20-1	Selecting Seed Disks .....	55-4
Tractor Tire Recommendation .....	20-3	Seed Disk Recommendations .....	55-5
Check Tire Inflation .....	20-3	Checking Seed Disk Cell .....	55-8
Wheel Weighting .....	20-4	Installing Seed Disk .....	55-8
Setting Wheel Spacing .....	20-4	Adjusting Vacuum Meter Baffle .....	55-10
<b>Attaching to Tractor</b>		Adjusting Meter Hub .....	55-11
Attaching Planter to Tractor .....	25-1	Installing Knockout Assembly .....	55-13
<b>Planter and 30—60 Series Tractor Hookup</b>		Installing Double Eliminator .....	55-16
Set Tractor Selective Control Valve Lever . . . .	30-1	Select Correct Vacuum Meter Brush .....	55-18
Selective Control Valve Lever Stop .....	30-1	How to Change Brush .....	55-18
Connecting Planter to Tractor .....	30-4	Installing Brush .....	55-18
Connect SeedStar™ Monitor .....	30-5	Check Hydraulic Connections .....	55-19
Vacuum Motor Return Coupler .....	30-5	<b>Preparing the Plateless Meter Unit</b>	
<b>8000 and 9000 Series Tractor Hookup</b>		Plateless Seed Hoppers .....	60-1
Set Valve Controls .....	35-1	Feed Cup Metering Unit .....	60-3
Connecting Wiring Harness and Hydraulic		Soybean Feed Cup .....	60-3
Hoses .....	35-3	Low-Rate Sorghum .....	60-4
Connect SeedStar™ Monitor .....	35-3	Replace Feed Cup with Finger Pickup .....	60-7
Vacuum Motor and Variable Drive Return		<b>Operating the Planter</b>	
Coupler .....	35-4	General .....	65-1
Hookup for Vacumeter™ .....	35-5	Raising and Lowering the Planter .....	65-2
Check Hydraulic System .....	35-6	Operating through Wet Soil .....	65-3
		Leveling Planter .....	65-3
		Set Frame Height .....	65-4

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OMA61879 L7-19-23DEC97

COPYRIGHT© 1997  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION™ Manual  
Previous Editions  
Copyright 1996, 1995 Deere & Company

Contents

	<b>Page</b>		<b>Page</b>
Half-Width Planting Drive Disconnect . . . . .	65-5	<b>Checking Seed Population</b>	
Set Marker Length . . . . .	65-6	Checking Seed Population . . . . .	95-1
Marker Adjustment . . . . .	65-6	Drive Wheel Slippage . . . . .	95-3
Marker Float Range . . . . .	65-7		
Raising and Lowering Independent Markers . . . . .	65-8	<b>General Attachments</b>	
Filling Marker Hydraulic Cylinders . . . . .	65-11	Unit Down Force Springs . . . . .	100-1
Marker Breakaway Bolt . . . . .	65-11	Heavy-Duty Down Force Springs . . . . .	100-1
Individual Row Lock Up . . . . .	65-12	Unit Mounted Coulter . . . . .	100-3
Eleven Row Lock Up . . . . .	65-14	Heavy-Duty Closing Wheels . . . . .	100-5
Cap Vacuum Manifold . . . . .	65-16	Rotary Scraper . . . . .	100-6
Seed Meter Disconnect . . . . .	65-16	Row Leveler Chain . . . . .	100-6
Reset Monitor . . . . .	65-17	Row Cleaner Height Adjustment . . . . .	100-7
Countershaft Drive Coupler Adjustment . . . . .	65-17		
Latch Adjustment . . . . .	65-20	<b>Granular Chemical Attachment</b>	
Pneumatic Down Force . . . . .	65-21	Granular Chemical Attachment . . . . .	105-1
Adjust Tire Scraper . . . . .	65-22	U.S. Measurement . . . . .	105-5
Changing Planting Depth . . . . .	65-23	Calibrating Insecticide/Herbicide Meter . . . . .	105-10
Stagger Closing Wheels . . . . .	65-23	Seed Furrow Insecticide Placement Bracket . . . . .	105-13
Adjusting Closing Wheel Down Force . . . . .	65-24	Rear Mount Insecticide Spreader . . . . .	105-13
Walking Gauge Wheels . . . . .	65-25	Herbicide Diffuser . . . . .	105-14
Center (Align) Closing Wheels . . . . .	65-25	Windshield . . . . .	105-14
Offset Hoppers . . . . .	65-26	Tine-Tooth Incorporator . . . . .	105-15
Filling Seed Hoppers . . . . .	65-26		
Emptying Seed Hoppers . . . . .	65-28	<b>Liquid Chemical Attachment</b>	
Inspection and Cleanout of Seed Hoppers . . . . .	65-30	Liquid Herbicide Pre-Emerge Spray Attachment . . . . .	110-1
		<b>Liquid Fertilizer Attachment</b>	
<b>How to Use Planting Rate Charts</b>		Quik-Fill™ Liquid Fertilizer System . . . . .	115-1
How to Use Planting Rate Charts . . . . .	70-1	Operation on Hillsides . . . . .	115-3
Low-Range Sprocket Combination . . . . .	70-2		
High-Range Sprocket Combination . . . . .	70-2	<b>Liquid Fertilizer—Piston Pump</b>	
Changing Sprocket Combinations . . . . .	70-3	System Operation . . . . .	120-1
		Priming and Initial Start Up of Pump . . . . .	120-2
<b>Operating the Vacuum Meter</b>		How to Set Liquid Fertilizer Rates . . . . .	120-3
Vacuum Meter Operating Characteristics . . . . .	75-1	Setting Pump Drive . . . . .	120-5
Use of Talc Lubricant . . . . .	75-2	Liquid Fertilizer Rate Charts . . . . .	120-5
Set Vacuum Level . . . . .	75-4	Checking Fertilizer Rates . . . . .	120-8
Zeroing the Vacuum Gauges after Installation . . . . .	75-5	Adjusting Pump to Pump Number Setting . . . . .	120-8
Vacuum Levels . . . . .	75-6	Changing Orifice in Special Fitting . . . . .	120-10
Vacuum Seed Chart . . . . .	75-13	Clean Strainer . . . . .	120-11
		Strainer Maintenance . . . . .	120-12
<b>Vacuum Meter Seed Charts</b> . . . . .	80-1		
		<b>Double-Disk Fertilizer Opener Attachment</b>	
<b>Operating the Plateless Meter</b>		Double-Disk Fertilizer Openers . . . . .	125-1
Finger Pickup Metering Unit Operating Characteristics . . . . .	85-1		
Feed Cup Operating Characteristics . . . . .	85-2		
<b>Plateless Meter Seed Charts</b> . . . . .	90-1		

Continued on next page

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.


**<https://www.ebooklibonline.com>**

Page	Page
<b>Unit Mount Double-Disk Fertilizer Opener</b>	
Adjusting Unit Mounted Fertilizer Opener . . .	130-1
<b>Single-Disk Fertilizer Opener Attachment</b>	
Single-Disk Fertilizer Openers . . . . .	135-1
Setting the Gauge Wheel . . . . .	135-3
Adjusting Down Force . . . . .	135-4
Adjusting . . . . .	135-6
Installing Heavy-Duty Spring . . . . .	135-7
<b>Troubleshooting</b>	
Planter (Unfolded) . . . . .	140-1
Planter (Folded) . . . . .	140-5
Vacuum Meter . . . . .	140-6
Plateless Meter . . . . .	140-10
Liquid Fertilizer—Piston Pump System . . . .	140-14
Checking Solenoids . . . . .	140-15
Checking Valves . . . . .	140-16
Filling Marker Hydraulic Cylinders . . . . .	140-18
<b>Lubrication</b>	
Grease . . . . .	145-1
Multiluber Grease . . . . .	145-1
Lubrication Symbols . . . . .	145-1
Roller Chain and Pesticide Sprocket Lubrication . . . . .	145-3
Special Lubricants for Vacuum Seed Meters . . . . .	145-12
Finger Pickup Only . . . . .	145-13
<b>Service</b>	
Practice Safe Maintenance . . . . .	150-1
Install Service Locks . . . . .	150-3
Service Tires Safely . . . . .	150-3
Replacing Drill Shaft Cotter Pins . . . . .	150-4
Replacing Marker Breakaway Bolt . . . . .	150-4
Coulter Maintenance . . . . .	150-6
Single-Disk Fertilizer Opener Maintenance . . .	150-7
Cleaning Insecticide and/or Herbicide Hoppers . . . . .	150-8
Vacuum Gauge Filter . . . . .	150-10
Clean Vacuum Pump Motor Guard . . . . .	150-11
Clean Vacuum Manifold System . . . . .	150-11
Clean Vacuum Meter Drive . . . . .	150-12
Vacuum Meter Inspection and Service . . . .	150-12
Seed Drive Mechanism Adjustment . . . . .	150-15
Vacuum Motor Inspection . . . . .	150-16
Installing New Vacuum Seal . . . . .	150-16
Finger Pickup Mechanism . . . . .	150-17
Adjusting Gauge Wheels . . . . .	150-23
Replacing Seed Opener Blades and Seed Tube Guard . . . . .	150-24
Cleaning Liquid Fertilizer Tanks . . . . .	150-25
Clean Latch Receiver . . . . .	150-28
<b>Storage</b>	
Beginning of the Season Service . . . . .	155-1
Service at the End of the Season . . . . .	155-3
Fertilizer System . . . . .	155-5
Clean Latch Receiver . . . . .	155-6
Store Planter . . . . .	155-7
<b>Crime Prevention Tips</b> . . . . .	160-1
<b>Specifications</b> . . . . .	165-1
<b>Index</b>	

*Contents*

# Safety

## 1780 12/23-Row Narrow Planter

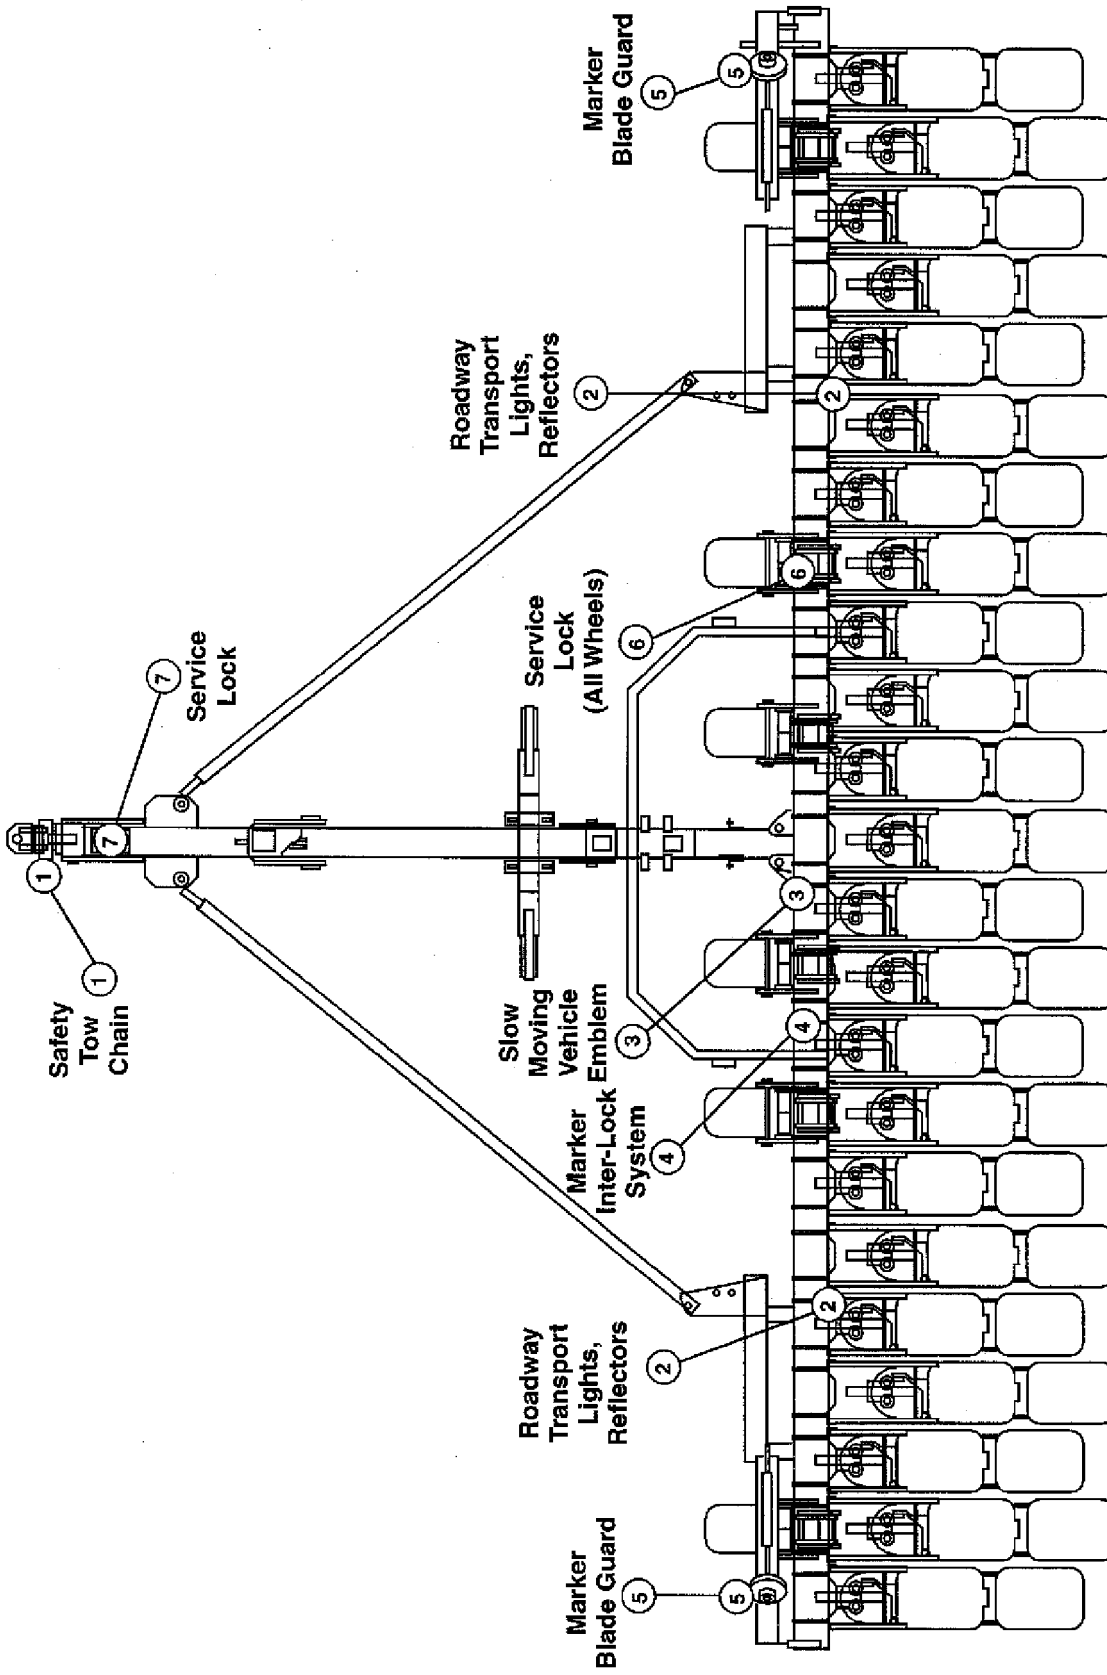

### SAFETY FEATURES OF THE 1780 12/23-ROW NARROW PLANTER

In addition to the safety features shown here, other components and systems, safety signs on the machine, and safety messages and instructions in the Operator's Manual contribute to the safe operation of this planter when combined with the care and concern of a capable operator.



## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

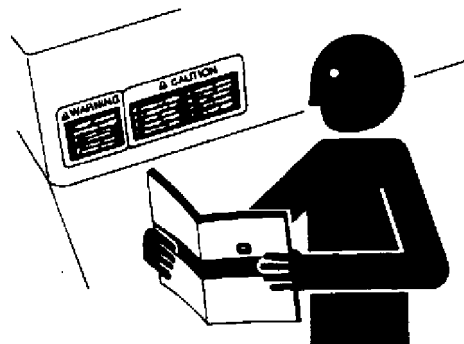

DX,READ -19-03MAR93

TS201 -UN-23AUG88




## PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

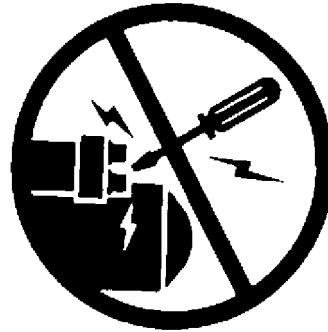

DX,BYPAS1 -19-03MAR93

TS177 -UN-11JAN89

## OPERATE THE PLANTER SAFELY

Be careful when operating planter to avoid injury.

If the planter must be in a raised position while working on or near it, be certain service locks are installed.


Serious injury or death can result from contact with electric lines. Use care when moving or operating this machine near electric lines to avoid contact.

Stand clear of machine when wings are being folded or unfolded. Mechanical or hydraulic failure can allow wings to move rapidly.

Be sure cylinder and attaching hoses are fully charged with oil before operating system.

Be careful when operating system on hillsides; tractor can tip sideways if it strikes a hole, ditch or other irregularity.

Permit only one person, the operator, on tractor platform while tractor and planter are in operation.

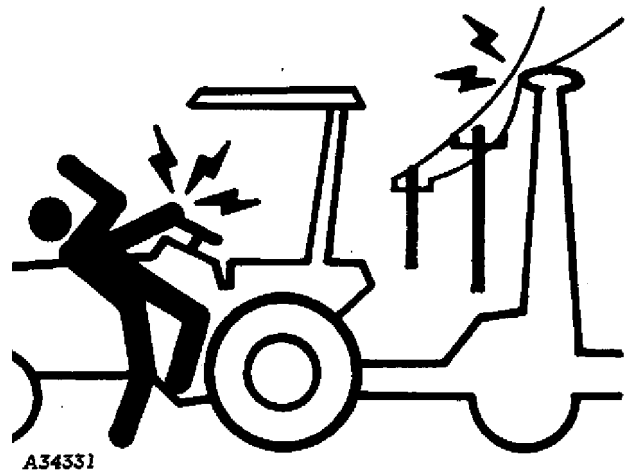

A34331

A34331 -UN-13OCT88


7200OM,FR,SA,A -19-19NOV97



## KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury, such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view, resulting in the machine being operated in an unsafe manner.

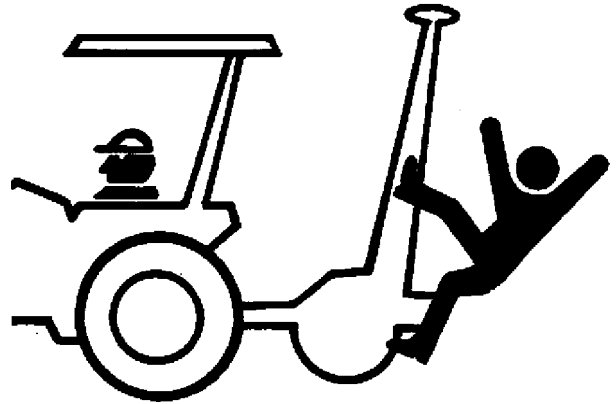

A34332

-UN-13OCT88  
A34332


720012FFOMSA,C -19-16SEP92

## PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

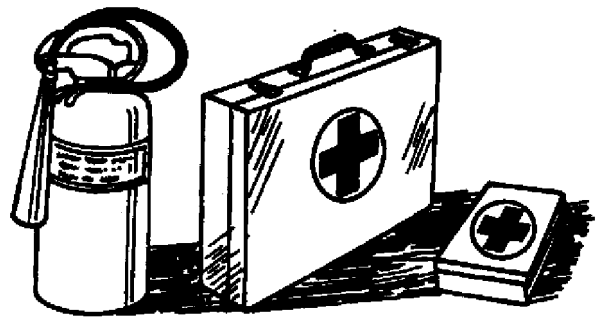

-UN-23AUG88  
TS291

DX,FIRE2 -19-03MAR93


## WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

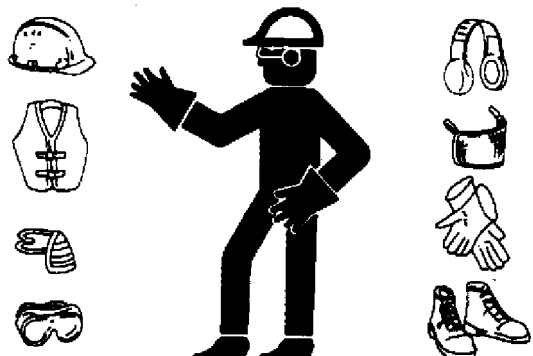

-UN-23AUG88  
TS206

DX,WEAR -19-10SEP90




## HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)

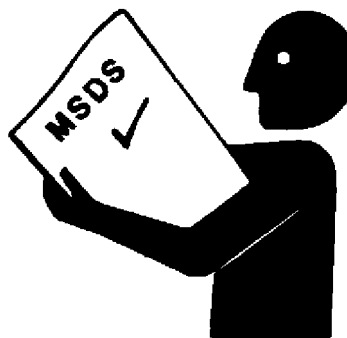


DX,MSDS,NA -19-03MAR93

TS1132 -UN-26NOV90

## HANDLE CHEMICALS PROPERLY

Agricultural chemicals can be dangerous. Improper selection or use can injure persons and animals. BE SAFE; handle and apply with care. Follow instructions of the chemical manufacturer.

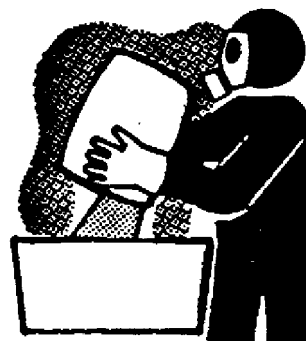

A34471

7200OM,FR,SA,B -19-16NOV90

A34471 -UN-11OCT88



## INSECTICIDE AND/OR HERBICIDE HOPPERS LID FILL CLOSED HANDLING SYSTEM

**!** **CAUTION:** Chemicals may cause eye, skin, or breathing problems. Wear long sleeve shirt, gloves and goggles. Refer to and follow safety instruction on the chemical supplier's label.

Chemical residue should be placed in the original or accepted container and disposed of in an approved manner. Follow instruction of the chemical manufacturers for disposal methods.


If hoppers are not washed, chemically treated dust may be on the hopper walls, resulting in exposure.

GENOM,CHEM,SA,A-19-20MAY93

## USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use hand signals or turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

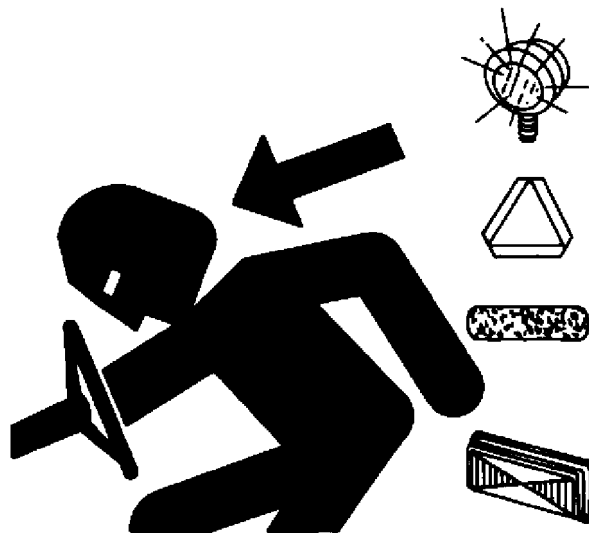

TS951  
-UN-12APR90

DX,FLASH -19-12SEP95



## TRANSPORT SAFELY

The maximum transport speed for this planter is 32 km/h (20 mph). **DO NOT EXCEED**. Never travel at any speed which does not permit adequate control of steering and stopping.

Reduce speed over rough ground.

M54944A,B -19-09FEB96


## TOW LOADS SAFELY

Stopping distance increases with speed and weight of towed loads, and on slopes. Towed loads with or without brakes that are too heavy for the tractor or are towed too fast can cause loss of control. Consider the total weight of the equipment and its load.

Observe these recommended maximum road speeds, or local speed limits which may be lower:

- If towed equipment does not have brakes, do not travel more than 32 km/h (20 mph) and do not tow loads more than 1.5 times the tractor weight.
- If towed equipment has brakes, do not travel more than 40 km/h (25 mph) and do not tow loads more than 4.5 times the tractor weight.

Ensure the load does not exceed the recommended weight ratio. Add ballast to recommended maximum for tractor, lighten the load, or get a heavier towing unit. The tractor must be heavy and powerful enough with adequate braking power for the towed load. Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

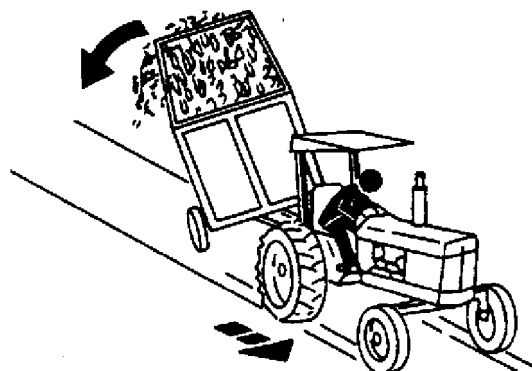

T5216 -UN-23AUG88

DX,TOW -19-02OCT95



## PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV -19-03MAR93

TS218 -UN-23AUG88

## REMOVE PAINT BEFORE WELDING OR HEATING


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

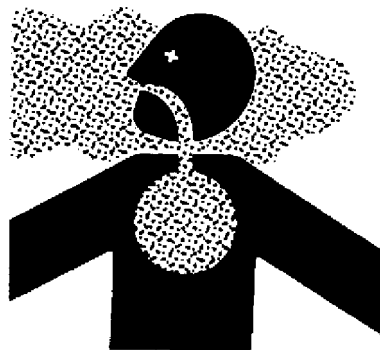

DX,PAINT -19-03MAR93

TS220 -UN-23AUG88



## AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



DX,TORCH -19-03MAR93

TS953  
-UN-15MAY90


## AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

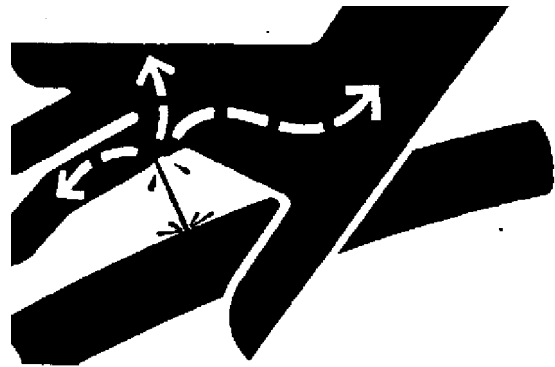


DX,FLUID -19-03MAR93

X9811  
-UN-23AUG88

## STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.

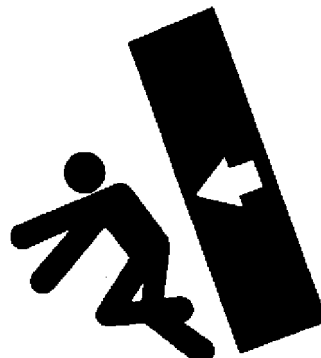

DX,STORE -19-03MAR93

TS219  
-UN-23AUG88



## DISPOSE OF WASTE PROPERLY


Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

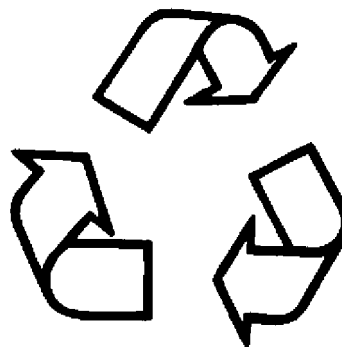

TS1133 -UN-26NOV90

DX,DRAIN -19-03MAR93

# Safety Signs



Markers


A54944,B -19-22AUG95



Pneumatic Down Force Compressor


OM61879,10A -19-19NOV97

Safety Signs

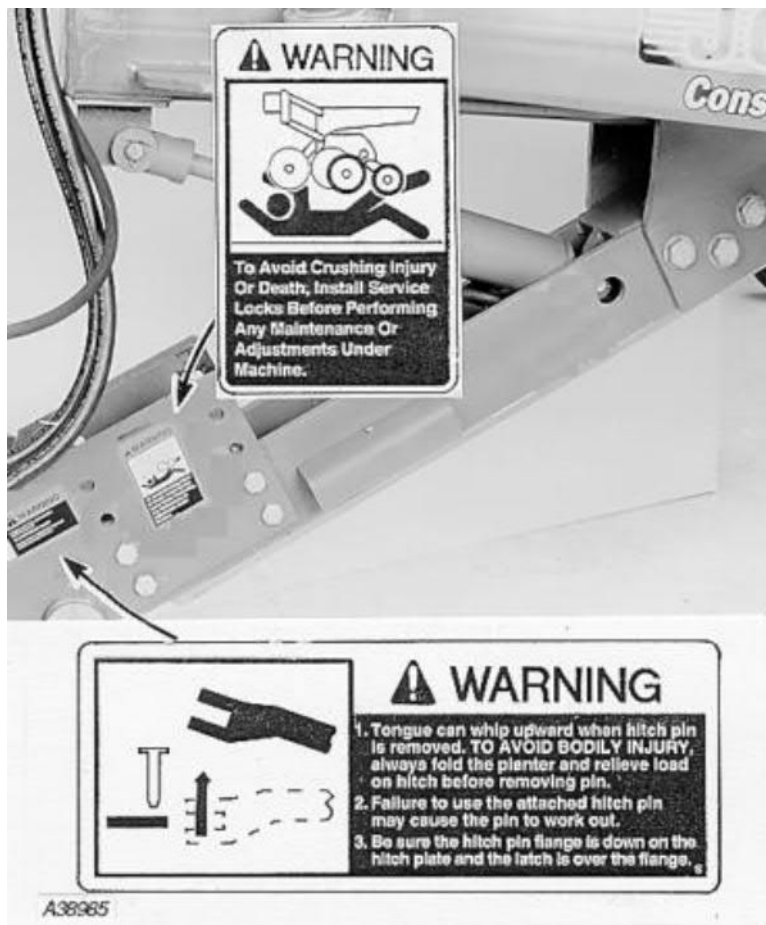

Hitch

OM58935,10A -19-28AUG96

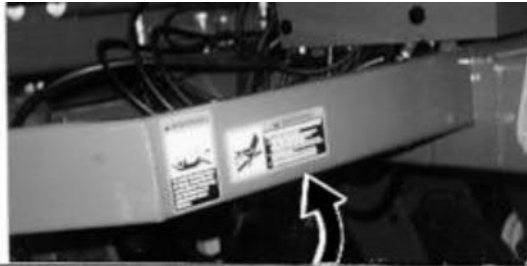

## ! WARNING

**AVOID BODILY INJURY FROM HYDRAULIC OIL UNDER PRESSURE. RELIEVE PRESSURE BEFORE REMOVING HOSES AND VALVES.**


1. Lower planter and both markers.
2. **JOHN DEERE 8000 SERIES TRACTORS ONLY:**  
Leave engine running and proceed to step 3.
3. **OTHER JOHN DEERE TRACTORS:**  
Stop engine, turn key switch on and proceed to step 3.
3. Place hydraulic lever in float position and upper console switch in plant position. Depress all remaining switches in both directions.
4. Place upper console switch in transport position. Depress all remaining switches in both directions.

A4-1011 -19-21FEB97


Center Frame

OM60123A,10A -19-24FEB97

## ! WARNING

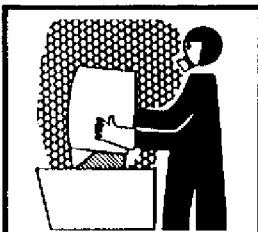


Chemicals may cause eye, skin or breathing problems.  
Wear face mask, gloves, and goggles.  
Read and follow safety instructions on the chemical supplier's label.

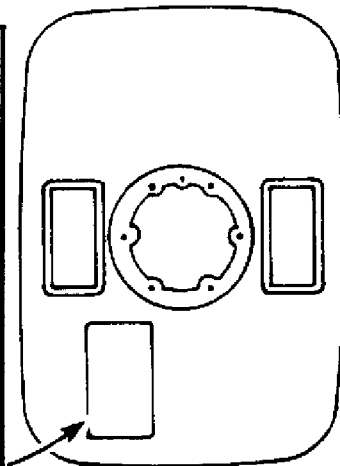

## IMPORTANT

**Remove chemical manufacturer's package from planter while planting or structural failure may occur.**

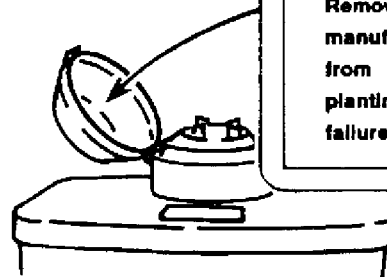

A36772

Lid Fill Closed Handling System

A36772 -19-09MAR95



**Suggest:**



**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**

Safety Signs

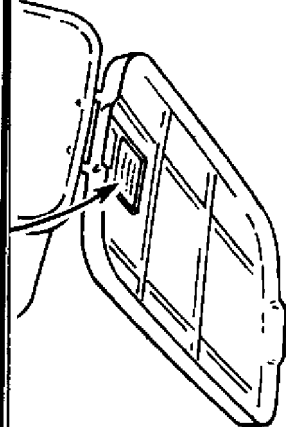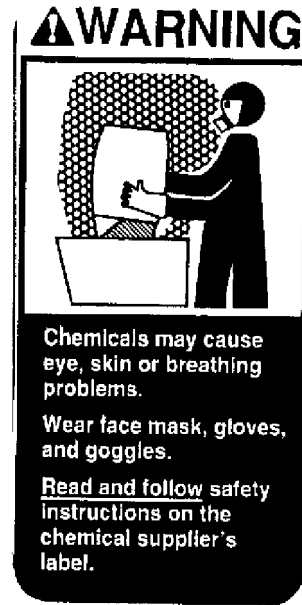

A36771

*Insecticide/Herbicide Hoppers*

A36771 -19-09MAR95

A54948.C -19-15MAY95



*Liquid Fertilizer*

A40733 -19-24JAN97

OM60123,10A -19-24FEB97

Safety Signs



OM56594,10A -19-10MAY96

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**