 


42 Bale Ejector

**John Deere Ottumwa Works
OME83029 Issue K4**

LITHO IN U.S.A.
ENGLISH

Introduction

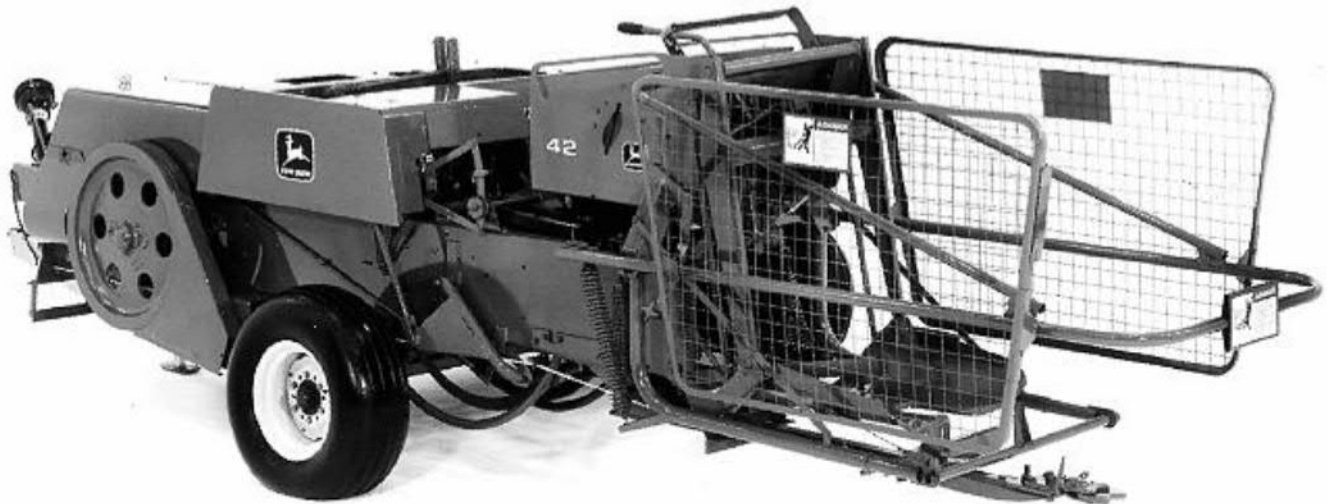

42 Bale Ejector on 338 Baler

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should

it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.

42 Bale Ejector Checklists

DEALER'S RECORD

Owner's Name _____ Date Sold _____
Address _____ Model Number _____
City _____ Serial Number _____
State _____ Zip _____

OME,42BE,CLIS,A-19-26OCT94

PREDELIVERY CHECKLIST

Assemble machine and inspect it for good running condition before delivering. Use the following checklist:

- Machine lubricated. (See Lubrication section.)
- All moving parts work freely.
- Hydraulic cylinders operate properly.
- Hydraulic hoses properly routed and clamped.
- Hydraulic reservoir filled to check plug level.
- Pump drive belt adjusted to correct dimension.
- Relief valve properly adjusted.
- Hand trip lever adjusted properly.
- Console control (optional) properly attached in tractor and functioning correctly.
- Electric distance control functions properly.
- Electric tilt motor (optional) functions properly.
- Automatic wagon disconnect (optional) functions properly.
- Bale case measuring arm is adjusted correctly for bale ejector.
- Electrical wiring correctly routed and clamped to avoid pinch points, kinks and sharp edges.
- All operating adjustments have been made.

(Date Set Up)

(Signature of Set-Up Technician)

OME,42BE,CLIS,B-19-26OCT94

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

DELIVERY CHECKLIST

Convey the following important information to the customer at the time machine is delivered.

- Advise the customer that the life expectancy of this machine is dependent on regular lubrication as described in operator's manual.
- Advise customer of safety precautions that must be observed while using this machine (See Safety section.)
- Give the operator's manual to customer and explain all operating adjustments and lubrication.
- Point out safety lockout and correct use.

When the machine is transported on a road or highway, accessory lights and devices should be used for adequate warning to operators of other vehicles. In this regard, tell customer to check local governmental regulations. Among these is the SMV (slow-moving vehicle) emblem which can be attached vertically to the mounting on the front side of the left-hand spring support bracket to provide proper light reflection.

Advise the customer of optional attachments that are available for special crop and operating conditions.

Explain the operation of console controls.

(Date Delivered)

(Signature)

OME.42BE,CLIS,C-19-26OCT94

AFTER-SALE CHECKLIST

It is suggested the following items be checked sometime during the first season's operation.

- Check for broken or damaged parts.
- If possible, run the machine to see if it is functioning properly.
- Go over machine and check for loose parts or missing bolts.

Check pump drive belt for proper tension.

Review operator's manual with customer and stress the importance of proper and regular lubrication and safety precautions.

(Signature)

(Date Checked)

OME.42BE,CLIS,D-19-26OCT94

Contents

| | Page | | Page |
|---|------|---------------------------------------|------|
| Safety | 1 | Hydraulic System Diagram | 43 |
| Preparing the Bale Ejector | 9 | Storage | 44 |
| Transporting | 11 | Assembly | |
| Operating the Bale Ejector | | Install | |
| Baling with Bale Ejector | 13 | Wheel Extensions | 46 |
| Ejecting Bales | 13 | Bale Ejector Assembly | 46 |
| Bale Size | 13 | Hydraulic Pump Assembly | 58 |
| Using Electric Controls | 14 | Hydraulic Tilt Cylinder | 60 |
| Using Side Screens | 15 | Short Hose Extensions | 63 |
| Using Hand Trip Lever | 16 | Electric Controls—Tilt Actuator | 63 |
| Adjusting Bale Length Timing | 16 | Wagon Hitch Release | 68 |
| Throwing Frame Latch | 18 | Specifications | 71 |
| Adjusting Bale Weight | 19 | Crime Prevention Tips | 74 |
| Adjusting Bale Length | 19 | Index | |
| Using Optional Hydraulic Aiming Control | 20 | | |
| Dropping Bales on the Ground | 20 | | |
| Adjusting Bale Case Extensions | 21 | | |
| Attachments | 22 | | |
| Lubrication and Maintenance | 24 | | |
| Troubleshooting | | | |
| Troubleshooting | | | |
| Miscellaneous | 31 | | |
| Hydraulic Pump | 32 | | |
| Latch and Throwing Cylinder | 34 | | |
| Control Valve | 35 | | |
| Electrical | 36 | | |
| Service | | | |
| Practice Safety | 38 | | |
| Adjusting Trip Cam | 38 | | |
| Adjusting Trip Cable | 39 | | |
| Changing Hydraulic Oil | 40 | | |
| Adjusting Pump Drive Belt | 41 | | |
| Adjusting Latch Springs | 41 | | |
| Wiring Diagram | 42 | | |

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OME83029 K4-19-21OCT94

COPYRIGHT© 1994
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual

Contents

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

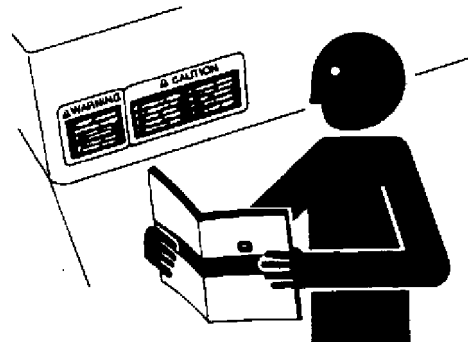

DX,READ -19-03MAR93

TS201 -UN-23AUG88



OPERATE SAFELY

Keep all shields in place while operating.

Keep hands, feet, and clothing away from moving parts.

Never stand behind ejector while baler is operating.

Do not use a chuck or forage wagon for loading or transporting bales.

Do not attempt to pull bales from ejector while baler is operating.

Never attempt to unplug ejector unless lockout is engaged.

Before servicing, adjusting, removing bales or other material from ejector, or hitching wagon to baler:

1. Disengage all power.
2. Shut off tractor engine.
3. Wait until baler flywheel has stopped turning.
4. Move lockout lever to locked position.



 
E37067 -UN-15FEB93

OME,42BE,SAF,A -19-26OCT94

KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

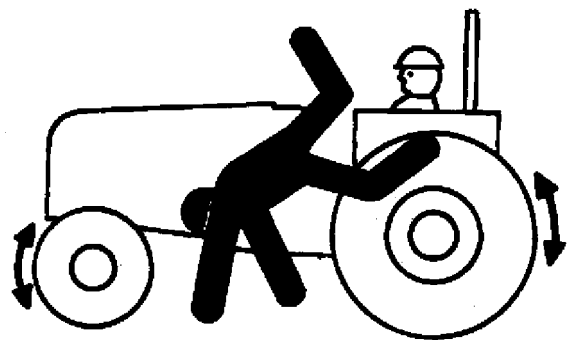

TS290 -UN-23AUG88

DX,RIDER -19-03MAR93

 


PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

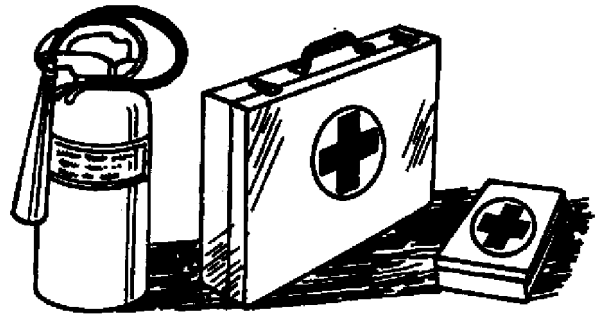

DX.FIRE2 -19-03MAR93

TS291 -UN-23AUG88

 
WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

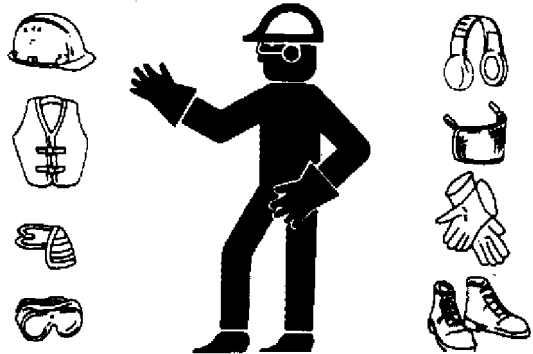

DX.WEAR -19-10SEP90

TS206 -UN-23AUG88



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading



 
HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)

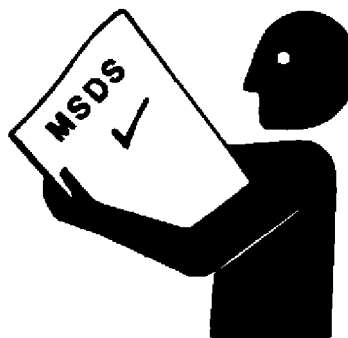

DX,MSDS,NA -19-03MAR93


TS1132 -UN-26NOV90

USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driven on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

Whenever driving on public roads, use flashing warning lights and turn signal according to local regulation. To increase visibility, use the lights and devices provided with your machine. For some equipment, install extra flashing warning lights.

 Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

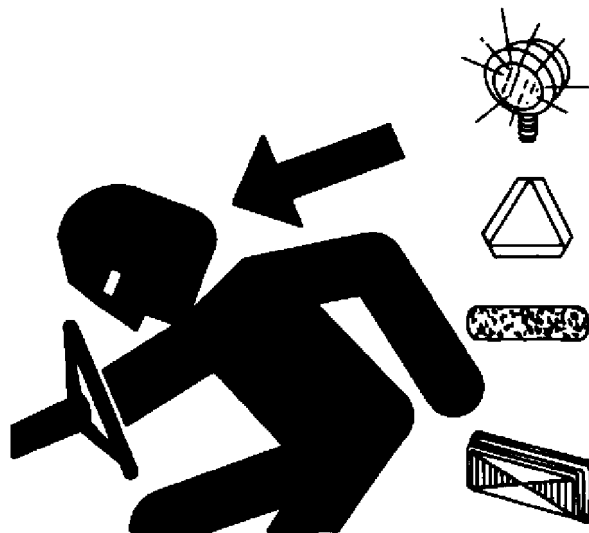

DX,FLASH -19-15MAR93

TS951 -UN-12APR90

 


USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

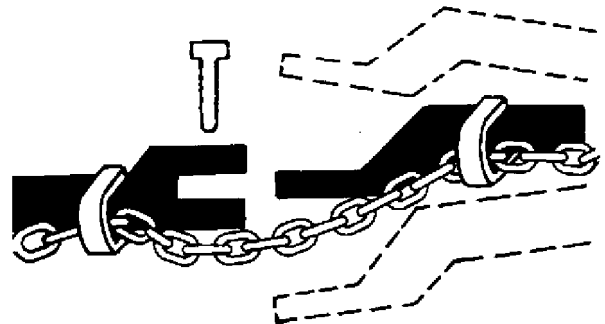

-UN-23AUG88
TS217

DX,CHAIN -19-03MAR93

PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



-UN-23AUG88
TS218

DX,SERV -19-03MAR93

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>