

# **328 and 338 Balers**

(Serial No. 943001- )

**John Deere Ottumwa Works**  
**OME82250 Issue H2**  
**(Mark old manual OME81602 Issue H1 for  
machines up to Serial No. 943001)**

LITHO IN U.S.A.  
ENGLISH

# Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.


WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers

when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.

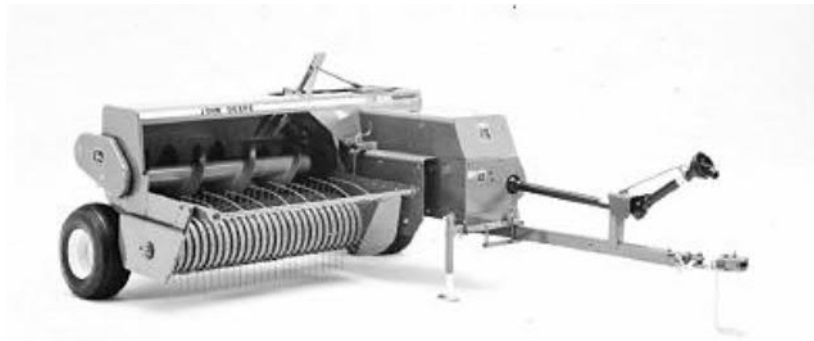

*John Deere 338 Baler*

E36801  
-UN-27MAR92

# Contents

	Page		Page
<b>Safety</b>		Replacing Knotter and Needle Drive	
		Shear Bolt . . . . .	30-9
<b>Preparing the Tractor</b> . . . . .	10-1	Adjusting Bale Weight . . . . .	30-9
		Adjusting Bale Weight with Hydraulic Bale	
<b>Preparing the Baler</b>		Tension . . . . .	30-10
Breaking in the Baler . . . . .	15-1	Adjusting Height of Pickup Teeth . . . . .	30-11
Securing Jackstand . . . . .	15-1	Adjusting Height of Pickup Teeth	
Positioning Tongue . . . . .	15-2	w/Optional Hydraulic Lift . . . . .	30-11
Attaching Hydraulic Tongue Positioning		Adjusting Gauge Wheel Height . . . . .	30-11
Cylinder . . . . .	15-2	<b>Attachments</b> . . . . .	35-1
Selecting Correct Twine and Wire . . . . .	15-3	<b>Lubrication and Maintenance</b>	
Loading Twine Box . . . . .	15-3	Extreme Pressure Grease . . . . .	40-1
Using Modified Square Knot—Sisal Twine . . . . .	15-3	Gear Case Oil . . . . .	40-2
Using Sheet Bend Knot—Plastic Twine . . . . .	15-4	Multiluber Grease . . . . .	40-2
Threading Right-Hand Needle . . . . .	15-4	Alternative Lubricants . . . . .	40-3
Threading Left-Hand Needle . . . . .	15-5	Lubrication and Maintenance	
After Threading Needles . . . . .	15-6	As Required . . . . .	40-4
Loading Wire Box—338 . . . . .	15-6	Every 10 Hours . . . . .	40-5
Threading Needles—Wire Baler . . . . .	15-7	Every 100 Hours . . . . .	40-8
Selecting Tire Inflation . . . . .	15-8	Each Season . . . . .	40-9
<b>Attaching and Detaching</b> . . . . .	20-1	<b>Knotter Troubleshooting</b> . . . . .	45-1
<b>Transporting</b> . . . . .	25-1	<b>Twister Mechanism Troubleshooting</b> . . . . .	50-1
<b>Operating the Baler</b>		<b>General Troubleshooting</b> . . . . .	55-1
Starting and Operating the Baler . . . . .	30-1	<b>Service</b>	
Preparing the Crop . . . . .	30-1	Placing Needles in Home Position . . . . .	60-2
Selecting Correct Direction of Travel . . . . .	30-2	Timing the Baler . . . . .	60-3
Understanding the Tying Cycle . . . . .	30-2	Adjusting Bale Measuring Control . . . . .	60-5
Understanding the Twisting Cycle . . . . .	30-3	Adjusting Crank Stop . . . . .	60-7
Adjusting Bale Length . . . . .	30-5	Adjusting Knotter Drive Brake . . . . .	60-8
Adjusting Compressor Rods . . . . .	30-5	Adjusting Needle Frame and Needle	
Removing Compressor Rods . . . . .	30-6	Link—Twine Baler . . . . .	60-8
Adjusting Twine Tension . . . . .	30-6	Adjusting Needles—Twine Baler . . . . .	60-9
Checking Twine Knot Strength . . . . .	30-7	Adjusting Twine Holder . . . . .	60-10
Adjusting Feeder Fingers . . . . .	30-7	Adjusting Tucker Fingers . . . . .	60-11
Replacing Flywheel Shear Bolt . . . . .	30-8		

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OME82250 H2-19-25JUN92

COPYRIGHT© 1992  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION® Manual  
Previous Editions  
Copyright 1991, 1989, 1988, 1987 Deere & Company

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

Contents

	<b>Page</b>
Adjusting Knife Arm . . . . .	60-13
Replacing Knife and Wiper Plate . . . . .	60-15
Adjusting Knotter Gears . . . . .	60-16
Removing Knotter Assembly . . . . .	60-17
Replacing Billhook Cam . . . . .	60-17
Multi-Twine and Sisal Billhooks . . . . .	60-18
Adjusting Twine Disk . . . . .	60-18
Adjusting Billhook Tongue . . . . .	60-19
Adjusting Needles—Wire Baler . . . . .	60-20
Adjusting Needle Lift Link—Wire Baler . . . . .	60-21
Adjusting Wire Guides . . . . .	60-22
Adjusting Grippers . . . . .	60-23
Adjusting Twister Hooks . . . . .	60-23
Adjusting Bevel Gear and Pinion . . . . .	60-24
Adjusting Intermittent Drive Gear—Wire Baler . . . . .	60-24
Adjusting Feeder Finger and Main Drive Chains . . . . .	60-25
Adjusting Slip Clutch . . . . .	60-25
Adjusting Pickup Flotation . . . . .	60-27
Adjusting Auger Drive Belt . . . . .	60-28
Adjusting Bale Counter . . . . .	60-28
Adjusting Plungerhead . . . . .	60-29
Adjust Hydraulic Bale Tension Pump Chain . . . . .	60-34
<b>Storage . . . . .</b>	<b>65-1</b>
<b>Assembly . . . . .</b>	<b>70-1</b>
<b>Specifications . . . . .</b>	<b>75-1</b>
<b>Crime Prevention Tips . . . . .</b>	<b>80-1</b>
<b>Index</b>	

# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-04JUN90

T81389 -UN-07DEC68

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-09JAN92

TS187 -19-30SEP88

## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.



DX,READ -19-04JUN90

TS201 -UN-23AUG88



## OPERATE BALER SAFELY

Keep all shields in place when operating baler.

Before tripping knotters by hand, removing twine or wire from bale case or knotters, or removing hay from pickup:

- Disengage all power.
- Shut off engine.
- Wait until all moving parts have stopped.


Stand clear of needle frame.

E01,338C,A -19-17MAR87

## KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

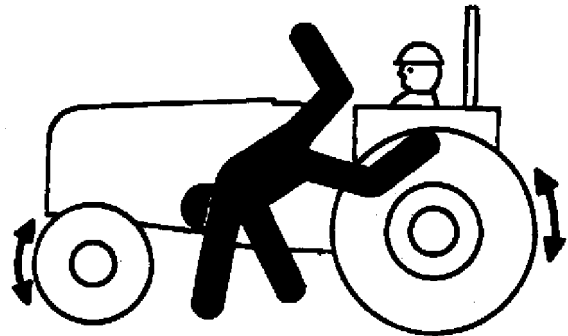

DX,RIDER -19-04JUN90


TS290  
-UN-23AUG88

## PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

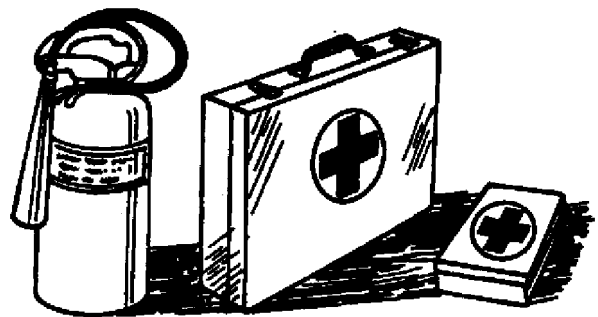

DX,FIRE2 -19-04JUN90

TS291  
-UN-23AUG88




## WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

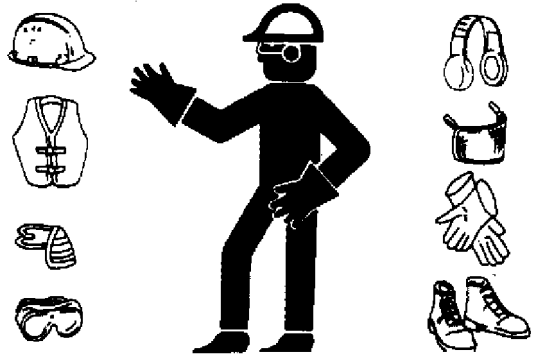

DX,WEAR -19-10SEP90

TS206 -UN-23AUG88


## HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)

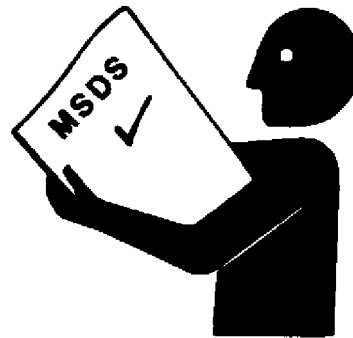

DX,MSDS,NA -19-15MAR91

TS1132 -UN-26NOV90

## STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.



DX,PTO -19-04JUN90

TS198 -UN-23AUG88




## USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driven on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

Flashing warning lights and turn signals are recommended whenever driving on public roads. To increase visibility, use the lights and devices provided with your machine. For some equipment, install extra flashing warning lights.

Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

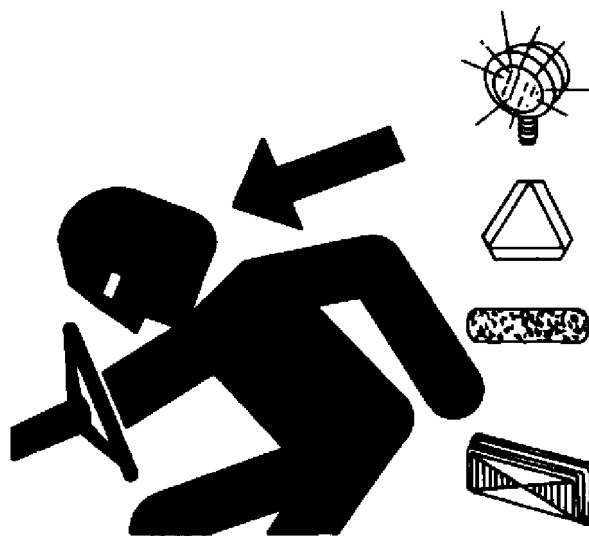

DX,FLASH -19-04JUN90


TS951 -UN-12APR90

## USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

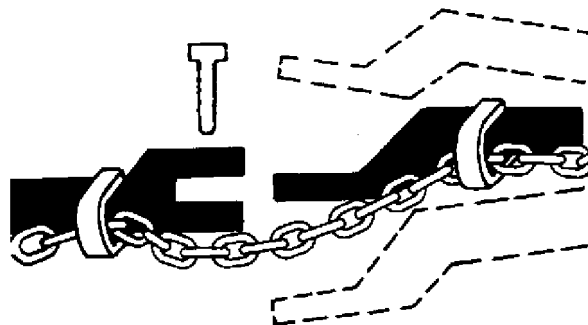

DX,CHAIN -19-04JUN90

TS217 -UN-23AUG88




## REDUCE SPEED WHEN TOWING LOADS

Braking to stop towed loads from transport speeds can cause the towed load to swerve and upset. Reduce speed if towed load weighs more than the tractor and is not equipped with brakes.

Follow recommended speed-weight ratio guidelines:

- Maximum speed is 32 km/h (20 mph) when towing load equal to or less in weight than the tractor.
- Reduce speed to 16 km/h (10 mph) when towing load up to double the tractor weight.
- Do not tow loads exceeding double the tractor weight.
- Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

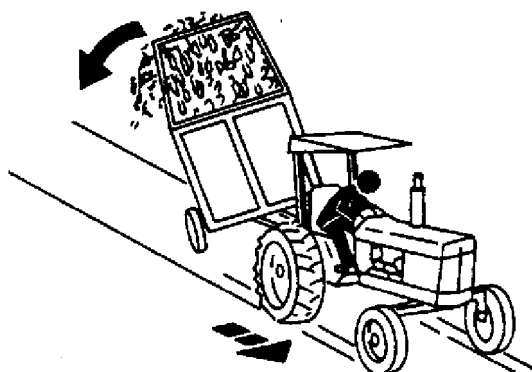

DX,TOW -19-27MAY92

TS216 -UN-23AUG88

## PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate or service machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV -19-04JUN90

TS216 -UN-23AUG88



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**



## REMOVE PAINT BEFORE WELDING OR HEATING


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

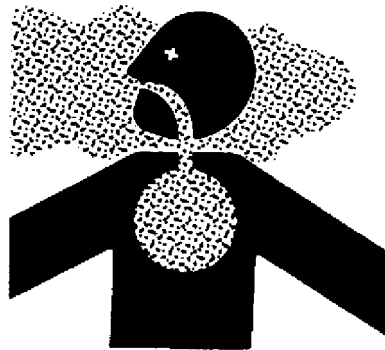

DX,PAINT -19-04JUN90

TS220 -UN-23AUG68

## AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



DX,TORCH -19-05OCT90

TS953 -UN-15MAY90




## AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

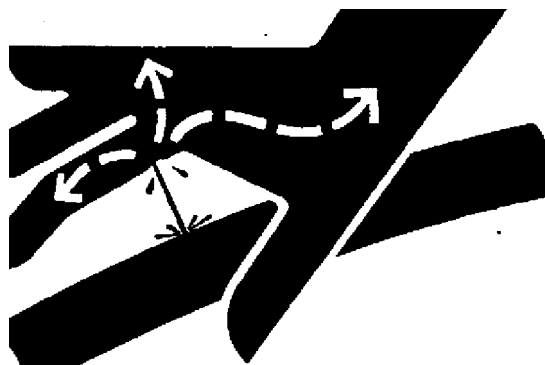

X9811 -UN-23AUG88

DX,FLUID -19-09AUG91

## DISPOSE OF WASTE PROPERLY


Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

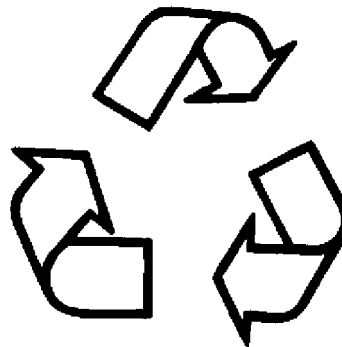

TS1133 -UN-26NOV90

DX,DRAIN -19-09AUG91

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**